

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# DE'LONGHI TRR0715 Owner's Manual

[Shop genuine replacement parts for DE'LONGHI  
TRR0715](#)



[Find Your DE'LONGHI HVAC Parts - Select From 166 Models](#)

----- Manual continues below -----



**ELECTRIC OIL FILLED**  
**INSTRUCTIONS FOR USE**  
**SAVE THESE INSTRUCTIONS**

**TYPE/MODELE/MODELO**  
**TRR0715**

Register this product on-line and receive a free  
Visit [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi).  
Visit [www.delonghi.com](http://www.delonghi.com) for a list of service

Pilot lamp  
Voyant lumineux  
Piloto  
Lampada spia


Handle  
Poignée  
Asa  
Maniglia

Thermostat dial  
Sélection thermostat  
Selección termostato  
Selezione termostato

Thermostat knob  
Bouton thermo  
Botón termostato  
Manopola term

Switch  
Interrupteur  
Interruptor  
Interuttore

Cord storage  
Dispositif  
Recogecable  
Avvolgicavo

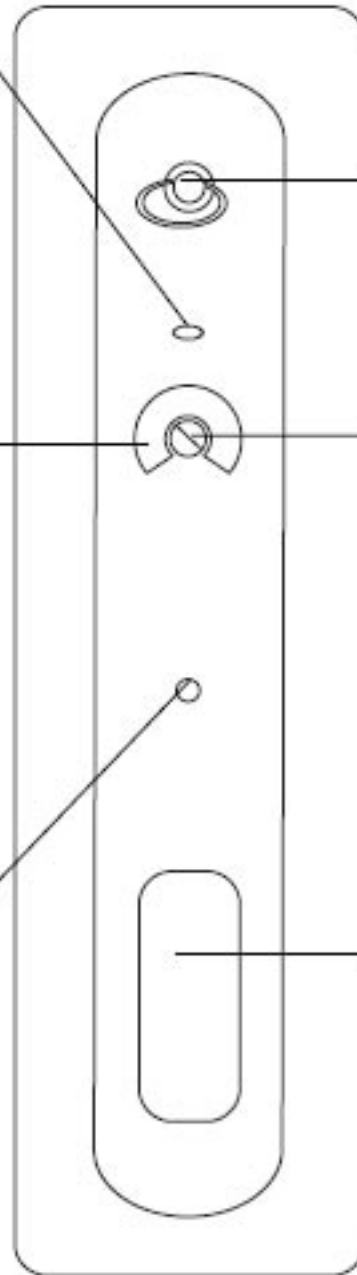

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. If your appliance is equipped with a polythene tape used as carry handle, remove the tape before plugging the appliance to the outlet.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Exercise caution when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, curtains at least 3 feet (0,9 m) from the front and top of the heater and keep the heater clear of the front and rear.
4. Extreme caution is necessary when any heater is used by or near children and when the heater is being operated and unattended.
5. Always unplug heater when not in use.
6. Do not operate any heater with a damaged cord or plug or after the heater has been dropped or damaged in any manner. If heater has leaked any oil, discontinue use immediately and contact the service center as indicated in the instruction leaflet. Return heater to service center for examination, electrical or mechanical adjustment, or repair.
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor areas. Do not use heater where it may fall into a bathtub or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or mats. Keep cord away from traffic area and where it will not be tripped over.
10. To disconnect heater, turn controls to off, then remove plug from outlet.
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening. This may cause electric shock, fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use heater in areas like a bed, where openings may become blocked.
14. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
15. Use this heater only as described in this manual. Any other use not recommended may cause fire, electric shock, or injury to persons.
16. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
17. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that is hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Damaged outlets should be replaced prior to further use of the heater. Plugging heater into an outlet that is not a standard outlet/ may result in overheating of the power cord or fire.
18. Do not use an extension cord because it may overheat and cause a risk of fire. If you must use an extension cord, the cord shall be No. 14 AWG minimum size and rated for at least 1500 watts, and has to be used only for supplying power to this heater.

## 1. GENERAL FEATURES

Remove the appliance from the packaging, and rest on the polystyrene tape.  
Check that neither the appliance nor the power cable has been damaged during transportation. Do not operate the appliance if damaged.

## 2. EASY WHEEL SYSTEM

Turn the radiator upside-down on a rug or a soft surface in order to protect the paint finish. Fully unfold the castors by turning them outwards (Fig.1).  
Turn the radiator back to its upright position.

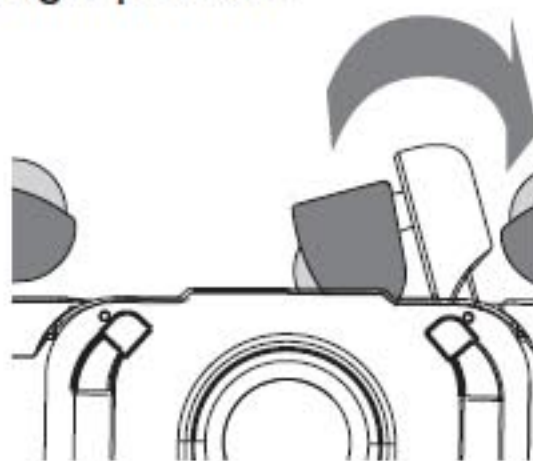


Fig.1

## IMPORTANT

When in use, the radiator should always be kept vertical (wheels at the bottom). Any other position could be dangerous!

ON/OFF switches



MIN 800 Watts

OFF

MAX 1500 Watts

## ECONOMIZER

For more economical use, utilize

## 3. CONNECTION

The radiator must be connected to a properly polarized A/C 110/120 V in perfect working conditions. Keep loose clothing or bedding, furniture and other items away from the wall outlet where the heater plug is fitted in.

## 4. OPERATION AND USE

## REMINDER

To completely shut unit off, ON/OFF switches must be placed in OFF position.

## 5. USE OF THERMOSTAT

The thermostat operates on room air temperature and not radiator temperature. Turn counter-clockwise direction - lower number, lower temperature. Clockwise direction - higher number, higher temperature.

### Antifreeze function

With thermostat in the ❄️ position and the switch in the II position, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

Your product is equipped with a polarized alternating current line plug (one blade wider than the other). This plug will fit into the power outlet only in one direction, a safety feature. If you are unable to insert the plug fully into the outlet, try turning it around. If the plug should still fail to fit, contact your electrician to replace your outlet. Do not defeat the safety purpose of the polarized plug.

## 6. MAINTENANCE AND SERVICE

Always remove the plug from the power socket and allow the radiator to cool before cleaning. Use a soft damp cloth, do not use detergents and abrasives.

Should the radiator not be in use over a certain length of time, wind the cord around the radiator and store it in a dry place (see fig. on front page).

This appliance has been built to provide many years of trouble free service. In case of malfunction or doubt, do not try to repair the heater by yourself. This is a hazardous task and may result in injury or electric shock. Call nearest Service Center (visit [www.delonghi.com](http://www.delonghi.com) for service centers near you (U.S. Only)).



## LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand.

### What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or an authorized service center of any defective parts or part thereof, other than parts damaged by accident. In the event of a product's replacement or return, the unit must be returned transportation charges prepaid. The repaired or new model will be returned at the company's expense. This warranty shall apply only if the appliance is used in accordance with the instructions and directions, which accompany it, and on an Alternating current ( AC ) circuit.

### How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt. This warranty applies only to the original purchaser for use.

### What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which has been repaired or alterations to the appliance outside our factory or authorized service center, nor shall it apply to any appliance, which has been subject to abuse, misuse, neglect, or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty is not recoverable under this warranty. Some states do not allow the exclusion of consequential or incidental damage, so the above limitation may not apply in those states.

### How do you get service?

If repairs become necessary, see contact information below:

#### U.S. Residents:

Please contact our toll free hotline at 1-800-322-3848 or log onto our website at [www.delonghi.com](http://www.delonghi.com). For all accessories, spare parts or replacement parts, please contact our toll free hotline at 1-800-865-6330.

**Residents of Canada:** Please contact our toll free hotline at 1-888-322-3848 or log onto our website at [www.delonghi.com](http://www.delonghi.com).