

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



DE'LONGHI HR715 Owner's Manual

[Shop genuine replacement parts for DE'LONGHI HR715](#)



[Find Your DE'LONGHI HVAC Parts - Select From 166 Models](#)

----- Manual continues below -----



ELECTRIC CONVECTOR HEATER

IMPORTANT INSTRUCTIONS
SAVE THESE INSTRUCTIONS

CONVECTEUR ÉLECTRIQUE

CONSIGNES DE SÉCURITÉ IMPORTANTES
MODE D'EMPLOI IMPORTANT

TERMOCONVECTOR ELECTRICO

INSTRUCCIONES PARA EL USO
REPASE Y GUARDE ESTAS INSTRUCCIONES

TERMOCONVETTORE

ISTRUZIONI IMPORTANTI
CONSERVARE QUESTE ISTRUZIONI

Type/Modèle/Modelo/Modelo

HR715

Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit www.prodregister.com/delonghi. Visit www.delonghi.com for a list of service centers near you. (U.S. Only)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez www.prodregister.com/delonghi. Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement)

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite www.prodregister.com/delonghi. Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista. Visita www.prodregister.com/delonghi. Visita www.delonghi.com per una lista dei centri di servizio a te più vicini. (Solo negli Stati Uniti)



IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. **Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.**
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never place heater where it may fall into a bathtub or other water container.
8. **Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.**
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly grounded outlets only.
11. This appliance must be adequately grounded. Have your electrical circuit checked by a qualified electrician.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. **A convector heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.**
15. Use this convector heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
17. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet (receptacle). Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet /receptacle/ may result in overheating of the power cord or fire.

18. **Do not use an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be UL listed No. 14 AWG minimum size and rated not less than 1875 watts, 15AMP at 125 V and has to be used only for supplying power to this heater.**
19. Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that outlets also deteriorate due to aging and continuous use: check periodically if signs overheating or deformations are evidenced by the plug. Do not use the outlet and CALL your electrician.
20. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
21. Before connecting to electric power outlet, check your electrical power supply. It must be 120 volts A.C. (alternating current). The outlet may be 15 amp. or 20 amp. The circuit must be of adequate size and must be protected by fuse or circuit breaker.
DO NOT place heater directly beneath electrical outlet and DO NOT place heater against paper board or low density fiberboard.
DO NOT touch hot surfaces.
DO NOT immerse cord, plug or heater in water or other liquid, or this will cause dangerous electrical conditions and potential electrical shock.
DO NOT obstruct the top or bottom air openings.
Dust and lint on the heating element can obstruct the free flow of air. DO NOT operate when obstructed.
Operating with air openings obstructed could cause a dangerous condition.
22. Make sure that no pieces of polystyrene or other packaging material have been left into the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
23. When switching on the appliance for the first time, allow it to run at full power for about 1 hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation.
24. It is not advisable for the appliance to be positioned where it is exposed to draughts which might prevent it from working properly.

SAVE THESE INSTRUCTIONS

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.


HOW TO USE YOUR HEATER

FEET ASSEMBLING

Fit the feet to the convector as follows:

Insert the foot ensuring that the bigger hole A on the foot coincides with the screw mounted on the base of the convector (see figure 1); then screw in the remaining three screws (see figure 2) which are supplied.

Note: the convector must be used only with the feet correctly fitted!

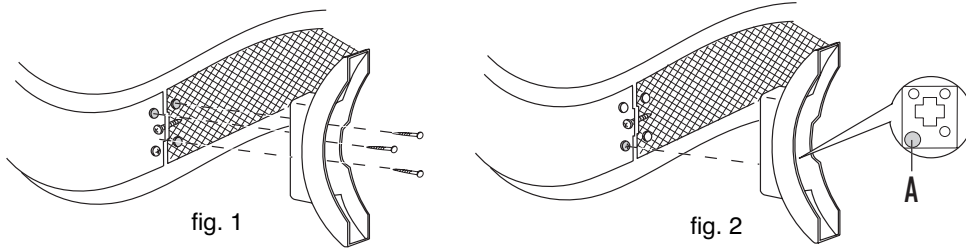

BE CAREFUL

Operate the heater in upright position only.

Any other position could create hazardous situation!

LOCATION

Place heater on floor beneath coldest window in the room or any desired location.

Used in this way, your heater will minimize the effect of cold drafts.

The heater must not be placed immediately below an outlet.

CONNECTION

This appliance must be grounded.

This appliance is equipped with a cord having a grounding wire with a grounding plug.

The radiator must be connected to a properly installed and grounded AC 110-120 V household outlet in perfect working conditions.

Improper use of the grounding plug can result in a risk of electric shock. The use of an extension cord is not recommended, but if it is necessary to use one, use only a three-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance.

The minimum recommended size of the extension cord is 14 AWG, rated not less than 1875 Watts. Keep loose clothing or bedding, furniture and flammable material away from the wall outlet where the heater plug is fitted in.

TURNING THE HEATER ON

Turn the thermostat knob clockwise to the highest setting and position the switch in the MIN position (minimum power) or MAX position (maximum power) the indicator light will go on, indicating that unit is operating.

HOW TO SWITCH THE APPLIANCE OFF

To switch the appliance OFF position the switch in the "OFF" position.

ADJUSTING THE THERMOSTAT

When the room has reached the desired temperature, turn the thermostat knob slowly in a counter-clockwise direction until you hear a click and the appliance turns off (indicator light off). The thermostat will now keep the temperature in the room constant, turning the heater on and off as appropriate.

MAINTENANCE AND SERVICE

Disconnect plug and allow the heater to cool. Wipe with a soft damp cloth, do not use detergents and abrasives.

Should the heater not be in use over a certain length of time, keep it in a dry place. This appliance has been built to give many years of trouble free service.

In case of malfunction or doubt, do not try to repair the heater yourself. Call nearest Service Center Visit www.delonghi.com for a complete list of Service Centers (U.S. Only).



limited warranty

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at **1-800-322-3848** or log onto our website at www.delonghi.com. For all accessories, spare parts or replacement parts, please contact our parts division at **1-800-865-6330**.

Residents of Canada: Please contact our toll free hotline at **1-888-335-6644** or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.