 


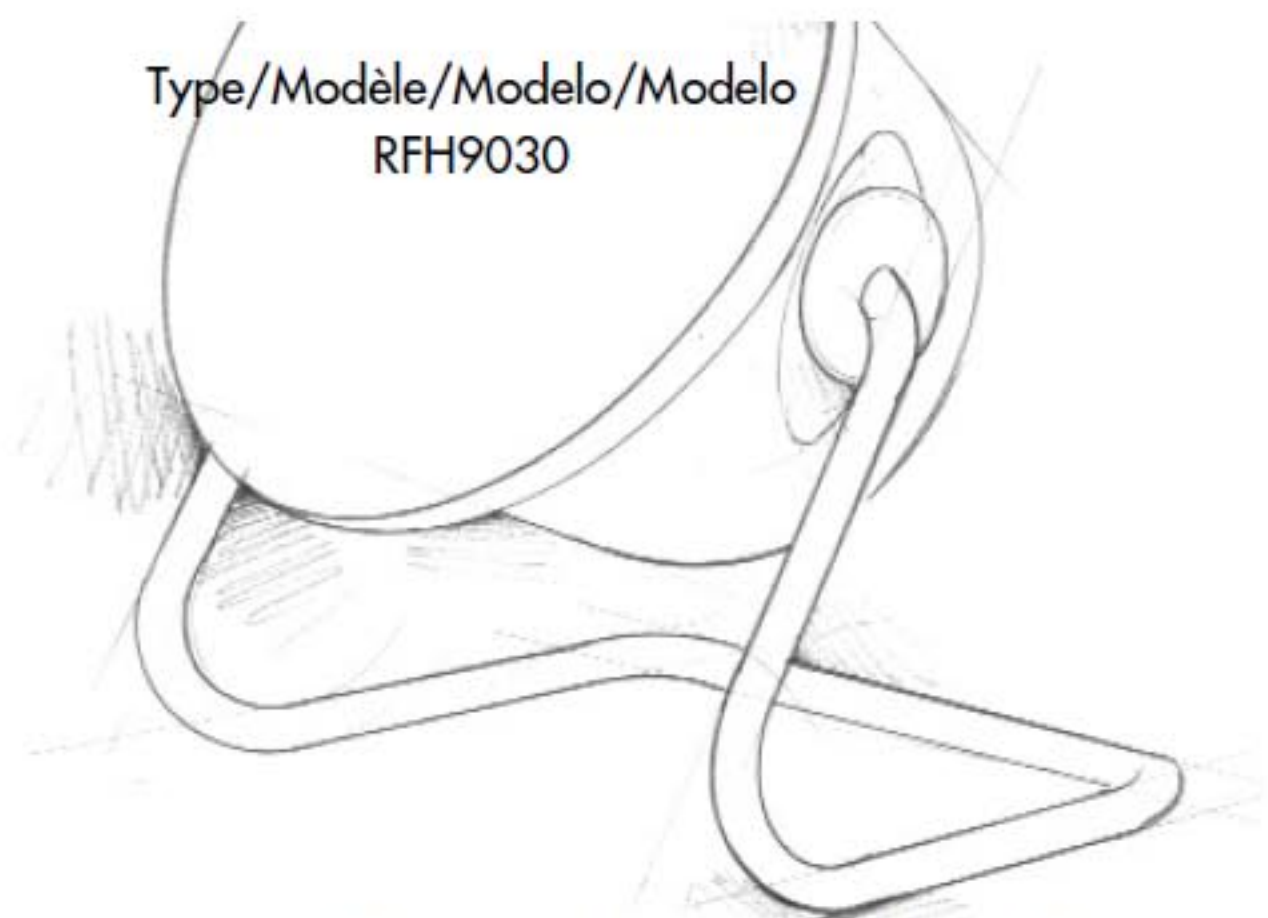

FAN HEATER
INSTRUCTIONS FOR USE
SAVE THESE INSTRUCTIONS

R



Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit www.prodregister.com/delonghi.
Visit www.delonghi.com for a list of service centers near you. (U.S. Only)

Mode selector

Indicator light

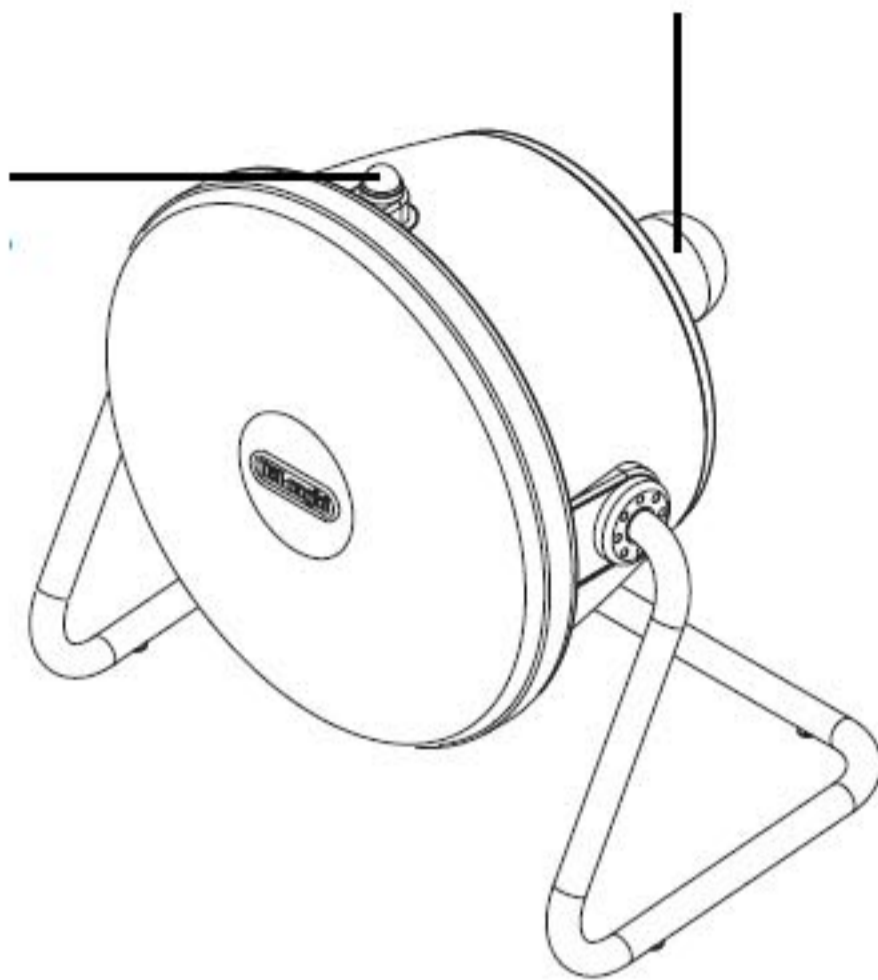 


Fig. 1

Pos. 1

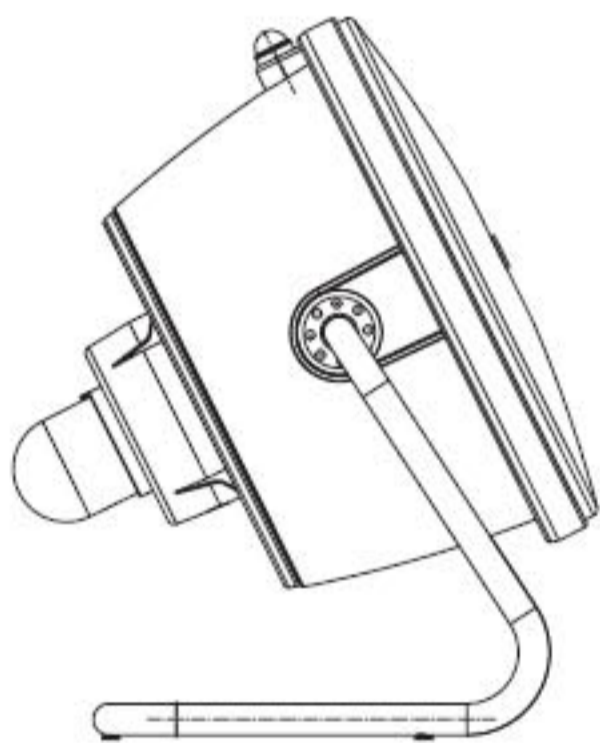 


Fig. 2

Pos.2

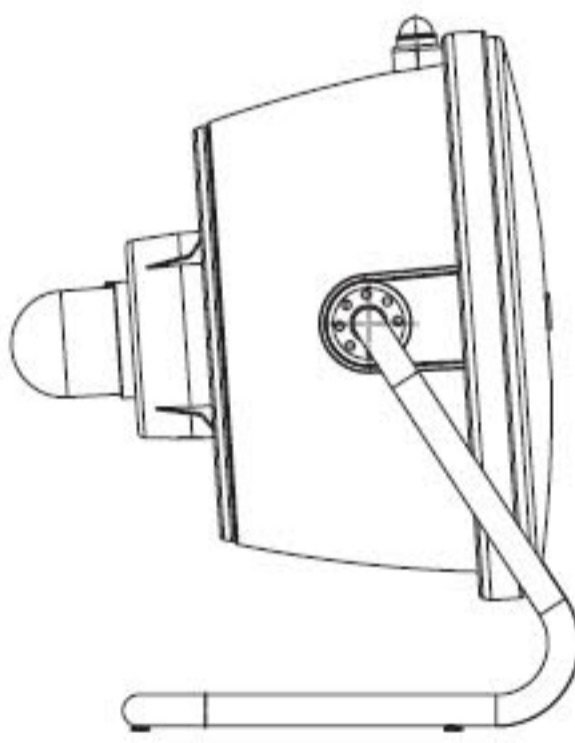 


Fig. 3

Voltage Wattage	See rating label
--------------------	------------------

IMPORTANT SAFEGUARDS



When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the heater is left operating and unattended.
4. Always unplug appliance when not in use.
5. **Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.**
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never place appliance where it may fall into a bathtub or other water container.
8. **Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.**
9. To disconnect the appliance, turn controls to off, then remove plug from outlet.
10. Connect to properly polarized outlets only.
11. Do not insert or allow foreign objects to enter any ventilation opening as this may cause an electric shock, fire or damage the appliance.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. **A fan heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.**
14. Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
16. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet (receptacle). Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle/ may result in overheating of the power cord or fire.
17. **Do not use an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be no. 14 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this appliance.**
18. Be sure that the plug is fully inserted into an appropriate outlet. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically if signs of overheating or deformations are evidenced by the plug. Do not use the outlet and CALL your electrician.
19. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
20. **CAUTION:** to prevent electric shock match wide blade of plug to wide slot, fully insert.
21. Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.

SAVE THESE INSTRUCTIONS

ELECTRICAL CONNECTION



- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit.

INSTALLATION

The appliance can be used as a portable unit only, resting on any horizontal surface.

The appliance must not be positioned directly underneath a fixed power point.

OPERATION

- **Summer use (ventilation only):** turn the mode selector clockwise to the  position. The indicator light switches on.
- **Heating at low power:** turn the mode selector to the **1** position.
- **Heating at maximum power:** turn the mode selector to the **2** position.
- **Setting the mode selector:** when the room temperature has reached the desired level, slowly turn the mode selector counter-clockwise until the indicator light goes out but no further. The appliance will now automatically maintain the temperature at the desired level.
- **Anti-freeze function**
With the mode selector in the thermostat position , the appliance maintains the room of about 5 degrees C (41 degrees F) thus preventing freezing with minimal energy consumption.
- **Switching the heater off:** turn the mode selector fully counter-clockwise to the "O" position.
To direct the air flow in the required direction, tilt the appliance manually to one of the two positions, **1** or **2** (see fig. 2/3).

MAINTENANCE

- Always unplug the appliance before cleaning the heater.
- **Periodically clean the air intake and outtake grille during the period in which the heater is in use.**
- Do not use abrasive cleaning products or solvents.

CAUTION

- Do not use this heater in the immediate proximity of showers, bathtubs, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outtake grilles (danger of overheating).
- The heater must positioned at least 50 cm (20 inches) from furniture or other objects.
- Do not use the appliance close to walls, furniture, curtains etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorized service center or a qualified electrician in order to eliminate all risk.
- Do not cover the appliance when in operation as this could cause a fire risk.
- Do not use the appliance in rooms less than 4 m² (43 square feet).

The heater is fitted with a **safety thermal cut-off** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outtake grilles, motor turning slowly or not at all). To reset, turn the heater off, disconnect the plug from the outlet for a few minutes, remove the cause of overheating then plug the appliance in again.

Warning: in order to avoid overheating, do not cover the heater.



LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

Limited Warranty

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at **1-800-322-3848** or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at **1-800-865-6330**.

Residents of Canada: Please contact our toll free hotline at **1-888-335-6644** or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.