

CERAMIC FAN HEATER

Instructions



ELECTRICAL CONNECTIONS

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the V value indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 89/336/EEC ON RADIO INTERFERENCE SUPPRESSION.

INSTALLATION

The appliance can be used on any horizontal surface.

Do not overload the electrical circuit. Avoid using the same socket for other appliances.

DESCRIPTION

- A "Stand-by" and swing button
- B Pulse MODE
- C SET TIME button
- D ON light
- E Motorised rotating base
- F Temperature adjustment button
- G POWER, stand-by button (remote control)
- H Swing button (remote control)
- I ON/OFF switch

OPERATION AND USE

1. Make sure the appliance is off before plugging into the mains
2. To turn the appliance on, the switch at the back must be in the I position. The appliance emits a beep. The "ON" light also comes on and remains lit while power to the appliance is on.
3. Press button A to turn the appliance on.
4. The appliance starts up in **LOW** mode (minimum heat output). The display shows room temperature.
5. Press the **MODE** button (B) to switch to **HIGH** mode (maximum heat output). The display shows room temperature.
6. Press the **MODE** button (B) again to switch the appliance to **AUTO** mode. The set temperature flashes and can be modified using the + and - buttons. After a few seconds, room temperature is shown on the display.
7. Press the **MODE** button (B) a fourth time to switch the appliance back to **LOW** mode. When the **MODE** button is pressed continuously, the appliance switches through the following modes in sequence: **LOW** → **HIGH** → **AUTO**.
8. To turn the appliance off, press button A for a few seconds and place the switch on the back in the 0 position.

Adjusting the thermostat

1. Press the **MODE** button (B) until **AUTO** is displayed.
2. Use the + and - buttons (or F on the remote control) to increase or reduce the temperature set point. The thermostat will then keep room temperature at the selected level automatically.
3. When room temperature is 2°C above the set temperature, the appliance goes off.
4. When room temperature drops below the set temperature, the appliance comes on automatically.

Frost prevention mode

You can keep the room at a temperature of about 5°C to prevent freezing with minimum energy consumption.

Press the **MODE** button (B) until **AUTO** is displayed. Press the "-" button to select a temperature set point of 5°C.

When the room temperature drops below the set temperature, the appliance comes on automatically.

Timer function

The timer function can be activated in any operating mode. The timer can be used to programme the time the appliance remains in operation from 1 to 8 hours.

Each time button (C) is pressed, the operating time increases by one hour.

Once set, the operating time decreases each hour and the remaining time is displayed. At the end of the set time the appliance goes off.

If you do not want to use the appliance with the timer function, press button (C) again to go back to manual mode.

Note: The display shows room temperature in either °C or °F. To select the required unit of measurement, press the + and - buttons together for a few seconds, then release.

MOTORIZED ROTATING BASE

To distribute the air flow over a larger area, with the appliance on press A button once more.

The appliance swings from right to left.

To stop the appliance in the desired position, simply press the A button again.

To turn the appliance off, press button A for a few seconds and place the switch on the back in the 0 position.

USING THE REMOTE CONTROL

The remote control should be handled with extreme care and respect.

1. Press button (G) to turn the appliance on.
2. To use the SWING (button H), SET TIME (button C), MODE (button B) and temperature regulation (button F) functions, see the OPERATION AND USE section.
3. To replace the batteries, remove the cover on the back of the remote control unit.
The remote control uses two AAA type alkaline batteries (included, but packaged separately).
4. Do not mix used and new batteries with different values.

WARNINGS

- Do not use this heater near showers, bathtubs, sinks, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- Do not allow children or unfit persons to use the appliance without adequate supervision.
- Do not allow children to play with the appliance.
- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance near walls, furniture, curtains, etc.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the power limit marked on the extension.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance in rooms with a floor area of less than 4 m².


The heater is fitted with a safety device which switches it off in the event of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again.



WARNING: In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

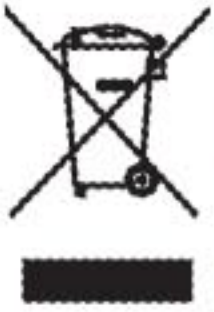

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.