

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# DE'LONGHI DCH2590ER Owner's Manual

[Shop genuine replacement parts for DE'LONGHI  
DCH2590ER](#)



[Find Your DE'LONGHI HVAC Parts - Select From 166 Models](#)

----- Manual continues below -----



## CERAMIC FAN HEATER

## ELECTRICAL CONNECTIONS

- Before plugging into the mains, make sure the voltage of your mains is the V value indicated on the appliance and that the socket and power are suitable for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 89/336/EEC ON RADIO INTERFERENCE SUPPRESSION.

## INSTALLATION

The appliance can be used on any horizontal surface.  
Do not overload the electrical circuit. Avoid using the same socket for other

## DESCRIPTION

- A "Stand-by" and swing button
- B Pulse MODE
- C SET TIME button
- D ON light
- E Motorised rotating base
- F Temperature adjustment button
- G POWER, stand-by button (remote control)
- H Swing button (remote control)
- I ON/OFF switch

## OPERATION AND USE

1. Make sure the appliance is off before plugging into the mains
2. To turn the appliance on, the switch at the back must be in the I position. A beep. The "ON" light also comes on and remains lit while power to the appliance is on.
3. Press button A to turn the appliance on.
4. The appliance starts up in **LOW** mode (minimum heat output). The display shows room temperature.
5. Press the **MODE** button (B) to switch to **HIGH** mode (maximum heat output). The display shows room temperature.
6. Press the **MODE** button (B) again to switch the appliance to **AUTO** mode. The display flashes and can be modified using the + and - buttons. After a few seconds, the display shows room temperature.
7. Press the **MODE** button (B) a fourth time to switch the appliance back to **LOW** mode. If the **MODE** button is pressed continuously, the appliance switches through the modes in sequence: **LOW** → **HIGH** → **AUTO**.

## Timer function

The timer function can be activated in any operating mode. The timer can measure the time the appliance remains in operation from 1 to 8 hours. Each time button (C) is pressed, the operating time increases by one hour. Once set, the operating time decreases each hour and the remaining time is shown at the end of the set time the appliance goes off. If you do not want to use the appliance with the timer function, press button (C) again to return to manual mode.

**Note:** The display shows room temperature in either °C or °F. To select the desired measurement, press the + and - buttons together for a few seconds, then release the buttons.

## MOTORIZED ROTATING BASE

To distribute the air flow over a larger area, with the appliance on press button (A). The appliance swings from right to left. To stop the appliance in the desired position, simply press the A button again. To turn the appliance off, press button A for a few seconds and place the dial in the 0 position.

## USING THE REMOTE CONTROL

The remote control should be handled with extreme care and respect.

1. Press button (G) to turn the appliance on.
2. To use the SWING (button H), SET TIME (button C), MODE (button D), TEMPERATURE regulation (button F) functions, see the OPERATION AND USE section.
3. To replace the batteries, remove the cover on the back of the remote control unit. The remote control uses two AAA type alkaline batteries (included, but packaged separately).
4. Do not mix used and new batteries with different values.

## WARNINGS

- Do not use this heater near showers, bathtubs, sinks, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry laundry. Never obstruct the intake and outlet (to avoid overheating).
- Do not allow children or unfit persons to use the appliance without adequate supervision.
- Do not allow children to play with the appliance.
- The heater must be positioned at least 50 cm from furniture or other objects.
- Do not use the appliance near walls, furniture, curtains, etc.
- The use of extension leads is not recommended. However if they cannot be avoided, follow the instructions accompanying the extension lead and never exceed the maximum length indicated on the extension.
- If the power cable is damaged, it must be replaced by the manufacturer's authorized service center.

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT WITH EC DIRECTIVE 2002/96/EC.**



At the end of its working life, the product must not be disposed of in the household waste. It must be taken to a special local authority differentiated waste collection point or a dealer providing this service.

Disposing of a household appliance separately avoids possible risks for the environment and health deriving from inappropriate disposal. It enables the constituent materials to be recovered to obtain significant energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.