OWNER'S INSTRUCTION INSTRUCCIONES DE USO



FAN HEATER TERMOVENTILADOR

READ AND SAVE THESE INSTRUCTIONS REPASE Y GUARDE ESTAS INSTRUCCIONES



IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before using the appliance.
- 2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
- 3. Extreme caution is necessary when any appliance is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4. Always unplug appliance when not in use.
- 5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 6. Do not use outdoors.
- 7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate appliance where it may fall into a bathtub or other water container.
- 8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- 9. To disconnect the appliance, turn controls to off, then remove plug from outlet.
- 10. Connect to properly polarized outlets only.
- 11. Do not insert or allow foreign objects to enter any ventilation opening as this may cause an electric shock, fire or damage the appliance.
- 12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13. A fan heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14. Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
- 16. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet (receptacle). Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle/ may result in overheating of the power cord or fire.
- 17. Do not use an extension cord because the extension cable may overheat and cause a risk of fire. However, if you have to use an extension cable, the cable shall be no. 14 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this appliance.
- 18. Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically if

2

signs overheating or deformations are evidenced by the plug. Do not use the receptacle and CALL your electrician.

- 19. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
- 20. CAUTION: to prevent electric shock match wide blade of plug to wide slot, fully insert.
- 21. Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.

SAVE THESE INSTRUCTIONS

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

ELECTRIC CONNECTION

The fan heater must be connected to a properly polarized A/C 110/120 V household outlet in perfect working condition.


Keep loose clothing or bedding, furniture and flammable material away from the wall outlet where the heater is plugged in.

When you plug in the appliance, the red pilot light will illuminate (Fig. 1).

INSTALLATION


The fan heater can be easily positioned on any horizontal support surface in an upright position.

FAN HEATER CONTROLS:

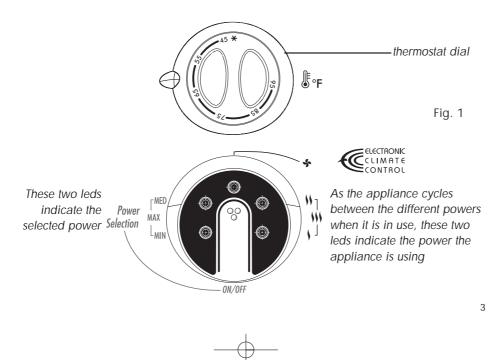


OPERATION AND USE

By pressing the "**ON/OFF**" button (Fig. 1) one or more times, the appliance will select the operating heating power, as follow:

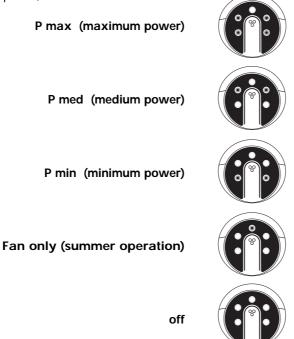

If "P max" maximum appliance operating power has been selected, adjust the thermostat dial (Fig. 1) to the desired comfort temperature, from 42°F and 95°F (5°C and 35°C).

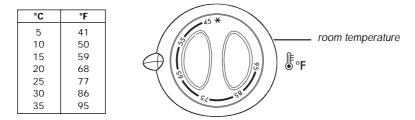

If the selected temperature is higher than the actual room temperature, the appliance will start automatically and rapidly heat the room until it reaches the selected temperature. The unit will automatically mantain the temperature at a constant level, by cycling between "max" (fig. 2), "med" and "min", as it approaches the selected comfort temperature.

If the room temperature exceeds the selected temperature level, the appliance will switch off.

Selected power	МАХ	MAX	MAX	MAX	
Power used	МАХ	MED	MIN	OFF	fig. 2

4

The appliance will switch on automatically again when the room temperature falls below the selected temperature level.

If a power level below "P max" has been selected using the "**ON/OFF**" button, the appliance will modulate between the selected level and the lower power levels.

ANTIFREEZE FUNCTION

Press the "ON/OFF" button to select the "P max" power level.

Set the thermostat dial to the "*" position (Fig. 1).

When set in this way, the appliance will switch on automatically only if the room temperature falls below $42^{\circ}F$ (5°C), to prevent it from freezing, at minimum energy consumption.

This function is not guaranteed in the event of black outs, even if lasting just a few seconds.

MODELS WITH ROTATING BODY

This appliance is fitted with a motorized base and a rotating body.

To distribute the air flow over a larger area, press the oversized switch (Fig. 3).

When activated, the appliance will oscillate from right to left over an angle of approximately 30°. To terminate oscillating, simply press the oversized switch again.

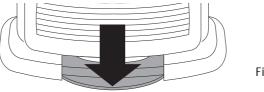


Fig. 3

IMPORTANT

In the event of a blackout, the appliance will not switch on again automatically. To switch the appliance back on, repeat the procedure described above.

MAINTENANCE AND SERVICE

Always remove the plug from the power socket and allow the heater to cool. After the heater has cooled, clean it with a soft damp cloth, do not use detergents or abrasives. Periodically clean the air intake and outlet grilles during the period in which the heater is in use with a vacuum cleaner.

Should the heater not be in use over a certain length of time, store it in a dry place.


This appliance has been built to provide many years of trouble free service.

In case of malfunction, do not try to repair the heater yourself: it may result in fire hazard or electric shock. Call the nearest Service Center (see attached list of Service Centers).

ATTENTION

A safety device switches the fan heater off if it accidentally overheats. An audible signal warns of any problems. To reset the unit for normal operation, remove the plug from the mains socket eliminate the cause of overheating (e.g. air intake or outlet grilles obstructed) and then plug the fan heater back in again. Contact your nearest Service Center if the fan heater does not begin normal operation again.



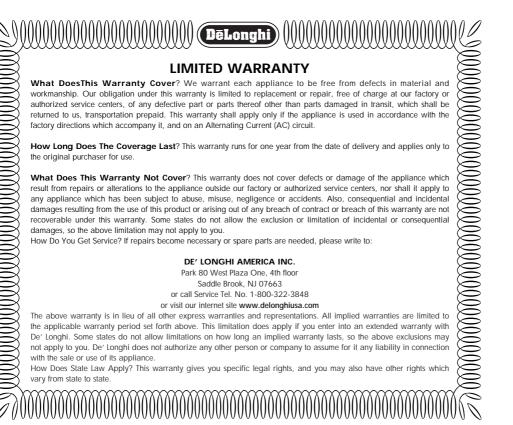

6