



# ONE-TOUCH<sup>®</sup> PLATINUM

 
 
 
 
 
 
 
 
18½ inch  
(47 cm)

---

22½ inch  
(57 cm)



30793

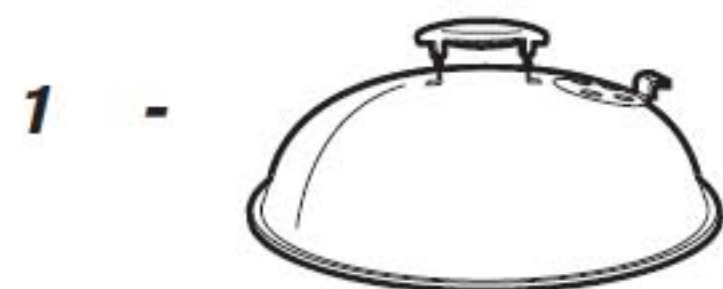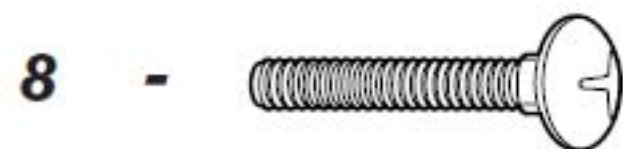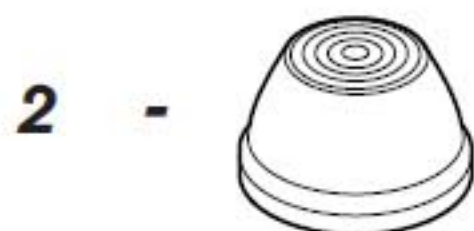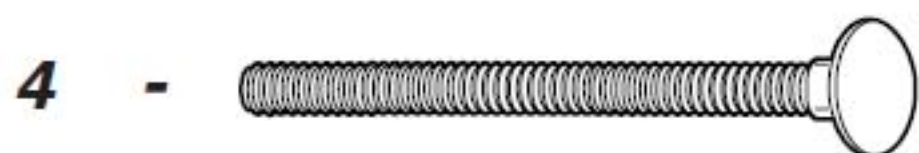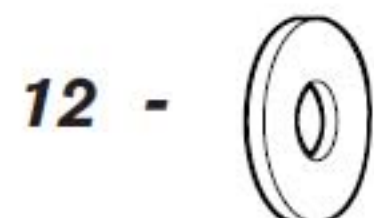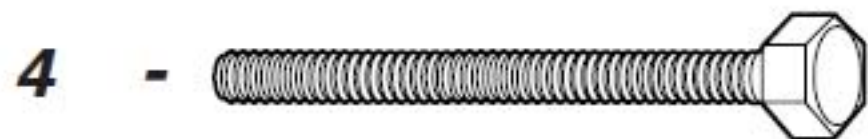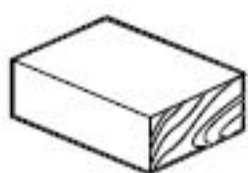


1 -



1 -



 1 -

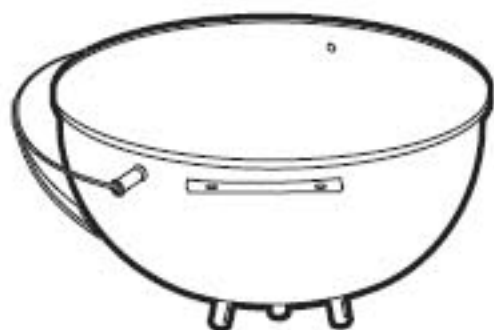


1 -



2 -



 
1 -

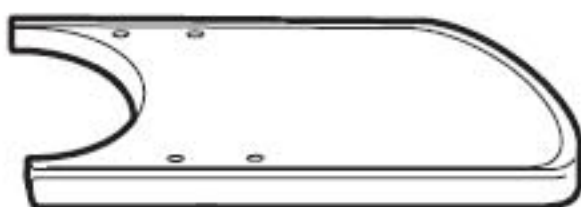

1 -



 2 -

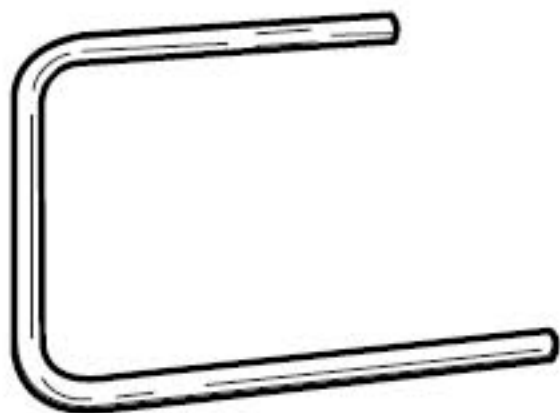

2 -



 
4 -




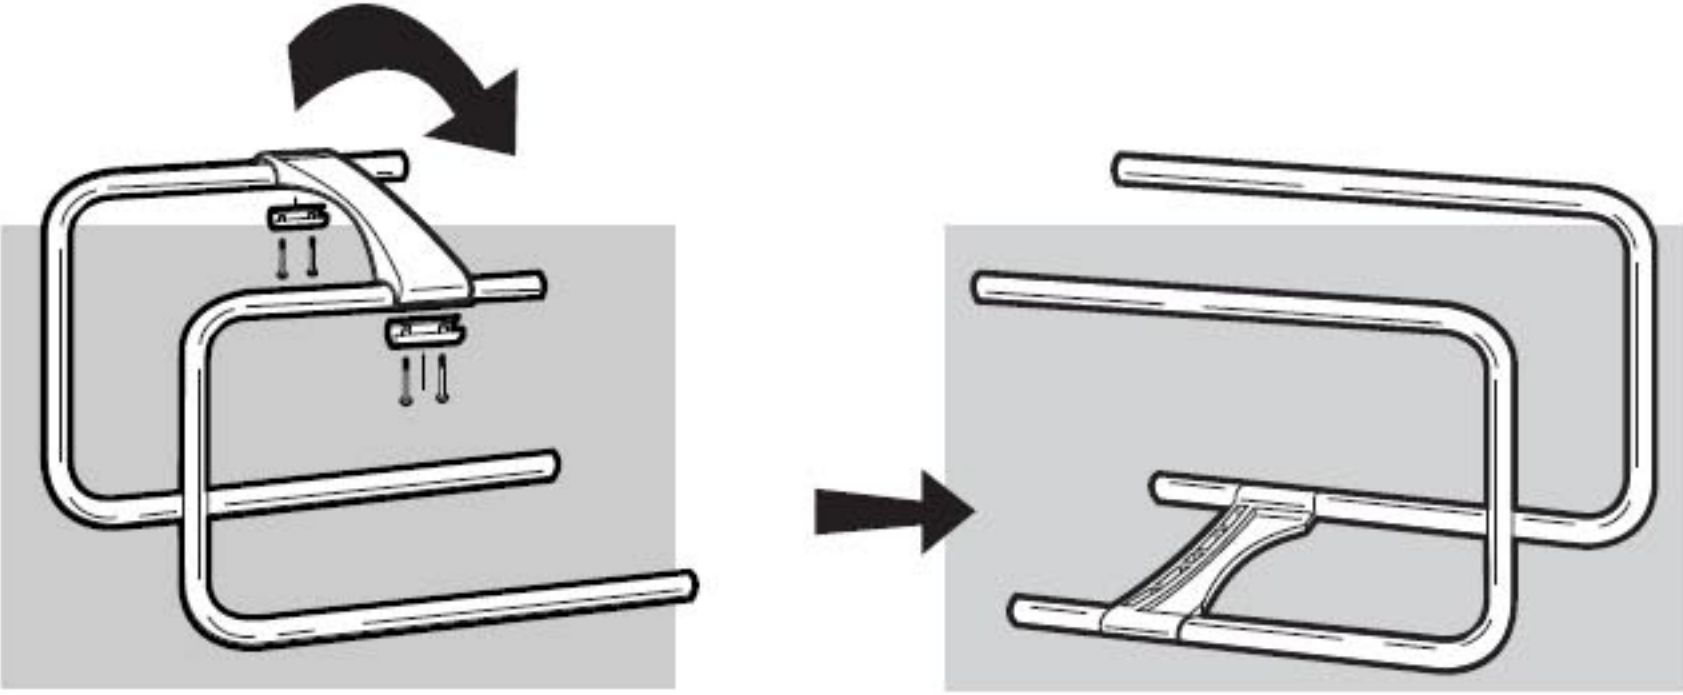 

1 -




One-Touch Platinum 18 1/2 (47cm) 022102

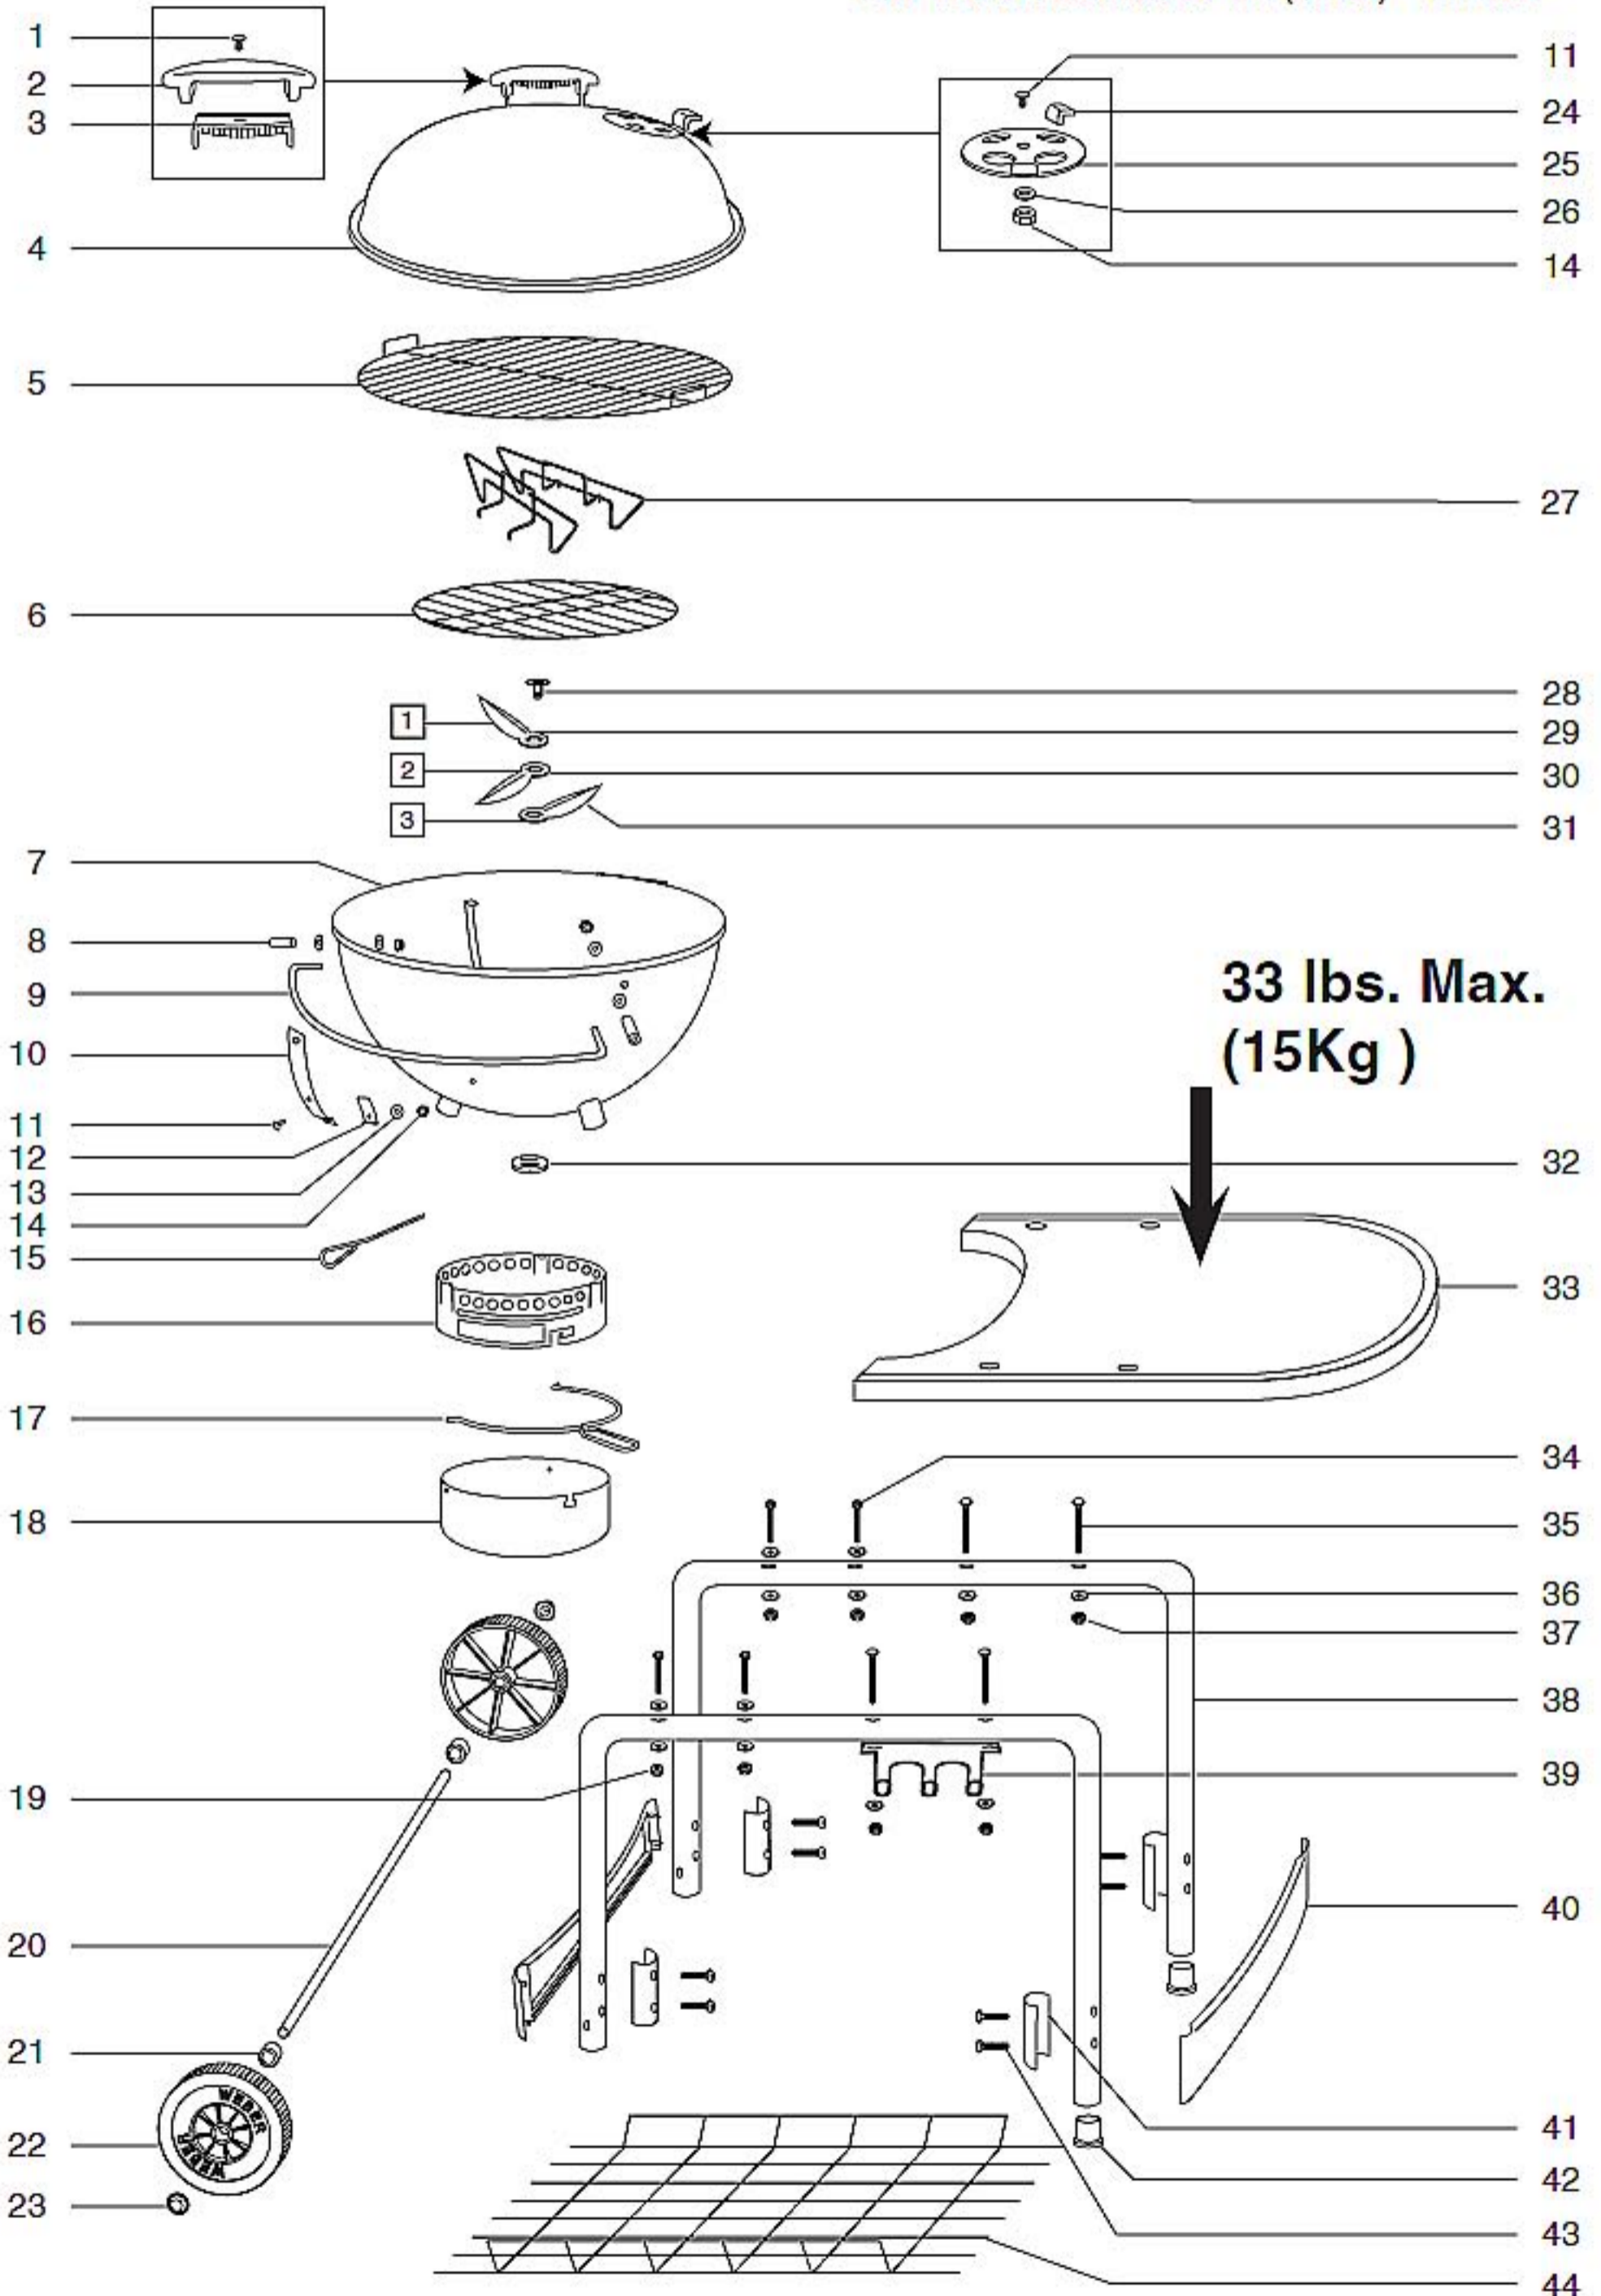


①

(4 -  ) 

 ②


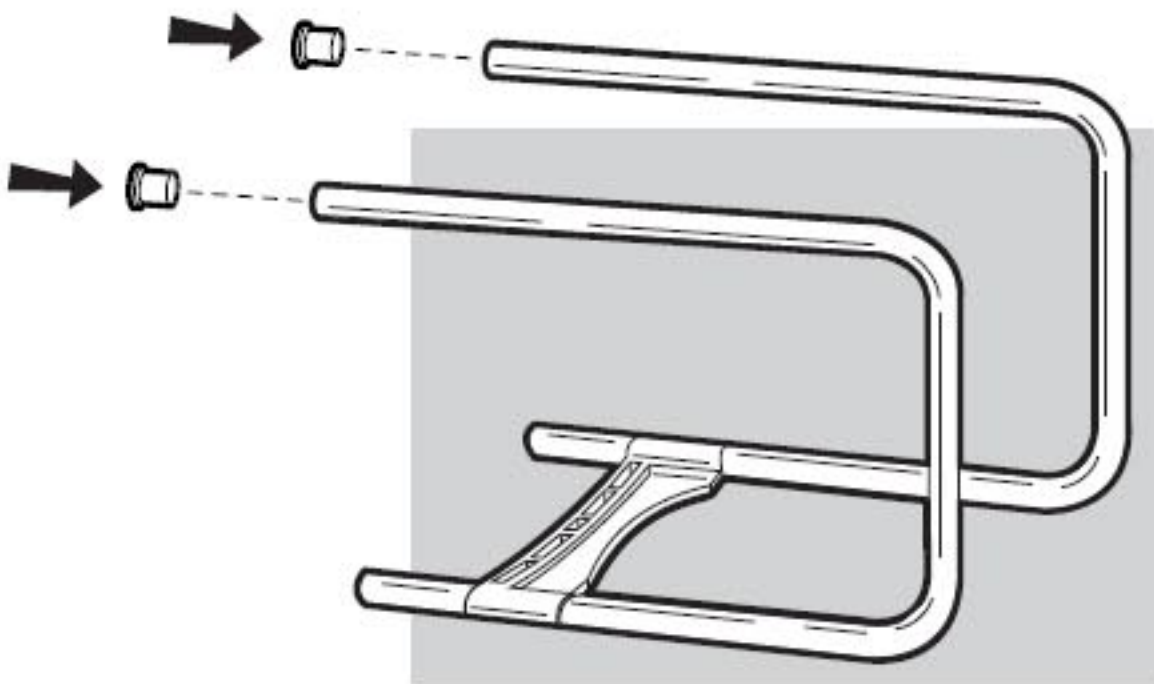
(2 -  )

   ③

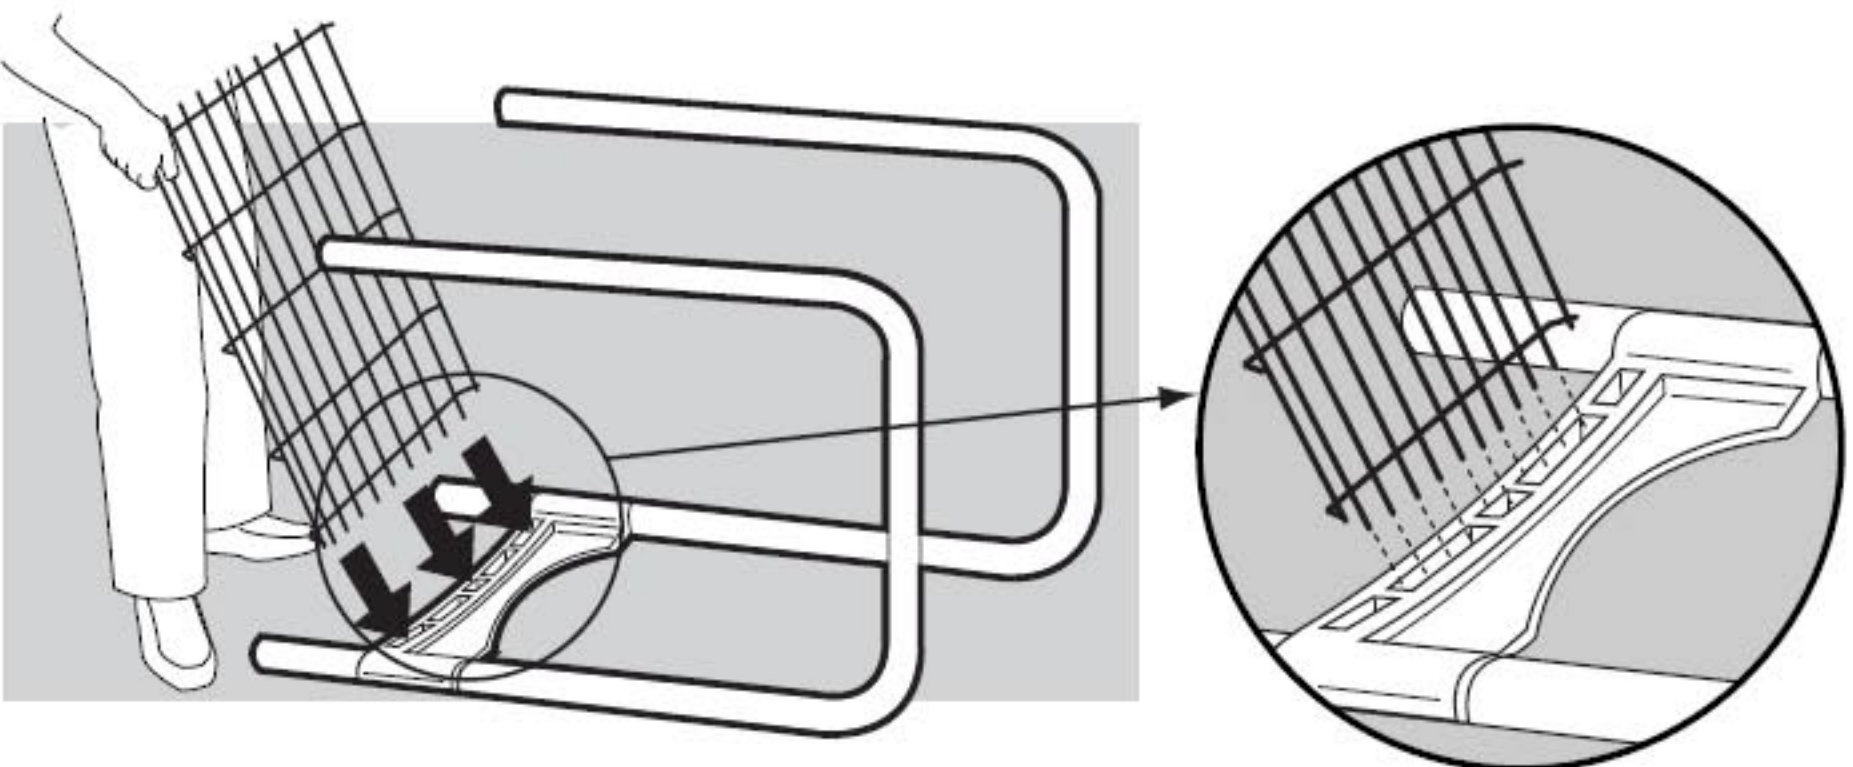
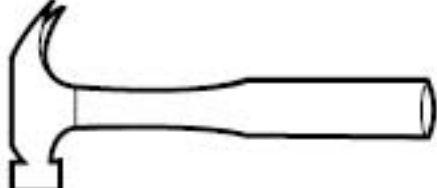
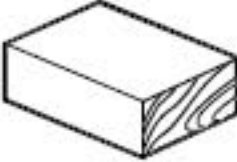





4

   (4 -  ) 

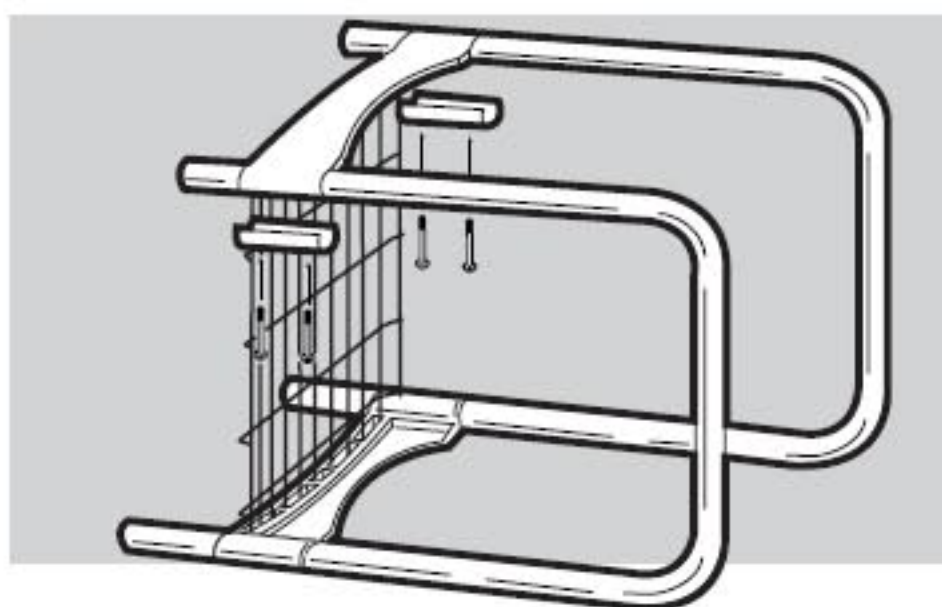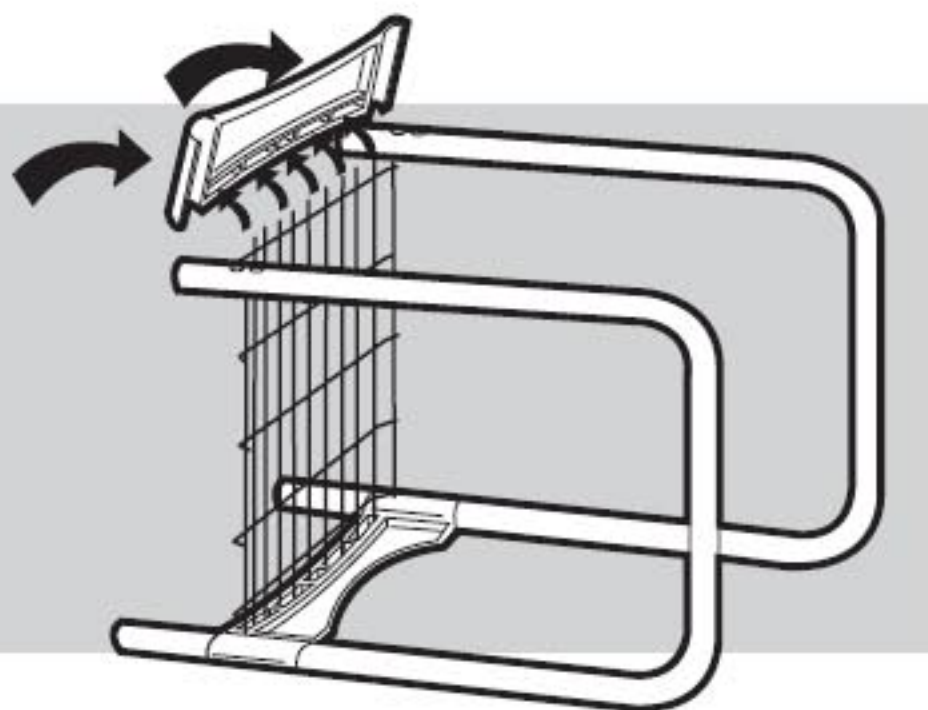
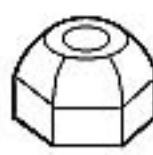








5

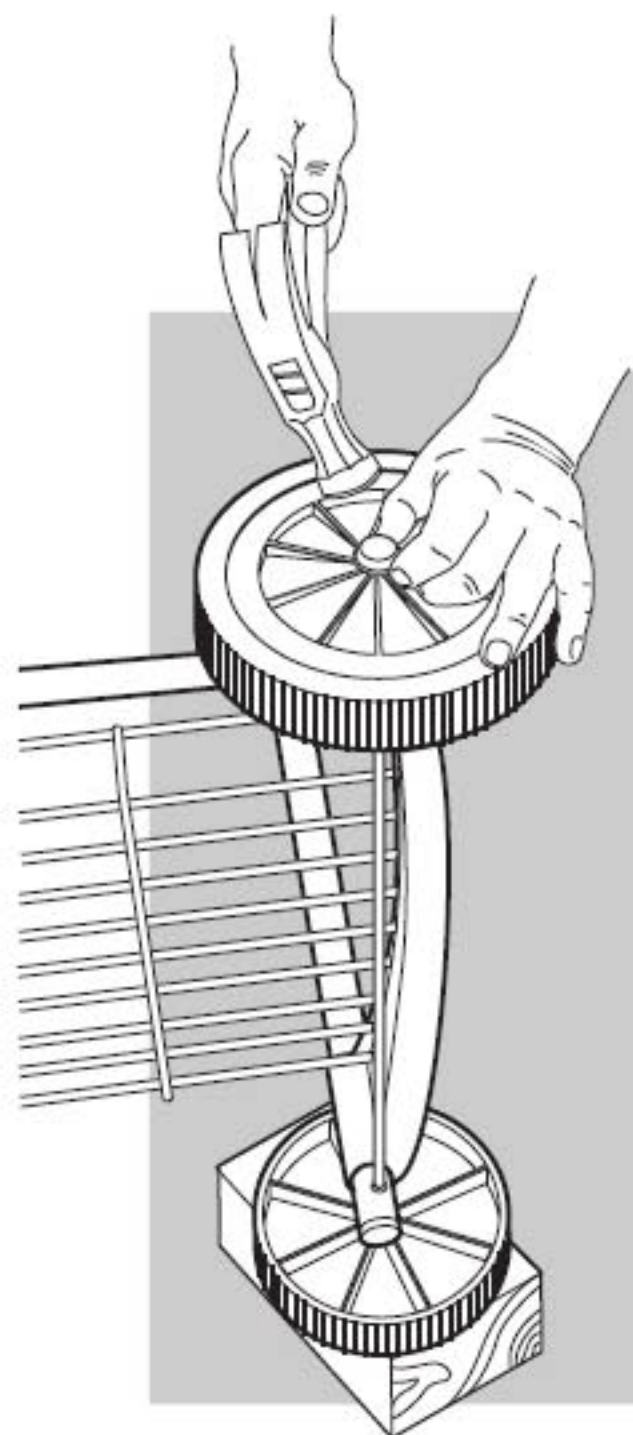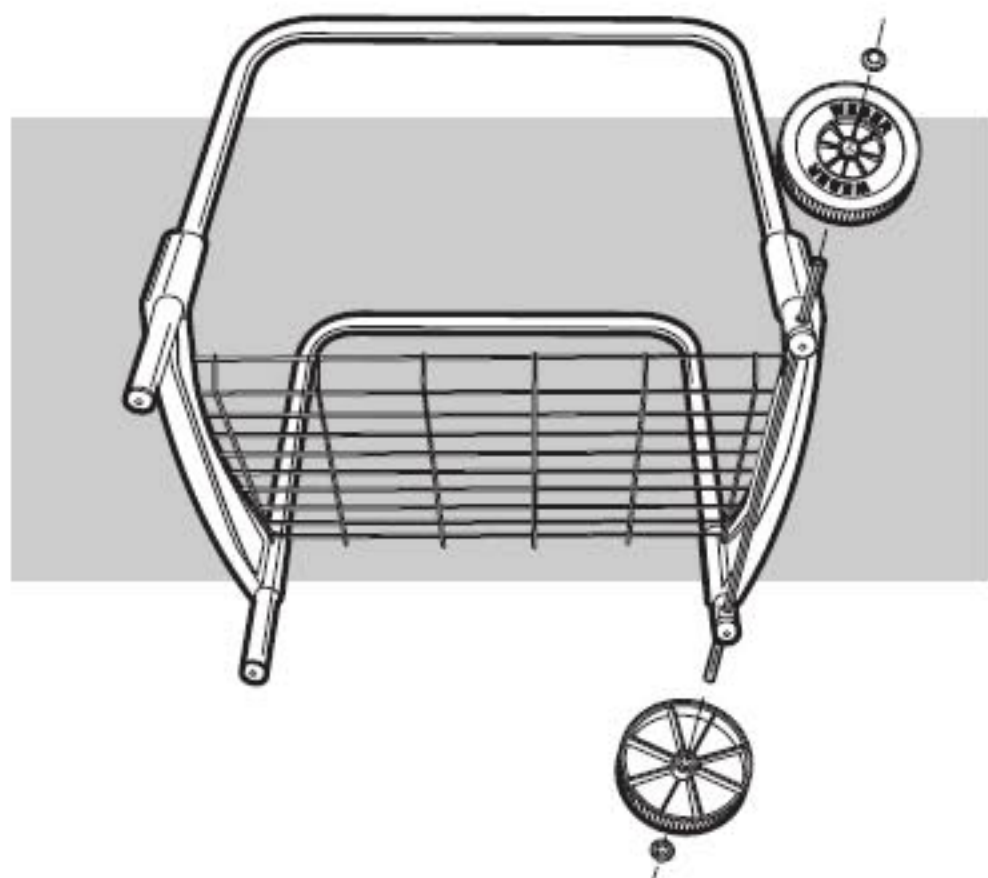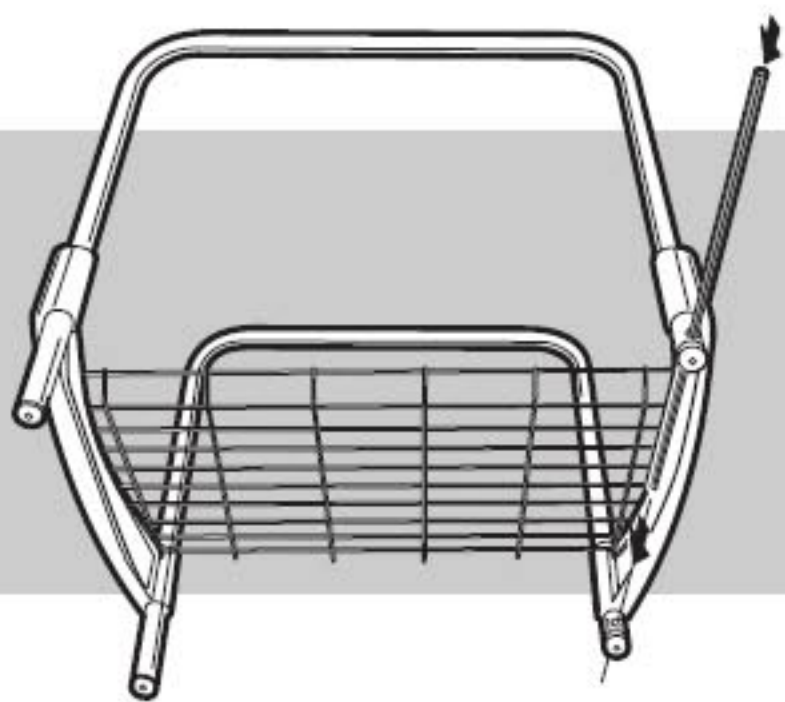(2 -  )  






6

   
 
(4 -    ) 

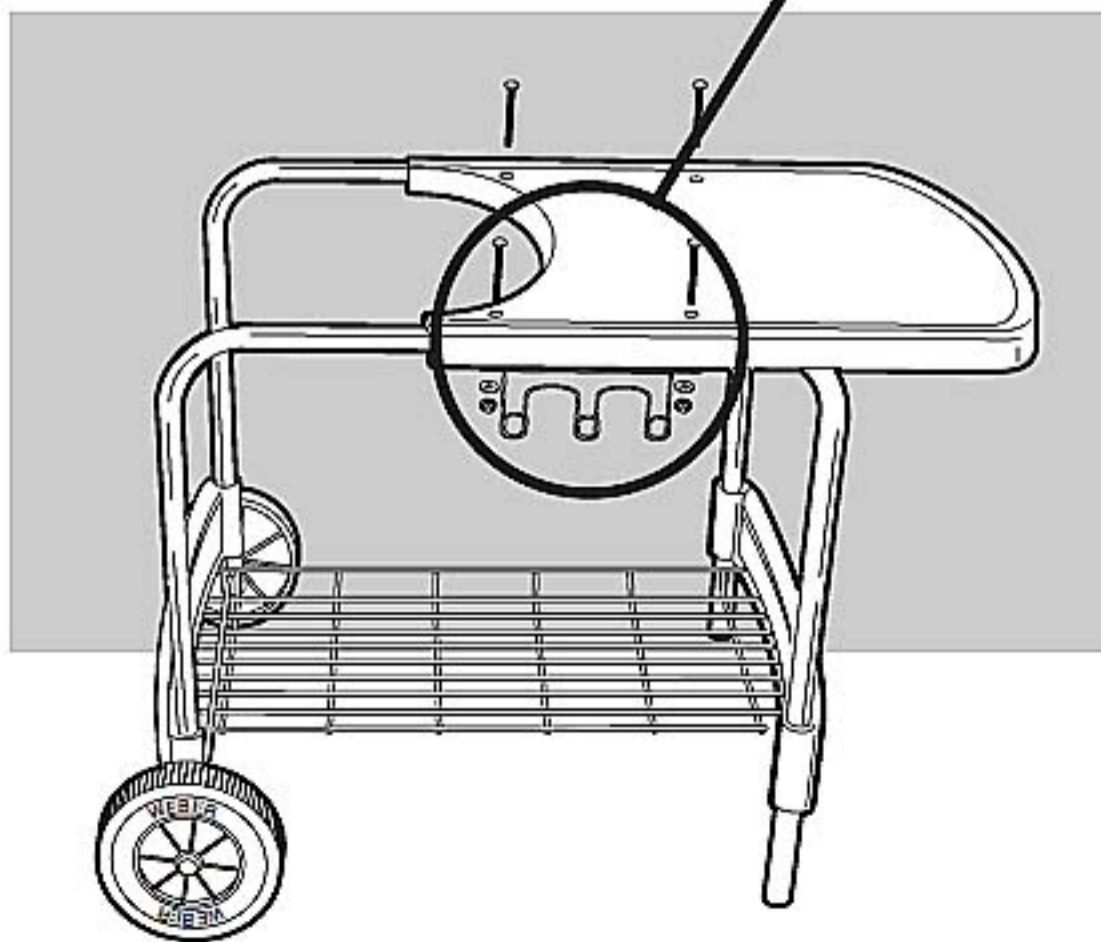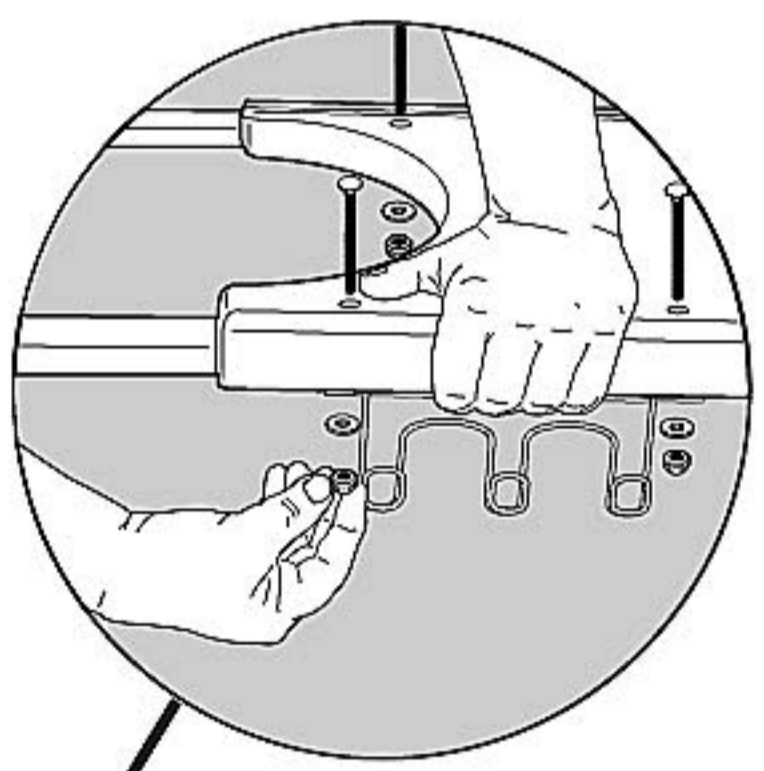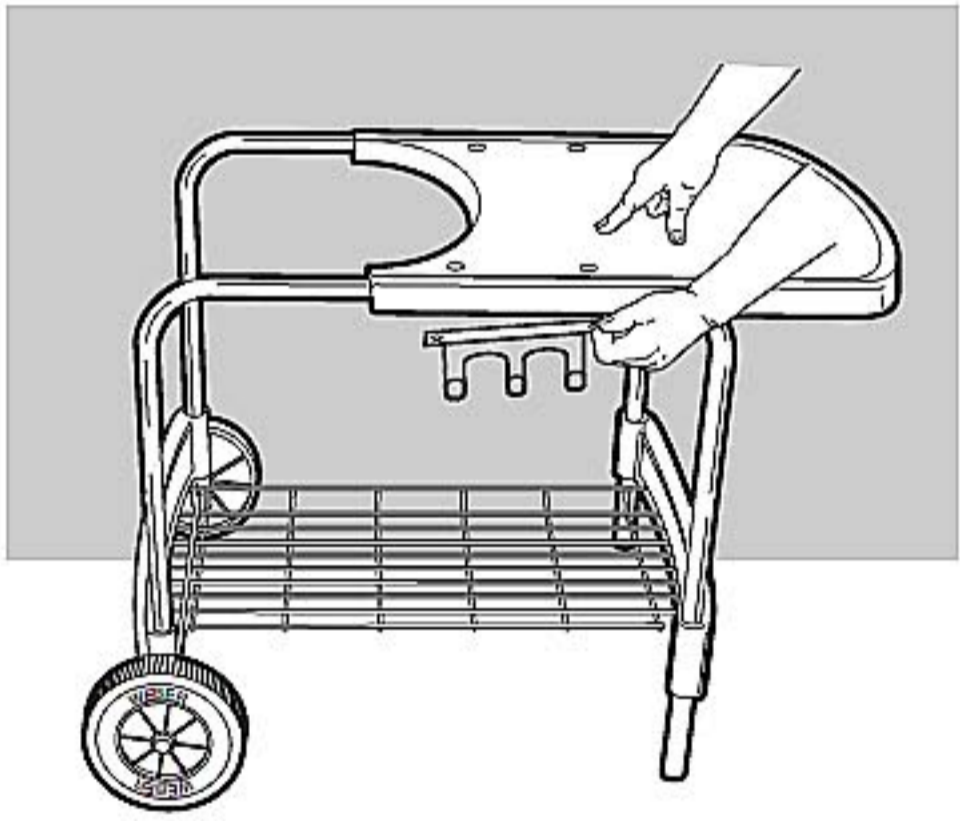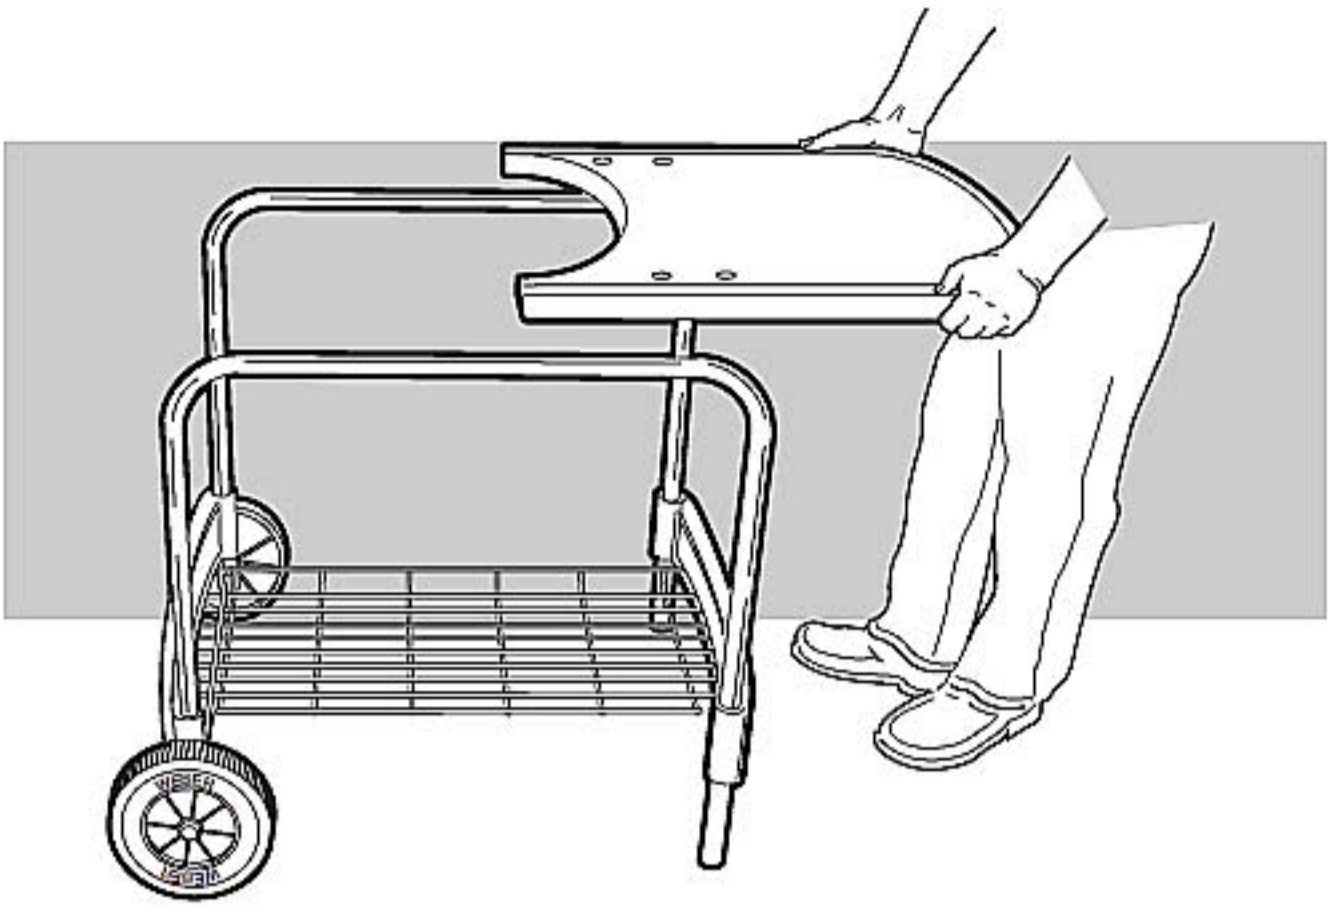


7

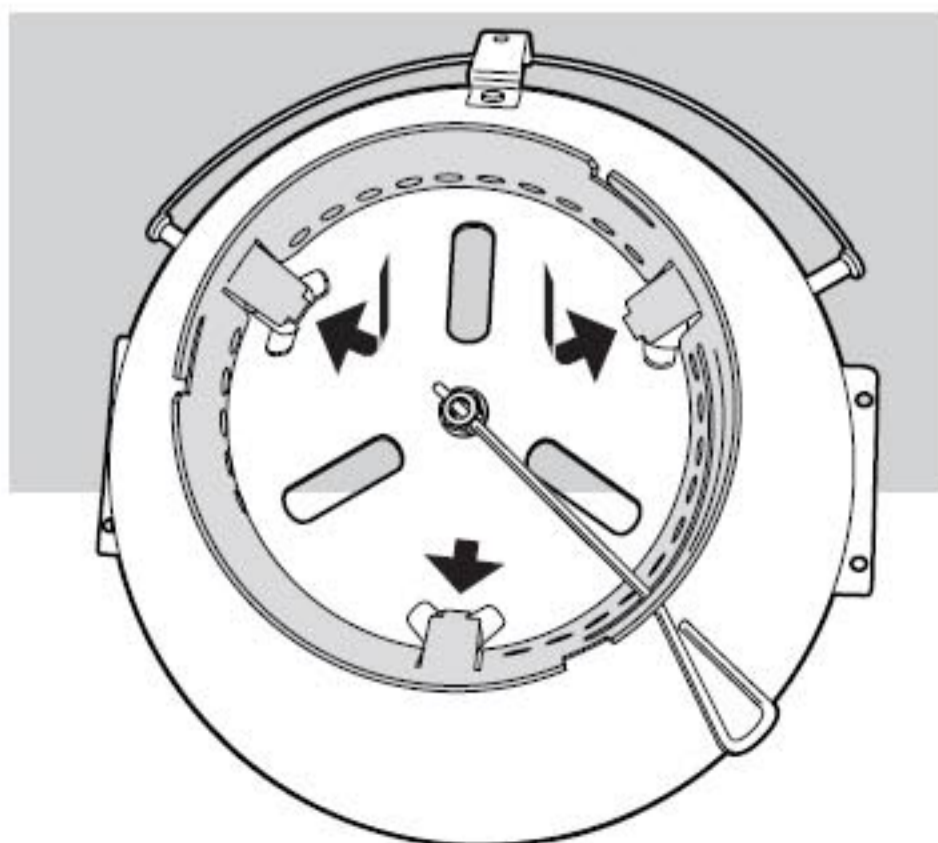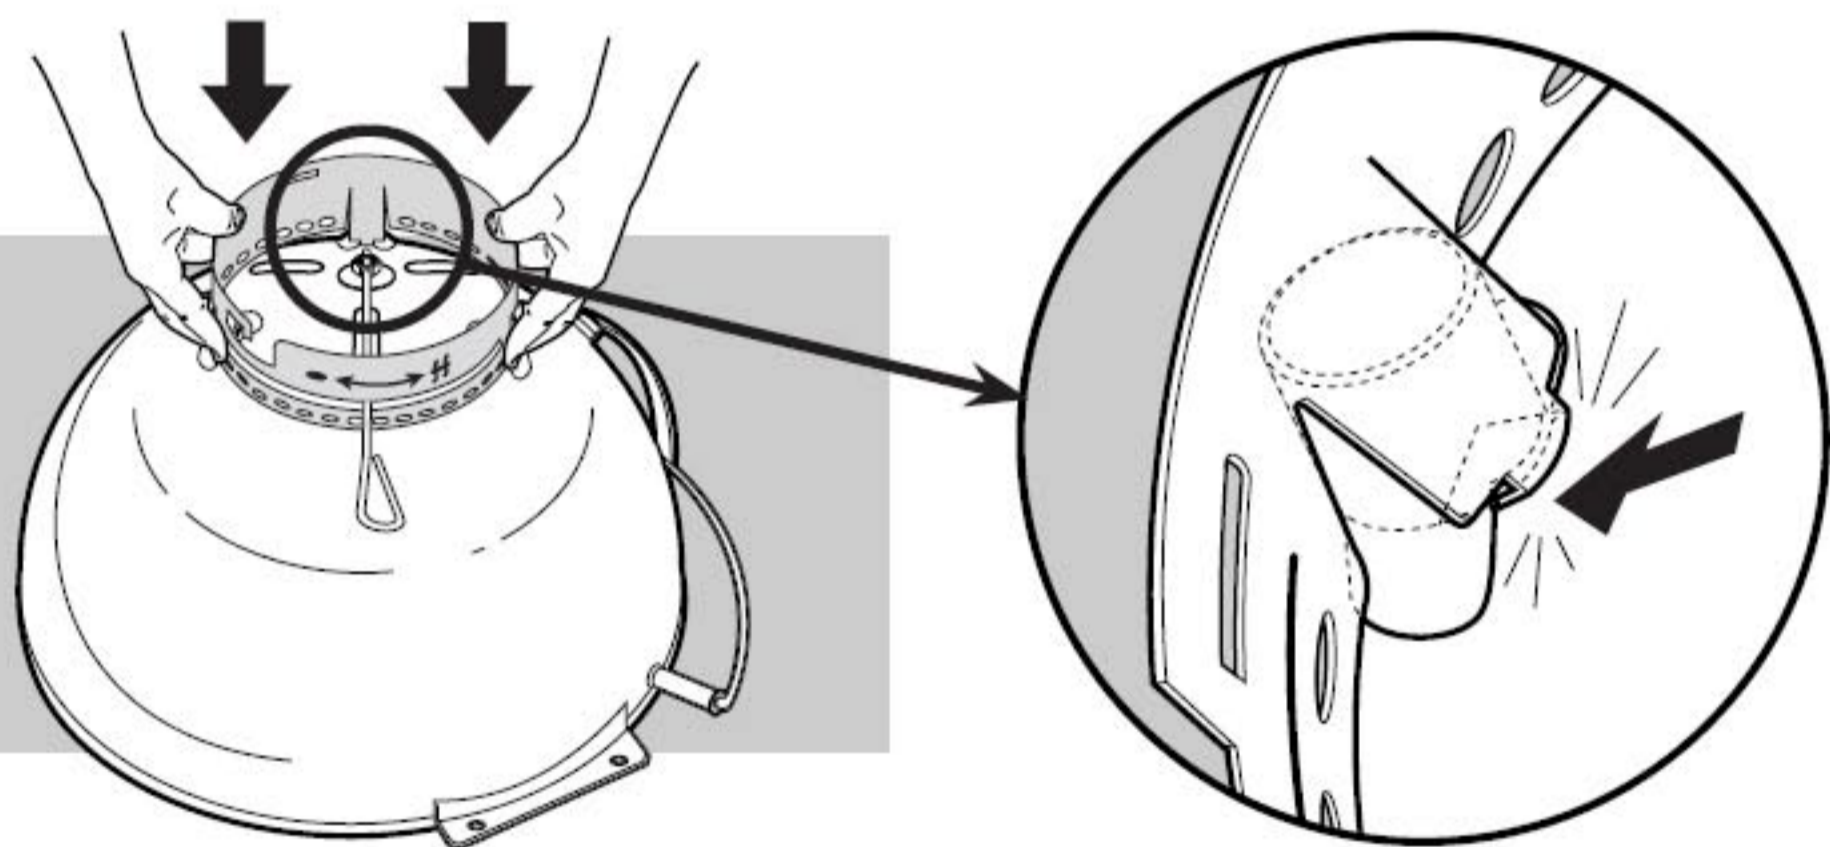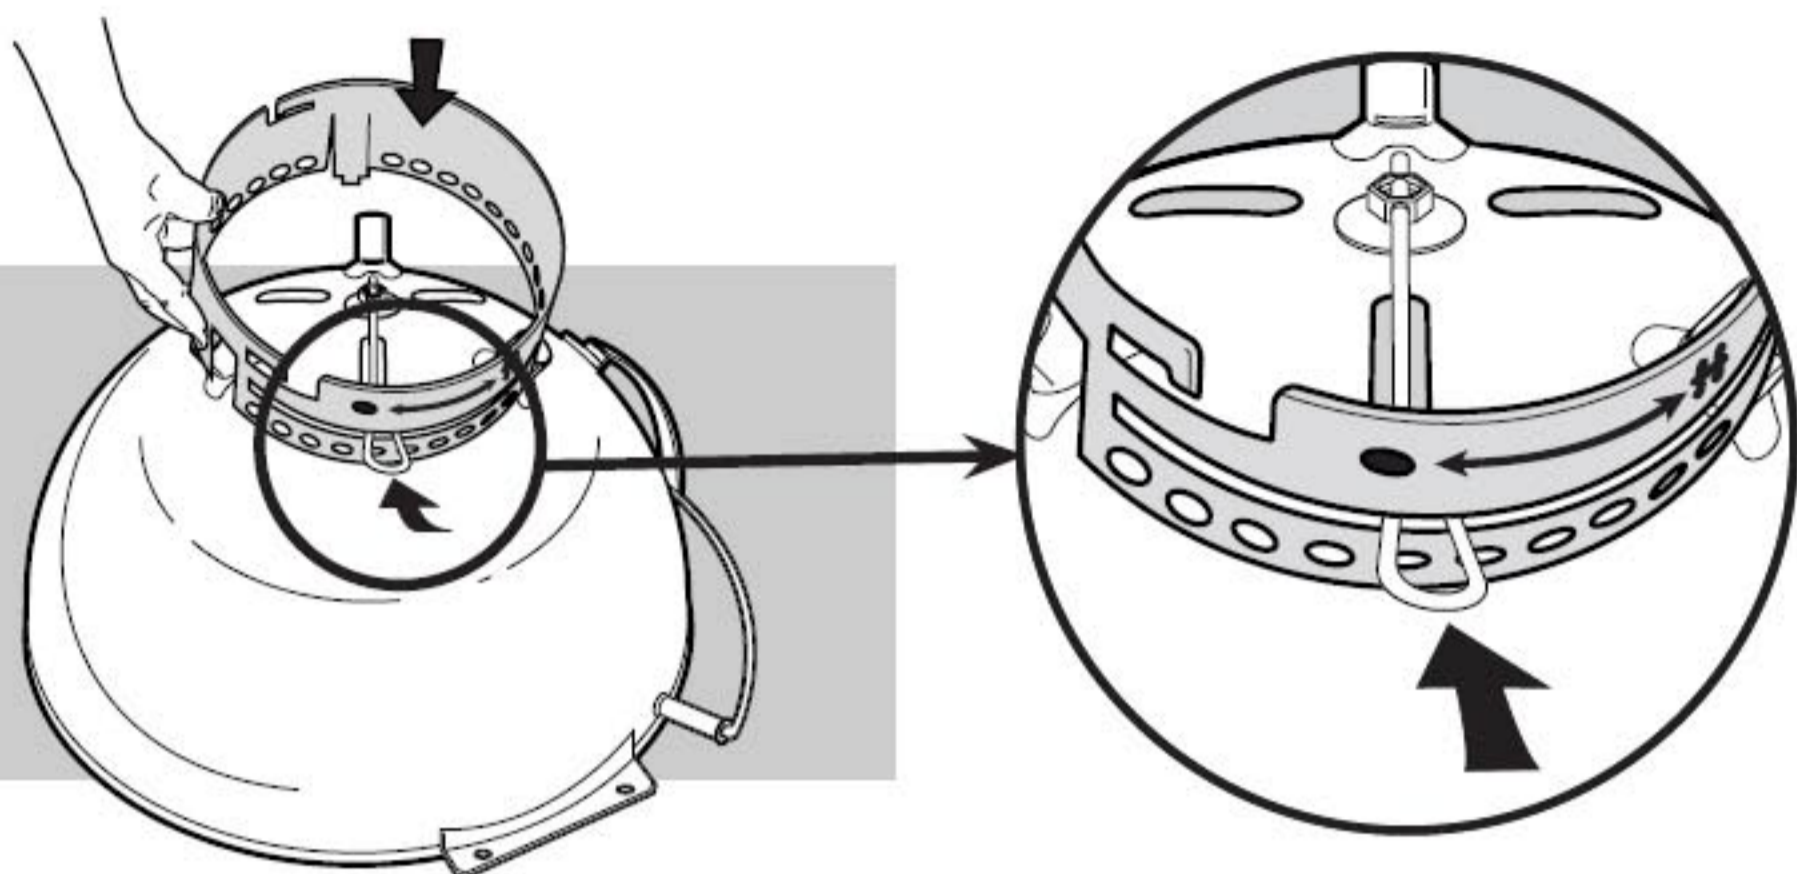   

8

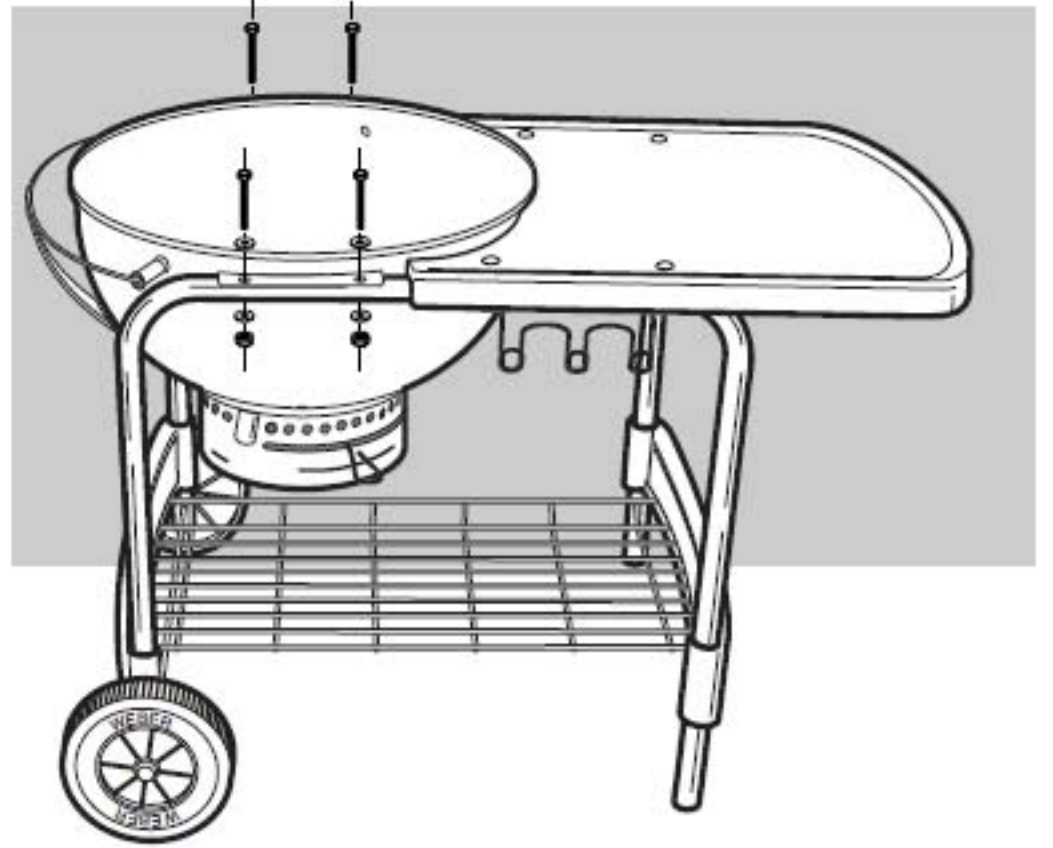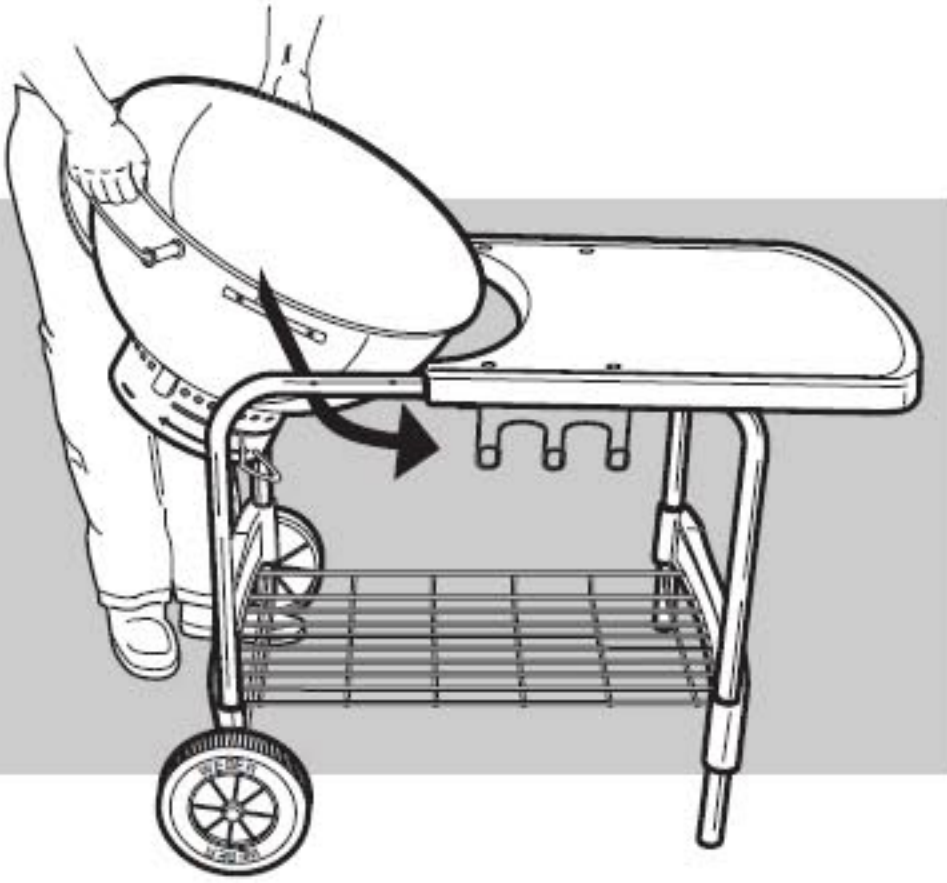  


9

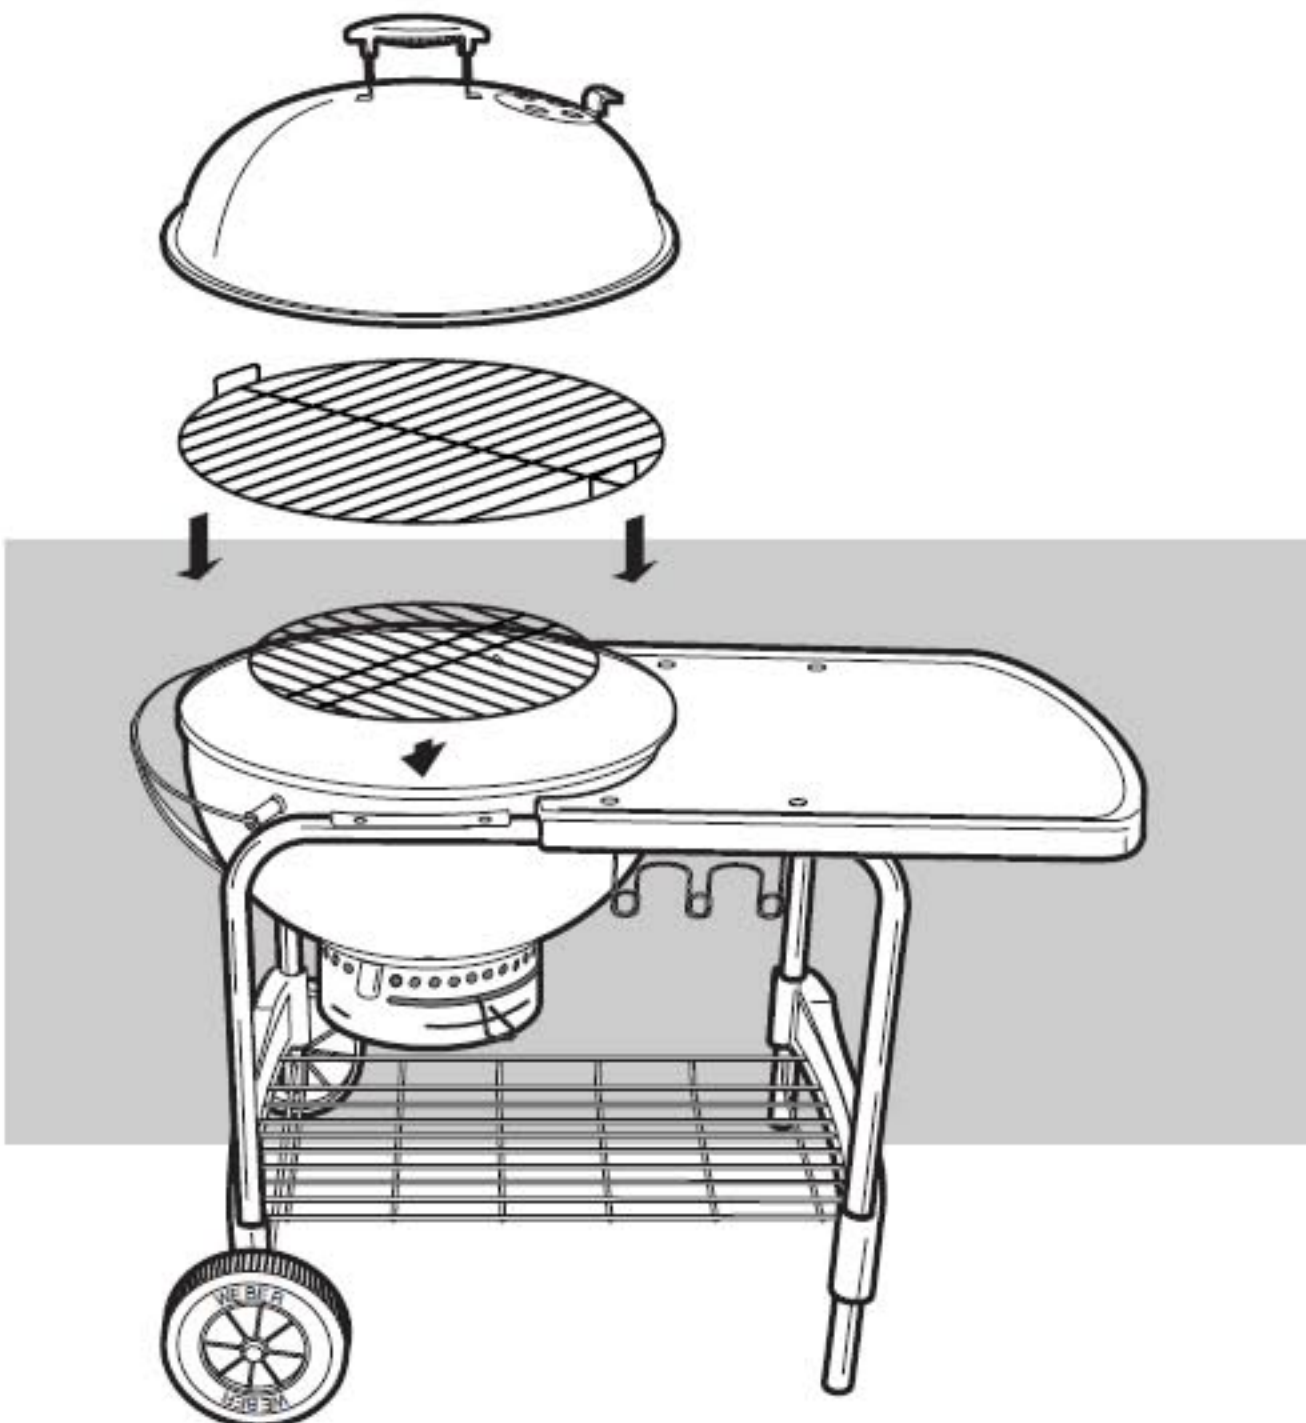 




## Charcoal Basket Instructions

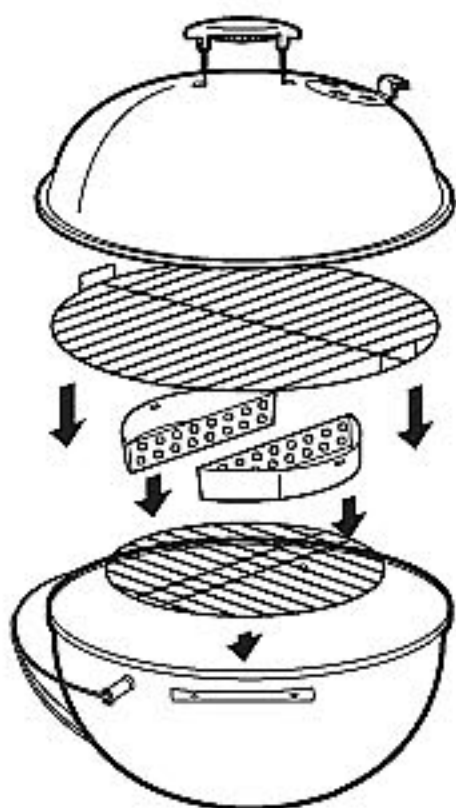 

**22½ inch  
(57 cm)**

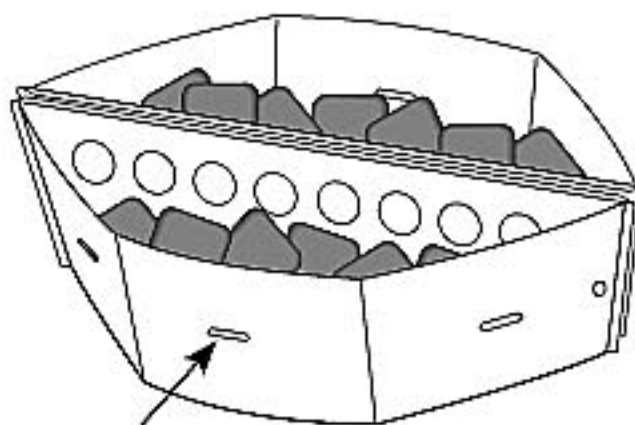 

US

Charcoal baskets allow for convenient Indirect and concentrated Direct cooking. Slots on baskets mark the recommended fill line.

PT

As cestas de carvão vegetal proporcionam um cozimento direto concentrado e indireto conveniente. As ranhuras na cesta marcam a linha de enchimento recomendada.

NO

Kullkurver tillater lettvent indirekte og konsentrert direkte steking. Rillen på kurven markerer det anbefalte feltområde.

DK

Trækulskurv medfølger til praktisk indirekte og koncentreret direkte madlavning. Huller i kurven viser, hvortil kullene bør fyldes.

ES

Las canastas para el carbón permiten cocinar con cocción Indirecta, una manera conveniente, al igual que con cocción Directa, una manera concentrada. Las muescas en las canastas marcan la línea recomendada de llenado.

FI

Hiilikorit mahdollistavat epäsuoran ja keskitetyn suoran grillauksen. Korissa olevat reiät merkitsevät suositetun täyttöviivan.

FR

Les paniers à charbon de bois facilitent la cuisson directe ou indirecte. Leurs fentes indiquent le niveau de remplissage recommandé.

IT

Grazie ai cestini per il carbone di legno, è possibile eseguire la cottura sia con il pratico metodo indiretto che con il metodo diretto a calore concentrato. Le fessure sulle pareti del cestino servono ad indicare il livello di riempimento suggerito.

SE

Brikettkorgar gör det enkelt vid både indirekt och koncentrerad, direkt grillning. Springor på korgarna visar hur högt upp briketter bör fyllas på.

DE

Die Holzkohlebehälter eignen sich für die indirekte wie auch die konzentrierte direkte Grillmethode. Die Schlitze am Behälter zeigen die empfohlene Füllmenge an.

NL

Met de houtskoolmandjes kunt u gemakkelijk indirect en geconcentreerd direct grillen. De gleuf op de mandjes geeft de aanbevolen vullijn aan.

PL

Koszyczki na brykiety ułatwiają pieczenie metodą pośrednią i intensywne pieczenie metodą bezpośrednią. Otwory w zbiornikach wyznaczają zalecany poziom ich napełnienia.

RU

Корзинки древесного угля допускают удобное не прямое и концентрированное прямое приготовление пищи. Прорези на корзинках указывают рекомендуемый уровень заполнения.


FC

Les paniers à charbon sont pratiques ; ils permettent une cuisson Indirecte comme une cuisson Directe concentrée. Des fentes situées sur les paniers indiquent la limite maximale de remplissage conseillée.



## CHARCOAL DIVIDERS INSTRUCTIONS

 
18½ inch  
(47 cm)

1

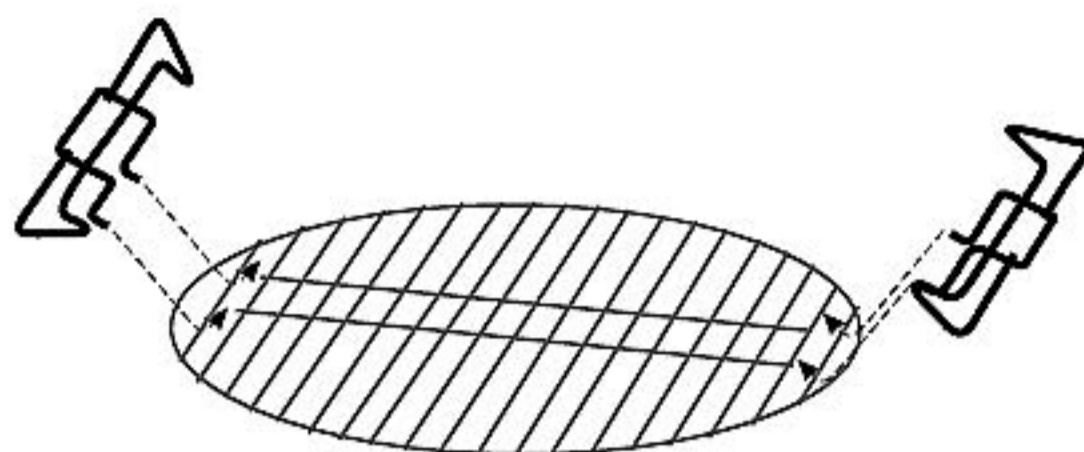


2

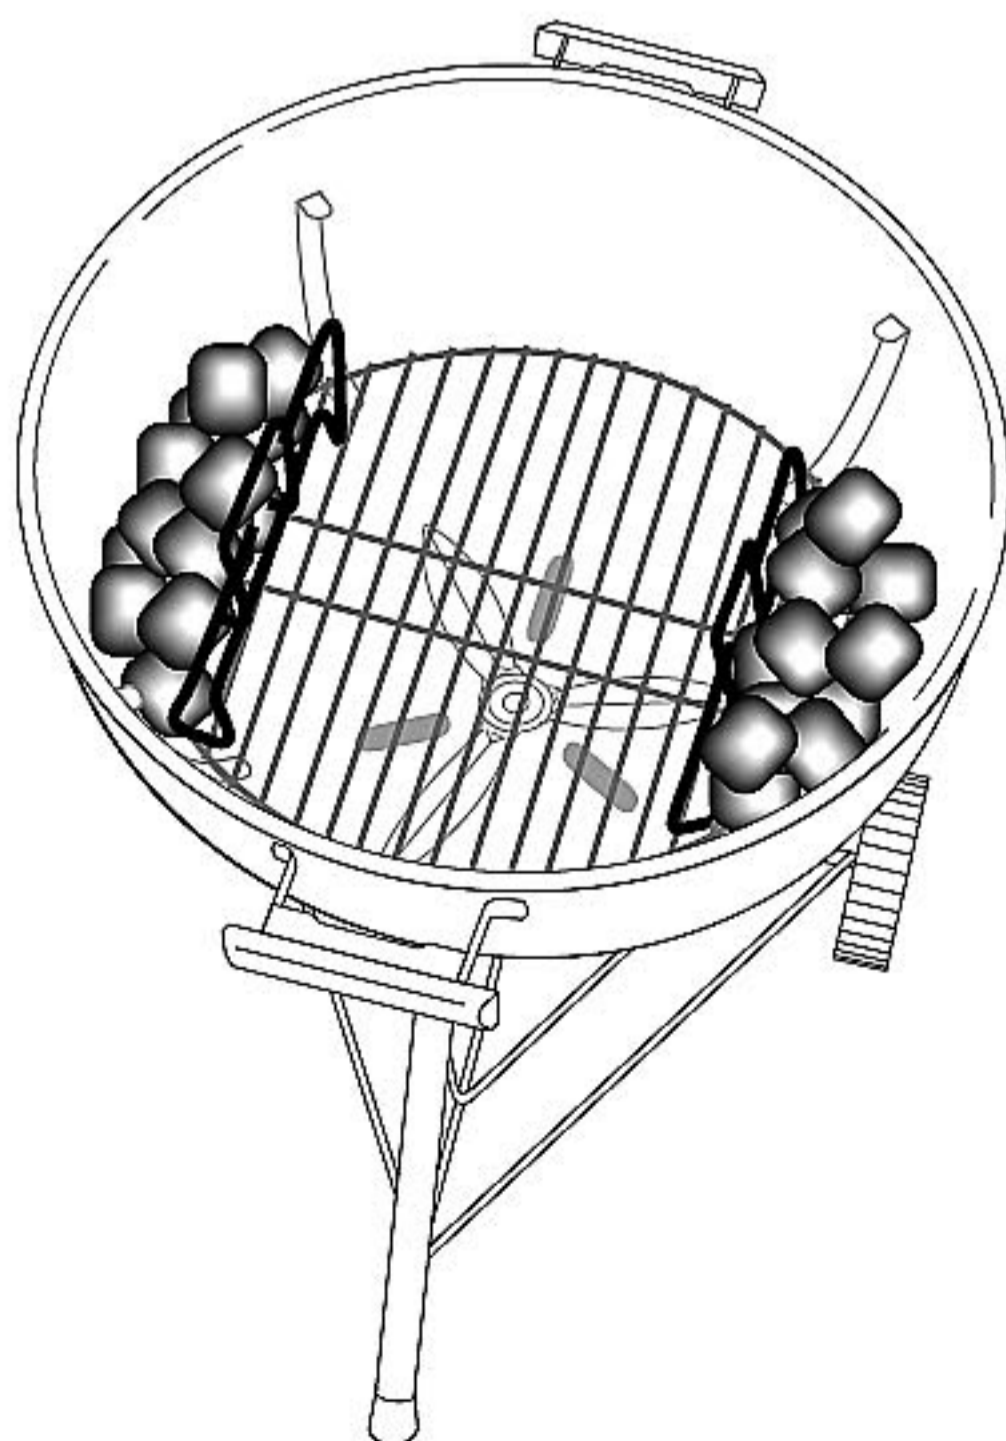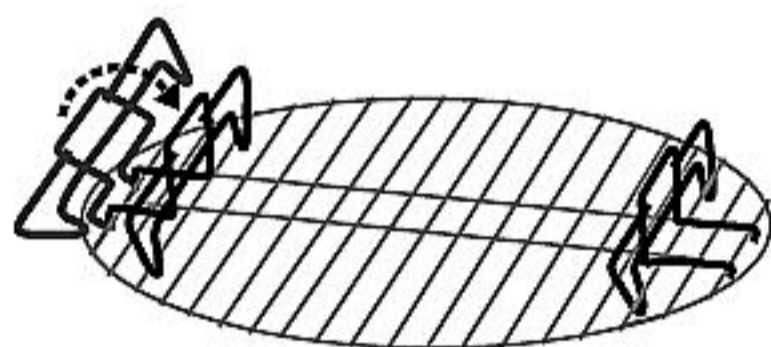  

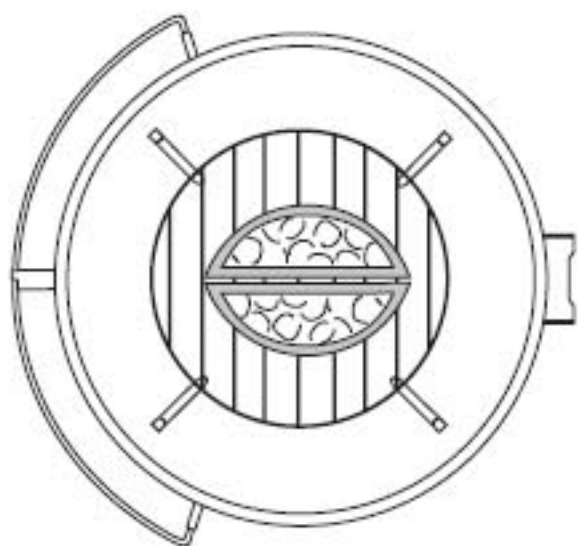 

DIRECT COOKING

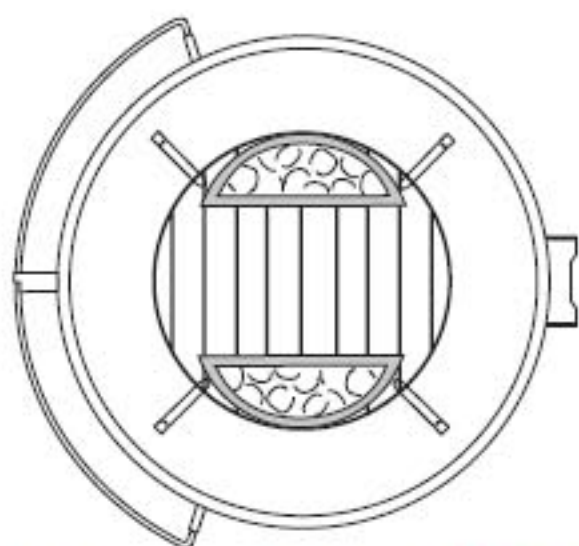 




INDIRECT COOKING

US

**Direct Cooking:** Place Char-Baskets with flat sides together in center of charcoal grate. **Indirect Cooking:** Place Char-Baskets on sides of kettle with "flaps" of hinged cooking grate above baskets.

---

   10

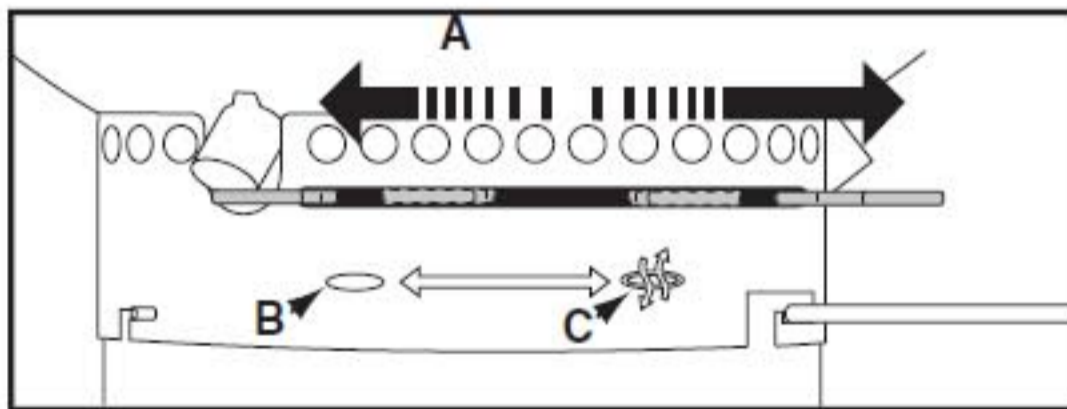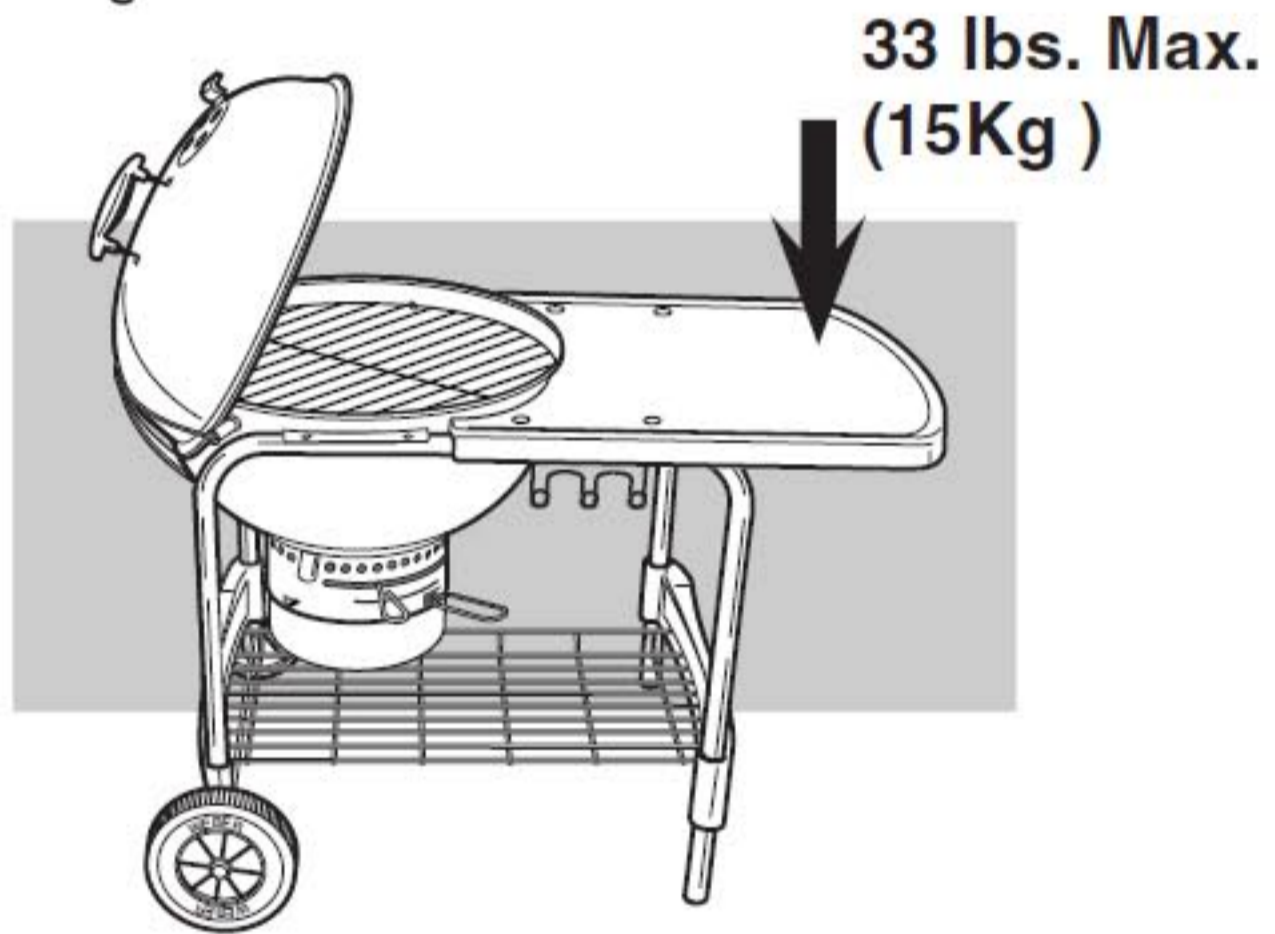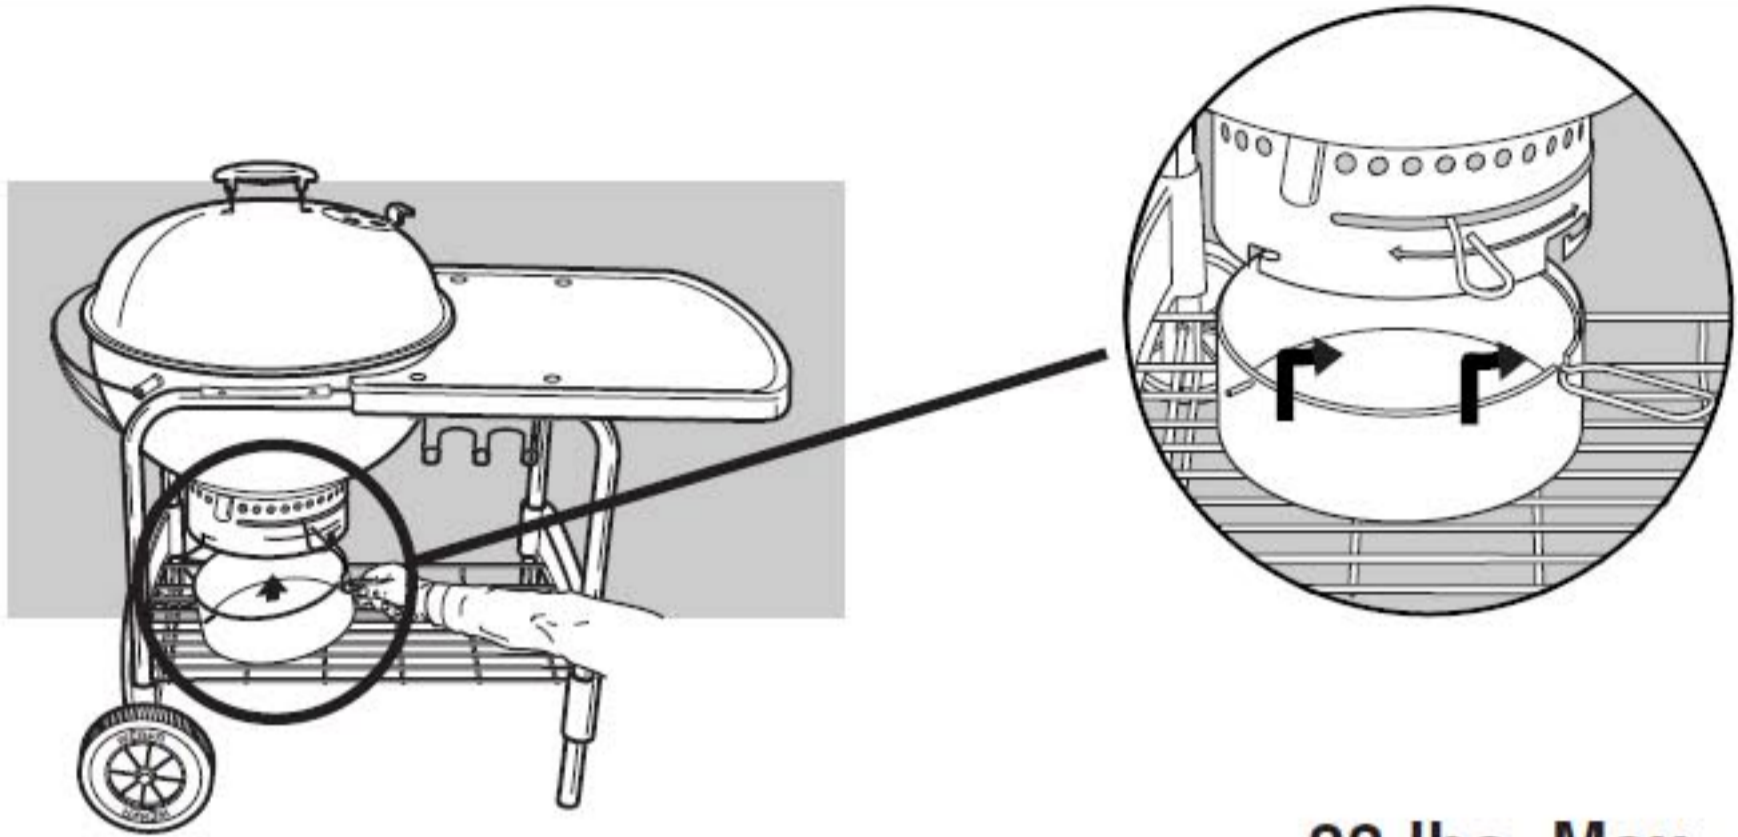

US A - Clear ashes B - Vents closed C - Vents open

**⚠WARNING:** When using liquid starters always check ash catcher before lighting. Fluid can collect in the ash catcher and could ignite, resulting in a fire below the bowl. Remove any fluid from the ash catcher before lighting charcoal.

US

Weber-Stephen Products Co., (Weber) hereby warrants to the ORIGINAL PURCHASER of this Weber® One-Touch® Silver, One-Touch® Gold, One-Touch® Platinum, Smokey Mountain Cooker™, and Ranch® grills, that it will be free from defects in material and workmanship from the date of purchase as follows:

Cooking / Charcoal grates	1 year
Stainless Steel One-Touch™ Cleaning System (One-Touch® Platinum)	10 years
Bowl and lid against rust / burn-through	10 years
Nylon handles	10 years
Thermoplastic/Thermoset Parts(One-Touch® Platinum)	10 years excluding fading
All remaining parts	5 years

When assembled and operated in accordance with the printed instructions accompanying it. Weber may require reasonable proof of your date of purchase. THEREFORE, YOU SHOULD RETAIN YOUR SALES SLIP OR INVOICE AND RETURN THE WEBER LIMITED WARRANTY REGISTRATION CARD IMMEDIATELY.

This Limited Warranty shall be limited to the repair or replacement of parts which prove defective under normal use and service and which on examination shall indicate to Weber's satisfaction they are defective. If Weber confirms the defect and approves the claim, Weber will elect to repair or replace such parts without charge. If you are required to return defective parts, transportation charges must be prepaid. Weber will return parts to the purchaser, carriage or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, vandalism, improper installation or improper maintenance or service, or failure to perform normal and routine maintenance. Deterioration or damage due to severe weather conditions such as hail, hurricanes, earthquakes or tornadoes, discoloration due to exposure to chemicals, either directly or in the atmosphere, is not covered by this Limited Warranty.

There are no other express warranties except as set forth herein, and any applicable implied warranties of merchantability and fitness are limited in duration to the period of coverage of this express written Limited Warranty. Some regions do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

Weber is not liable for any special, indirect or consequential damages. Some regions do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

Weber does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return or replacement of its equipment; and no such representations are binding on Weber.