



DO NOT SEND THIS PRODUCT TO THE PLACE OF PURCHASE

For product questions:
Sunbeam Consumer Service
USA : 1.800.458.8407
Canada : 1.800.667.8623
www.sunbeam.com

DO NOT SEND PRODUCT TO THE ABOVE ADDRESS

©2003 Sunbeam Products, Inc. All rights reserved.
SUNBEAM® is a registered trademark of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc.
Boca Raton, Florida 33431

NO RETORNE ESTE PRODUCTO AL LUGAR DONDE LO COMPRÓ

Para preguntas sobre los productos:
Sunbeam Consumer Service
EE.UU. : 1.800.458.8407
Canadá : 1.800.667.8623
www.sunbeam.com

NO ENVÍE PRODUCTO A LA DIRECCIÓN ANTERIOR

©2003 Sunbeam Products, Inc. Todos los derechos reservados.
SUNBEAM® es una marca registrada de Sunbeam Products, Inc.
Distribuido por Sunbeam Products, Inc.
Boca Raton, Florida 33431

Printed in China

Impreso en China


WELCOME
Now you can quench your thirst anytime with quick, healthy and delicious smoothies created in your SUNBEAM® Smoothie Maker!
KNOW YOUR SUNBEAM® SMOOTHIE MAKER
A. Stir stick for creating an even and smooth consistency
B. Locking lid for added convenience and safety
C. Easy-to-use pour spout for quick and precise dispensing
D. 56-oz. family-size plastic jar
E. Locking jar for safety and enhanced performance
F. Jar base
G. 500-watt motor for exceptional ice crushing power
H. Pulse/Ice Crush button provides a burst of high speed for crushing ice for smooth, frozen drinks
I. Low button runs Smoothie Maker at low speed for initial mixing of ingredients or while using pour spout
J. High button runs Smoothie Maker at high speed for final mixing of ingredients
K. Off button shuts Smoothie Maker off when either Low or High button is pressed
USING YOUR SMOOTHIE MAKER
Follow these simple steps to make a delicious, healthy smoothie from your favorite ingredients:
CLEAN AND ASSEMBLE
Before using your Smoothie Maker for the first time, clean and assemble it according to the instructions under "Care and Cleaning of Your Smoothie Maker."
ADD LIQUIDS
Add any combination of liquid ingredients to the Smoothie Maker jar, including fruit, milk, juice, yogurt, soft tofu or herbal supplements. Use a recipe or experiment with your favorite foods and flavors!
For 2 cups of smoothie, use at least 8 oz. of liquid. Do not run your Smoothie Maker without any liquid in the jar.
You can mix up to 7 cups (56 oz.) of ingredients as marked on the outside of the jar.
ADD ICE
Add ice or any frozen ingredients such as frozen fruit, frozen yogurt or ice cream. For thicker smoothies, add more frozen ingredients.
For thinner smoothies, add more liquid.
You can mix up to 7 cups (56 oz.) of ingredients as marked on the outside of the jar.
START SMOOTHING
Lock the lid into place on the top of the jar, insert the stir stick into the hole in the lid, and press the Low button; let your Smoothie Maker run on Low for 30 seconds to begin mixing of ingredients.
After 30 seconds, press the High button. Let your Smoothie Maker run on High until your desired smoothie consistency is reached.
While your Smoothie Maker is running, turn the stir stick counter-clockwise for thorough mixing.

SERVE

To serve, press the Low button. Hold a glass under the pour spout and depress the lever to dispense your smoothie. Do not run your Smoothie Maker on High while serving.
Give the stir stick a few counter-clockwise turns or add a few tablespoons of liquid to improve the flow of thicker smoothies.
When you are done serving, or when the jar is empty, press the Off button. Enjoy your smoothie!
You can continue making more smoothies by rinsing the jar, lid and stir stick. A quick way to rinse the pour spout is to fill the jar halfway with water, and with the Smoothie Maker running on Low, dispense the water through the pour spout into another container.

CARE AND CLEANING OF YOUR SMOOTHIE MAKER

To prolong the life of your Smoothie Maker, do not wash any parts in a dishwasher.
Before using your Smoothie Maker for the first time, and after each use, thoroughly wash the mixing jar, jar base, blade assembly, pour spout, lid and stir stick in warm, soapy water, rinse, and dry well.
To wash the plastic jar, remove it from the jar base by it turning counter-clockwise while on the motor housing. To wash the jar base, turn it counter-clockwise to remove it from the motor housing. Carefully remove the blade assembly and the silicon ring from the jar base and wash. Disassemble the spout lever to rinse out the spout.
To disassemble the spout for cleaning, first remove the lever by pushing upward on the stopper and sliding the lever off of the stopper pin. Remove cap by unscrewing it counter-clockwise. Remove spring. Remove stopper by pulling the rubber rim of the stopper. Do not separate the stopper pin from the stopper. Clean all parts in warm, soapy water, rinse, dry well, and reassemble in the order shown. Do not try to detach spout from the jar base.
As needed, clean the outside of the motor housing by unplugging your Smoothie Maker from the electrical outlet and wiping the housing with a damp, soft sponge and mild detergent. Wipe dry.
Periodically check all parts before reassembly. If the blades are stuck or difficult to turn, do not use your Smoothie Maker. Check blades by carefully turning them counter-clockwise. Blades should turn freely. If the jar is chipped or cracked, do not use your Smoothie Maker.
After all parts are clean and dry, replace the silicon ring inside the jar base with the flat side against the jar base and then replace the blade assembly. The upper silicon ring should be installed with the flat side against the jar. Fit the jar base to the top of the motor housing; the spout should be on the same side as, and centered above, the Pulse/Ice Crush button and the Low/High/Off buttons. Place the jar into the jar base so that the handle is on the same side as the Low/High/Off buttons. Store your Smoothie Maker with its lid ajar to prevent jar odors. Your Smoothie Maker is now ready to make more smoothies anytime! If you experience any problems with your machine, unplug it immediately from your electrical outlet, and contact your nearest authorized service center.

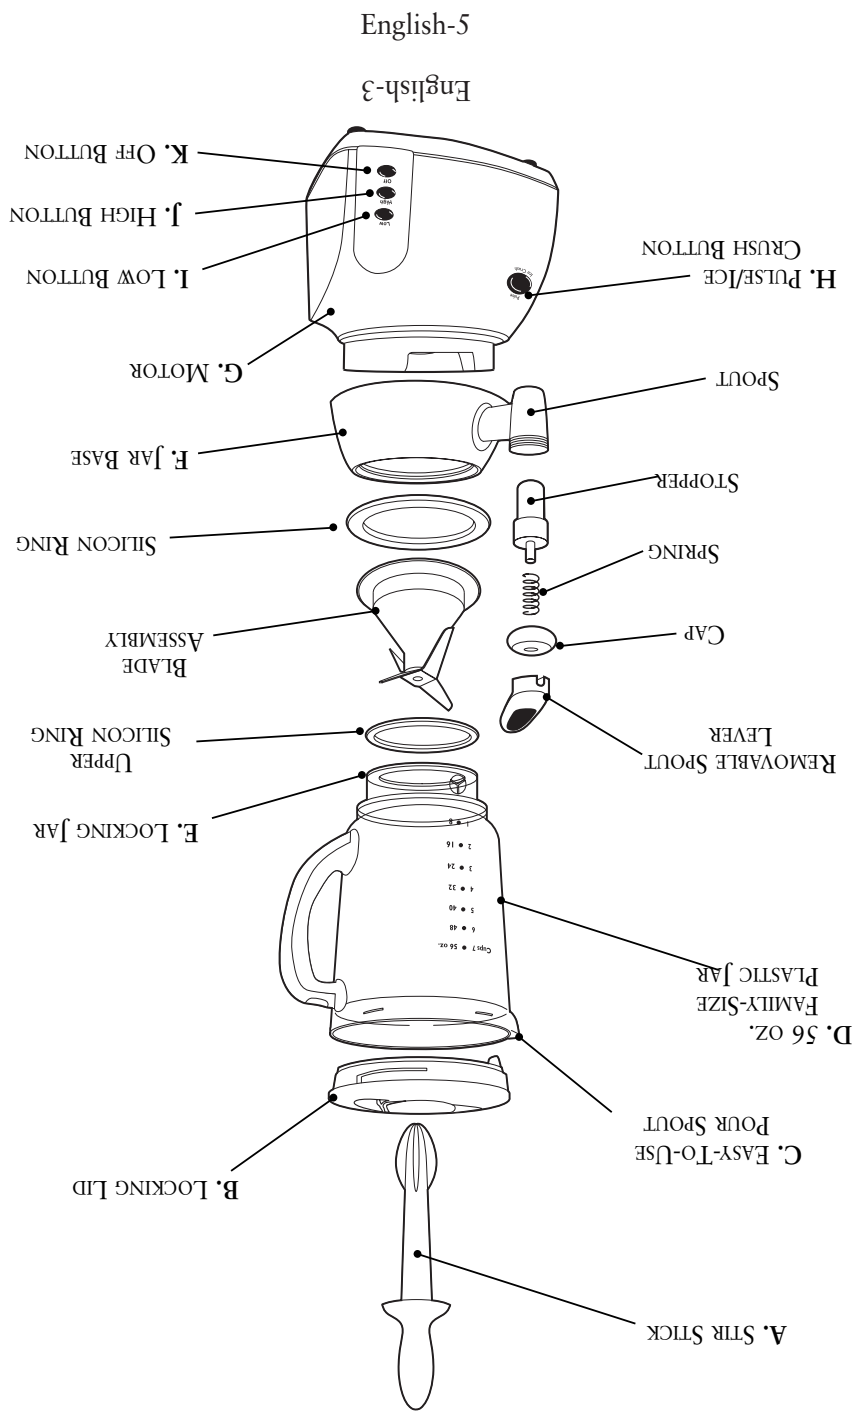

KNOW YOUR SUNBEAM® SMOOTHIE MAKER

Now you can quench your thirst anytime with quick, healthy and delicious smoothies created in your SUNBEAM® Smoothie Maker!

WELCOME

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A. - If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada - If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

English-1
English-2
English-3
English-4
English-5

SAVE THESE INSTRUCTIONS

- This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, reverse the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat this safety purpose of the polarized plug by modifying the plug in any way.
• The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a long cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the electrical rating of the blender (3.4 amperes). Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

POLARIZED PLUG INFORMATION

THIS SMOOTHIE MAKER IS DESIGNED FOR HOUSEHOLD USE ONLY
The maximum rating as marked on the unit is based on the attachment that draws the greatest load. Other recommended attachments may draw significantly less power.

THIS SMOOTHIE MAKER IS DESIGNED FOR HOUSEHOLD USE ONLY

- DO NOT use outdoors.
• DO NOT let the cord hang over edge of table or countertop.
• DO NOT let cord rest against hot surfaces.
• DO NOT leave the Smoothie Maker unattended while it is operating.



User Manual

Smoothie Maker

Manual de Instrucciones

Licuada para Hacer Smoothies

MODEL/ MODELO 4200



www.sunbeam.com

P.N. 113319

- To protect against risk of electrical shock, do not put Smoothie Maker base in water or other liquid.
• Close supervision is necessary when any appliance is used near children or incapacitated persons.
• Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
• Avoid contact with moving parts.
• DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Sunbeam Appliance Service Center for examination, repair or electrical or mechanical adjustment.
• Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons and/or damage to the unit. If scraping, folding, etc., is necessary, turn off and unplug the unit, and only use a rubber spatula.
• Blades are sharp. Handle carefully.
• To reduce risk of injury to persons, never place cutting blades on base without the container properly attached.
• Screw on container bottom firmly. Injury can result if moving blades become exposed.
• Always operate the Smoothie Maker with cover in place.
• Make sure that the voltage in your outlet is the same as the voltage indicated on the appliance (120 V, 60 Hz).
• Always hold container while processing. If the container should turn when the motor is switched "On," switch "Off" immediately and tighten the Smoothie Maker container into the threaded container bottom.
• When blending hot liquids, remove the feeder cap from the two-piece cover. DO NOT fill the container beyond the four-cup level. Always begin processing at the lowest speed setting. Keep hands and other exposed skin away from the cover opening to prevent possible burns.

READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed including the following:

IMPORTANT SAFEGUARDS