

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



SUNBEAM 2567 Owner's Manual

[Shop genuine replacement parts for SUNBEAM 2567](#)



[Find Your SUNBEAM Small Appliance Parts - Select From 72 Models](#)

----- Manual continues below -----

FEATURES OF YOUR MIXMASTER® HERITAGE SERIES™ HAND MIXER

- A. **SPEED CONTROL DIAL/ATTACHMENT EJECT BUTTON** – Speed control button that also functions as the beater eject button.
- B. **BURST OF POWER® BUTTON** – This feature allows for an added boost to the selected speed setting at the press of a button.
- C. **ERGONOMIC HANDLE** – The soft-grip open handle has been ergonomically designed to provide comfort to prevent hand fatigue during heavy or long mixing tasks.
- D. **HEEL REST** – The newly designed heel rest provides exceptional stability.
- E. **BEATERS** – For creaming butter and sugar, plus mixing cake batter.
(All Models)
- F. **DOUGH HOOKS** *(Models 2547, 2551, 2564, 2565, 2566, 2567)*
- G. **WHISKS** *(Models 2547, 2551, 2564, 2565, 2566, 2567)* ONE whisk *(Models 2556, 2557, 2558, 2559)*
- H. **DISPLAY STAND** *(Model 2547, 2564, 2565, 2566, 2567)* – Provides attractive storage with convenient accessory drawer.
- I. **STORAGE STAND** *(Model 3156, 2560, 2561, 2562, 2563)* – Saves space with compact design.
- J. **STAINLESS STEEL BOWL** *(Model 2551)* – Dual purpose bowl with lid for mixing and storing.


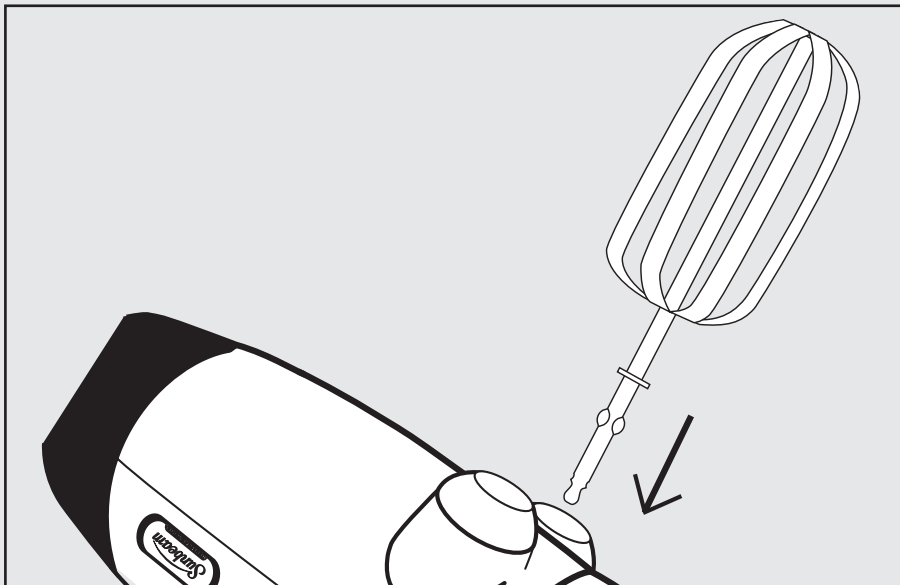


FIGURE A / FIGURA A

FEATURES /

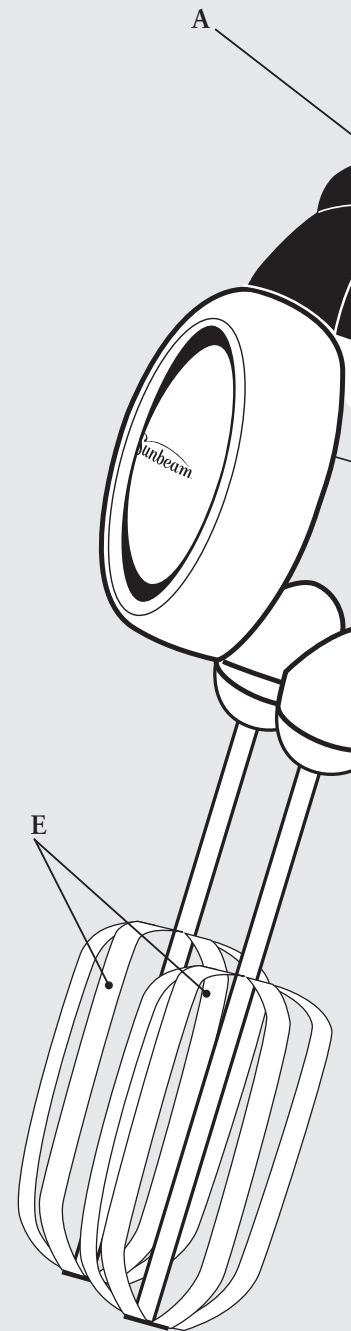

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- To protect against risk of electrical shock, do not put hand mixer in water or other liquid. This may cause personal injury and/or damage to the product.
- Close supervision is necessary when hand mixer is used by or near children, or incapacitated persons.
- Unplug from outlet while not in use, before putting on or taking off parts and before cleaning.

PREPARING THE

The SUNBEAM® Mixmaster® Her assist you in preparing delicious f Before using your mixer for the fi water. Rinse and dry thoroughly.

INSTALLING ATTACHM

Make sure the speed control is in an electrical outlet. Insert attachm the opening on the bottom of the until it clicks into position. *(See F Turn mixer on and adjust speed s*

NOTE: The whisks may be insert