

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HAMILTON BEACH 59785R Owner's Manual


[Shop genuine replacement parts for HAMILTON
BEACH 59785R](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

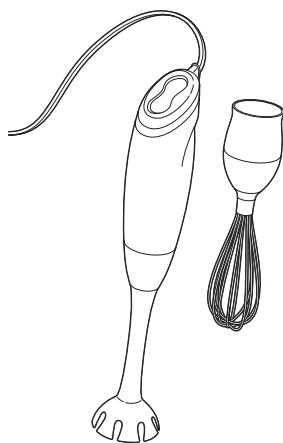

Hand Blender Mélangeur à main Batidora de inmersión

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

**Read before use.
Lire avant l'utilisation.
Lea antes de usar.**



In an effort to reduce paper waste, Hamilton Beach Brands, Inc. has reduced the size of this Use and Care and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-vous à protéger l'environnement!

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2828

México: 01.800.71.16.100

840121701

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put motor end, cord or plug in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Avoid contact with moving parts. Keep hands, hair, clothing, and utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A scraper may be used but must be used only when the unit is not running.
5. The use of attachments not recommended or sold by the appliance manufacturer for use with this model may cause fire, electric shock, or injury.
6. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
7. Blades are sharp, handle carefully.
8. Do not use over a stove or other heat source.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surfaces, including the stove.
12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
13. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS

Other consumer safety information

This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

BEFORE FIRST USE: Wash attachments according to instructions.

Parts and features



1. Speed Control Button
2. Motor Housing
3. MAX Immersion Limit
4. Shaft
5. Blade Attachment

How to use the

⚠ WARNING Personal

- Never wash attachments in water.
- Always inspect attachments for damage.
- Do not use cracked, bent or damaged attachments.

1. Place food in a tall, deep container. Solid foods should be no larger than 1/2 inch.
2. Attach blade or whisk attachment to the hand blender upright and turn counterclockwise to loosen.
3. Plug into outlet.
4. Grasp unit in hand. Push blade through the food; use speed control to adjust blending.
5. Do not immerse attachments in hot liquids.
6. Unplug from outlet when finished.

Helpful hints

- To use the hand blender in a container, do not place it directly on the stove. The hand blender should be used over a heat source.
- To puree foods, liquid is needed. Add milk, or cream, until desired consistency.
- This appliance is not intended for use as a mixer after blending.
- For thorough blending, move the hand blender up and down until smooth.
- To achieve best blending results, use a tall container.
- For easy cleanup, unplug hand blender and run under running water immediately.

