

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HAMILTON BEACH 49315 Owner's Manual


[Shop genuine replacement parts for HAMILTON
BEACH 49315](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

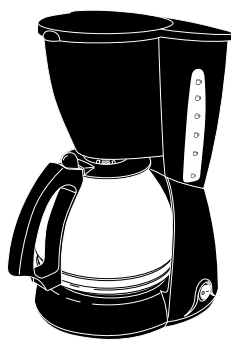

Coffeemaker
Cafetières
Cafeteras

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

IMPORTANT SAFEGUARDS

- Do not use a cracked carafe or one with loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- Be certain carafe lid is securely in place during brew cycle and when pouring coffee. Do not use force when placing lid on carafe.
- Do not place coffeemaker on or near a hot gas or electric burner or in a heated oven.
- To disconnect coffeemaker, turn controls to OFF and then remove plug from wall outlet.
- WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

Other consumer safety information


This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with your coffeemaker.

Parts and features

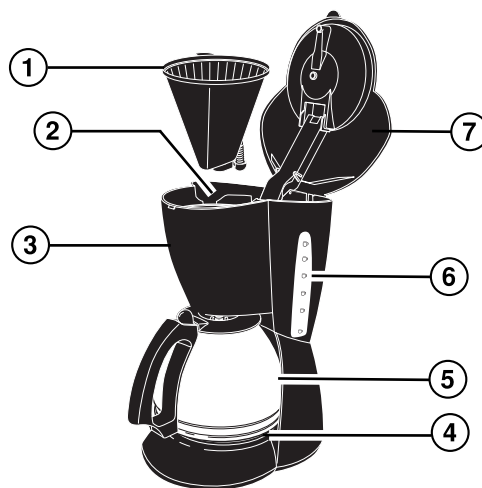

- | | |
|-----------------------|-----------------|
| 1. Filter Basket | 5. Carafe |
| 2. Water Reservoir | 6. Water Window |
| 3. Filter Basket Well | 7. Lid |
| 4. Keep-Hot Plate | |

NOTE: Picture references major components for all coffeemakers covered by these instructions.

How to make coffee

⚠ WARNING

Burn Hazard.

To avoid hot coffee overflowing from the filter basket:

Features

Pause 'N Brew

This feature allows you to pause the entire brew cycle to add cream or sugar. The flow of coffee will resume automatically. Do not remove the lid or the carafe may overflow.

Brew Strength

This feature allows you to brew coffee. To adjust the strength select the desired strength.

Permanent Filter

The permanent filter allows you to brew coffee. Place the permanent filter in the filter basket facing the hot water reservoir. Do not run the coffee maker in top rack of the dishwasher.

Automatic Clock Timer

The Automatic Clock Timer allows you to brew coffee two hours before you wake up. Turn the clock to OFF and unplug the coffee maker.

Digital Display

(on select models)

To set clock

- Plug in the coffee maker.
- To set the clock, press the clock button.
- Press the up/down arrow buttons to set the time.

Auto Iced Coffee

(on select models)

To set auto iced coffee

- Make sure the coffee maker is plugged in.
- Fill the coffee reservoir with water.
- Press the auto iced coffee button.
- Once the coffee is brewed, the display will show the time to change the water.
- Once the coffee is brewed, the display will show the time to change the water.
- Once the coffee is brewed, the display will show the time to change the water.
- Once the coffee is brewed, the display will show the time to change the water.

Care and cleaning

To maintain the coffee maker:

To clean the coffee maker

- Place the filter basket in the sink.
- Pour the coffee into the reservoir.
- Plug the coffee maker in.
- After the coffee is brewed, wait 5 minutes.
- Wait 5 minutes before turning the coffee maker ON again.
- Empty the water reservoir.
- Turn the coffee maker OFF.