

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




# HAMILTON BEACH 45237 Owner's Manual

[Shop genuine replacement parts for HAMILTON  
BEACH 45237](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

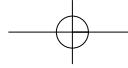

**READ BEFORE USE**  
**LIRE AVANT UTILISATION**  
**LEA ANTES DE USAR**

Visit [hamiltonbeach.com](http://hamiltonbeach.com) for delicious recipes, tips, and to register your product online!



Consultez [hamiltonbeach.ca](http://hamiltonbeach.ca) pour de délicieuses recettes, des conseils pratiques et pour enregistrer votre produit !

¡Visite [hamiltonbeach.com.mx](http://hamiltonbeach.com.mx) para recetas deliciosas, consejos, y para registrar su producto en línea!

**Questions?**

Please call us – our friendly associates are ready to help.  
USA: 1.800.851.8900

**Questions?**

N'hésitez pas à nous appeler – nos associés s'empresseront de vous aider.  
CAN: 1.800.267.2826

**¿Preguntas?**

Por favor llámenos – nuestros amables representantes están listos para ayudar.

MEX: 01 800 71 16 100

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

 


**Hamilton**

**St**

**Thermal Coff**  
**Cafetière à caraj**  
**Cafetera de ja**

Engl  
Fran  
Espa




## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electric shock, do not place cord, plug or coffeemaker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet by firmly grasping the plug when either the coffeemaker or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Coffeemaker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or over hot surfaces, including stove.
11. The carafe is designed for use with this coffee maker. It never be used on a range top or in a microwave or convection oven.
12. Do not use carafe with loose or weakened lid.
13. To avoid accidents, do not pour in direction of face or feet.
14. Be certain carafe lid is securely in place during pouring when pouring coffee. Do not use force when lid is stuck.
15. To disconnect coffeemaker, turn controls to OFF and unplug from wall outlet.
16. Do not place coffeemaker on or near a hot burner or in a heated oven.
17. **WARNING:** To reduce the risk of fire or electrical shock, do not remove the bottom cover. No user serviceable parts. Repair should be done by authorized service personnel.
18. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS!

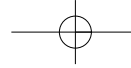



## OTHER CONSUMER SAFETY INFORMATION


**This appliance is intended for household use only.**

**WARNING! Shock Hazard:** This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.


The length of the cord used on this appliance reduce the hazards of becoming tangled in a longer cord. If a longer cord is necessary an extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so it does not drape over the countertop or tabletop where it could be stepped on or tripped over by children or accidentally tripped over.

 To avoid an electrical circuit overload, do not use other high wattage appliance on the same circuit with this appliance.

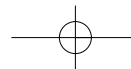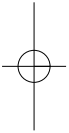



## Parts and Features

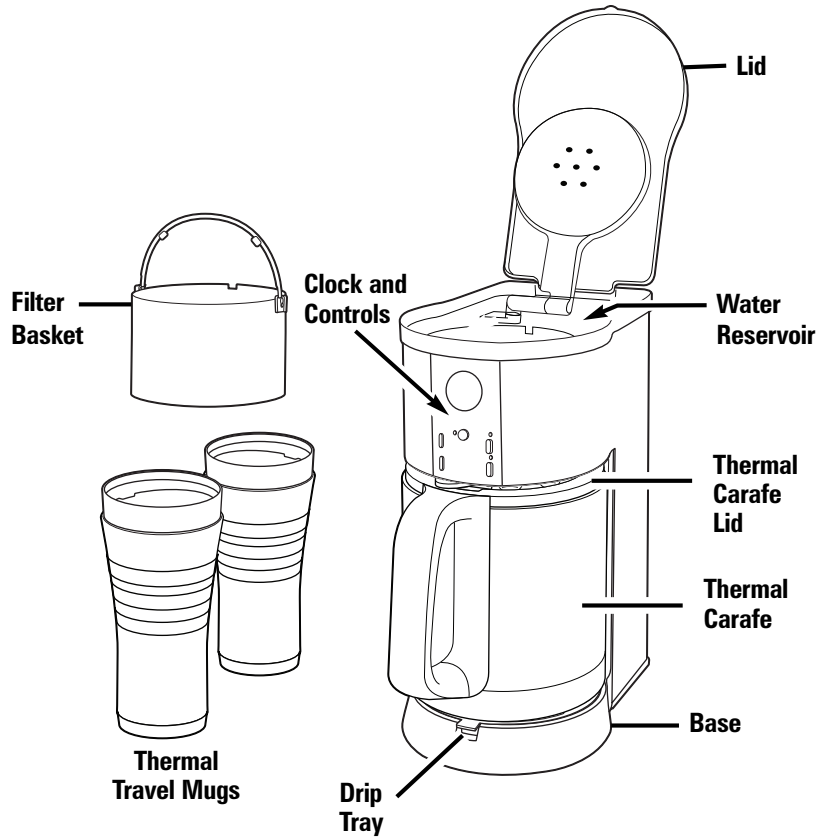 

## Optional Accessories

 



Gold Tone  
Permanent  
Coffee Filter



Water Filter

To Order Call:  
1-800-851-8900 (U.S.) • 1-800-2  
01-800-71-16-100 (Me  
or visit [hamiltonbeach.com](http://hamiltonbeach.com)



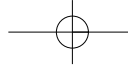


# How to Make Coffee


## Coffee Usage Chart:

- 1 scoop\* or level tablespoon ground coffee per cup
- 3 scoops\* or level tablespoons ground coffee per tray

 
\*Coffee scoop is optional feature on select models.

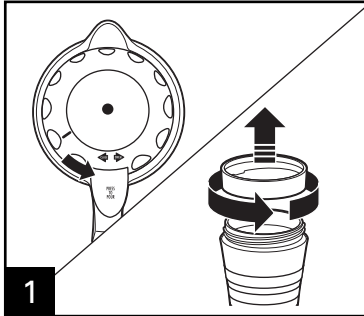

 **1** Remove thermal carafe lid or lid of thermal travel mug.

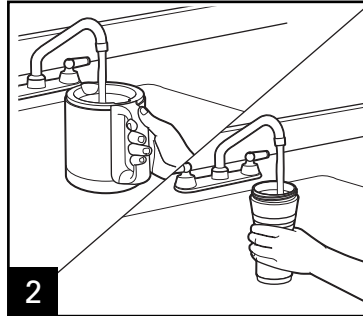

**2**

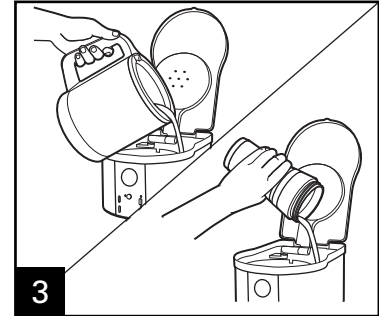 


**3**




**4**

 **WARNING:** for brewing brewing two ing coffee is

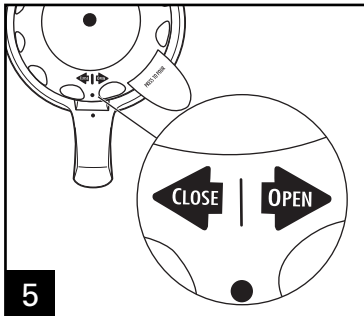


 **5** Align with open lock and twist to lock in place.

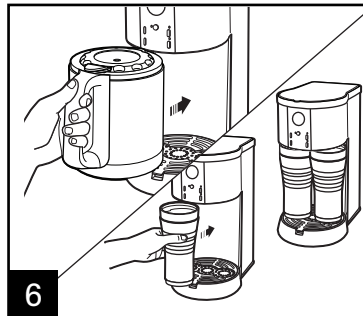


**6**

 **For Hotter Coffee:** Before brewing, fill carafe or thermal travel mug with hot tap water and let stand 1 minute then replace.

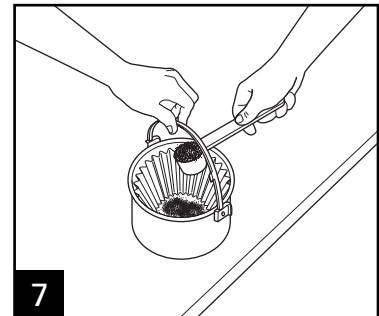


**7**

 Paper filter or optional permanent filter may be used.

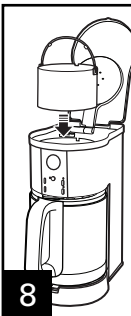


**8**

 Lock filter b **IMPORTANT** the way if fi not locked s




## How to Make Coffee (cont.)

 
**WARNING:** Do not remove carafe or thermal travel mug until the thermal travel mug light goes out. If coffeemaker overflows, allow the carafe and grounds to cool before cleaning the unit, cover the carafe, and do not touch.

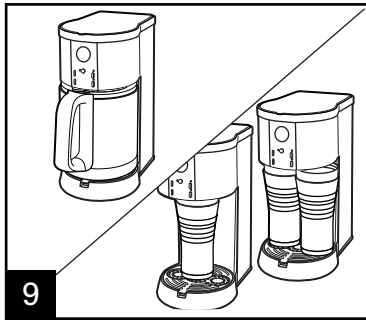

9

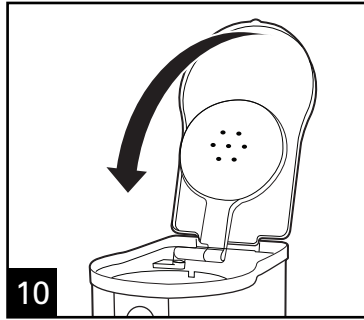 


10

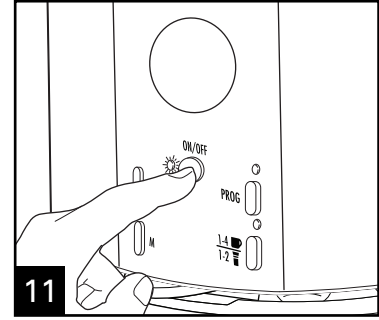 

11


Press  $\frac{1.4}{1.2}$  to activate thermal travel mug. Press  $\frac{1.4}{1.2}$  to activate stronger coffee. Press  $\frac{1.4}{1.2}$  to activate Coffeemaker. Press  $\frac{1.4}{1.2}$  to activate immediately.

## Programming

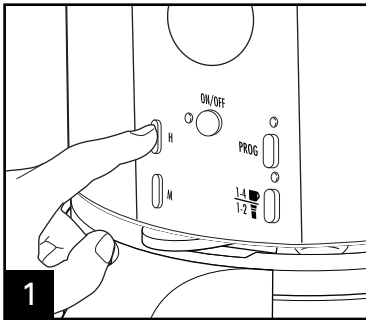 


1

 Press **H** and then **M** to set clock.

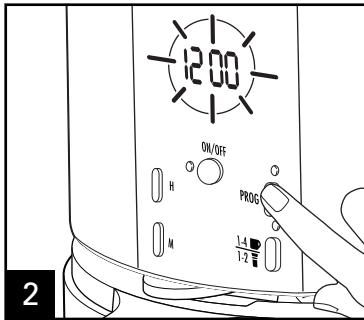

2

 Hold **PROG** until clock flashes.

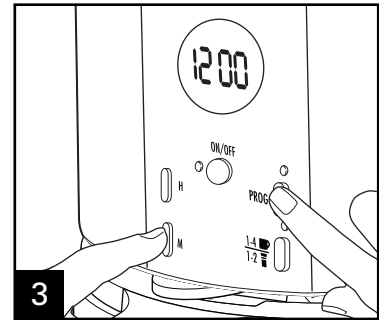

3

Continue holding **PROG** button, press **H** and **M** until the desired brewing start time is reached.



4

Press **PROG** to activate auto brew.

6


# How to Make Iced Coffee
 
## Coffee Usage Chart:


**1 mug** = 1/2 mug ice, 1 1/2 cups water, 3 scoops\* ground coffee

**2 mugs** = 1/2 mug (each) ice, 3 c. water, 6 scoops\* ground coffee


\*Coffee scoop is optional feature on select models

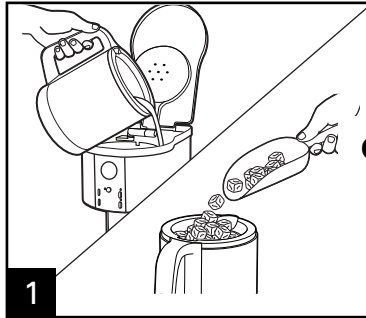

 
**1** Fill water reservoir to a maximum of 5 cups and thermal carafe with ice to just below inside rim.

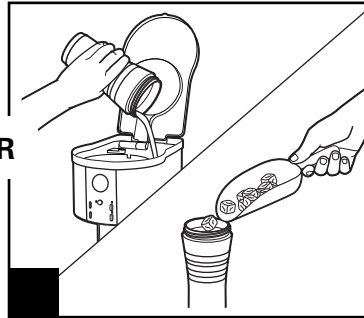

 
**OR** **WARNING:** Do not fill beyond [ ] for brewing one mug or [ ] for brewing two mugs. Hot overflowing coffee is a burn hazard.

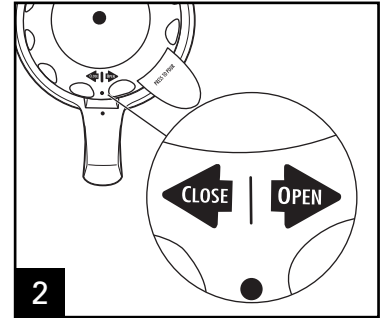

 
**2** Align with open lock and twist to lock in place.

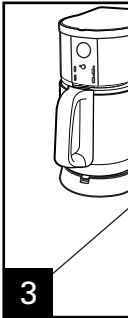


**3**

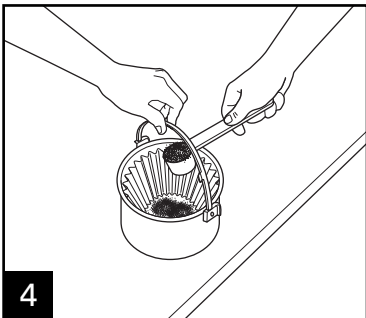 

 **4** Brew double strength coffee for iced coffee. For a full pot, use 10 scoops.

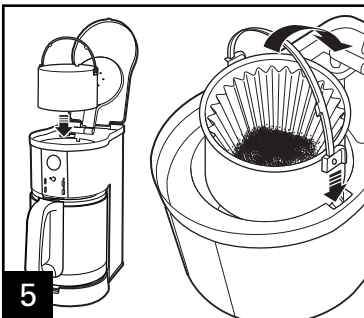

 
**5** Lock filter basket into place. **IMPORTANT:** Lid will not close all the way if filter basket handle is not locked securely into place.

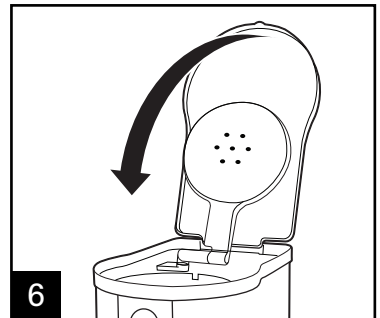

**6**






 **7** **IMPORTANT:** or thermal tray goes out. Cool immediately




## Water Filter (Optional Accessory)

   
The water filter can help achieve a better tasting cup of coffee by removing chlorine and impurities from tap water. It is recommended to be replaced every 60 brew cycles.

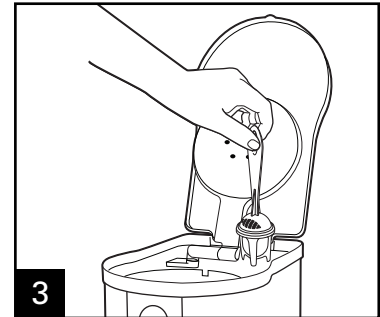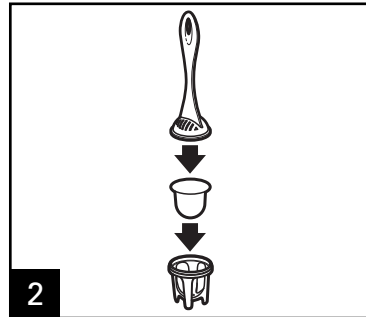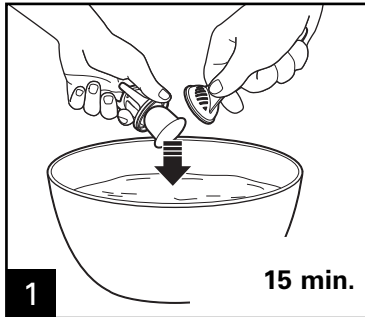


## Cleaning with Vinegar

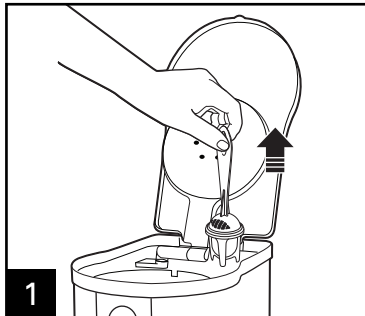 

Remove optional water filter.

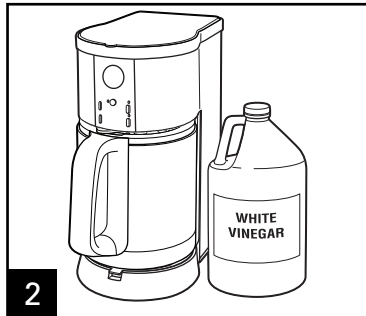 

 
Pour 1 pint (2 cups/500 ml) vinegar into water reservoir.

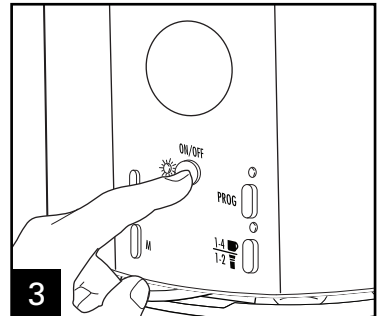


Press ON (Ⓢ). Turn OFF (Ⓢ) after 20 seconds and wait 30 minutes. Press ON (Ⓢ). The unit will automatically turn off when brew cycle is completed. When cool, empty reservoir and rinse.



 Run 2-3 more brew cycles with CLEAN WATER. Allow coffee to cool between cycles.



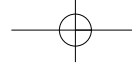

# Troubleshooting

## PROBLEM

Filter basket overflows  
or coffee brews slowly.

## PROBABLE CAUSE

- Excessive amounts of coffee.
- Coffee ground too finely. Set coffee grinder to automatic drip grind.
- Coffeemaker needs cleaning.

### **If using a paper filter:**

- Coffee grounds between paper filter and filter basket.
- Paper filter not open and in proper position.
- Rinse filter basket before inserting paper filter so the edges will remain pressed against the sides of the basket.
- Poor quality paper filter.

Coffee leaks onto base.

 
 
- Thermal travel mugs not properly seated in position indicators on base. Refer to *Coffee* for correct position of thermal travel mugs during brewing.

 
Coffee tastes bad.

- Coffeemaker needs cleaning.
- Coffee ground too coarsely or too finely. Set coffee grinder to automatic drip grind.
- Coffee-to-water ratio unbalanced. Adjust for personal preference.
- Poor coffee quality and freshness.
- Poor water quality (use filtered or bottled water).

Coffee sediment in cup.

- Use a high-quality, basket-style paper filter instead of optional permanent coffee filter.





# Troubleshooting

## PROBLEM

Coffee not brewing or unit will not turn on.

Longer than normal brew time.

 
## PROBABLE CAUSE

 
- Water reservoir is empty.
- Unit is unplugged.
- Power outage.
- Power surge. Unplug then plug the unit back in.
- Clock requires reset after power outage.

• Mineral deposits can build up in the pump of your coffeemaker. Periodic cleaning of the unit is recommended. More frequent cleaning may be necessary, depending on the hardness of your water. See *Cleaning with Vinegar* section.

**NOTE:** Do not disassemble the unit.

- 1-4 CUP mode was selected for a full pot.





## Limited Warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective at our option; however, you are responsible for all costs associated with returning the product to us and our return shipping charges. A component under this warranty to you. If the product or component is no longer available, we will replace with a similar or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or product resulting from accident, alteration, abuse or misuse. This warranty extends only to the original consumer product recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is not valid if used for other than single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of express or implied warranty. The amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of sale, is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.235.8900 in Canada or visit [hamiltonbeach.com](http://hamiltonbeach.com) in the U.S. or [hamiltonbeach.ca](http://hamiltonbeach.ca) in Canada. For faster service, locate the model, type, and serial number on your appliance.

