

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HAMILTON BEACH 49754 Owner's Manual


[Shop genuine replacement parts for HAMILTON
BEACH 49754](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

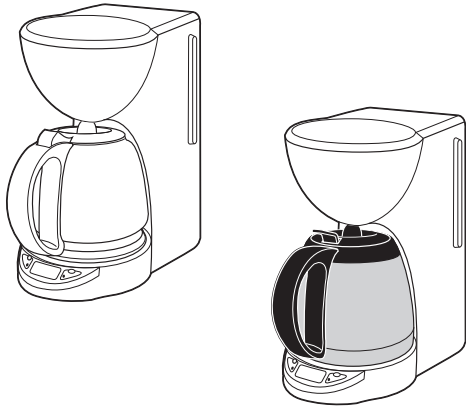

Coffeemaker Cafetière Cafetera

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

**Read before use.
Lire avant utilisation.
Lea antes de usar.**



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-nous à protéger l'environnement!

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc. ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

12. The carafe is designed for use with this coffeemaker. It must never be used on a range top or in a microwave oven.
13. Do not set a hot carafe on a wet or cold surface.
14. Do not use a cracked carafe or one with loose or weakened handle.
15. Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
16. Be certain carafe lid is securely in place during brew cycle and when pouring coffee, do not use force when placing lid on carafe.
17. Do not place coffeemaker on or near a hot gas or electric burner or in a heated oven.
18. To disconnect coffeemaker, turn controls to OFF, then remove plug from wall outlet.
19. **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
20. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

Other consumer safety information


This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with your coffeemaker.

Parts and features

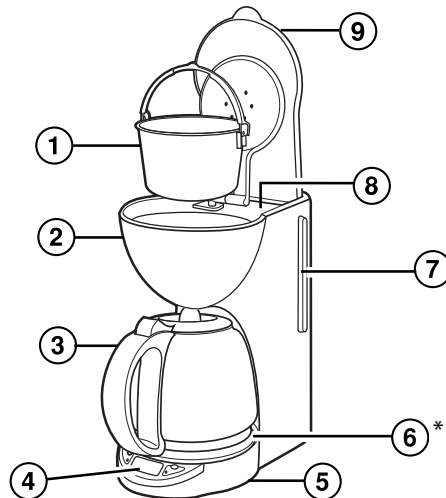

- | | |
|-----------------------|---|
| 1. Filter Basket | 6. Keep-Warm Plate*
(select feature on glass carafe models only) |
| 2. Filter Basket Well | 7. Water Window |
| 3. Carafe | 8. Water Reservoir |
| 4. Clock | 9. Lid |
| 5. Base | |

NOTE: Picture references major components for all coffeemakers covered by these instructions.

How to make coffee

⚠ WARNING

Burn Hazard.

To avoid hot coffee overflowing from the filter basket:

- When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount

How to

1. Make
2. Fill co
- Place
3. Hold
- until
- PROG**
4. Press
- button
5. Press

How (therm

1. Fill w
- caraf
- WAR**
- Hot, c
2. Place
- lock
3. Brew
- use 1
4. Place
- comp
5. Close
- comp
6. Press
- indica
- therm
- NOTE**
- brewi

Featu

Pause '

This feat
brew cyc
coffee w
when ca
WARNING!
seconds
this feat
burn haz

Brew S

This feat
coffee. To
strength
desired s

Perman

The perm
Rinse pe
permane
of coffee
or on top

Automa

The Auto
hours aft
NOTE: M
brewing.

Care

Inside

1. Place
2. Pour
3. Plug
4. Press
- OFF. t
- turn
5. Empt
- into t
6. Press
- comp
- more
7. Wash

Carafe

1. Wash
- dishw
2. Remo
- hand

Outsie

Wipe out
use abra
product