

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



HAMILTON BEACH 49970 Owner's Manual


[Shop genuine replacement parts for HAMILTON
BEACH 49970](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

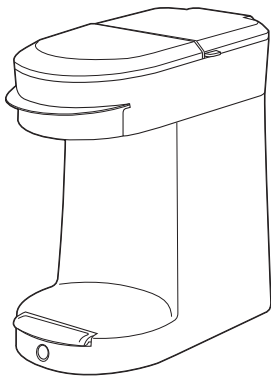

Coffeemaker
Cafetière
Cafetera

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc., a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

840183801

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electric shock, do not place cord, plug, or coffeemaker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when the coffeemaker is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Coffeemaker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Call our toll-free technical service number for information on examination, repair, or adjustment.
8. The use of an accessory not evaluated for use with this appliance may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

SAVE THESE INSTRUCTIONS

Other consumer safety information

This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.


The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use a high-wattage appliance on the same circuit with the coffeemaker.

NOTE: For best results, allow the coffeemaker to cool for one minute between brewing cycles.

Parts and features

2. Two-Pod Permanent Brew Basket

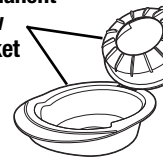

3. Cup F

4. Power ON Indicator Light

How to use the

▲ WARNING Burn Hazard

To avoid contact with hot

- Do not use more than 1
- Fully insert cup under b
- Do not remove cup until
- This coffeemaker can be pods. It is not recommended since this may decrease overflow.

Automatic Shutoff: The coffee shut off after brew cycle is

1. Plug in coffeemaker.
2. Lift reservoir lid and slide brew basket.

For regular coffee/tea:

of basket, place ONE coffee pod into brew basket, and close the top of basket.

For stronger coffee/tea:

the top of basket and place coffee or tea pod into brew and place another pod in pod(s) are centered and may be weak from water.

3. Fill serving cup with up to

NOTE: Once the START

brew for one cycle. If the with no water in the reservoir one brew cycle and the out. If the brew cycle new unplug unit. Reduce water

4. Pour water carefully into and lower reservoir lid.

5. Place serving cup under

6. Press START button. The light up to show that coffee is on. Coffeemaker will start automatically and light w

7. After you have finished your and the coffeemaker has use the tab on the front of brew basket to slide out the basket and dispose of pods.

If using standard tea bags,

all directions except in steep brew water directly into a steep tea bag in cup until

NOTE: For best results, a

minute between brewing