

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.ApplianceFactoryParts.com).



HAMILTON BEACH 40870 Owner's Manual


[Shop genuine replacement parts for HAMILTON
BEACH 40870](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

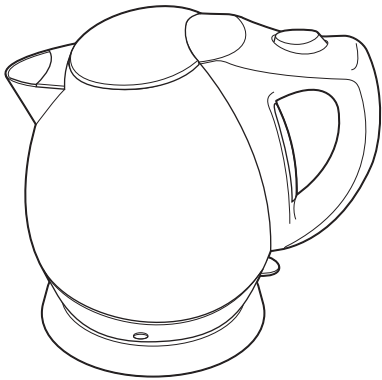

Electric Kettle
Bouilloire électrique
Hervidor de agua

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

840182800

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces or hot water. Use handles or knobs. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
3. To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or personal injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
11. To disconnect electric kettle, turn any control to OFF (O) and then remove plug from wall outlet. Never pull on cord as this may damage the cord and eventually cause electric shock.
12. Do not use appliance for other than intended use.
13. Do not use for other than heating water. Other liquids or food will contaminate the interior and void warranty.
14. Do not allow kettle to boil dry.
15. To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.
16. Scalding may occur if the lid is opened during the heating cycle.

SAVE THESE INSTRUCTIONS


Other consumer safety information

This appliance is intended for household use only.

WARNING! Shock Hazard: This product is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a polarized or grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and features

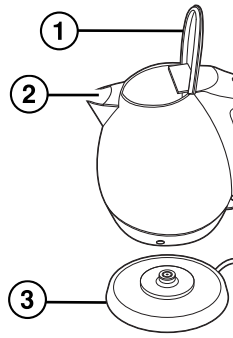

How to use the

▲ WARNING Burn Hazard: Water may

BEFORE FIRST USE: Flip the lid to the MAX fill line on the water level indicator. Turn the kettle ON to a boil, then shut off automatically. Rinse the kettle 2–3 times, rinsing out kettle before use.

1. Remove kettle from power outlet.
2. Fill kettle with required amount of water. Water level is between MAX and MIN. Always keep kettle upright.
3. Make sure that the lid is on a level surface. **If lid is not closed, kettle will not operate.**
4. Plug into outlet and turn on.
5. The kettle will switch OFF automatically when water has boiled. (Remember: Kettle gets hot; take care—only touch handles.)
6. The kettle may be left on the burner, but it is recommended to unplug the kettle. When finished, make sure to remove any water from kettle.

NOTE: Only use kettle to heat water. Do not use for other liquids, such as coffee.

If Kettle Floor Discolors: The heating elements may discolor. To clean, remove the elements of the kettle. Do not use abrasive cleaners since this may damage the heating elements.

If Kettle Boils Dry: The heating elements and automatic safety devices may be damaged if the kettle is switched on without being filled. If the kettle boils dry, the kettle will automatically shut off. • Turn the switch to OFF, unplug the kettle, and allow the element to cool down. • Refill the kettle; then use the kettle functions correctly.

If Kettle Does Not Work: If the kettle does not work, call the toll-free customer assistance number. • Have you turned power off? • If the kettle heats but does not boil, is the kettle filled with water or allowed to boil dry? Turn OFF, wait 20 minutes, and try again. • Is cord firmly plugged into the base?

Anti-Scale Mesh Filter: Scale buildup in hard water. The mesh filter catches scale particles from being poured. The filter should be cleaned periodically to ensure proper operation. To clean the filter, unplug kettle and remove the filter. The filter may be removed by pressing the kettle opening. Rinse filter with a soft brush. An old, clean