

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# HAMILTON BEACH 72900 Owner's Manual


[Shop genuine replacement parts for HAMILTON  
BEACH 72900](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

# Hamilton Beach®

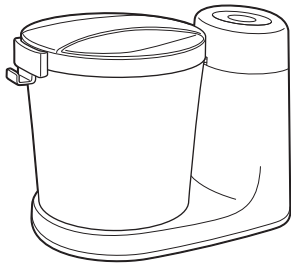

## 3-Cup Food Chopper Hachoir de 3 tasses Picadora de 3 tazas

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.  
Lire avant utilisation.  
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

[hamiltonbeach.com](http://hamiltonbeach.com)

### Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

[hamiltonbeach.ca](http://hamiltonbeach.ca)

### ¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

[hamiltonbeach.com.mx](http://hamiltonbeach.com.mx)

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

840180900

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put cord, plug, or base in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface including stove.
10. Keep hands and utensils away from the cutting blades while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but must be used only when the food chopper is not running.
11. Blades are sharp. Handle carefully.
12. This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food at one time.
13. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
14. Be certain lid is securely locked in place before operating appliance.
15. Do not attempt to defeat the lid interlock mechanism.

## SAVE THESE INSTRUCTIONS


### Other consumer safety information

**This appliance is intended for household use only.**

**WARNING! Shock Hazard:** This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

## Parts and features

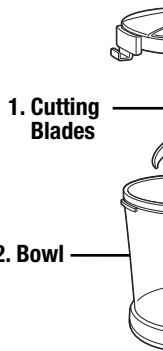

## How to use the

**IMPORTANT:** Before first use and Cleaning.”

1. Make sure chopper is unplugged. Lock bowl onto base by turning clockwise. See illustration.
  2. Carefully place blade in center shaft. Turn until down to bottom of bowl.
  3. Place food in bowl.
  4. Place lid on bowl and turn clockwise to lock. See illustration.
  5. Plug into electrical outlet. Press Pulse button to pulse turn off, release button to remove lid until blade is turning.
  6. Remove lid. Unlock bowl from base.
- IF CHOPPER DOES NOT STOP** make sure the bowl and lid

## Chopping tips

- The bowl has a capacity of 3 cups. Do not exceed 1¾ cups.
- For more control, process in batches. Then releasing. Check contents.
- Tear bread into pieces; then break crackers or cookies into crumbs for use as recipe.
- To chop carrots, celery, etc., cut into 1-inch chunks for more uniform consistency.
- Chop nuts; mince parsley.
- Do not process raw meat in the food chopper. This

## Care and cleaning

**⚠ WARNING** Electric base, cord, or liquid.

1. Wash lid, bowl, and cup in top rack of dishwasher carefully.
2. Reassemble for safe storage.
3. To clean the base, wipe with abrasive cleaners.