

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
HAMILTON BEACH 31136 Owner's Manual

[Shop genuine replacement parts for HAMILTON
BEACH 31136](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----



READ BEFORE USE
LIRE AVANT UTILISATION
LEA ANTES DE USAR

Visit hamiltonbeach.com for delicious recipes, tips, and to register your product online!



Consultez hamiltonbeach.ca pour de délicieuses recettes, des conseils pratiques et pour enregistrer votre produit !

¡Visite hamiltonbeach.com.mx para recetas deliciosas, consejos, y para registrar su producto en línea!

Questions?

Please call us – our friendly associates are ready to help.
USA: 1.800.851.8900

Questions ?

N'hésitez pas à nous appeler – nos associés s'empresseront de vous aider.
CAN: 1.800.267.2826

¿Preguntas?

Por favor llámenos – nuestros amables representantes están listos para ayudar.
MEX: 01 800 71 16 100

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Hami

 
Toas

 
Four g

Horno de la



Engl
Fran
Espa





⚠ WARNING



 
Fire Hazard.

 
- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and opening door.
- Do not operate unattended while in Toast or Broil modes.
- Do not use with oven cooking bags.
- Always allow at least one inch between food and heating element.
- Always unplug toaster oven when not in use.
- Regular cleaning reduces risk of fire hazard.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, or toaster oven in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be used when moving toaster oven containing hot oil or other hot liquids.
12. To disconnect, turn all controls to OFF (**O**); pull plug from wall outlet.
13. Use extreme caution when removing pan or tray from toaster oven to avoid grease.
14. Do not clean with metal scouring pads. Piece of metal scouring pad and touch electrical parts, creating a risk of electrical shock.
15. Oversize foods or metal utensils must not be placed in toaster oven as they may create a fire or risk of electrical shock.
16. A fire may occur if the toaster oven is covered with flammable material, including curtains, drapes, or clothing like, when in operation. Do not store any items in or on toaster oven when in operation or before the toaster oven is cooled.
17. Extreme caution should be exercised when using toaster oven constructed of materials other than metal or plastic.
18. Do not store any materials, other than manufacturer's accessories, in this oven when not in use.





19. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. To turn oven off, turn Timer to OFF (**O**) position. See "Parts and Features" section.

22. Do not place eyes or face in close proximity safety glass door, in the event that the safety glass breaks.
23. Always use appliance with crumb tray secured.
24. Do not use appliance for other than intended use.
25. Clean oven interior carefully. Do not scratch element tube.

SAVE THESE INSTRUCTIONS!

OTHER CONSUMER SAFETY INFORMATION

 
 
This appliance is intended for household use only.

 
WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

This appliance is equipped with a fully tempered safety glass door. The tempered glass is four times stronger than regular glass and is more resistant to breakage. Tempered glass can break into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the glass is cracked or nicked, call our toll-free customer service number.

Always unplug your toaster oven from the outlet when not in use.






Parts and Features


Before First Use

Most heating appliances produce an odor and/or smoke. Plug the toaster oven into an outlet. Turn Function/Temperature knob to the broil setting (230°C). Heat at this temperature for 10 minutes. The odor will disappear after this initial preheating. **Wash baking pan, broil rack, and crumb tray before using.**

 
NOTE: *Broil rack is an optional accessory on select models.

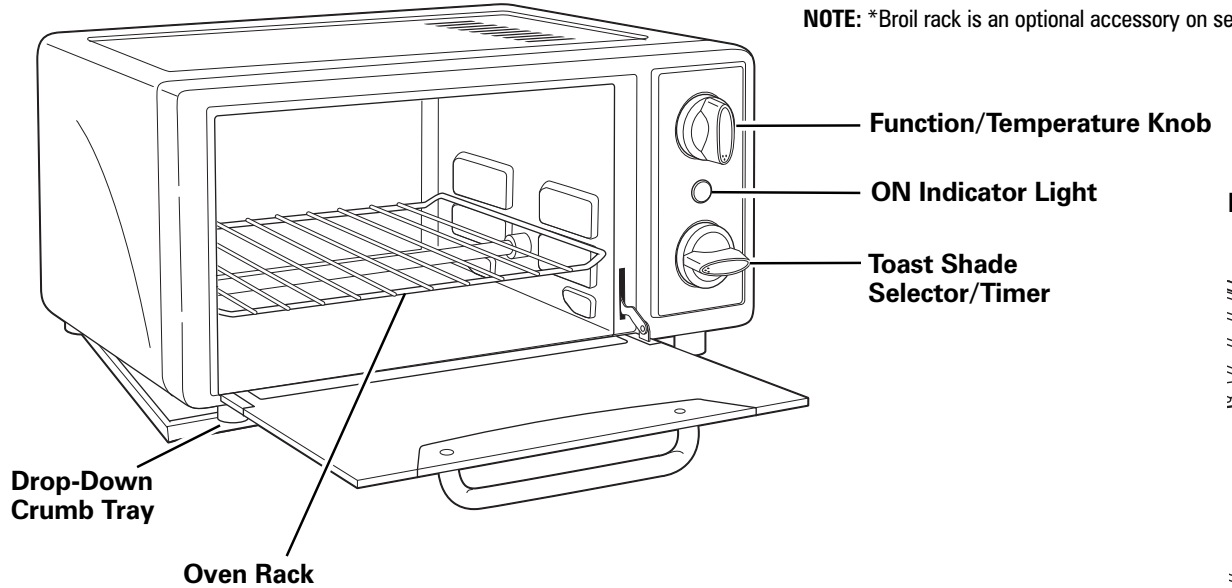


Baking Pan

 


 Broil Rack
(optional accessory on select models)



  Broil Rack* in Baking Pan
(*optional accessory on select models)







How to Toast


⚠ WARNING Fire Hazard.

 
- If contents ignite, do not open oven door. Unplug oven and allow to cool before opening door.
- Do not leave appliance unattended when in operation.
- Always unplug toaster oven when not in use.

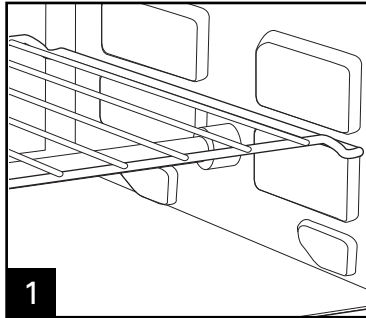

 
Place oven rack in **BROIL/TOAST POSITION**. Place food item on rack.

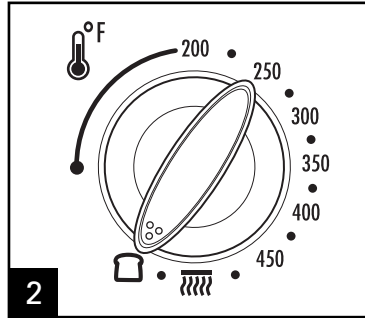

 Turn Function/Temperature Knob to **TOAST** .

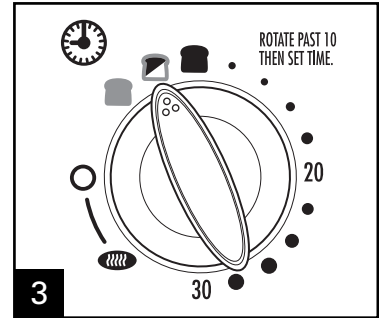


 
Rotate Toast Shade Selector/Timer past 10 and then back to desired toast color. A bell will sound when the toast cycle is complete.

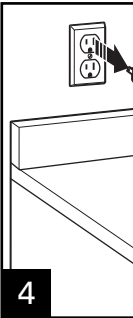


When finished, unplug the toaster oven.

- To toast bagels or English muffins, place bread cut-side down. This will toast the cut side more than the outside. English muffins may need a darker setting than regular bread to achieve the same color.
- To toast frozen pastry or waffles, select a light color and toast directly on oven rack. If pastry has a glaze or frosting, use baking pan to prevent dripping.

   - When toasting, condensation may form on oven door. To prevent this, the toaster oven door is open and allows moisture to escape. The toaster oven is a closed space and so moisture is slow to evaporate.
- At the end of the toast cycle, remove toast immediately. Toast remaining in the toaster oven will continue to cook your toast.






How to Bake


⚠ WARNING Fire Hazard.

- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.

 
- Do not use oven for broiling.
- Always allow a few minutes to cool between food items.
- Always unplug oven when not in use.

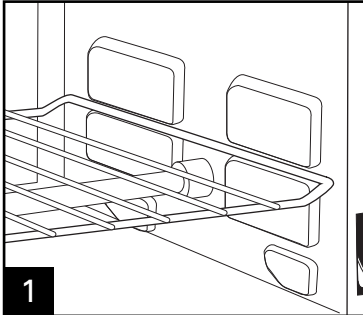

1 Place oven rack in **BAKE POSITION**.

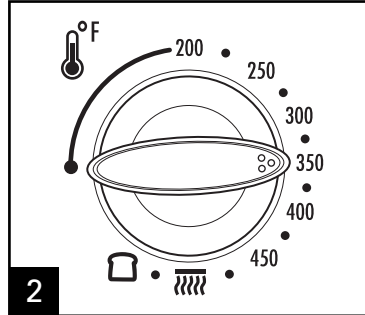 

 
2 Turn Function/Temperature Knob to desired temperature.

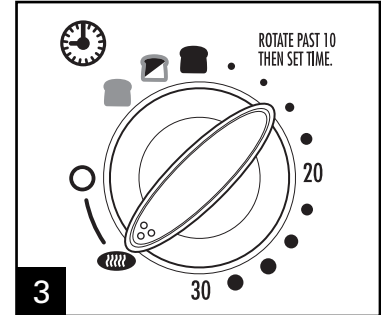

3 Set Toast Shade Selector/Timer to **ON**. Let preheat for 5 minutes prior to placing food in oven.



 4 Turn Toast Shade Selector/Timer to a desired setting.

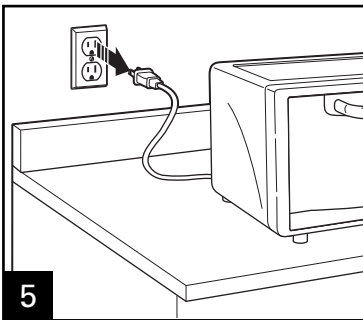



5 When finished, turn Toast Shade Selector/Timer to **OFF** and unplug.

6

- Do not totally enclose foods in aluminum foil. Foil can insulate foods and slow down heating.
- To reheat rolls or biscuits, place on baking pan and heat at 300°F for 10 minutes.
- Reheat leftover roasts or casseroles at 350°F for 20 to 30 minutes or until heated through.

  - Bake foods, such as pizza, on **BAKE POSITION**. Place food directly on the baking pan.
- Bake foods, such as a whole chicken, on **BAKE POSITION**. Place food on the oven rack.






How to Broil

WARNING


Fire Hazard.

- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.
- Do not leave oven unattended during operation.

 
- Keep one inch between
- Do not use oven cooking
- Do not heat foods in pla
- Follow food manufacture

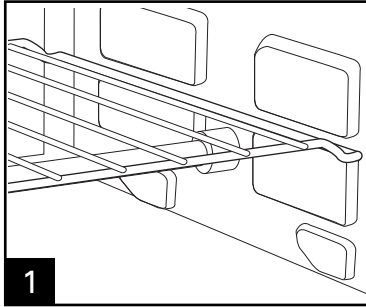

 
1 Place oven rack in **BROIL/TOAST POSITION**. Place food item on rack.

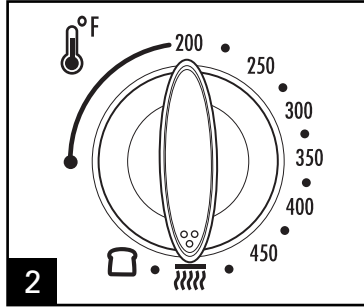

 2 Turn Function/Temperature Knob to **BROIL**. The indicator light will come on.

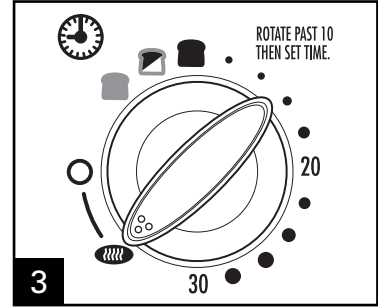

 3 Set Toast Shade Selector/Timer to desired time or **ON**. Turn foods when browned or halfway through cooking time.

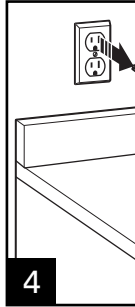



4 When finished, unplug.


| FOOD | APPROX. BROIL TIME |
|---|--------------------|
| Hamburgers | 25 minutes |
| Hot Dogs | 15 minutes |
| Sausage Links or Patties (pierce casings before cooking) | 15 to 20 minutes |
| Fish | 15 minutes |

These cooking times are an average and should be adjusted to individual preferences. Turn foods halfway through cooking time.

- Cook beef and pork to at least 160°F (71°C).
- Cook chicken to at least 165°F (73°C).
- Cook fish until at least 145°F (63°C) or until opaque or flakes with a fork.
- Visit foodsafety.gov for more safe cooking temperature information.

   - When broiling, use the broil rack that top a broil pan.
- To melt cheese, use the broil rack with the broil pan.






Cleaning


⚠ WARNING Electrical Shock Hazard.

Do not clean with metal scouring pads. Pieces can break off pad and touch

 Your toaster oven should be cleaned regularly for best performance and long life. Regular cleaning will also reduce the risk

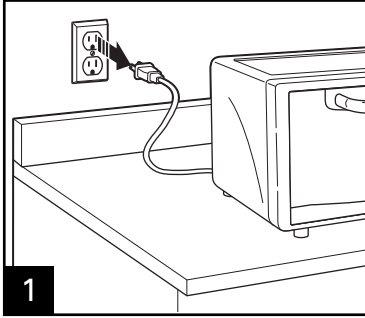


1

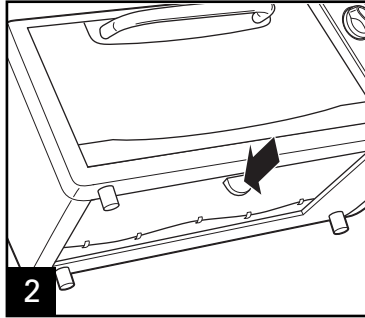 

2

 
Remove baking pan and rack from oven. Tilt oven back. Push handle down to unlock crumb tray.

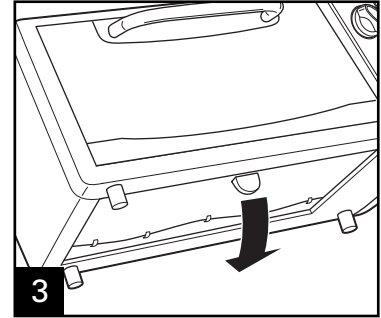

3


Pull tray down and out. Gently shake crumbs out of tray and wipe with a damp, clean cloth. Push tray back and lock into place.

 NOTE: Crumb tray is not removable.

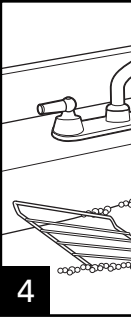

4

 NOTE: Broil accessory or

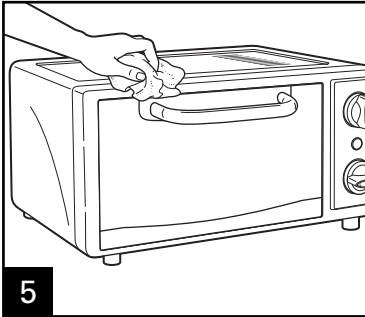



5

Wipe outside of oven with a damp cloth. Do not use abrasive cleansers or metal scouring pads.



 8

 
Visit hamiltonbeach.com for delicious recipes, tips, and to register your product online!






Troubleshooting

| PROBLEM | PROBABLE CAUSE/SOLUTION |
|---|---|
| Oven will not heat. | <ul style="list-style-type: none"> Check to make sure the outlet is working and the oven is plugged in. Next, turn the Function/Temperature Knob to 350°F and then turn the Toast Shade Selector/Timer to ON . Light should now be lit. |
| Moisture forms on inside of oven door when toasting. | <ul style="list-style-type: none"> This is normal when toasting in a toaster oven. Moisture is slower to escape from a toaster oven than from a conventional toaster. The amount of moisture will differ between fresh bread, bagels, and pastries. |
| An odor and smoke come from oven. | <ul style="list-style-type: none"> Smoke and odor are normal during first use of most heating appliances. These will not be a problem after the initial heating period. |
| Oven will not toast. | <ul style="list-style-type: none"> Check to make sure the outlet is working and the oven is plugged in. <ol style="list-style-type: none"> Set Function/Temperature Knob to Toast . Set Toast Shade Selector/Timer to a toast color. The ON Indicator Light should now be lit. |
| Some foods burn and some are not done. | <ul style="list-style-type: none"> Adjust oven rack position to center food in oven. Adjust oven temperature or cooking time for best results with your recipes. |
| Indicator light stays on. | <ul style="list-style-type: none"> Turn Toast Shade Selector/Timer to O (OFF). If light stays on, unplug unit and call the toll-free number for information on examination, repair, or adjustment. Do not continue to use unit. |
| Oven gets hot on the outside. | <ul style="list-style-type: none"> Be careful; the top and sides of oven get very hot, but this is normal. |

 

 

Limited Warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product or any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective at our option; however, you are responsible for all costs associated with returning the product to us and our return shipping charges. A component under this warranty to you. If the product or component is no longer available, we will replace with a similar or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is not valid if used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case the implied warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. Other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.235.8900 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and serial number on your appliance.

