

READ BEFORE USE
LIRE AVANT UTILISATION
LEA ANTES DE USAR

Visit hamiltonbeach.com for delicious recipes, tips, and to register your product online!



Consultez hamiltonbeach.ca pour de délicieuses recettes, des conseils pratiques et pour enregistrer votre produit !

¡Visite hamiltonbeach.com.mx para recetas deliciosas, consejos, y para registrar su producto en línea!

Questions?

Please call us – our friendly associates are ready to help.
USA: 1.800.851.8900

Questions?

N'hésitez pas à nous appeler – nos associés s'empresseront de vous aider.
CAN: 1.800.267.2826

¿Preguntas?

Por favor llámenos – nuestros amables representantes están listos para ayudar.
MEX: 01 800 71 16 100

 
 
 
Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

**Hamilton
Beach®**

Electric Griddle
Plaque chauffante
Plancha



English	2
Français	8
Español	14



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs, which may be warm. Use oven mitts.
3. To protect against electric shock, do not immerse cord, plug, or temperature control in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Call our toll-free customer service number for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first; then plug cord into the wall outlet. To disconnect, turn any control to MIN and then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Never leave appliance unattended while in use.
15. Use only temperature-controlling plug provided by manufacturer. Use of other temperature-control plug may cause injury.
16. Be sure that handles are assembled and fastened properly.

SAVE THESE INSTRUCTIONS!

OTHER CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

 
WARNING! This product is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a polarized or grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over, a longer cord. Do not use an extension cord.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.


Parts and Features

Before First Use: Wash all parts in hot, soapy water. Rinse and dry thoroughly.

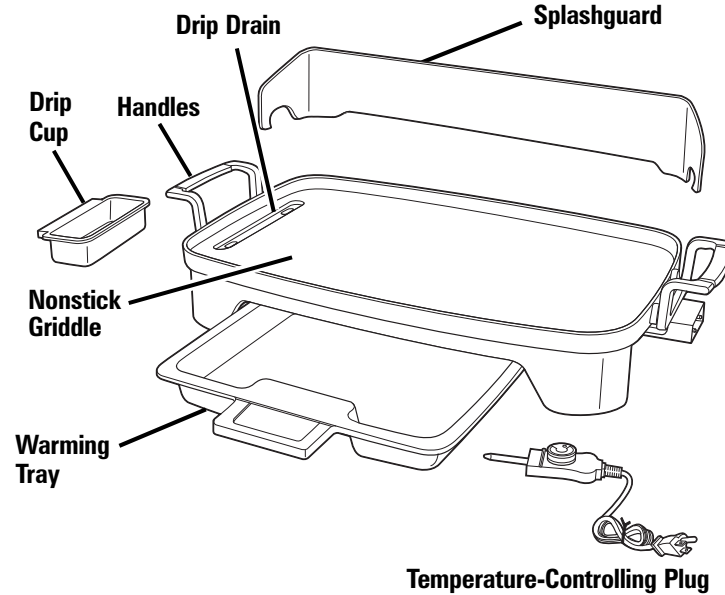


How to Assemble

 A Phillips-head screwdriver is required. Do not use an electric or power screwdriver since they may strip and/or damage the screws. Wash and dry all parts thoroughly before use.

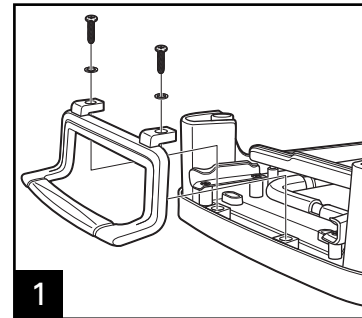

Turn griddle upside down. Align handles with screw posts on bottom of unit. Put split lock washer and then long screw in place. Secure long screw with a Phillips-head screwdriver.




 
NOTE: The assembled unit should appear as shown on the front cover of this Use & Care Guide. Handles are not intended to be removed after installation.

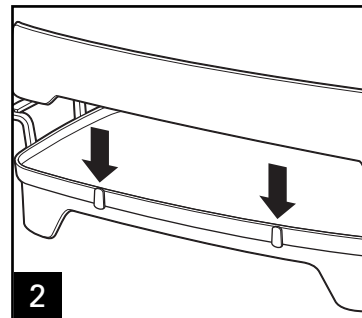

If desired, attach the splashguard to griddle. Align the cutout notches along the back of the unit. The splashguard should rest on the back of the griddle. It is not attached with any screws.

How to Use the Griddle

   
 
Before First Use: Attach handles. See *How to Assemble* on page 3.

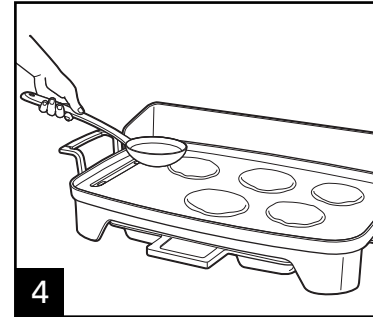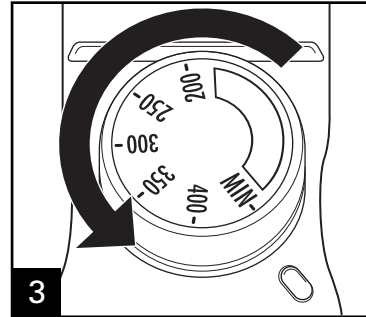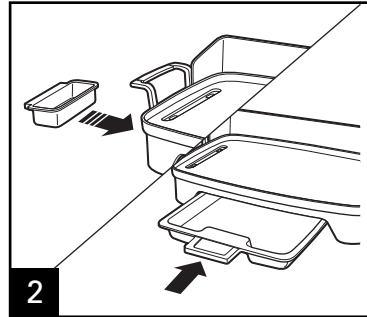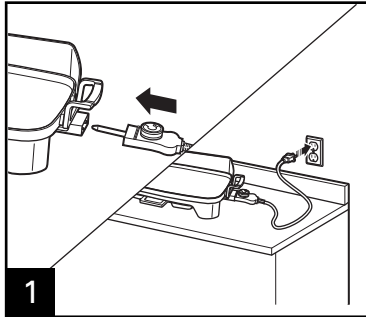

Slide drip cup and warming tray into place.

Indicator light will go out when set temperature is reached.

  Only use wooden or plastic cooking utensils. This will help prolong the life of the nonstick coating.

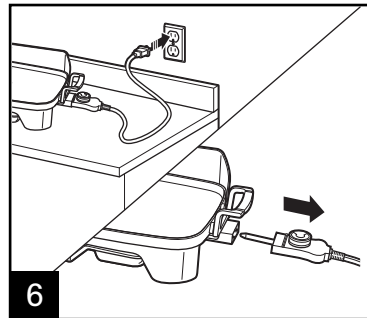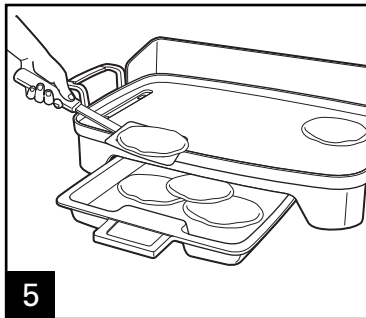

Place cooked food in warming tray while cooking next batch.

When finished, unplug from outlet, then from unit.

⚠ WARNING Fire Hazard.

Do not place nonfood items such as paper towels, napkins, or wax paper in tray.

Cooking Chart

FOOD	TEMPERATURE	INTERNAL TEMP.*	APPROX. COOKING TIME**
Hamburgers (1/3 lb [150 g] each)	350°F (180°C)	165°F (73°C)	15 to 20 minutes
Bacon	350°F (180°C)	crisp	10 to 15 minutes
Sausage Links and Patties	350°F (180°C)	165°F (73°C)	15 minutes
Chicken Breasts, Boneless	375°F (190°C)	170°F (77°C)	20 to 30 minutes
Pork Chops	325°F (160°C)	165°F (73°C)	20 to 30 minutes
Fried Eggs	325°F (160°C)	—	2 to 3 minutes
French Toast	350°F (180°C)	—	8 to 10 minutes
Grilled Cheese Sandwiches	375°F (190°C)	—	4 to 5 minutes
Pancakes	375°F (190°C)	—	4 to 5 minutes
Hot Dogs	325°F (160°C)	—	15 minutes

*Visit foodsafety.gov for more information on safe internal cooking temperatures.

 
**All temperatures are based on fresh, NOT frozen foods.

Care and Cleaning


⚠ WARNING

Electrical Shock Hazard.


Disconnect power before cleaning.
Do not immerse cord or plug in any liquid.

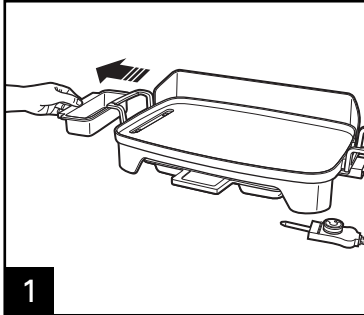

 Unplug; allow to cool completely.
Remove and empty drip tray.
Do not use metal scouring
pads or abrasive cleansers.

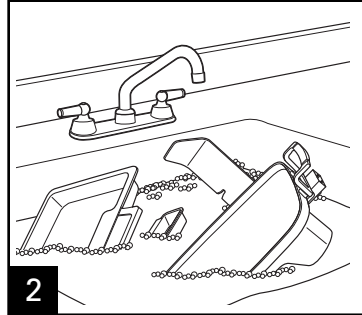

 Wash all parts EXCEPT tempera-
ture-controlling plug in hot,
soapy water. Dry thoroughly.

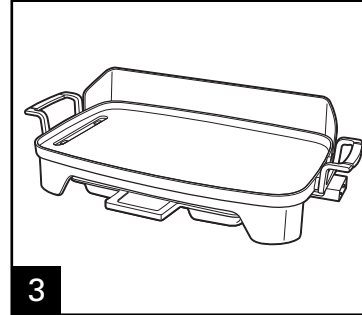

Troubleshooting

PROBLEM

Low, poor, or
slow heating.

PROBABLE CAUSE/SOLUTION

- Allow griddle to heat for 10 to 15 minutes before use.
- Make sure the Temperature-Controlling Plug is fully inserted into the unit.

Limited Warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the US or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.