

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# HAMILTON BEACH 24504 Owner's Manual


[Shop genuine replacement parts for HAMILTON  
BEACH 24504](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

# Hamilton Beach®

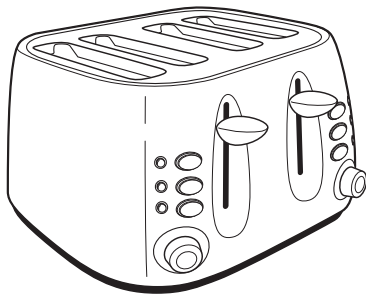

## Toasters Grille-pain Tostador

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

**Read before use.  
Lire avant utilisation.  
Lea antes de usar.**



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

[hamiltonbeach.com](http://hamiltonbeach.com)

### Aidez-vous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

[hamiltonbeach.ca](http://hamiltonbeach.ca)

### ¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y

**⚠ WARNING** To reduce the risk of fire:



- Do not operate while unattended.
  - Do not use with food that has been spread with butter, jelly, frosting, etc.
  - Do not use with rice cakes, fried foods, frozen prepared foods or non-bread items.
  - Do not use with toaster pastries. Always cook toaster pastries in a toaster oven broiler.
  - Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
  - Closely supervise when used by or near children.
  - Always unplug toaster when not in use.
- Failure to follow these instructions can result in death or fire.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not operate toaster while unattended.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not attempt to dislodge food when toaster is plugged in.
5. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, or moving toaster.
7. Do not operate toaster with a damaged cord or plug or after toaster malfunctions or has been damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
8. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
9. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts resulting in risk of electrical shock.
10. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, overhead cabinets, paper or plastic products, cloth towels, and the like, when in operation.
11. Do not operate toaster in an enclosed space, such as an appliance cabinet, caddy, garage, or other storage area.
12. Do not cook, warm, or toast rice cakes, fried foods, non-bread items, or toaster pastries. Toaster pastries should be heated in a toaster oven broiler. Do not heat any food product that has been spread or iced with margarine, butter, jelly, frosting, syrup, or other spread. Follow Toasting chart.
13. Failure to clean crumb tray may result in a fire hazard.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Do not touch hot surfaces. Use handles or knobs.
16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
17. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
18. Before unplugging toaster, make sure bread lifter is in "up" position.
19. Do not use outdoors.
20. Do not use toaster for other than intended use.

**SAVE THESE INSTRUCTIONS**

Parts a

CANCEL

BAGEL

DEFROST

Food Slot

Bread Lift

The CANCEL

lifted up to

Shade Se

toast (1) to

setting bef

Slide-Out

"Cleaning"

informatio

Program

DEFRO

be plac

for the

Press

BAGEL

muffin,

the out

Press

CANCEL

cycle v

How t

1. Plug to

2. Place a

English

inside v

bread li

function

NOTE:

is plugg

3. At the e

4. To stop

the CANCEL

Toasting

FOOD

Regula

English

Bagels

Frozen

Frozen

Frozen