


This Owner's Manual is provided and hosted by Appliance Factory Parts.



SEA BREEZE 12A23YGX Owner's Manual

[Shop genuine replacement parts for SEA BREEZE
12A23YGX](#)

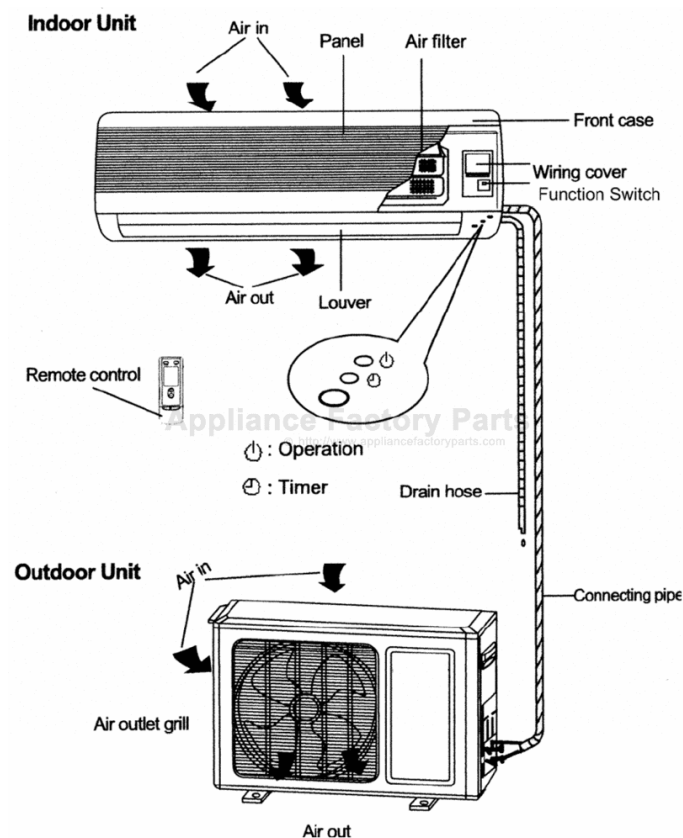

[Find Your SEA BREEZE Air Conditioner Parts - Select From 23 Models](#)

----- Manual continues below -----



OPERATING INSTRUCTIONS

MINI-SPLIT AIR CONDITIONING SYSTEM

FOR MODEL

9A23YGX
12A23YGX
12A23ZGX
18A23ZGX

Table of Contents

Safety.....	1
Unit Parts & Features.....	2
Remote Control Functions & Indicators.....	3
Operation Guide.....	4
Care & Maintenance.....	6
Troubleshooting.....	7

Troubleshooting (Cont.)

Problem	Possible Solutions
Remote Control Will Not Operate	Do the batteries need to be replaced? Are you within the operating range of the remote control? Are you pointing the remote control towards the receiver on the indoor unit? Is anything obstructing the path between the remote control and the receiver? Occasionally the remote control may not function properly when the unit is disturbed or when the functions are changed frequently. In this case, disconnect the power to the indoor unit and then reconnect to recover remote control operation.

Manual Operation (18,000 BTU units only)

- Turn on power
- Press the "MODE" button to select operating mode.
- If remote control is lost, unit may be operated manually by opening the front cover.
- "AUTO" will operate the unit in auto mode as explained in that section of this manual.
- "TEST" will operate the unit in the cool mode. Temperature may be adjusted with the remote if desired. If remote is not available, unit will operate at last set temperature. In this mode fan will operate at high speed.
- "RUN" will operate the unit normally.
- "STOP" will turn the unit off. Unit will not operate if the switch is in this position.

Safety & Operation


Safety

- Do not let any liquids come into contact with the unit.
- Do not touch the metal parts of the indoor unit or the air filter.
- Avoid extended use in high humidity and when windows are open).
- Do not operate the indoor unit with windows open.
- Do not place hands, fingers, or other body parts near the outdoor unit.
- Avoid extended direct exposure to sunlight.
- Disconnect power supply and contact with the unit if there is a smell or smoke.
- Do not attempt to repair either unit by yourself. Contact a qualified service technician.
- Do not charge or disassemble batteries. Use only batteries with the same type and dispose of old batteries properly.
- Disconnect power source when unit is not in use for a period of time.
- Do not place a space heater near the unit.
- Keep combustibles, sprays and liquids away from the indoor and outdoor units.
- Do not step on top of the outdoor unit.
- Do not block the air intake or outlet vents.
- Do not disconnect the power source while the unit is in normal operation.
- Unit should be installed by a qualified technician and grounded properly.
- Operate unit from a stable power supply. Do not use a power breaker depending on model, with the appropriate rating.

Operation:

- Do not use unit when outside temperature is above 110°F.
- Do not operate indoor unit when windows are open.
- Do not operate unit without air filter.
- Do not store remote control in direct sunlight.
- Do not drop or throw the remote control.
- Do not immerse the remote control in water.

Unit Parts & Features

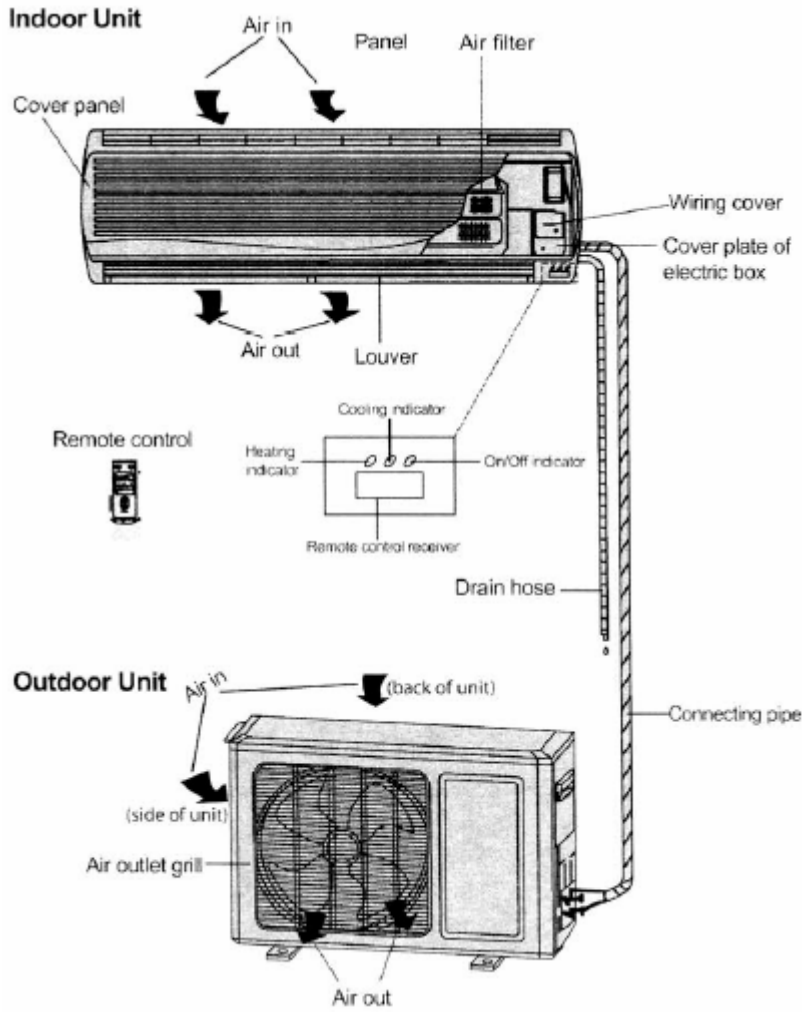

Troubleshooting

Check the following list before calling. If the problem persists, contact your dealer or other authorized service technician.

Problem	Cause
System will not operate.	<ul style="list-style-type: none"> • Power is not supplied to the indoor unit. • The remote control receiver is not working. • The remote control is not working. • The indoor unit is not set to the correct mode. • The indoor unit is not set to the correct temperature.
An unusual odor is detected from the indoor unit.	This could be trapped dust, smoke, or mold. Clean the indoor unit.
A slight liquid noise is heard from the indoor unit.	This could be refrigerant or water. Contact your dealer.
A slight creaking noise is heard from the indoor unit.	This could be the plastic cover or the fan. Contact your dealer.

(Continued on next page)

For Technical Assistance

Tel: 704-504-1111

Fax: 704-504-1112

Care & Maintenance

CAUTION

▲ Always disconnect power before cleaning.

Cleaning Cover Panel (note: Always remove cover before cleaning.)


1. Open cover panel and pull in the direction of the arrows in Diag. 1 to remove the cover panel.




2. Wipe with a damp cloth using warm water or mild cleaner and allow to air dry. (Note: Never use hot water.)
3. Replace the cover panel by inserting the tab support on either end of the cover into the supporting slots on the unit, then closing and latching the cover.

Cleaning Air Filters (Note: Recommended once every three months under normal conditions.)


1. Open cover panel.
2. Using the tab at the bottom of the filter, lift the filter and remove in the direction of the arrows in Diag. 2.

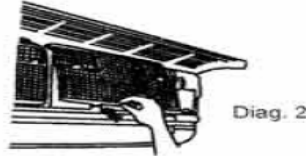

3. Clean filters using a vacuum cleaner (see Diag. 3) or by washing them with warm water and allowing them to air dry. (Note: never use hot water.)

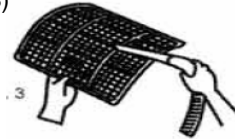

4. Replace filters by inserting as shown in Diag. 4. Then close and latch the cover panel.

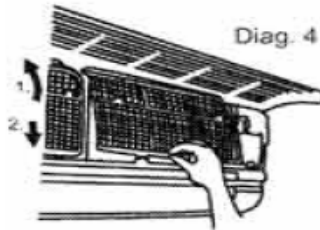

Remote Control Functions & Indicators

Notes: Be sure that there is no obstruction between the remote control and the unit.

Some of the indicators on the remote control are active only when the remote control is in the ON mode. Be active on your remote control when using these instructions.

SWING button

Press this button to rotate the louvers automatically. And press again to stop.

MODE indicators

See mode button below for details.

SLEEP indicator

SLEEP button

Press this button to initiate the sleep mode which allows the system to gradually change the temperature setting over a specified period of time.

MODE button

Press this button to change the operation mode in order of:

AUTO	AUTO mode
"❄️"	COOL mode
"☀️"	DRY mode
"🌀"	FAN mode
"🔥"	HEAT mode



Operation Guide

Note: On first operation ensure that power to both indoor and outdoor unit is active.

Install Batteries:

The remote control takes two (2) AAA Batteries.

1. Press and slide the battery compartment cover on the bottom side of the remote to open it.
2. Insert two (2) AAA batteries, being careful to align the polarities correctly as labeled inside the battery compartment.
3. Close the battery compartment cover by sliding it back into place.

Using the Remote Control:

- The remote control must always be pointed at the receiver on the indoor unit (See diagram on page 3) to operate properly.
- The operating range of the remote control is approximately 22 ft. Ensure that you are within that range when attempting to operate the system with the remote control.
- Please refer to the diagram on page 3 for general operating instructions. Some of the specific functions will be addressed in more detail below and on the following pages.

Selecting MODE:

- Press the MODE button on the remote control repeatedly until the icon appears for the mode you want to select. (See diagram on page 3).
- In HEAT (On heat pump models only) and COOL mode the system will run to satisfy the temperature setting.
- In AUTO mode the system will determine the operation mode based on the room temperature in the vicinity of the indoor unit.
- In FAN mode the heating and cooling will not operate, but the fan will run constantly at the selected speed unless the temperature setting is satisfied.
- In DRY mode cooling will run periodically with low speed fan in order to dehumidify the room. Heating will not operate in this mode.

Operation Guide (Cont.)**SWING operation:**

- Press the SWING button on the remote control to initiate rotation of the louvers.
- Louvers can be kept in automatic rotation throughout the room.
- If desired, press the SWING button a second time to set the louvers in a specific position in order to control the airflow.

Selecting FAN speed:

- Press the FAN button on the remote control to select auto, low, medium or high speed fan operation.
- In AUTO FAN, the system will select the fan speed based on the temperature setting.

Setting SLEEP mode:

1. Make sure that the unit is in the desired mode.
2. Press SLEEP button once to enter SLEEP mode.
3. Press TIMER OFF button to set the scheduled length of time before the unit will advance in half hour.
4. Press + or – buttons to specify the desired SLEEP mode.
5. Once SLEEP mode is set, the system will maintain the temperature setting throughout the scheduled time until both the final temperature setting is reached and the unit automatically returns to the desired mode.

TIMER operation

- When system is “Cooling”, press the TIMER button repeatedly to advance the timer by the scheduled time before the system will advance in half hour.
- When system is “Heating”, press the TIMER button repeatedly to advance the timer by the scheduled time before the system will advance in half hour.

