

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC NNS543BFR Owner's Manual

[Shop genuine replacement parts for PANASONIC
NNS543BFR](#)

Panasonic

[Find Your PANASONIC Microwave Parts - Select From 981 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for PANASONIC NNS543BFR

14QBP20CFB	Fuse Ceramic 20A
40QBP1012	10 X 12 Cut To Fit
F06014T00AP	TRAY 13.5"
F63265G60AP	MOTOR TYJ50-8
2M261-M32KLP	Magnetron.
F30216P40AG	spring
F290D9330AP	ROLLER
F612EBK00AP	REPLACEMENT LAMP
J61415G10XN	DOOR MICROSWITCH



myPDFmanuals

 
You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC NN-S543BFR. You'll find the answers to all your questions on the PANASONIC NN-S543BFR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC NN-S543BFR
User guide PANASONIC NN-S543BFR
Operating instructions PANASONIC NN-S543BFR
Instructions for use PANASONIC NN-S543BFR
Instruction manual PANASONIC NN-S543BFR



Operating Instructions Microwave Oven

Models: NN-S634/S644/S543



Safety Information

Precautions	Inside cover
Important Safety Instructions	1-3
Installation and Grounding Instructions	3-4
Safety Precautions	5-6

Operation

Control Panel	8-9
Starting to Use Your Oven	10
Setting the Clock	10
Child Safety Lock	10
Selecting Power & Cook Time	11
Quick Min Feature	11
Popcorn Feature	12
More/Less Feature	12
Inverter Turbo Defrost Feature	13
Defrosting Tips & Techniques	13-14
Auto Reheat Feature	15
Auto Cook Feature	15
Auto Cook Chart	16

Operation

Timer Feature (Kitchen Timer/Stand Time/Delay Start)	17
Microwave Shortcuts	18-19
Food Characteristics	20
Cooking Techniques	20-21
Quick Guide to Operation	25

Maintenance

Care and Cleaning of Your Microwave Oven	22
Accessory Purchases	22
Before Requesting Service	23
Limited Warranty & Customer Service Directory	24

General Information

Cookware Guide	7
Oven Components Diagram	8
Specifications	26
User's Record	26

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.
Para instrucciones en español, voltee el libro.

For assistance, please call: 1-800-211-PANA(7262)
or send e-mail to: consumerproducts@panasonic.com
or visit us at www.panasonic.com (U.S.A)

For assistance, please call: 787-750-4300
or visit us at www.panasonicpr.com (Puerto Rico)

F00036L20AP
FLE0204-0
Printed in China



[You're reading an excerpt. Click here to read official PANASONIC NN-S543BFR user guide](http://mypdfmanuals.com/dref/205756)
<http://mypdfmanuals.com/dref/205756>

Manual abstract:

DO NOT cover or block any openings on this appliance. 7. DO NOT store this appliance outdoors. DO NOT use this product near water-- for example, near a kitchen sink, in a wet basement, or near a swimming pool or similar locations. 8. Use this appliance only for its intended use as described in this manual. DO

NOT use corrosive chemicals, vapors, or non-food products in this appliance. This type of oven is specifically designed to heat, or cook food. It is not designed for industrial or laboratory use. The use of corrosive chemicals in heating or cleaning will damage the appliance and may result in radiation leaks.

9. When cleaning surfaces of the door and oven that come together on closing the door, use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth. 10. DO NOT allow children to use this appliance, unless closely supervised by an adult. DO NOT assume that because a child has mastered one cooking skill he/she can cook everything.

11. DO NOT operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. 12. DO NOT immerse cord or plug in water. 13.

Keep cord away from heated surfaces. 14. DO NOT let cord hang over edge of a table or counter. 15. This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service center for examination, repair or adjustment. 16. Some products such as whole eggs with or without shell, narrow neck bottles and sealed containers--for example, closed glass jars--may explode and should not be heated in this oven. 17. To reduce the risk of fire in the oven cavity: (a) Do not overcook food.

Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking. (b) Remove wire twist-ties from paper or plastic bags before placing bag in oven. (c) If material inside the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel. (d) DO NOT use the cavity for storage purposes. DO NOT leave paper products, cooking utensils or food in the cavity when not in use. 1 WARNING IMPORTANT SAFETY INSTRUCTIONS (continued) 18. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons: (a) STIR THE LIQUID BOTH BEFORE AND HALFWAY THROUGH HEATING IT.

(b) Do not heat water and oil, or fats together. The film of oil will trap steam, and may cause a violent eruption. (c) Do not use straight-sided containers with narrow necks. (d) After heating, allow the container to stand in the microwave oven for a short time before removing the container. 19.

DO NOT cook directly on the turntable. It can crack, cause injury or damage to the oven. WARNING TO AVOID THE RISK OF SHOCK: DO NOT remove outer panel from oven. Repairs must be done only by a qualified service person. TO REDUCE THE RISK OF EXPOSURE TO MICROWAVE ENERGY: DO NOT tamper with, or make any adjustments or repairs to Door, Control Panel Frame, Safety Interlock Switches, or any other part of oven, microwave leakage may result.

TO AVOID THE RISK OF FIRE: 1. DO NOT operate the oven empty. The microwave energy will reflect continuously throughout the oven causing overheating and damage, if food or water is not present to absorb energy. 2. DO NOT store flammable materials next to, on top of, or in the oven. 3. DO NOT dry clothes, newspapers or other materials in the oven, or use newspaper or paper bags for cooking. 4. DO NOT hit or strike Control Panel. Damage to controls may occur.

5. DO NOT use recycled paper products unless the paper product is labeled as safe for microwave oven use. Recycled paper products may contain impurities which may cause sparking.



[You're reading an excerpt. Click here to read official PANASONIC](http://mypdfmanuals.com/dref/205756)

[NN-S543BFR user guide](http://mypdfmanuals.com/dref/205756)

<http://mypdfmanuals.com/dref/205756>

TO AVOID THE RISK OF SCALDING: POT HOLDERS should always be used when removing items from the oven. Heat is transferred from the HOT food to the cooking container and from the container to the Glass Tray. The Glass Tray can also be very HOT after removing the cooking container from the oven..



[You're reading an excerpt. Click here to read official PANASONIC
NN-S543BFR user guide
http://mypdfmanuals.com/dref/205756](http://mypdfmanuals.com/dref/205756)