

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC NNS553WF Owner's Manual

[Shop genuine replacement parts for PANASONIC
NNS553WF](#)

Panasonic

[Find Your PANASONIC Microwave Parts - Select From 981 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for PANASONIC NNS553WF

14QBP20CFB	Fuse Ceramic 20A
40QBP1012	10 X 12 Cut To Fit
F63265G60AP	MOTOR TYJ50-8
2M261-M32KLP	Magnetron.
F30216P40AG	spring
F290D9330AP	ROLLER
F612EBK00AP	REPLACEMENT LAMP




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC NN-S553WF. You'll find the answers to all your questions on the PANASONIC NN-S553WF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual PANASONIC NN-S553WF
User guide PANASONIC NN-S553WF
Operating instructions PANASONIC NN-S553WF
Instructions for use PANASONIC NN-S553WF
Instruction manual PANASONIC NN-S553WF



Operating Instructions Microwave Oven

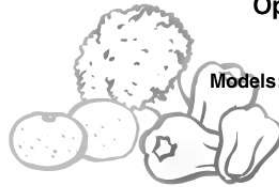

Models: NN-S645/S655/S735/S935

 

Safety Information

Precautions	Inside cover
Important Safety Instructions	1-3
Installation and Grounding	
Instructions	3-4
Safety Precautions	5-6

Operation

Control Panel	8-9
Starting to Use Your Oven	10
Setting the Clock	10
Child Safety Lock	10
Selecting Power & Cook Time	11
Quick Min Feature	11
Keep Warm Feature	11
Popcorn Feature	12
More/Less Feature	12
Inverter Turbo Defrost Feature	13
Defrosting Tips & Techniques	13-14
Auto Reheat Feature	15
Auto Cook Feature	15
Auto Cook Chart	16

Operation

Timer Feature (Kitchen Timer/Stand Time/Delay Start)	17
Microwave Shortcuts	18-19
Food Characteristics	20
Cooking Techniques	20-21
Quick Guide to Operation	25

Maintenance

Care and Cleaning of Your Microwave Oven	22
Accessory Purchases	22
Before Requesting Service	23
Limited Warranty & Customer Service Directory	24

General Information

Cookware Guide	7
Oven Components Diagram	8
Specifications	26
User's Record	26

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.
Para instrucciones en español, voltee el libro.

For assistance, please call: 1-800-211-PANA(7262)
or send e-mail to: consumerproducts@panasonic.com
or visit us at www.panasonic.com (U.S.A)

For assistance, please call: 787-750-4300
or visit us at www.panasonicpr.com (Puerto Rico)

F00037E20AP
FLE0205-0
Printed in China



[You're reading an excerpt. Click here to read official PANASONIC NN-S553WF user guide](http://mypdfmanuals.com/dref/205767)
<http://mypdfmanuals.com/dref/205767>

Manual abstract:

DO NOT operate the oven without the Roller Ring and the Glass Tray in place. 2. DO NOT operate the oven without the Glass Tray fully engaged on the drive hub. Improper cooking or damage to the oven could result. Verify that the Glass Tray is properly engaged and rotating by observing its rotation when you press Start. Note: The Glass Tray can turn in either direction. 3. Use only the Glass Tray specifically designed for this oven. DO NOT substitute any other glass tray. 4.

If the Glass Tray is hot, allow to cool before cleaning or placing in water. 5. DO NOT cook directly on the Glass Tray. Always place food in a microwave safe dish, or on a rack set in a microwave safe dish. 6.

If food or utensil on the Glass Tray touches oven walls, causing the tray to stop moving, the tray will automatically rotate in the opposite direction. Roller Ring 1. The Roller Ring and oven floor should be cleaned frequently to prevent excessive noise. 2. Always replace the Roller Ring and the Glass Tray in their proper positions.

3. The Roller Ring must always be used for cooking along with the Glass Tray. INSTALLATION AND GROUNDING INSTRUCTIONS Examine Your Oven Unpack oven, remove all packing material and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if oven is damaged. DO NOT install if oven is damaged. Placement of Oven 1. The oven must be placed on a flat, stable surface. Place the front surface of the door three inches or more from the counter top edge to avoid accidental tipping of the microwave oven during normal use. For proper operation, the oven must have sufficient air flow. Allow 3-inches (7.

6 cm) of space on both sides of the oven and 1-inch (2.5 cm) of space on top of the oven. (a) DO NOT block air vents. If they are blocked during operation, the oven may be overheated and damaged. (b) DO NOT place oven near a hot, damp surface such as a gas or electric range, or dishwasher. (c) DO NOT operate oven when room humidity is excessive. 2. This oven is manufactured for counter top household use only. It is not intended for built-in operation and is not approved or tested for mobile vehicle, marine, or commercial use. Installation DO NOT block air vents.

If they are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off. The oven will remain inoperable until it has cooled. 3 INSTALLATION AND GROUNDING INSTRUCTIONS (continued) --IMPROPER USE OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a three wire extension cord that has a three prong polarized grounding plug, and a three slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

WARNING Grounding Instructions THIS APPLIANCE MUST BE GROUNDED. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. · Plug into properly installed and grounded 3 prong outlet. · DO NOT remove ground prong. · DO NOT use an adapter. Power Supply 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. 2. Longer cord sets or extension cords are available and may be used if care is exercised in their use. Do not let cord hang over edge of a table or counter. 3.

If a long cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the extension cord must be a grounding-type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally.



[You're reading an excerpt. Click here to read official PANASONIC](http://mypdfmanuals.com/dref/205767)

[NN-S553WF user guide](http://mypdfmanuals.com/dref/205767)

<http://mypdfmanuals.com/dref/205767>