

# GoldStar

website: <http://www.lgservice.com>  
e-mail: <http://www.lgeservice.com/techsup.html>

# MICROWAVE OVEN

## OWNER'S MANUAL

PLEASE READ THIS OWNER'S MANUAL  
THOROUGHLY BEFORE OPERATING.

### MV-1500MG

P/NO. 3828W5A1965  
Printed in Korea

# TABLE OF CONTENTS

<b>TABLE OF CONTENTS</b> .....	<b>2</b>	Popcorn.....	13
<b>SAFETY</b> .....	<b>3</b>	Potato.....	13
Important Safety Instructions .....	3	Cook.....	14
Precautions To Avoid Possible Exposure To		Cooking Guide for “Cook” .....	14
Excessive Microwave Energy .....	4	Reheat.....	15
<b>INFORMATION</b> .....	<b>5</b>	Cooking Guide for “Reheat” .....	15
Location of Model Number .....	5	Auto Defrost .....	16
Oven Specifications .....	5	Defrosting Tips .....	16
Electrical Rating .....	5	Auto Defrost Chart .....	17
Electrical Requirements .....	5	<b>MAINTENANCE</b> .....	<b>19</b>
Grounding Instructions .....	5	<b>CARE AND CLEANING</b> .....	<b>19</b>
Microwave Oven Features .....	6	Cleaning the Grease Filters .....	19
Oven Control Panel.....	7	Charcoal Filter(Optional) Replacement .....	19
<b>OPERATION</b> .....	<b>9</b>	Cooktop/Night Light Replacement .....	20
<b>LEARN ABOUT YOUR MICROWAVE OVEN</b> .....	<b>9</b>	Oven Light Replacement .....	20
CLOCK.....	9	<b>QUESTIONS AND ANSWERS</b> .....	<b>20</b>
Kitchen Timer .....	9	<b>MICROWAVE UTENSIL GUIDE</b> .....	<b>21</b>
FAN Hi/Lo/Off.....	9	<b>BEFORE CALLING FOR SERVICE</b> .....	<b>22</b>
LIGHT Hi/Lo/Off .....	9		
Child Lock .....	9		
Custom Set .....	10		
Ez On .....	10		
Time Cook.....	10		
Cooking at High Cook Power .....	11		
Cooking at Lower Power Levels.....	11		
Cooking Guide for “Lower Power Levels” .....	12		

# SAFETY

## IMPORTANT SAFETY INSTRUCTIONS

The safety instructions below will tell you how to use your oven to avoid harm to yourself or damage to your oven.

**WARNING**-To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

- **Read all the instructions before using your oven.**
- **Do not allow children to use this oven without close supervision.**
- Read and follow the specific **“PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY”** found on page 4.
- Use the microwave oven only for its intended use as described in its manual. **Do not use** corrosive chemicals or vapors, in the microwave oven. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- **Do not use or store** this appliance outdoors. Do not use this product near water -for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- **Do not use** the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- **Clean the ventilating hood frequently.** Do not allow grease to accumulate on the hood or the filters.
- When flaming foods under the hood, turn the fan on.
- Suitable for use above both gas and electric cooking equipment 36 inches wide or less.
- Use care when cleaning the vent hood filters. Corrosive cleaning agents such as lye-based oven cleaners, may damage the filters.
- **When cleaning the door and the surfaces that touch the door, use only mild, non-abrasive soaps or detergents and a sponge or soft cloth.**
- **Do not tamper with the built-in safety switches on the oven door.** The oven has several built-in safety switches to make sure the power is off when the door is open.
- **If your oven is dropped or damaged,** have it thoroughly checked by a qualified service technician before using it again.
- **To avoid a fire hazard:**
  - **Do not severely overcook food.** Severely overcooked foods can start a fire in the oven. Watch the oven carefully, especially if you have paper, plastic, or other combustibles in the oven.
  - **Do not store combustible items (bread, cookies, etc.) in the oven,** because if lightning strikes the power lines, it may cause the oven to turn on.
  - **Do not use wire twist-ties in the oven.** Be sure to remove them before placing the item in the oven.
- **If a fire should start:**
  - **Keep the oven door closed.**
  - **Turn the oven off.**
  - **Disconnect the power cord or shut off the power at the fuse or circuit breaker panel.**
- **To avoid electric shock:**
  - **This appliance must be grounded.** Connect it only to a properly grounded outlet. See the electrical grounding instructions on page 5.
  - **Do not operate this appliance if it has a damaged cord or plug,** if it is not working properly or if it has been damaged or dropped.
  - **Do not immerse the electrical cord or plug in water.**
  - **Keep the cord away from heated surfaces.**
  - This appliance should be serviced only by qualified service personnel.
- Install or locate the microwave oven only in accordance with the provided installation instructions.
- Do not mount oven a sink.
- Do not let cord hang over edge of table or counter.

# SAFETY

- **To avoid improperly cooking some foods.**
  - **Do not heat any types of baby bottles or baby food.** Uneven heating may occur and possibly cause personal injury.
  - **Do not heat small-necked containers,** such as syrup bottles.
  - **Do not deep-fat fry in your microwave oven.**
  - **Do not attempt home canning in your microwave oven.**
  - **Do not heat the following items in the microwave oven:** whole eggs in the shell; water with oil or fat; sealed containers or closed glass jars. These items may explode.
- **Do not use this oven for commercial purposes.** It is made for household use only.
- Do not cover or block any openings in the oven.
- Do not run the oven empty, without food in it.
  - **Do not** allow the gray film on special microwave-cooking packages to touch the oven floor. Put the package on a microwavable dish.
- **Do not** cook anything directly on the oven floor. Use a microwavable dish.
- Keep a browning dish at least 3/16 inch above floor. Carefully read and follow the instructions for the browning dish. If you use a browning dish incorrectly, you could damage the oven floor.
- **Preserve the metal rack:**
  - Remove the metal rack from the oven when you are not using it.
  - **Do not** use the oven empty with the metal rack in it.
  - The metal rack may get hot while cooking. Use pot holders to remove it after cooking.
  - **Do not** use foil or metal containers on the metal rack.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.

## SAVE THESE INSTRUCTIONS

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY ...


- **Do not attempt to operate this oven with the door open,** since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlock.
- **Do not operate the oven if it is damaged.** It is particularly important that the oven door close properly and that there is no damage to the:
  - door (bent)
  - hinges and latches (broken or loosened)
  - door seals and sealing surfaces.
- **Do not place any object between the oven front face and the door,** or allow soil or cleaner residue to accumulate on sealing surfaces.
- **The oven should not be adjusted or repaired** by anyone except properly qualified service personnel.

# INFORMATION

Please read this owner's manual. It will tell you how to use all the fine features of this microwave oven.

## LOCATION OF MODEL NUMBER

To request service information or replacement parts, the service center will require the complete model number of your microwave oven. The number is on the left side of control panel as shown in the illustration below.

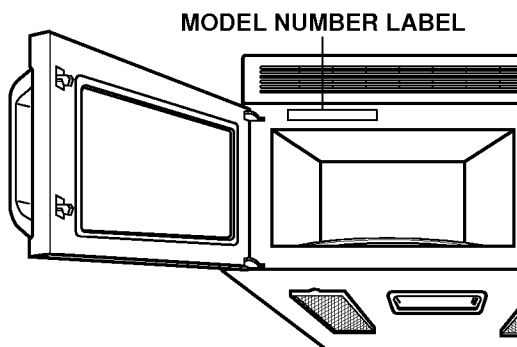

## OVEN SPECIFICATIONS

Output Power 900W (IEC 60705 Standard)  
Outer Dimensions 29-15/16" x 16-7/16" x 15-3/8"  
Cavity Volume 1.5 Cu.ft  
Net Weight 52 lbs.

## ELECTRICAL RATING

\* Electrical Rating of the Oven: 120V AC 60Hz  
\* 13 Amps / 1500 Watts ( MWO + Cooktop Lamp + Ventilation Fan)

## ELECTRICAL REQUIREMENTS

The oven is designed to operate on a Standard 120V/60Hz household outlet. Be sure the circuit is at least 15A or 20A and the microwave oven is the **only appliance on the circuit**. It is not designed for 50Hz or any circuit other than a 120V/60Hz circuit.

## GROUNDING INSTRUCTIONS


**This appliance must be grounded.** If an electrical short circuit occurs, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The cord for this appliance has a grounding wire with a grounding plug. Put the plug into an outlet that is properly installed and grounded.

**WARNING - If you use the grounding plug improperly, you risk electric shock.**

Ask a qualified electrician if you do not understand the grounding instructions or if you wonder whether the appliance is properly grounded.

Because this appliance fits under the cabinet, it has a short power-supply cord. See the separate Installation Instructions for directions on properly placing the cord. Keep the electrical power cord dry and do not pinch or crush it in any way.


If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

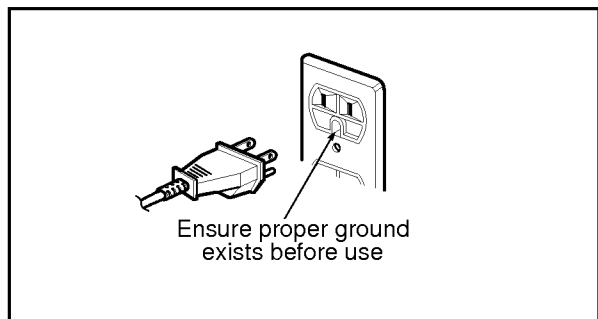

For a permanently connected appliance: This appliance must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding conductor should be run with the circuit conductors and connected to the equipment grounding terminal or lead on the appliance.


# INFORMATION

## MICROWAVE OVEN FEATURES

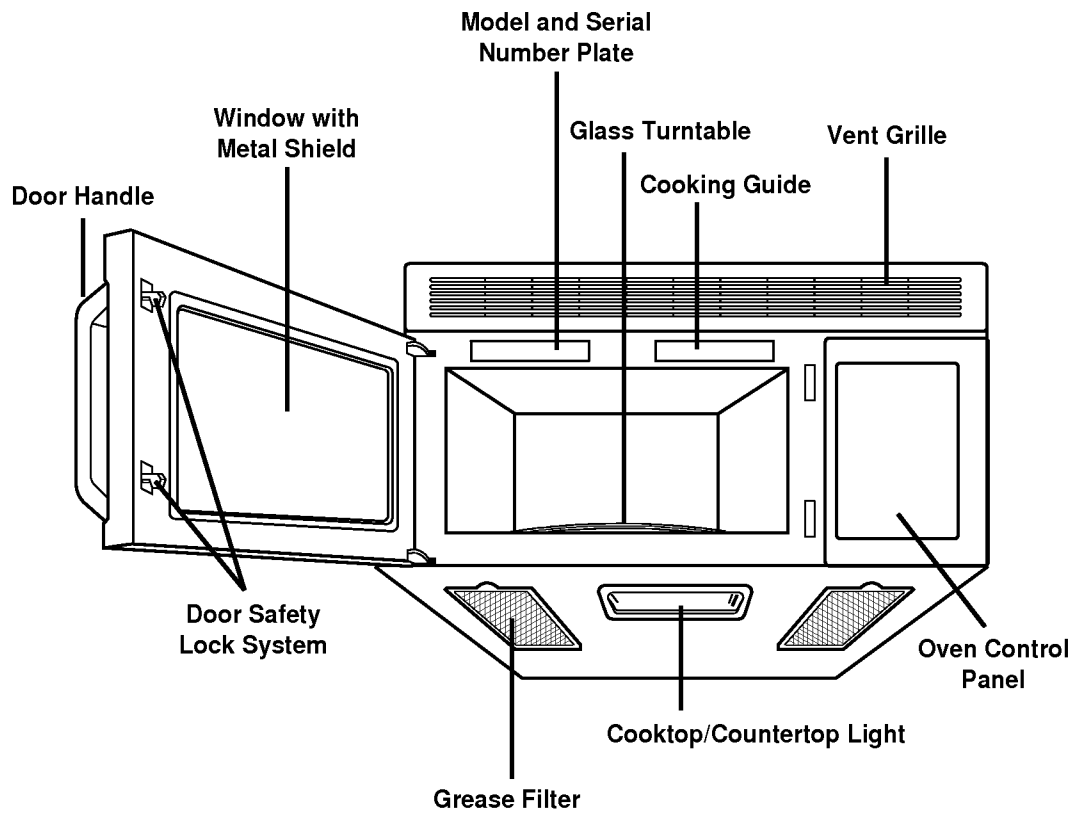

# INFORMATION

## OVEN CONTROL PANEL

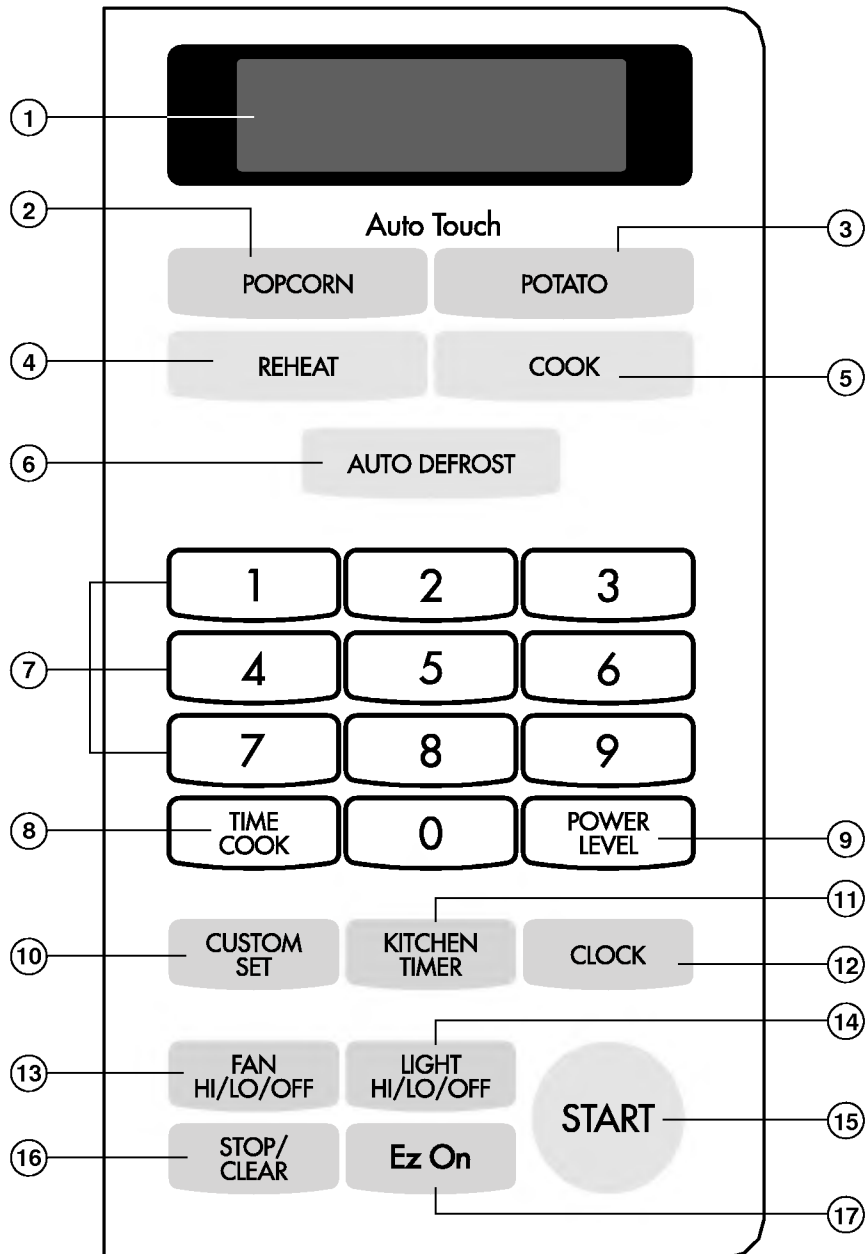

# INFORMATION

- 1. DISPLAY:** The Display includes a clock and indicators to tell you time of day, cooking time settings and cooking functions selected.
- 2. POPCORN:** Touch this pad when popping popcorn in your microwave oven.
- 3. POTATO:** Touch this pad to cook potatoes from 1 to 4.
- 4. REHEAT:** Touch this pad to reheat dinner plate, soup/sauce, casserole, roll/muffin.
- 5. COOK:** Touch this pad to cook vegetables, rice, or casseroles.
- 6. AUTO DEFROST:** Meat, poultry, fish. Touch on pad to select food type and defrost food by weight.
- 7. NUMBER:** Touch number pads to enter cooking time, power level, quantities or weights.
- 8. TIME COOK:** Touch this pad to set a cooking time.
- 9. POWER LEVEL:** Touch this pad to select a cooking power level.
- 10. CUSTOM SET:** Touch this pad to change the oven's default settings for sound, clock, display speed, defrost weight, and demo mode operations.
- 11. KITCHEN TIMER:** Touch this pad to set the kitchen timer.
- 12. CLOCK:** Touch this pad to enter the time of day.
- 13. FAN HI/LO/OFF:** Touch this pad to turn the fan on or off.
- 14. LIGHT HI/LO/OFF:** Touch this pad to turn on the cooktop/countertop light.
- 15. START:** Touch this pad to start a function. If you open the door after oven begins to cook, retouch START.
- 16. STOP/CLEAR:** Touch this pad to stop the oven or clear all entries.
- 17. EZ ON:** Touch this pad to set and start quickly at 100% power level.



# OPERATION

## LEARN ABOUT YOUR MICROWAVE OVEN

This section discusses the concepts behind microwave cooking and introduces you to the basics you need to know to operate your microwave oven. Please read this information before use.

### CLOCK

This oven includes a 24 hour clock.

**Example: To set 8:00 AM.**

1. Touch **STOP/CLEAR**.
2. Touch **CLOCK**.  
(Press once for AM, twice for PM.)
3. Enter the time by using the number key pad.
4. Touch **CLOCK**. (or **START**)

### FAN HI / LO / OFF

FAN  
HI/LO/OFF

The FAN moves steam and other vapors from the surface cooking. Touch FAN once for High fan speed, twice for Low fan speed, or a three times to turn the fan off.

**NOTE:** If the temperature gets too hot around the microwave oven, the fan in the vent hood will automatically turn on at the LOW setting to cool the oven. It may stay on up to an hour to cool the oven. When this occurs, **you can not turn the fan off manually.**

### LIGHT HI / LO / OFF

LIGHT  
HI/LO/OFF

Touch LIGHT once for bright light, twice for the night light or three times to turn the light off.

### KITCHEN TIMER

You can use your microwave oven as a timer. Use the Timer for timing up to 99 minutes, 99 seconds.

**Example: To count 3 minutes.**

1. Touch **STOP/CLEAR**.
2. Touch **KITCHEN TIMER**.
3. Enter the time by using the number key pad.
4. Touch **START**.  
When the time is over, you will hear seven beeps and **END** will display.

**Example: To set the child lock.**

1. Touch **STOP/CLEAR**.
2. Touch and hold **START** more than 4 seconds. **LOCKED** will appear in the display window with two beeps.

**Example: To cancel the child lock.**

1. Touch and hold **START** more than 4 seconds. **LOCKED** will disappear and you hear two beeps. At this time the oven is ready.

# OPERATION

## CUSTOM SET

You can change the default values for beep sound, clock, display speed, defrost weight, and demo mode operations. See following chart for more information.

NUMBER	CUSTOM SET	NUMBER	RESULT
1	Sound ON/OFF control	1	Sound ON
		2	Sound OFF
2	Clock display control	1	Clock ON
		2	Clock OFF
3	Display	1	Slow speed
		2	Normal speed
		3	Fast speed
4	Defrost weight mode select	1	Lbs
		2	Kg
5	Demo mode select	1	Demo ON
		2	Demo OFF

### Example: To change defrost weight mode. (from lbs to kg)

1. Touch **STOP/CLEAR**.
2. Touch **CUSTOM SET**.
3. Touch number **4**.
4. Touch number **2**.

## EZ ON

A time-saving pad, this simplified control lets you quickly set and start microwave cooking without the need to touch **START**.

### Example: To cook for 2 minutes.

**Ez On**

Touch **EZ ON** 2 times. The oven begins cooking and display shows time counting down.

### NOTE:

It will add 1 minutes up to 99 min 59 seconds.

## TIME COOK

### Example: To cook for 2 minutes.

**STOP/CLEAR**

1. Touch **STOP/CLEAR**.

**TIME COOK**

2. Touch **TIME COOK**.

**2 0 0**

3. Enter the cook time.

**START**

4. Touch **START**.

# OPERATION

## COOKING AT HIGH COOK POWER

Example: To cook food for 8 minutes 30 seconds.

1. Touch **STOP/CLEAR**.

2. Enter the cook time.

3. Touch **START**.  
When the cook time is over, you will hear four beeps and **END** will display.

## COOKING AT LOWER POWER LEVELS

HIGH power cooking does not always give you the best results with foods that need slower cooking, such as roasts, baked goods, or custards. Your oven has 9 power settings in addition to "HIGH".

Example: To cook food for 7 minutes 30 seconds at 70% power.

1. Touch **STOP/CLEAR**.

2. Enter the cook time.

3. Touch **POWER LEVEL**.

4. Enter the power level.

5. Touch **START**.  
When the cook time is over, you will hear four beeps and **END** will display.

# OPERATION

## COOKING GUIDE FOR “LOWER POWER LEVELS”

The nine power levels in addition to “HIGH” allow you to choose the best power level for the food you are cooking. Below are listed all the power levels,

examples of foods best cooked at each level, and the amount of microwave power you are using.

POWER LEVEL	MICROWAVE OUTPUT	USE
10 "HIGH"	100%	<ul style="list-style-type: none"> <li>• Boil water.</li> <li>• Cook ground beef.</li> <li>• Make candy.</li> <li>• Cook fresh fruits and vegetables.</li> <li>• Cook fish, and poultry.</li> <li>• Preheat browning dish.</li> </ul>
9	90%	<ul style="list-style-type: none"> <li>• Reheat meat slices quickly.</li> <li>• Saute onions, celery, and green pepper.</li> </ul>
8	80%	<ul style="list-style-type: none"> <li>• All reheating.</li> <li>• Cook scrambled eggs.</li> </ul>
7	70%	<ul style="list-style-type: none"> <li>• Cook breads and cereal products.</li> <li>• Cook cheese dishes, veal.</li> <li>• Cook cakes, muffins, brownies, cup cakes.</li> </ul>
6	60%	<ul style="list-style-type: none"> <li>• Cook pasta.</li> </ul>
5	50%	<ul style="list-style-type: none"> <li>• Cook meats, whole poultry.</li> <li>• Cook custard.</li> <li>• Cook whole chicken, turkey, spare ribs, rib roast, sirloin roast.</li> </ul>
4	40%	<ul style="list-style-type: none"> <li>• Cook less tender cuts of meat.</li> <li>• Reheat frozen convenience foods.</li> </ul>
3	30%	<ul style="list-style-type: none"> <li>• Thawing meat, poultry, and seafood.</li> <li>• Cooking small quantities of food.</li> <li>• Finish cooking casserole, stew, and some sauces.</li> </ul>
2	20%	<ul style="list-style-type: none"> <li>• Soften butter and cream cheese.</li> <li>• Heating small amounts of food.</li> </ul>
1	10%	<ul style="list-style-type: none"> <li>• Soften ice cream.</li> <li>• Raise yeast dough.</li> </ul>
0		<ul style="list-style-type: none"> <li>• Standing time.</li> </ul>

# OPERATION

## POPCORN

POPCORN lets you pop 1.75, 3.0, and 3.5 ounce bags of commercially packaged microwave popcorn. Pop only one package at a time. If you are using a microwave popcorn popper, follow manufacturer's instructions.

To correctly set your microwave oven, follow this chart:

Bag Size-ounces	1.75	3.0	3.5
Touch NUMBER	1	2	3

### Example: To pop a 3.0 oz. bag.

1. Touch **STOP/CLEAR**.
2. Touch **POPCORN**.
3. Touch number **2**.  
When the cook time is over, you will hear four beeps and **END** will display.

**CAUTION:** Do not leave microwave unattended while popping popcorn.

## POTATO

The POTATO pad lets you cook potatoes with the preset times and cook powers. You can choose from 1 to 4 potatoes.

### NOTE:

- Cooking times based on an average 8 ounce potato.
- Before baking, pierce potato with fork several times.
- After baking, let stand for 5 minutes.

### Example: To cook 2 Potatoes.

1. Touch **STOP/CLEAR**.
2. Touch **POTATO**.
3. Touch number **2**.  
When the cook time is over, you will hear four beeps and **END** will display.

# OPERATION

## COOK

COOK provides four preset categories for cooking.

**Example: To cook 2 cups of Rice.**

**STOP/CLEAR** 1. Touch **STOP/CLEAR**.

**COOK** 2. Touch **COOK**.

**3** 3. Choose food category.

Category	Touch pad number
Fresh vegetable	1
Frozen vegetable	2
Rice	3
Casserole	4

**2** 4. Enter quantity/servings.

Category	Number of cups
Fresh vegetable	1 - 4 cups
Frozen vegetable	1 - 4 cups
Rice	1 - 2 cups
Casserole	1 - 4 cups

When the cook time is over, you will hear four beeps and **END** will display.

## COOKING GUIDE FOR "COOK"

CODE	CATEGORY	QUANTITY	DIRECTIONS
1	FRESH VEGETABLE	1 cup Vegetables and 2 tbsp water	Place in a microwavable bowl or casserole. Add amount of water according to the quantity. Cover with vented plastic wrap. Let stand 5 minutes.
		2 cups Vegetables and 1/4 cup of water	
		3 cups Vegetables and 1/3 cup of water	
		4 cups Vegetables and 1/2 cup of water	
2	FROZEN VEGETABLE	1 cup	Place in a microwavable bowl or casserole. Cover with vented plastic wrap. Let stand 5 minutes.
		2 cups	
		3 cups	
		4 cups	
3	RICE	1 cup of Long grain rice and 2 1/4 cup of water	In large microwavable casserole, combine water, rice, margarine and salt. Cover with microwavable lid or vented plastic wrap. After cooking, let stand covered for 5 minutes.
		2 cups of Long grain rice and 4 1/4 cup of water	
4	CASSEROLE	1 cup	Place in a microwavable bowl or casserole. Cover with vented plastic wrap.
		2 cups	
		3 cups	
		4 cups	

# OPERATION

## REHEAT

REHEAT provides four preset categories for reheating.

**Example: To reheat 3 cups of Casserole.**

1. Touch **STOP/CLEAR**.

2. Touch **REHEAT**.

3. Choose food category.

Category	Touch pad number
Dinner Plate	1
Soup/Sauce	2
Casserole	3
Roll/Muffin	4

4. Enter quantity/servings.

Category	Number of cups/Items
Dinner plate	1 - 2 servings
Soup/sauce	1 - 4 cups
Casserole	1 - 4 cups
Roll/Muffin	1 - 4 pieces

When the cook time is over, you will hear four beeps and **END** will display.

## COOKING GUIDE FOR "REHEAT"

CODE	CATEGORY	SERVING AMOUNT	DIRECTION
1	DINNER PLATE	1 serving	Place on a low plate. Cover with vented plastic wrap.
		2 servings	
2	SOUP/SAUCE	1 cup	Place in shallow microwavable casserole. Cover with vented plastic wrap.
		2 cups	
		3 cups	
		4 cups	
3	CASSEROLE	1 cup	Place in a microwavable bowl or casserole. Cover with plastic wrap.
		2 cups	
		3 cups	
		4 cups	
4	ROLL/MUFFIN	1 piece	Place on paper towel. Do not cover.
		2 pieces	
		3 pieces	
		4 pieces	

# OPERATION

## AUTO DEFROST

Your microwave oven is preset with three defrost sequences. Using AUTO DEFROST is the best way to defrost frozen foods. The Auto Defrost Sequence Table below provides some basic guidelines for using the three defrost sequences.

**Example: To defrost 1.2 lbs of ground beef.**

1. Touch **STOP/CLEAR**.
2. Touch **AUTO DEFROST**.
3. Choose food category.
 

Category	Touch pad number
Meat	1
Poultry	2
Fish	3
4. Enter the weight.
5. Touch **START**.
6. After 1/3 of the defrost time is over, The display will prompt you to turn over food. Open door, turn over food, and shield any warm portions.
7. Close the door and restart.
8. After 2/3 of the defrost time is over, the display will prompt you to turn over food. Repeat steps 6 and 7. When the defrost time is over, you will hear four beeps and **END** will display.

**NOTE:** If you do not open the door, the display will resume the countdown.

### Weight conversion chart

You are probably used to food weights as being in pounds and ounces that are fractions of a pound (for example 4 ounces equals 1/4 pound).

However, in order to enter food weight in AUTO DEFROST, you must specify pounds and tenths of a pound. If the weight on the food package is in fractions of a pound, you can use the following chart to convert the weight to decimals.

EQUIVALENT OUNCE WEIGHT	NUMBER AFTER DECIMAL
1.6	.10
3.2	.20
4.0	.25 One-Quarter Pound
4.8	.30
6.4	.40
8.0	.50 One- Half Pound
9.6	.60
11.2	.70
12.0	.75 Three-Quarters Pound
12.8	.80
14.4	.90
16.0	1.00 One Pound

### DEFROSTING TIPS

- When using AUTO DEFROST, the weight to be entered is the net weight in pounds and tenths of pounds (the weight of the food minus the container).
- Only use AUTO DEFROST for raw food. AUTO DEFROST gives best results when food to be thawed is a minimum of 0°F (taken directly from a "true" freezer). If food has been stored in a refrigerator-freezer that does not maintain a temperature of 5°F or below, always program a lower food weight (for a shorter defrosting time) to prevent cooking the food.
- If the food is stored outside the freezer for up to 20 minutes, enter a lower food weight.
- The shape of the package alters the defrosting time. Shallow rectangular packets defrost more quickly than a deep block.
- Separate pieces as they begin to defrost. Separated pieces defrost more easily.
- You can use small pieces of aluminum foil to shield foods like chicken wings, leg tips, and fish tails, but the foil must not touch the side of the oven. Foil can damage the oven lining.
- Shield areas of food with small pieces of foil if they start to become warm.
- For better results, a preset standing time is included in the defrosting time.



# OPERATION

## AUTO DEFROST CHART

### Meat setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
<b>BEEF</b>			Meat of irregular shape and large, fatty cuts of meat should have the narrow or fatty areas shielded with foil at the beginning of a defrost sequence.
Ground beef (bulk)	MEAT	Remove thawed portions with fork. Turn over. Return remainder to oven.	Do not defrost less than 1/4 lb. Freeze in doughnut shape.
Ground beef (patties)	MEAT	Separate and rearrange.	Do not defrost less than two oz.patties. Depress center when freezing.
Round steak	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Tenderloin steak	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Stew beef	MEAT	Remove thawed portions with fork. Separate remainder. Return remainder to oven.	Place in a microwavable baking dish.
Pot roast, chuck roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Rib roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Rolled rump roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
<b>LAMB</b>			
Cubes for stew	MEAT	Remove thawed portions with fork. Return remainder to oven.	Place in a microwavable baking dish.
Chops (1 inch thick)	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
<b>PORK</b>			
Chops (1 inch thick)	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Hot dogs	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Spareribs Country style ribs	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Sausage, links	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Sausage, bulk	MEAT	Remove thawed portions with fork. Turn over. Return remainder to oven.	Place in a microwavable baking dish.
Loin roast, boneless	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.

# OPERATION

## AUTO DEFROST CHART (continued)

### Poultry setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
<b>CHICKEN</b> Whole	POULTRY	Turn over (finish defrosting breast-side down). Cover warm areas with aluminum foil.	Place chicken breast-side-up on a microwavable roast rack. Finish defrosting by immersing in cold water. Remove giblets when chicken is partially defrosted.
Cut-up		Turn over. Cover warm areas with aluminum foil. Separate pieces and rearrange.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.
<b>CORNISH HENS</b> Whole	POULTRY	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.
<b>TURKEY</b> Breast	POULTRY	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.

### Fish setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
<b>FISH</b> Fillet	FISH	Turn over. Separate fillets when partially thawed if possible.	Place in a microwavable baking dish. Carefully separate fillets under cold water.
Steaks	FISH	Separate and rearrange.	Place in a microwavable baking dish. Run cold water over to finish defrosting.
Whole	FISH		Place in a microwavable baking dish. Cover head and tail with foil; do not let foil touch sides of microwave. Finish defrosting by immersing in cold water.
<b>SHELLFISH</b> Crabmeat	FISH	Break apart.	Place in a microwavable baking dish.
Lobster tails	FISH	Rearrange.	Place in a microwavable baking dish.
Shrimp	FISH	Separate and rearrange.	Place in a microwavable baking dish.
Scallops	FISH	Separate and rearrange.	Place in a microwavable baking dish.

**NOTE :** Food to be defrosted must be not more than 6.0 lbs. (4.0kg)

\* Available weight is 0.1~6.0 lbs. (0.1~4.0kg)

# MAINTENANCE

## CARE AND CLEANING


For best performance and safety, keep the oven clean inside and outside. Take special care to keep the inner door panel and the oven front frame free of food or grease build-up.

**Never use rough powder or pads.** Wipe the microwave oven inside and out, including the hood bottom cover, with a soft cloth and a warm(not hot) mild detergent solution. Then rinse and wipe dry. Use a chrome cleaner and polish on chrome, metal and aluminum surfaces. Wipe spatters immediately with a wet paper towel, especially after cooking chicken or bacon. Clean your oven weekly or more often, if needed.


## CLEANING THE GREASE FILTERS

The grease filters should be removed and cleaned often, at least once a month.


1. To remove grease filters, slide each filter to the side. Pull filters downward and push to the other side. The filter will drop out.

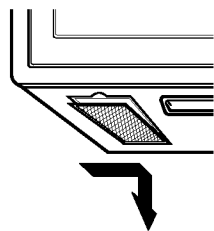

2. Soak grease filters in hot water and a mild detergent. Rinse well and shake to dry. **Do not use ammonia or place in a dishwasher. The aluminum will darken.**

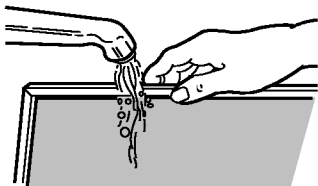

3. To reinstall the filters, slide it into the side slot, then push up and toward oven center to lock.

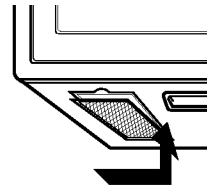


**NOTE: Do not** operate the hood without the filters in place.


## CHARCOAL FILTER REPLACEMENT

If your oven is vented inside, the charcoal filter should be replaced every 6 to 12 months, and more often if necessary. The charcoal filter cannot be cleaned. To order a new charcoal filter, contact the Service Center.


1. Remove the two vent grille mounting screws. (2 middle screws)
2. Tip the grille forward, then lift it out

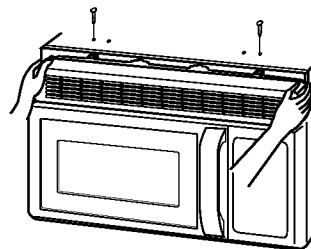

3. Open the door.
4. Push the hook and remove old filter.

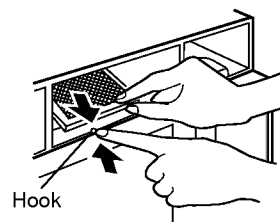

5. Slide a new charcoal filter into place and close the door. The filter should rest at the angle shown and set the clock.

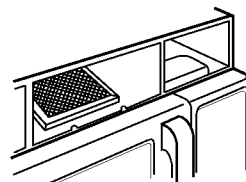


6. Slide the bottom of the vent cover into place. Push the top until it snaps into place. Replace the mounting screws. Turn the power back on at the main power supply and set the clock.

# MAINTENANCE

## COOKTOP/NIGHT LIGHT REPLACEMENT


1. Unplug oven or turn off power at the main power supply.
2. Remove the bulb cover mounting screws.

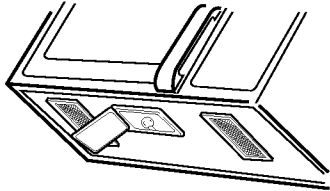


3. Replace bulb with 30 watt appliance bulb.
4. Replace bulb cover, and mount screw.
5. Turn the power back on at the main power supply.

## OVEN LIGHT REPLACEMENT

1. Unplug oven or turn off power at the main power supply.
2. Remove the vent cover mounting screws. (2 middle screws)
3. Tip the cover forward, then lift out to remove.

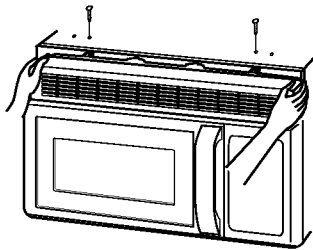

4. Lift up the bulb holder.

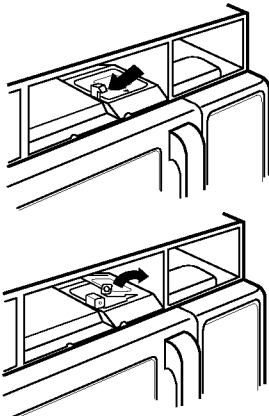

5. Replace bulb with a 30 watt appliance bulb.
6. Replace the bulb holder.
7. Slide the top of the vent cover into place. Push the bottom until it snaps into place. Replace the mounting screws. Turn the power back on at the main power supply.

## QUESTIONS AND ANSWERS

### Q. Can I use a rack in my microwave oven so that I may reheat or cook in two levels at a time?

- A. Only use the rack that is supplied with your microwave oven. Use of any other rack can result in poor cooking performance and/or arcing and may damage your oven.

### Q. Can I use either metal or aluminum pans in my microwave oven?

- A. Usable metal includes aluminum foil for shielding (use small, flat pieces), and shallow foil trays (if tray is 3/4 inch deep and filled with food to absorb microwave energy). Never allow metal to touch walls or door.

### Q. Sometimes the door of my microwave oven appears wavy. Is this normal?

- A. This appearance is normal and does not affect the operation of your oven.

### Q. What are the humming noises that I hear when my microwave oven is operating?

- A. You hear the sound of the transformer when the magnetron tube cycles on and off.

### Q. Why does the dish become hot when I microwave food in it? I thought that this should not happen.

- A. As the food becomes hot it will conduct the heat to the dish. Use hot pads to remove food after cooking.

### Q. What does "standing time" mean?

- A. "Standing time" means that food should be taken out of the oven and covered for additional time after cooking. This process allows the cooking to finish, saves energy and frees the oven for other purpose.

### Q. Can I pop popcorn in my microwave oven? How do I get the best results?

- A. Yes. Pop packaged microwave popcorn following manufacturer's guidelines or use the preprogrammed Popcorn pad. Do not use regular paper bags. Use the "listening test" by stopping the oven as soon as the popping slows to a "pop" every one or two seconds. Do not try to repop unpopped kernels. You can also use special microwave poppers. When using a popper, be sure to follow manufacturer's directions. Do not pop popcorn in glass utensils.

### Q. Why does steam come out of the air exhaust vent?

- A. Steam is normally produced during cooking. The microwave oven has been designed to vent this steam out the top vent.

# MAINTENANCE

You may microwave in many more utensils than you can use on the stove or in a conventional oven, because microwaves penetrate them safely still cooking the food.

Below are listed the utensils you can safely cook with and those you must avoid. To test whether you can safely with a utensil not on the lists below, do the following:

1. Place the utensil empty in the microwave oven.
2. Measure 1 cup of water in a glass measuring cup and place in the oven beside the utensil.
3. Microwave on HI Power for 1 minute.
4. If the utensil is warm to the touch at the end of this time, you should not use it for microwave cooking.

## MICROWAVE UTENSIL GUIDE

USE	DO NOT USE
<p><b>OVENPROOF GLASS</b> (treated for high intensity heat): utility dishes, loaf dishes, pie plates, cake plates, liquid measuring cups, casseroles and bowls without metallic trim.</p> <p><b>CHINA:</b> bowls, cups, serving plates and platters without metallic trim.</p> <p><b>PLASTIC:</b> Plastic wrap (as a cover)-- lay the plastic wrap loosely over the dish and press it to the sides. Vent plastic wrap by turning back one edge slightly to allow excess steam to escape. The dish should be deep enough so that the plastic wrap will not touch the food. As the food heats it may melt the plastic wrap wherever the wrap touches the food. Use plastic dishes, cups, semirigid freezer containers and plastic bags <b>only for short cooking time. Use these with care because the plastic may soften from the heat of the food.</b></p> <p><b>PAPER:</b> Paper towels, waxed paper, paper napkins and paper plates with no metallic trim or design. Look for the manufacturer's label for use in the microwave oven.</p>	<p><b>METAL UTENSILS:</b> Metal shields the food from microwave energy and produces uneven cooking. Also avoid metal skewers, thermometers or foil trays. Metal utensils can cause arcing, which can damage your microwave oven.</p> <p><b>METAL DECORATION:</b> Metal-trimmed or metal-banded dinnerware, casserole dishes, etc. The metal trim interferes with normal cooking and may damage the oven.</p> <p><b>ALUMINUM FOIL:</b> Avoid large sheets of aluminum foil because they hinder cooking and may cause harmful arcing. Use small pieces of foil to shield poultry legs and wings. Keep ALL aluminum foil at least 1 inch from the side walls and door of the oven.</p> <p><b>WOOD:</b> Wooden bowls and boards will dry out and may split or crack when you use them in the microwave oven. Baskets react in the same way.</p> <p><b>TIGHTLY COVERED UTENSILS:</b> Be sure to leave openings for steam to escape from covered utensils. Pierce plastic pouches of vegetables or other food items before cooking. Tightly closed pouches could explode.</p> <p><b>BROWN PAPER:</b> Avoid using brown paper bags. They absorb too much heat and could burn.</p> <p><b>FLAWED OR CHIPPED UTENSILS:</b> Any utensil that is cracked, flawed or chipped may break in the oven.</p> <p><b>METAL TWIST TIES:</b> Remove metal twist ties from plastic or paper bags. They become hot and could cause a fire.</p>

## **BEFORE CALLING FOR SERVICE**

Check the following list to be sure a service call is really necessary. A quick reference of this manual as well as reviewing additional information on items to check, may prevent an unneeded service call.

### **If nothing on the oven operates:**

- check for a blown circuit fuse or a tripped main circuit breaker.
- check if oven is properly connected to electric circuit in house.
- check that controls are set properly.

### **If the oven interior light does not work:**

- the light bulb is loose or defective.

### **If oven will not cook:**

- check that control panel was programmed correctly.
- check that door is firmly closed.
- check that Start Pad was touched.
- check that probe was inserted correctly into receptacle.
- check that timer wasn't started instead of a cook function.

### **If oven takes longer than normal to cook or cooks too rapidly:**

- be sure the Power Level is programmed properly.

### **If the time of day clock does not always keep correct time:**

- check that the power cord is fully inserted into the outlet receptacle.
- be sure the oven is the only appliance on the electrical circuit.

### **If food cooks unevenly:**

- be sure food is evenly shaped.
- be sure food is completely defrosted before cooking.
- check placement of aluminum strips used to prevent overcooking.

### **If food is undercooked:**

- check recipe to be sure all directions (amount, time, & power levels) were correctly followed.
- be sure microwave oven is on a separate circuit.
- be sure food is completely defrosted before cooking.

### **If food is overcooked:**

- check recipe to be sure all directions (amount, power level, time, size of dish) were followed.

### **If arcing (sparks) occur:**

- be sure microwavable dishes were used.
- be sure wire twist ties weren't used.
- be sure oven wasn't operated when empty.
- make sure metal rack (if used) is properly installed on 4 supports.

### **If the Display shows a time counting down but the oven is not cooking:**

- check that door is firmly closed.
- check that Timer wasn't started instead of a cooking function.

## ***BEFORE CALLING FOR SERVICE***

You can often correct operating problems yourself. If your microwave oven fails to work properly, locate the operating problem in the chart below and try the solutions marked for each problem. If the microwave oven still does not work properly, contact the nearest Service center. Service Centers are fully equipped to handle your service requirements.

<b>PROBLEM</b>	<b>SOLUTION</b>
Oven will not start	Is power cord plugged in? Is door closed? Cooking time not set. Temperature not set or probe not plugged in.
Arcing or Sparking	Use approved cookware only. Properly position temperature probe. Do not operate with oven empty.
Time of day incorrect	Reset time of day.
Probe Light Flashes	Is temperature probe properly plugged in?
Unevenly Cooked Foods	Use approved cookware only. Turn or stir food. Completely defrost food.
Overcooked Foods	Properly position temperature probe. Use correct time. / Power level setting. Use correct temp setting.
Undercooked Foods	Use approved cookware only. Properly position temperature probe. Completely defrost food. Use correct time. / Power level setting. Use correct temp setting. Check see that oven ventilation ports are not restricted.
Improper Defrosting	Use approved cookware only. Turn or stir food. Use correct time. / Power level setting.
Oven Lamp does not Light	Is power cord plugged in? Is door closed? Cooking time not set. Is light bulb burned out?

CENTRE DE SERVICE AUTORISÉ INDEPENDENT PAR  
**LG ELECTRONICS CANADA, INC.**

**AUTHORIZED INDEPENDENT SERVICE CENTERS**

not all listed service centres repair all product, please see product code listed below

**BRITISH COLUMBIA & NORTHWEST TERRITORIES**

**CRANBROOK**  
DANNYS HOME  
ENTERTAINMENT  
11B 14TH AVE S  
VIC 2W9 (604) 426-7413  
A1 A2 A3 B1 B2 B3 B5 E1 E5

**FORT ST-JOHN**  
DIVERSIFIED  
ELECTRONICS  
10607-101 ST AVENUE  
V1J 5J4 (604) 785-9119  
B1 B2 B3

**KAMLOOPS**  
GIDDENS SERVICES LTD.  
1613 VALLEYVIEW DRIVE  
V2C 4B4 (604) 372-8842  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E2 E4 E5

**KAMLOOPS**  
JOHNS ELECTRIC REPAIR  
CENTER  
773 VICTORIA STREET  
V2C 2B5 (604) 374-0388  
A1 A2 A3 B1 B2 B3 C1 E1 E5

**KELOWNA**  
VALLEY DIG ITRONICS  
SERVICE LTD  
2453 HIGHWAY 97 NORTH  
VIX 4J2 (604) 763-8366  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5 Z1

**KITIMAT**  
WINGS ELECTRONICS  
161 CITY CENTRE  
V8C 1T6 (604) 632-4247  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
C2 E1 E5

**LANGLEY**  
A.A.A TV SERVICE  
19-9316-194TH STREET  
V3T 4W2 (604) 888-7777  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
Z1

**LANGLEY**  
FRASER VALLEY VIDEO  
REPAIR  
21271-40TH STREET  
V3A 4P5 (604) 530-6094  
A1 A2 A3 A4 B3 Z1

**MAPLE RIDGE**  
HANEY TV & SOUND  
SERVICE  
11781 FRASER ST  
V2X 6C6 (604) 467-4955  
A1 A2 A3 B1 B2 B3 B5 C1 E1  
E5

**NANAIMO**  
KEBB ELECTRONICS  
CLINIC LTD  
1609A BOWEN RD  
V9S 1G5 (604) 754-6335  
A1 A2 A3 A4 B1 B3 C1 E1

**PORT ALBERNI**  
QUALITY ELECTRONICS  
LTD.  
4414 MARGARET STREET  
V9Y 6G6 (604) 724-3422  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
E5

**POWELL RIVER**  
DIAMOND TV AND RADIO  
4844 JOYCE AVE  
V8A 3B8 (604) 485-5793  
A1 A2 A3 B1 B2 B3 C1 E1 E5

**PRINCE GEORGE**  
ABC TV & STEREO  
1-1839 1ST AVENUE  
V2L 2Y8 (604) 564-9018  
A1 A2 A3 B1 B2 B3 B5 C1 E1  
Z1

**RICHMOND**  
ELTEX ELECTRONIC  
SERVICES  
4351 NO.3 ROAD  
V6X 2X8 (604) 270-8480  
A1 A2 A3 A4 B1 B2 B3 B4 C1  
E1 E2 E5 F2

**RICHMOND**  
MICROTECH SERVICE  
CORP.  
130-2188 5 ROAD  
V6X 2T1 (604) 276-8324  
B5

**RICHMOND**  
RR VIDEO MASTER LTD  
5471 MINORU BLVD  
V6X 2B1 (604) 270-7288  
A1 A2 A3 A4 B1 B2 B3 Z1

**SECHELT**  
BEACON ELECTRONICS  
RR 1 HEATHER RD  
VON 3A0 (604) 885-5963  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
E5

**SURREY**  
GUILDFORD ELECTRONICS  
LTD  
113-9547 152ND ST S  
V3R 5Y5 (604) 581-2272  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 E5 Z1

**TERRACE**  
ELECTRONICS PLUS  
4617 LAZELLE AVE  
V8G 1S3 (604) 635-4577  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
C2 E1

**TERRACE**  
THE TV SHOP  
4807 HAMER AVE  
V8G 2E5 (604) 635-4695  
A1 A2 A3 A4 B1 B3 E1

**VANCOUVER**  
VANCOUVER MICRO  
SERVICE  
2643 KINGSWAY  
V5R 4H4 (604) 433-2446  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 E5

**VICTORIA**  
AMP SERVICE CENTRE  
101 3347 OAK ST.  
V8X 1R2 (604) 475-3065  
A1 A2 A3 A4 B1 B2 B3 B4 C1  
E1

**VICTORIA**  
BC SOUND & RADIO  
SERVICE  
1805 FORT STREET  
V8R 1J6 (604) 595-4225  
A1 A2 A3 A4 B1 B2 B3 C1 C2  
E1 E5

**NORTHWEST TERRITORIES**  
**YELLOWKNIFE**  
ARCTIC APPLIANCE  
SERVICE  
4310-50TH AVE  
X1A 1B5 (403) 920-4511  
E1 E2 E4 E5

**ALBERTA**

**CALGARY**  
ABBA ELECTRONICS  
1916 37TH STREET SW  
T3E 3A3 (403) 240-2669  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
E2

**CALGARY**  
CITY-WIDE ELECTRONICS  
311-36 AVE SE  
T2G 1W1 (403) 243-0925  
A1 A2 A3 A4 B1 B2 B3 C1 E1

**CALGARY**  
MICROTECH  
2735-39 AVE NE 100  
T3E 5R9 (403) 250-7041  
A1 A2 A3 A4 B1 B3 C1 E1

**CALGARY**  
NATIONAL ELECT SERVICE  
ASC 2  
1266-73 AVENUE S.E.  
T2H 2V5 (403) 252-6988  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 E5

**CALGARY**  
SOUTHLAND CROSSING TV  
9827-C HORTON SW  
T2V 2X5 (403) 255-9647  
A1 A2 A3 B1 B2 B3 B4 C1 E1  
E2 E5 F2

**CAMROSE**  
ELECTRONIC SERVICES  
4612-49 AVE  
T4V 0M6 (403) 672-3601  
B1 E1 E2 Z1

**CANMORE**  
MOUNTAIN ELECTRONIC  
SERVICES  
BOX 2459 1316 RAILWAY  
AVE T0L 0M0 (403) 678-6448  
A1 A2 A3 B1 B2 B3 B5 C1 C2  
E1 E2 E5

**EDMONTON**  
STERLING T.V. AND VIDED  
15608-116 AVE  
T5M 3S5 (403) 455-8725  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 E5

**EDMONTON**  
VIDED TECH  
5310-89 ST  
T6E 5P9 (403) 468-5856  
A1 A2 A3 A4 B1 B3 C1 E1

**GRAND CENTRE**  
CENTRE TV AND  
APPLIANCE SERV  
5804-50TH AVE  
T0A 1T1 (403) 594-2425  
A1 A2 A3 A4 B1 B3 B5 C1

**GRANDE PRAIRIE**  
G.P. ELECTRONICS  
SERVICE  
10702-100TH STREET  
T8V 3X8 (403) 539-4240  
A1 A2 A3 A4 B1 B3 B5 C1

**GRANDE PRAIRIE**  
T.V. KORNER  
9827-97TH AVE  
T8V 0M9 (403) 539-4805  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
C2 E1

**INNISFAIL**  
VIDEOTRONICS SERVICE  
NO 3, 4912-52 STREET  
T4G 1S7 (403) 227-4111  
A1 A2 A3 B1 B2 B3 C1 E1 E2

**LETHBRIDGE**  
FAITH ELECTRONICS LTD.  
1422-2 AVE SOUTH  
T1J 0E9 (403) 327-2977  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5 Z1

**LETHBRIDGE**  
PRO TELEVISION SALES  
1815-2nd AVENUE SOUTH  
T1J 0E8 (403) 328-4977  
A1 A2 A3 B1 B2 B3 E1

**MEDICINE HAT**  
GUST'S RADIO TV  
913 SOUTH RAILWAY ST. S.E.  
T1A 2W3 (403) 526-6815  
A1 A2 A3 A4 B1 B2 B3

**MEDICINE HAT**  
TEL-RAY TELEVISION  
683 SOUTH RAILWAY  
STREET SE  
T1A 2V8 (403) 526-4588  
A1 A2 A3 B1 B3 E1

**PEERS**  
KARLS TV SERVICE  
C.2. SITE 19, RR1  
T0E 1W7 (403) 693-3737  
B1 B2 B3 Z1

**RED DEER**  
MIDWAY APPLIANCE  
SERVICE  
BAY 11-7895 49 TH AVE  
T4N 6K2 (403) 342-1353  
E1 E2 E3 E4 E5

**RED DEER**  
TOWN & COUNTRY  
RADIO & TV  
4A 4999-76 STREET  
T4P 1T5 (403) 347-4388  
A1 A2 A3 B1 B2 B3 E1 E5

**VERMILION**  
VERMILION COMMUNITY  
T.V. BOX 786  
T0B 4M0 (403) 853-5007  
A1 A2 A3 B1 B2 B3 C1 E1  
E5

**SASKATCHEWAN**

**CARROT RIVER**  
CHANNEL 16  
ELECTRONICS BOX 416  
S0E 0L0 (306) 768-3784  
A1 A2 A3 B1 B2 B3 C1 C2

**KINDERSLEY**  
STEVE'S T.V. & RADIO  
SERVICE  
BOX 2728 304 2ND AVE W.  
S0L 1S0 (306) 463-2930  
A1 A2 B1 B3 E1

**KINISTHO**  
TOM'S TV & RADIO  
SERVICE BOX 369  
S0J 1H0 (306) 864-2244  
A1 A2 A3 B1 B2 E1 E5

**LLOYDMINSTER**  
CLAUDE'S T.V. SERVICE  
4912-49 AVENUE  
S9V 0T6 (306) 825-9441  
B1 E1

**MEADOW LAKE**  
CLAUDE'S ELECTRONIC  
REPAIR  
BOX 3184  
S0M 1V0 (306) 236-3160  
A1 A2 A3 A4 B1 B3 B5 E1

**N BATTLEFORD**  
SPECTRONIC SERVICE LTD.  
11204 RAILWAY AVE. E.  
S9A 2R7 (306) 446-2345  
B1 B2 B3 E1

**NORTH BATTLEFORD**  
CLAUDE'S T.V. & RADIO LTD  
1922-100 TH STREET  
S9A 0X3 (306) 446-2322  
A1 A2 A3 A4 B1 B2 B3 C1 B5  
E1

**PRINCE ALBERT**  
ALS ELECTRONIC SERVICE  
LTD.  
127A 16 TH ST W  
S6V 3V2 (306) 763-7790  
A1 A2 A3 A4 B1 B2 B3 E1 E5

**PRINCE ALBERT**  
GALAXY ELECTRONICS LTD.  
1306 CENTRAL AVE  
S6V 4W3 (306) 764-7377  
A1 A2 A3 A4 B1 B2 B3 B5  
E1 E5

**SASKA TOON**  
AAA TV DOCTOR  
2207 & 2209 FIRST AVE.  
NORTH S7K 2A4 (306) 242-  
1797  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 E5

**SASKA TOON**  
TRICOM ELECTRONICS  
1926 ALBERTA AVENUE  
S7K 1R9 (306) 653-3913  
A1 A2 A3 A4 B1 B2 B3 E1 E5

**SASKA TOON**  
WESTWAY APPLIANCE  
SERVICE INC  
5-1622 ONTARIO AVE  
S7K 1S8 (306) 652-1550  
E1

**YORKTON**  
DALIN ELECTRONICS  
80 SMITH STREET  
S3N 0J4 (306) 783-3420  
A1 A2 A3 B1 B3 C1 E1

**YORKTON**  
BONSAL'S APPLIANCE  
REPAIR LTD.  
76 7TH AVE S., BOX 160  
S3N 2V7 (306) 783-8991  
E1 E2 E4 E5



CENTRE DE SERVICE AUTORISÉ INDEPENDENT PAR  
**LG ELECTRONICS CANADA, INC.**

**AUTHORIZED INDEPENDENT SERVICE CENTERS**

not all listed service centres repair all product, please see product code listed below

**MANITOBA**

<b>BRANDON</b> TELEVISION CITY 1639 ROSSER AVE R7A 0M9 (204) 728-1232 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1 E2	<b>WINNIPEG</b> AUTEK LAO LTD 488 ST. ANNES ROAD R2M 3E1 (204) 256-4048 A1 A2 A3 A4 B1 B3 C1 C2 E1	<b>WINNIPEG</b> MM ELECTRONICS SYSTEMS LTD 695 LOGAN AVE R3E 1M5 (204) 788-4450 A1 A2 A3 A4 B1 B3 B5 C1 E1	<b>WINNIPEG</b> T.R. ELECTRONIC SERVICES 1646 ST-JAMES STREET R3H 0L3 (204) 772-6834 A1 A2 A3 A4 B1 B2 B3 B4 E1 E5	<b>WINNIPEG</b> THE VIDED RE-FIT SHOP 3147 PORTAGE AVE R3K 0W4 (204) 831-0862 A1 A2 A3 B1 B2 B3 E1 Z1
<b>PORTAGE LA PRAIRIE</b> REEVES SERVICES 446 TUPPER STREET NORTH R1N 1X5 (204) 857-7233 A1 A2 A3 B1 B2 B3 C1 C2 E1 Z1	<b>WINNIPEG</b> JAPAN AUDIO 1037 ERIN STREET R3G 2X1 (204) 775-0494 A1 A2 A3 A4 B1 B2 C1 E1 E5 F2	<b>WINNIPEG</b> SUPERIOR APPLIANCE SERVICE LTD 729 WALL STREET R3G 2T6 (204) 775-8677 B1 B2 B3 Z1		

**ONTARIO**

<b>AJAX</b> DUNBARTON RADIO AND TV LTD 29 HARWOOD AVE SOUTH 3 L1S 2B8 (905) 686-3957 A1 A2 A3 A4 B1 B2 B3 E1 Z1	<b>ELGINBURG</b> HALL ELECTRONIC SERVICE 2162 UNITY RD. K0H 1M0 (613) 541-0808 A1 A2 A3 A4 B1 B2 B3 B5	<b>MARKHAM</b> MULTI-ELECTRONICS SERVICE 190 DON PARK ROAD UNITS L3R 2V8 (905) 475-5068 B3 B4	<b>NORTH BAY</b> R.J. ELECTRONICS SERVICE 101 FERRIS DRIVE P1A 8Z4 (705) 474-0830 A1 A2 A3 A4 B1 B2 C1 E1 E5	<b>PORT PERRY</b> PICTURE PERFECT TV SERVICE 72 WATER STREET L9L 1J2 (905) 985-9500 A1 A2 A3 A4 B1 B2 B3 E1 Z1
<b>BARRIE</b> NORTHERN ELECTRONIC SERVICES 165 WELLINGTON ST W UNIT 2A L4N 1L7 (705) 733-2195 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1	<b>ELLIOT LAKE</b> SUPERIOR AUDIO AND VIDEO 184 ONTARIO AVE. P5A 1Y4 (705) 848-2366 A1 A2 A3 A4 B1 B2 B3 C1 E1 E5	<b>MARKHAM</b> RAMTEL INC 39 RIVIERA DRIVE UNIT 11 L3R 8N4 (905) 940-3166 B5	<b>OSHAWA</b> VCR CLINIC 1300 KING ST. E 26 L1H 8J4 (905) 723-6373 B1 B3 E1	<b>RICHMOND HILL</b> ONE STDP ELECTRONICS SERVICE 85 WEST WILMOT ST. #7 L4B 1K7 (905) 882-0700 F1
<b>BELLEVILLE</b> CONSUMERS ELECTRONICS 257 NORTH FRONT ST K8P 3C3 (613) 966-3599 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1	<b>HAMILTON</b> ALL BEST AUDIO VIDEO LTD. 70 NEBO ROAD, UNIT 3 L8W 2E3 (905) 575-3486 A1 A2 A3 A4 B1 B2 B3 C1 E1 E2 E3 E5	<b>MARKHAM</b> RELIABLE AUDIO 550 ALDEN ROAD UNIT 104 L3R 6A8 (905) 477-1222 A1 A2 A3 A4 B1 B2 B3 E1 E5	<b>OTTAWA</b> REGIONAL HOME APPLIANCE 1221 NEWMARKET ST K1B 3V1 (613) 741-6520 A1 A2 A3 B1 B2 B3 E1 E2 E3 E4 E5	<b>SARNIA</b> DUAL ELECTRONICS 153 MITTON STREET, NORTH N7T 6G9 (519) 344-2323 A1 A2 A3 A4 B1 B2 B3 E1 E5 Z1
<b>BELLEVILLE</b> MILLER ELECT. SERVICING CO. MAITLAND PLAZA, UNIT 3 K8N 4Z5 (613) 969-5299 A1 A2 A3 A4 B1 B2 B3 E1 E5 Z1	<b>HAMILTON</b> COLTECH ELECTRONICS INC 306 KENORA AVE L8E 2W2 (905) 561-5506 A1 A2 A3 A4 B1 B2 B3 C1 E1	<b>MISSISSAUGA</b> CENTECH ELECTRONICS 1330 MIDWAY BLVD., UNIT 3 L5T 2G8 (905) 564-8585 A1 A2 A3 B1 B3 C1 E1 F1 F2	<b>OTTAWA (GLOUCESTER)</b> HOME ELECTRONICS CENTER LTD 5310 CANOTEC UNIT 34 K1J 9N5 (613) 746-7700 A1 A2 A3 A4 B1 B2 B3 C1 E1 E2 E4 E5	<b>SARNIA</b> KEELANS SERVICE CENTRE 190 MAXWELL STREET N7T 5C3 (519) 337-7557 A1 A2 A3 A4 B1 B2 B3 E1 E2 E3 E4 E5 Z1
<b>CAMBRIDGE</b> CAMBRIDGE ELECTRONICS LTD 645 KING STE N3H 3N7 (519) 653-2120 A1 A2 A3 A4 B1 B2 B3 B5 C1 C2	<b>HORNEPAYNE</b> BOZEC ELECTRIC 90 FRONT ST POM 1Z0 (807) 868-3023 E1 E2 E4 E5	<b>MISSISSAUGA</b> KODAN ELECTRONICS 3045 SOUTH CREEK RD.50 L4X 2X7 (905) 625-5613 A1 A2 A3 A4 B1 B2 B3 B4 C1 E1 E5 Z1	<b>OTTAWA (NEPEAN)</b> CAMSERV 52AIIITARES DR UNIT 16 K2E 7Z1 (613) 226-3375 B3 B4 B5	<b>SCARBOROUGH</b> AAB-TECH ELECTRONICS INC 1050 MCNICOLL AVE UNIT 10 M1W 2L8 (416) 490-0200 A1 A2 A3 A4 B1 B2 B3 C1 E1 E5
<b>CAMBRIDGE</b> PRESTON TV AND RADIO 238 LOWTHER ST N N3H 1Y1 (519) 653-0130 A1 A2 A3 B1 B2 B3 B5 E1	<b>KAPUSKASING</b> MICHEL T.V. SERVICE 110 BRUNELLE NORTH P5N 2M2 (705) 335-5223 A1 A2 A3 A4 B1 B2 B3 B5 C1 E1 Z1	<b>MISSISSAUGA</b> KODAN ELECTRONICS 3045 SOUTH CREEK RD.50 L4X 2X7 (905) 625-5613 A1 A2 A3 A4 B1 B2 B3 B4 C1 E1 E5 Z1	<b>OTTAWA (NEPEAN)</b> HOME ELECTRONICS CENTRE 3-1950 MERIVALE RD K2G 5T5 (613) 723-9194 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1 E2 E4 E5	<b>SCARBOROUGH</b> CONSUMERS ELECTRONICS 87 THORN MOUNT DRIVE 33 M1B 5S5 (416) 281-8411 A1 A2 A3 A4 B1 B2 B3 B4 C1 E3 E4 E5
<b>COBOURG</b> RON LINTON APPLIANCE SERVICE 434 KING ST W K9A 2N7 (805) 372-8761 E1 E2 E4 E5	<b>KINGSTON</b> DEPOT CONSUMER SERVICE LTD 607 GARDINERS RD K7M 3Y4 (613) 384-1660 A1 A2 A3 B1 B2 B3 C1 E1 E2 E3 E5	<b>MISSISSAUGA</b> PC SERVICE PARTNERS 6715 MILLCREEK DRIVE, SUITE #1 L5N 5V2 (905) 567-3239	<b>OTTAWA (NEPEAN)</b> TELE SERVICE ELECTRONICS LTD 1891 MERIVALE ROAD K2G 1E5 (613) 224-7748 A1 A2 A3 A4 B1 B2 B3 B4 E1 E5 F2 Z1	<b>SIMCOE</b> K.C. ELECTRONIC SERVICE 40 SYDENHAM ST. N3Y 1R7 (519) 428-2803 A1 A2 A3 A4 B1 B2 B3 B5 E1 E5
<b>COBOURG</b> UNITED TELEVISION COBOURG LTD. 66 KING STREET EAST K9A 1K9 (905) 372-6832 A1 A2 A3 A4 B1 B2 B3 E1 E5	<b>KINGSTON</b> MONTGOMERY ELECTRONICS 3079 PRINCESS STREET RR 3 L7L 4V2 (613) 389-2846 A1 A2 A3 A4 B1 B2 B3 E1 E2 E5	<b>MISSISSAUGA</b> WINDWOOD VIDEO INC 3080 NINDWOOD DRIVE L5N 2K5 (905) 542-0333 A1 A2 A3 A4 B1 B2 B3 B5 C1 C2 E1 E2 E3 E4 E5	<b>OWEN SOUND</b> HOME ELECTRONICS REPAIR 180B 12TH ST E N4K 1B7 (519) 371-3808 A1 A2 A3 B1 B2 B3 E1	<b>SIoux LOOKOUT</b> ADI'S ELECTRONICS BOX 582 P8T 1A8 (807) 737-2946 A1 A2 A3 B1 B2 B3
<b>CORNWALL</b> CURRIER REPAIR SERVICE 360 BALMORAL AVE K6H 6K1 (613) 932-8235 E1 E2 E3 E4 E5	<b>KITCHENER</b> TOP TECH ELECTRONICS (KITCHEN) 907 FREDERICK STREET N2B 2B9 (519) 578-7600 Z1	<b>NEWMARKET</b> HEXTECH CONSUMER ELECTRONICS 731 DAVIS DR. L3Y 2R2 (905) 830-6797 A1 A2 A3 A4 B1 B2 B3 E1 E5	<b>PEMBROKE</b> M & N ELECTRONICS 574 MILLER STREET K8A 5Z9 (613) 735-5839 A1 A2 A3 A4 B1 B2 B3 E1	<b>SUDBURY</b> KINGWAY ELECTRONICS LTD. 1106 KINGWAY ROAD P3B 2E5 (705) 566-9290 A1 A2 A3 A4 B1 B2 B3
<b>CORNWALL</b> TIM'S ELECTRONICS 1124 PAULOTREET K6H 6H5 (613) 933-4037 A1 A2 A3 B1 B2 B3 C1 E1 E5	<b>LONDON</b> ADVANCED AUDIO 8 VI DED SERVICE 60 MEG DRIVE, UNIT 14 N6E 3T6 (519) 686-4334 A1 A2 A3 A4 B1 B2 B3 C1 E1	<b>NIAGRA FALLS</b> RK ENTERPRISES 6355 ARMSTRONG DRIVE L2H 2L8 (905) 374-0780 B3	<b>PEMBROKE</b> MURRAY LEACH APPLIANCE 152 MUD LAKE RD K8A 6W4 (613) 732-4871 E1 E3 E4 E5	<b>SUDBURY</b> STRINGERS ELECTRONICS 1899 LASALLE BLVD P3A 2A3 (705) 566-5177 A1 A2 A3 A4 B1 B2 B3 E1 E5
<b>DOWNSVIEW</b> RAYJAC ELECTRONICS 701 PETROLIA ROAD M3J 2N6 (416) 661-5237 A1 A2 A3 A4 B1 B3 B5 C1 E1 Z1	<b>LONDON</b> TOP TECH ELECTRONICS (LONDON) 310 ADELAIDE ST SOUTH N5Z 3L2 (519) 686-6515 A1 A2 A3 A4 B1 B2 B3 Z1	<b>NORTH BAY</b> ADRIENS APPLIANCE SERVICE 1374 FRANKLIN ST P1A 2S2 (705) 474-1755 E1 E3 E4 E5	<b>PETERBOROUGH</b> BILL HAYES RADIO & TV 213 HUNTER STREET W K9H 2L1 (705) 742-0056 A1 A2 A3 A4 B1 B2 B3 B5 C1 E1 E5	

CENTRE DE SERVICE AUTORISÉ INDEPENDENT PAR  
**LG ELECTRONICS CANADA, INC.**

**AUTHORIZED INDEPENDENT SERVICE CENTERS**

not all listed service centres repair all product, please see product code listed below

**ONTARIO**

**THUNDER BAY**

S & R ELECTRONICS  
805 W FREDERICA ST  
P7E 3X4 (807) 475-4956  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5

**THUNDER BAY**

SOUND STEREO SERVICE  
189 SOUTH ALGOMA  
STREET  
P7B 3C1 (807) 344-6763  
A1 A2 A3 A4 B3 C1 Z1

**TILLSONBURG**

LES BOYS LTD  
3 SIMCOE STREET  
N4G 2H4 (519) 842-5904  
E1 E2 E4 E5

**TILLSONBURG**

VATCHER APPLIANCE  
SERVICE  
108B CONCESSION ST.  
EAST  
N4G 1P7 (519) 688-9030  
E1 E3 E4 E5

**TORONTO**

DOWNTOWN AUDIO AND  
VIDEOELT  
457 BATHURST ST.  
M6T 2S9 (416) 594-1468  
A1 A2 A3 B1 B5 C1 C2 E1 Z1

**TORONTO**

DOWNTOWN  
ELECTRONICS, JOHN LU  
1643 ST CLAIR AVE W  
M6N 1H7 (416) 653-2828  
A1 A2 A3 A4 B1 B2 B5 C1 C2  
E1 E5

**WATERLOO**

A-V ELECTRONICS  
SERVICES 450 WEBER ST N  
N2L 4E7 (519) 884-8660  
A1 A2 A3 A4 B1 B3 B5 E1 F2

**WATERLOO**

NARA ELECTRONICS LTD.  
372 KING STREET NORTH  
N2J 2Z3 (519) 888-9696  
A1 A2 A3 A4 B1 B3 B5 E1 F2

**WATERLOO**

WATERLOO APPLIANCE  
SERVICE  
90 FROBISHER DRIVE  
N2V 2A1 (519) 884-2507  
E1 E3 E4 E5

**WAWA**

SUPERIOR ELECTRIC  
18 KLONDIKE ST BOX 834  
POS 1K0 (705) 856-2864  
E1 E2 E3 54 E5

**WHITBY**

VIEWCOM ELECTRONICS  
INC.  
133-1/2 BROCK ST. NORTH  
L1H 4H3 (905) 430-0954  
A1 A2 A3 A4 B1 B3 C1

**WINDSOR**

CRESCENT TELEVISION  
LTD.  
3033 MARENTE TTE AVENUE  
N8X 4G1 (519) 969-1622  
A1 A2 A3 A4 B1 B2 B3 B4 C1  
E1 E5 Z1

**WINDSOR**

FACTORY APPLIANCE  
SERVICE  
3647 RIBERY RD  
N8W 3V9 (519) 972-0558  
E1 E3 E4 E5

**WINDSOR**

P. L. G. ELECTRONICS  
3314 WALKER RD  
N8W 3S1(519) 972-7666  
A1 A2 A3 B1 B2 B3 C1 E1 E5

**QUEBEC**

**ALMA**

LOUIS DION INC  
25 BOUL AUGER O  
G8B 2A6 (418) 662-3073  
E3 E4 E5

**AMOS**

A.P. ELECTRONIQUE ENR  
92 RUE BEAUDRY  
J9T 3V2 (819) 732-0844  
A1 A2 A3

**ANJOU**

CIRCUITS ELECTRONIQUE  
(6060) ENC  
8155 LARREY  
H1J 2L5 (514) 352-4111  
A1 A2 A3 A4 B1 B2 B3 C1 C2  
E1

**BAIE COMEAU**

ELECTROTECH  
1680 BOUL LAFLECHE  
G6C 1C9 (418) 589-7515  
A1 A2 A3 A4 B1 B2 B3 C1 E1

**BEAUPORT**

ATELIER AUDIO VIDEO  
J.F.M. INC  
660 AVE. ROYALE  
G1E 1Y7 (418) 666-8182  
A1 A2 A3 A4 B1 B2 B3 C1 C2  
E1 E2

**BRIGHAM**

SERVICE LAROUQUETTE INC  
224 RUE DECELLES  
JOE 1J0 (514) 777-0770  
E1 E2 E3 E4 E5

**CHICOUTIMI**

CLAUDE GIRARD TV ENR  
786 RUE ST-PAUL  
G7J 3B7 (418) 549-8767  
A1 A2 A3 A4 B1 B2 B3 E1 E5  
Z1

**CHICOUTIMI**

TELEVIDEO AS. INC 2147  
BOULEVARD TALBOT  
G7H 5B1 (418) 696-2264  
A1 A2 A3 A4 B1 B2 B3 E1 Z1

**CHOMEDY LAVAL**

B & K AUDIO SERVICE  
2025 BOUL FORTIN  
H7S 1P4 (514) 667-0491  
A1 A2 A3 B1 B2 B3 B5 C1 E1  
E5

**DOLBEAU**

VF ELECTRONIQUE ENR  
1849 BOUL WALLBERG  
G8L 1J1 (418) 276-8191  
A1 A2 A3 B1 B2 B3 C1 C2 E1  
E5

**DRUMMONVILLE**

MORISSETTE SERVICE INC  
4571 BLVD ST JOSEPH  
J2A 1B4 (819) 472-2469  
E1 E4 E5

**DRUMMONVILLE**

ROSS ELECTRONIQUE INC.  
985, BOUL. JEAN DE  
BREBOELIF  
J2B 4T2 (819) 477-1522  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1 Z1

**OUPARGUE**

GAETAN LACASSE  
SERVICE  
1675 RGV11 CP161  
J0Z 1W0 (819) 948-2248  
E2 E4 E5

**GATINEAU**

COSMO-TECH SERVICES  
INC.  
868 MALONEY BLVD EAST  
J8P 1H1 (819) 663-4496  
A1 A2 A3 A4 B1 B2 B3 E1 E2  
E3 E4 E5

**GRANBY**

LA CLINIQUE DU SON INC  
78 ASSOMPTION  
J2G 3S1(514) 375-2323  
A1 A3 B1 B2 B3 B5 E1 E5

**IBERVILLE**

ALAIN BONNEAU  
TELEVISION INC  
21 RANG OT-EDOLIARD  
J2X 5G3 (514) 347-0563  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
E5

**JOLIETTE**

B.G. ELECTRONIQUE  
150 ST. PIERRE SUD  
J6E 5Y7 (514) 759-3091  
A1 A2 A3 A4 B1 B2 B3 E1 E5

**JONQUIERRE**

SERVICE TV ARVIDA INC.  
2343 MATHIAS  
G7S 3V6 (418) 548-3059  
A1 A2 A3 B1B2 B3 B5 C1 E1  
E5

**LA MALBAIE**

ALAIN MURRAY  
ELECTRONIQUE  
11 RUECIMON  
G5A 1E5 (418) 665-3590  
A1 A2 A3 B1 B2 B3 B5 C1 Z1

**LATUQUE**

LED PEPIN TV ENR.  
639 DESBIENS  
G9X 2K2 (819) 523-3243  
A1 A2 A3 B1 B2 B3 C1

**LACHINE**

CENTRE DE SERVICE DEFY  
INC.  
10600 COIE DE LIESSE STE 55  
H8T 1A4 (514) 633-9313  
A1 A2 A3 A4 B1 B2 B3 B5 E1  
E2 E5

**LEMOYNE**

VIDEOSUD  
200 CHARRON  
J4R 2K9 (514) 671-9572  
A1 A2 A3 A4 B1 B2 E1

**LEVIS**

SELECTROTEC  
4717 BOUL. DE LA RIVE  
SUD  
G6W 1H5 (418) 835-3966  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5

**MANIWAKI**

SERVICE FLANSBERRY  
INC.  
375 BOUL DESJARDINS  
J9E 2E6 (819) 449-2212  
E1 E3 E4 E5

**MATANE**

FORTIN TV SERVICE  
273 RUE ST-PIERRE  
G4W 2B7 (418) 562-3571  
A1 A2 A3 B1 B2 B3 C1 C2 E1  
E5 Z1

**MISTASSINI**

SERVICE SERGE MICHAUD  
122 RUE BOUDREAULT  
GOW 2C0 (418) 276-1282  
E1 E2 E3 E4 E5

**MONT LAURIER**

SERVITRONIUE ENR  
335 BOUL DES RUISSEAU  
J9L 3G6 (819) 623-7143  
A1 A2 A3 A4 B1 B3 E1

**MONTREAL**

AUDIC VIDEO RD INC  
375 DECARIE  
H4L 3K7 (514) 336-2222  
A1 A2 A3 A4 B1 B2 B3 B4 E1  
E5

**MT. ROYAL (WEST MONTREAL)**

SOLACMAR INC  
5785 PARE STREET  
H4P 1S1 (514) 341-1431  
A1 A2 A3 A4 B1 B2 B3 E1 E5

**QUEBEC**

ASTRO-SERVICE  
ELECTRONIQUE  
2665 BOUL PERE LELIEVRE  
G1P 2X9 (418) 687-2787  
A1 A2 A3 B1 B2 B3 B5 C1 E1  
E5

**QUEBEC**

AUDYO EEAUDIN TV INC  
670 BOUVIER SUITE 108  
G2J 1A7 (418) 623-8960  
A1 A2 A3 A4 B1 B2 B3 C1 C2  
E1 E5

**REPENTIGNY**

ATELIERS G PAGUETTE INC  
104 LAROCHE  
J6A 7M5 (514) 645-6744  
A1 A2 A3 B1 B2 E1 E2

**REPENTIGNY**

MICROVISION  
336 NOTRE-DAME, 3  
J6A 2S2 (514) 654-5774  
A1 A2 A3 A4 B1 B2 B3 B5 C1  
E1

**RIMOUSKI**

M.S.P. ELECTRONIQUE INC.  
273 ST GERMAN EST  
G5L 1B8 (418) 722-8373  
A1 A2 A3 A4 B1 B2 B3 B5 E1

**RIVIERS DU LOUP**

ELECTRON63UE MERCIER  
LTEE  
162 RUE FRASER  
G5R 1C8 (418) 862-7269  
A1 A2 A3 B1 B2 C1 C2 E1 E5

**SEPT ILES**

TECHSERV INC  
10 RUE PERE DUVET  
G4R 3N2 (418) 962-2391  
A1 A2 A3 B1 C1

**SEPT ILES**

ELECTRO-REF SERVICES  
161 PERE DUVET  
G4R 3P8 (418) 962-9186  
E1 E4 E5

**SHERBROOKE**

JACOLIES BERGERON TECH  
2226 KING ST W  
J1J 2E8 (819) 569-1676  
A1 A2 A3 A4 B1 B2 B3 B5 E1

**ST JEROME**

POIRIER RADIO SERVICE  
506 RUE ST. GEORGES  
J7Z 5B3 (514) 438-3375  
A1 A2 A3 A4 B1 B3 E1

**ST EUSTACHE**

SERVICE OS TV RIVE NORD  
307 GRANDE COTE  
J7P 1C6 (514) 623-6060  
A1 A2 A3 B1 B2 E1 E5

**ST GABRIEL DE BRANDON**

RICHARD HENRICHON  
ELECTRONIQUE  
37 BOULEVARD HOULE  
JOK 2N0 (514) 835-2218  
A1 A2 A3 B1 B2 E1

**ST HYACINTHE**

CENTRE SERVICE PLUS INC  
2145 STE ANNE SUITE 101  
J2S 5H5 (514) 771-1492  
A1 A2 A3 A4 B1 B2 B3

**ST LAURENT**

HECOTRON LTEE  
4800 COTE VERTLI  
H4S 1V9 (514) 331-5720  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5

**ST PIERRE LES BECOUSTS**

J.B. ELECTRONIQUE ENR  
599 MARIE VICTORIN  
GOX 2Z0 (819) 263-2559  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5

**ST. AGAPIT**

SERVICE DE TELE  
JACOUCS CHABOT  
C.P. 460  
GOS 1Z0 (418) 888-3857  
A1 A2 A3 B1 B2 B3 E1

**STE CECILE DE MILTON**

MICHAUD VIDEO TV  
284 PRINCIPALE  
JOE 2C0 (514) 777-2814  
A1 A2 A3 A4 B1 B2 B3

**TROIS RIVIERE-OUEST**

LA8TRONIC  
5115 BOUL JEAN XXIII  
G6Z 4A5 (819) 373-0066  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E2

**VAL D'OR**

LDOR REFREGINATION  
LTEE.  
1273 SIEME RUE  
JOP 4A1 (819) 825-2505

**VALLEYFIELD**

LES ENTREPRISES  
ELECTRONOUS  
193 RUE MADEN  
J6S 3V7 (514) 373-5466  
A1 A2 A3 B1 B2 B3 E1 Z1

**VICTORVILLE**

ACTION L.M. SERVICE INC.  
310 ST. GEORGES  
G6P 3A2 (819) 751-0992  
E1 E2 E3 E4 E5

**VICTORVILLE**

GERARD MICHAUD  
ELECTRONIQUE  
88 NOTRE DAME EST  
G6P 3Z6 (819) 758-1877  
A1 A2 A3 A4 B1 B2 B3 C1 E1  
E5

**WINDSOR**

WINDSOR ELECTRONIOUS  
INC.  
74-2IEME AVENUE  
J1S 1Z3 (819) 845-4202  
A1 A2 A3 A4 B1 B2 B3 E1 E5

CENTRE DE SERVICE AUTORISÉ INDEPENDANT PAR  
**LG ELECTRONICS CANADA, INC.**

**AUTHORIZED INDEPENDENT SERVICE CENTERS**

not all listed service centres repair all product, please see product code listed below

**NEW BRUNSWICK**

**BATHURST**

ALS TV AND RADIO  
 579 PATTERSON CRES  
 E2A 1Z9 (506) 546-5763  
 B1 E1

**BERESFORD**

BOUCHARD APPLIANCE  
 REPAIRS BOX 4062  
 E0B 1H0 (506) 548-3938  
 E1 E2 E4 E5

**BERTRAND**

MM REPARATION  
 ELECTRONIQUE  
 RR 1 SITE 22 BTE 4  
 E0B 1J0 (506) 727-7884  
 A1 A2 A3 B1 B2 C1 C2

**CAMPBELLTON**

B & G IDEAL SERVICE LTD  
 81 WATER STREET  
 E3N 1A9 (506) 753-5474  
 A1 A2 A3 B1 B3 B5 E1

**EDMUNDSTON**

PICARD SERVICE INC.  
 2-47E AVENUE  
 E3V 3B8 (506) 739-9475  
 E1 E2 E3 E4 E5

**EDMUNSTON**

DATA ELECTRONICS  
 25 HILL STREET  
 E3V 1H7 (506) 735-4073  
 A1 A2 A3 B1 B2 B3 B5 C1 E1

**FREDERICTON**

CYGNUS TECHNOLOGY  
 LTD  
 154 HAIN STREET  
 E3A 1C8 (506) 459-4606  
 A1 A2 A3 A4 B1 B2 B3 B5 E1

**GRAND FALLS**

DONALD PICARD  
 746 3RD AVE C.P. 743  
 E0J 1M0 (506) 473-5496  
 B1 B2 B3

**MONCTON**

B.J.W. ELECTRONICS LTD  
 59 PACIFIC AVE.  
 E1E 2G2 (506) 857-2118  
 A1 A2 A3 A4 B1 B2 B3 C1 E1  
 E5 Z1

**MONCTON**

CHAMPLAIN ELECTRONICS  
 LTD  
 247 LEWISVILLE RD  
 E1A 6T1 (506) 854-6663  
 A1 A2 A3 A4 B1 B2 B3 E1 E5

**OROMOCTO**

HARTS TV  
 9 SMITH ST RR3  
 E2V 2G3 (506) 357-9785  
 A1 A2 A3 A4 B1 B3 B5 C1 E1

**SACKVILLE**

TANTRAMAR  
 ELECTRONICS  
 70 CRESENT ST BOX 1686  
 E0A 3C0 (506) 536-3953  
 A1 A2 A3 B1 B2 B3 B5 E1 E5

**ST JOHN**

GALBRAITH ELECTRONICS  
 LTD  
 646-FAIRVILLE BLVD  
 E2M 3M2 (506) 635-0317  
 A1 A2 A3 B1 B2 B3 E1 E5

**WOODSTOCK**

PLOOM ELECTRONICS  
 BOX  
 798 LOWER WOODSTOCK  
 E0J 2B0 (506) 328-3205  
 A1 A2 A3 B1 B3 C1 E1

**NOVA SCOTIA**

**ANTIGONISH**

MIKE'S HOME FURNISHING  
 89 ST. ANDREWS STREET  
 B2G 2G9 (902) 863-2886  
 A1 A2 A3 B1 B2 B3 C1 C2

**BRIDGEWATER**

HERLIN ELECTRONICS  
 209 HIGH ST SUITE A  
 B4V 1W2 (902) 543-1313  
 A1 A2 A3 A4 B1 B3 B5 E1

**COLDBROOK**

N & B EATON MARKETING  
 LTD  
 2687 POPLARD DRIVE  
 B4R 1A9 (902) 679-1852  
 A1 A2 A3 B1 B2 B3 C1 E1 E5

**DARTMOUTH**

E.P. BLIGHT 169 MAIN  
 STREET  
 B2X 1S1 (902) 434-8306  
 A1 A2 A3 B1 B2 B3 B5 C1 C2  
 E1 Z1

**DARTMOUTH (HALIFAX)**

MUNRO ELECTRONIS  
 SERVICE  
 75 AKERLEY BLVD UNIT J  
 B3B 1R7 (902) 468-4991  
 A1 A2 A3 A4 B1 B2 B3 B5 E1  
 E3

**KINGSTON**

GE KENNEDY ELECTRONIC  
 REPAIR 1050  
 WHITTINGTON DRIVE  
 B0P 1R0 (902) 765-6448  
 A1 A2 A3 A4 B1 B2 E1

**NEW MAINS**

VIDEO WORLD  
 1009 KENTUCKY COURT  
 B4N 4N1 (902) 681-7577  
 B4

**YARMOUTH**

BLUENOSE ELECTRONICS  
 19 FIRST STREET  
 B5A 1S9 (902) 742-8885  
 B1 B2 B3 Z1

**PEL**

CHARLETTETOWN  
 GALLANT ELECTRONICS  
 96 MOUNT EDWARD ROAD  
 PO 2961  
 C1A 8C5 (902) 892-3100  
 A1 A2 A3 A4 B1 B2 B3

**NEW FOUNDLAND**

**CORNER BROOK**

A-1 ELECTRONICS  
 98 WEST STREET  
 A2H 2Z3 (709) 634-1581  
 A1 A2 A3 A4 B1 B2 B3 B5 C1  
 E1 Z1

**PASADENA**

WILSON TV SERVICE  
 6 ELMWOOD CRESCENT  
 A0L 1K0 (709) 686-2617  
 A1 A2 A3 B1 B2

**WABUSH**

CLIFFS TV SERVICE  
 WABUSH PLAZA. BOX 785  
 A0R 1B0 (709) 282-3941  
 A1 A2 A3 B1 B2 B3 C1 E1 E5

<p><b>PRODUCT TYPE CODES.</b></p> <p><b>AUDIO</b>                  "A1" = Portable Radio/Tape                  "A2" = Home Audio                  "A3" = HiFi Audio                  "A4" = Compact Disc</p> <p><b>VIDEO</b>                  "B1" = Television                  "B2" = In Home Service                  "B3" = VCR &amp; Accessories                  "B4" = Camcorder</p> <p><b>AUTOMOTIVE</b>                  "C1" = Radio/Tape/Amp.                  "C2" = Removal &amp; Installation</p> <p><b>APPLIANCE</b>                  "E1" = Microwave Oven                  "E2" = Bread Bakery                  "E3" = Air Conditioner                  "E4" = Refrigerator                  "E5" = In Home Service</p> <p><b>BUSINESS EQUIPMENT</b>                  "F1" = Telephone &amp; Attach                  "F2" = Fax                  "B5" = Computer Monitors</p>	<p><b>IDENTIFICATION DES CONDES</b></p> <p><b>AUDIO</b>                  "A1" = Radio Portatif/Cassette                  "A2" = Audio maison                  "A3" = Audio Hi-Fi                  "A4" = Lecteur audionumerique</p> <p><b>VIDEO</b>                  "B1" = Téléviseur                  "B2" = Service maison                  "B3" = Magnétoscope &amp; accessoires                  "B4" = Caméscope</p> <p><b>AUTOMOTIVE</b>                  "C1" = Autoradio/lecteur/Ampli.                  "C2" = Installation</p> <p><b>APAREIL MENAGER</b>                  "E1" = Four micro-ondes                  "E2" = Four a pain                  "E3" = Air conditioné                  "E4" = Réfrigérateur                  "E5" = Service maison</p> <p><b>EN AFFAIRES</b>                  "F1" = Téléphone &amp; access.                  "F2" = Télécopieur                  "B5" = Moniteurs d'ordinateur</p>
--	---