

MWD24 & MWD30 PARTS LIST

Ref #	Part #	Description
1	813739	Transformer
2	813740	Magnetron
3	813741	Sensor Assy
4	813742	Monitor Switch Fuse Assy
5	813743	Power Supply
6	813744	Stir Cover Assy
7	813745	Side Rail
8	813746	HVC Assy
9	813747	Door Assy, MWD24-U/S
	813748	Door Assy, MWD30-2U/S
	813749	Door Assy, MWD30-2F/S
10	813750	Latch Assy, R, MWD24-2U/S
	813752	Latch Assy, R, MWD30-2
11	813751	Latch Assy, L, MWD24-2U/S
	813753	Latch Assy, L, MWD30-2
12	813754	Fan Motor
13	813455	Thermal Cut-Out
14	813756	Harness Assy, MWD24-2U/S
	813757	Harness Assy, MWD30-2
15	813758	Latch Hook, R
	813759	Latch Hook, L
16	813760	Switch Lever, L
19	813762	Switch
20	813763	Noise Filter Unit
21	813764	Oven Lamp Socket
22	813765	Louver, MWD24-2U/S
	813766	Louver, MWD30-2
23	813767	Stirrer Motor
24	813768	Auto Drawer Gear Assy
25	813770	Switch Angle, L
26	813771	Actuator, R
27	813772	Actuator, L
28	813773	SW Power Supply
29	813774	Rack Gear
30	813769	Switch Angle, R
31	813778	Power Supply Cord MWD24-2U/S
	813779	Power Cord, MWD30-2
32	813775	Side Angle, R, MWD24-2U/S
	813776	Side Angle, L, MWD24-2U/S
	813777	Side Angle, MWD30-2
33	813813	Choke Cover, MWD24-2U/S
	813815	Choke Cover, MWD30-2
34	813809	Door Support Cover MWD24-2U/S
	813811	Door Support Cover MWD30-2

Not Shown

Part #	Description
813784	Control Unit

MWD24 & MWD30 Exploded View

