



To contact LG Electronics, 24 hours a day,
7 days a week:

1-800-243-0000 (USA)

Or visit us on the Web at: *us.lge.com* (USA)

ELECTRIC RANGE

USER'S GUIDE

Please read this guide
thoroughly before
operating and keep it handy
for reference at all times.

Models
LSE3092ST



INTRODUCTION

IMPORTANT SAFETY INFORMATION3-9

SURFACE CONTROLS COOKING

Locations of Surface Elements and Controls	10
Setting Surface Controls	11
Hot Surface Indicator	11
Using the Element	11-12
Recommended Surface Cooking Setting	12
Tips to Protect the Glass/Ceramic Cooktop Surface ..	13
Glass/Ceramic Cooktop Surface	13
Cooking Areas	14
Using the Proper Cookware	14
Home Canning Tips	14

LOWER OVEN CONTROLS

Using the Lower Oven	15
----------------------------	----

PARTS AND FEATURES

Parts and features	16
Control panel features	17

OPERATING INSTRUCTIONS

Clock	18
Minimum & Maximum Default Settings	18
Timer On/Off	19
Special Features of your Oven Control	20-21
Before using Oven Racks	22
Telescopic Rack	23
Cooking Mode	24-34
- Bake	24
- Baking layer cakes	25
- Broil	26
- Recommended Broiling guide	27
- Dual Convection Bake	28-29
- Convection Roast	30
- Timed cook	31
- Delayed Timed Cook	32
- Warm/Proof	33
- Healthier Roast	34
- Meat Probe	35-36
- The Favorite	36
To Turn On or Off the oven light	36
Oven Lockout feature	37
Self Clean	38-40

MAINTENANCE

Care & Cleaning	41-42
Cleaning the Glass/Ceramic Cooktop	42-43
Removing & Replacing the Lift-off Oven door	44
Door Care Instructions	44
Removing & Replacing the Lower oven Drawer	45

TROUBLESHOOTING

Before Calling for Service	46-49
----------------------------------	-------

WARRANTY

Warranty for Customers in the U.S.A	50
---	----

THANK YOU!

Congratulations on your purchase and welcome to the LG family. Your new LG Electric range combines precision cooking features with simple operation and stylish design. Follow the operating and care instructions in this manual and your range will provide you with many years of reliable service.

Staple your receipt here.

Product Registration Information

Model: _____

Serial Number: _____

Date of Purchase: _____

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the range. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.




This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**. These words mean:


! WARNING This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.

! CAUTION This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.


SAFETY PRECAUTIONS

! WARNING

 • **DO NOT step or sit on the door. Install the Anti-Tip Bracket packed with range.**

 - The range could be tipped and injury might result from spilled hot liquid, food, or the range itself.

- If the range is pulled away from the wall for cleaning, service, or any other reason, ensure that the anti-tip bracket is properly re-engaged when the range is pushed back against the wall.

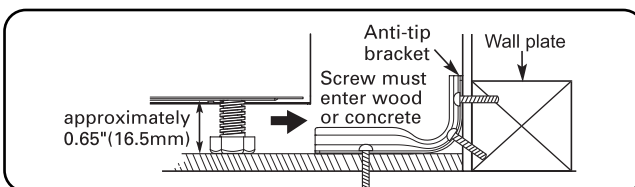

- To check that the anti-tip bracket is properly installed:
Grasp the top rear edge of the range back guard and carefully attempt to tilt it forward. Verify that the anti-tip devices are engaged.
- Lower oven: Remove drawer and visually inspect that the rear leveling leg is fully inserted into the anti-tip bracket.
- Refer to the installation manual for proper anti-tip bracket installation.
- Be certain your appliance is properly installed and grounded by a qualified technician.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual.
- All other servicing should be referred to a qualified technician.
- Always disconnect power to appliance before servicing by unplugging, removing the fuse or switching off the circuit breaker.

To reduce the risk of tipping of the range, the range must be secured by properly installing anti-tip bracket.

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

SAFETY PRECAUTIONS (cont')

- **DO NOT TOUCH HEATING ELEMENTS OR INTERIOR SURFACES OF OVEN.**

Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch or let clothing or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns. Among these surfaces are oven vent openings and surfaces near these openings, oven doors, and windows of oven doors.

- **Use Care When Opening Door.**

Let hot air or steam escape before you remove or replace food in the oven.

- **Do Not Heat Unopened Food Containers.**

Build-up of pressure may cause container to burst and result in injury.

- **Be certain all packing materials are removed from the appliance before operating.**

Keep plastics, clothes, and paper away from parts of the appliance that may become hot.

- **DO NOT force the door open.**

This can damage the automatic door locking system. Use care when opening the oven door after the self cleaning cycle. Stand to the side of the oven when opening the door to allow hot air or steam to escape. The oven may still be VERY HOT.

- **DO NOT use a steel-wool pad.**

It will SCRATCH the surface.

- **DO NOT use harsh etching, abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface.**

Scratches may cause the glass to shatter.

- **Be careful when removing and lifting the door.**

- **DO NOT lift the door by the handle.**

The door is very heavy.

- **DO NOT step or sit on the door.**

Install the anti-tip bracket packed with range.

- The range could be tipped and injury might result from spilled hot liquid, food, or the range itself.

- If the range is pulled away from the wall for cleaning, service, or any other reason, ensure that the anti-tip bracket is properly re-engage when the range is pushed back against the wall.

WARNING

- **NEVER use your appliance for warming or heating the room.**

- **DO NOT use water on grease fires.**

Should an oven fire occur, leave the oven door closed and turn the oven off. If the fire continues, throw baking soda on the fire or use a fire extinguisher.

- **Use dry pot holders only.**

Moist or damp pot holders on hot surfaces may result in burns from steam. Do not let the pot holder touch hot heating elements. Do not use a towel or other bulky cloth.

- **Storage in or on appliance.**

Flammable materials should not be stored in an oven or near surface elements.

- **Wear proper apparel.**

Loose-fitting or hanging garments should never be worn while using the appliance.


IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

ELECTRICAL SAFETY

- **Protective Liners.** Do not use aluminum foil or any other material to line the oven bottoms. Improper installation of these liners may result in a risk of electric shock or fire.
- **Do Not** allow aluminum foil or meat probe to contact heating elements.

⚠ WARNING

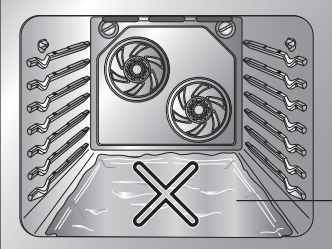

Aluminum foil

- **DO NOT** place aluminum foil directly on the oven bottom.


- **Before replacing your oven light bulb, switch off the electrical power to the oven at the main fuse or circuit breaker panel.**
Failure to do so can result in severe personal injury, death, or electrical shock.
- **DO NOT** line the oven walls, racks, bottom, or any other part of the oven with aluminum foil or any other material.
Doing so will disrupt heat distribution, produce poor baking results and cause permanent damage to the oven interior (aluminum foil will melt to the interior surface of the oven.)

⚠ WARNING

- **Turn POWER OFF** before removing the Lower Oven Drawer.
- Failure to do so can result in severe personal injury, death, or electrical shock.

PAN PLACEMENT

⚠ WARNING

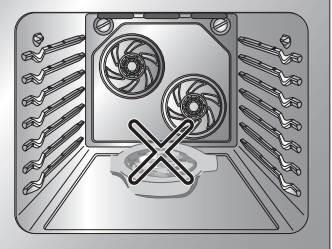

- **Do not** place food or cookware on the bottom of the oven cavity.

Doing so will cause permanent damage to the oven bottom finish.

- **Never** place plastics, paper, canned foods or combustible material in the oven.
- **When cooking food in the Lower oven** always use a baking sheet or pan with 4 raised sides. This will prevent food from sliding off.

DEEP FAT FRYERS

- Use extreme caution when moving or disposing of hot grease.

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

SURFACE COOKING UNITS

- **Use Proper Pan Sizes.** This appliance is equipped with one or more surface units of different size. Select utensils having flat bottoms large enough to cover the surface unit heating element.
The use of undersized utensils will expose a portion of the heating element to direct contact and may result in ignition of clothing. Proper relationship of utensil to burner will also improve efficiency.
- **Never Leave Surface Units Unattended at High Heat Settings.** Boil overs cause smoking and greasy spillovers that may ignite.
- **Glazed Cooking Utensils.** Only certain types of glass, glass/ceramic, ceramic, earthenware, or other glazed utensils are suitable for range-top service without breaking due to the sudden change in temperature.
- **Utensil Handles Should Be Turned Inward and Not Extend Over Adjacent Surface Units.** To reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the utensil, the handle of a utensil should be positioned so that it is turned inward, and does not extend over adjacent surface units.
- Be sure you know which control pads operate each surface unit. Make sure you turned on the correct surface unit.

SAFETY DURING USE

- **Oven Racks.** Always place oven racks in desired position while oven is cool.
- **Always use pot holders or oven mitts when removing food from the oven or Center Warming element as cookware and plates will be hot.** You can be burned because cookware and plates will be hot.
- **Always use an oven mitt to remove the temperature probe after cooking.**
- **Use caution with the TIMED BAKE or DELAYED TIMED BAKE features. Use the automatic timer when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, such as milk, eggs, fish, meat or poultry, should be chilled in the refrigerator first. Even when chilled, they should not stand in the oven for more than 1 hour before cooking begins, and should be removed promptly when cooking is completed.**
Eating spoiled food can result in sickness from food poisoning.
- **Should an oven fire occur, leave the oven door closed and turn the oven off. If the fire continues, throw baking soda on the fire or use a fire extinguisher.**
- **DO NOT put water or flour on the fire.** Flour may be explosive and water can cause a grease fire to spread and cause personal injury.
- **DO NOT use the broiler pan without the grid. DO NOT cover the grid with aluminum foil.**
- **Do not use plastic to cover food.** Plastic can melt onto oven surfaces. Use foil or oven resistant lids only.
- **If the oven is heavily soiled with oil, self clean the oven before using the oven again. It could cause a risk of fire.**
Wipe up heavy soil on the oven bottom before self clean. It requires longer cleaning cycles and produces more smoke.

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

CHILD SAFETY

WARNING

- Children should be kept away from the oven.
- Accessory parts will become hot when the broiler is in use.

CAUTION

- **DO NOT** leave small children unattended near the appliance.
During the self clean cycle, the outside of the oven can become very hot to the touch.

CAUTION

- **NEVER** leave children alone or unsupervised near the appliance when it is in use or is still hot. Children should never be allowed to sit or stand on any part of the appliance as they could be injured or burned.
- **NEVER** store items of interest to children in cabinets above an appliance. Children climbing on the appliance or on the appliance door to reach items could be seriously injured.
- Children must be taught that the appliance and utensils in it can be hot. Let hot utensils cool in a safe place, out of reach of small children. Children should be taught that an appliance is not a toy. Children should not be allowed to play with controls or other parts of the appliance.

GLASS/CERAMIC COOKING SURFACES

• **DO NOT TOUCH SURFACE UNITS OR AREAS NEAR UNITS.**

Surface units may be hot even though they are dark in color. Areas near surface units may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact surface units or areas near units until they have had sufficient time to cool. This includes the cooktop and the area above the oven door.

- **Do Not Cook on a Broken Cooktop.** If the cooktop should break, cleaning solutions and spillovers may penetrate the broken cooktop and create a risk of electric shock. Contact a qualified technician immediately.

- **Clean Cooktop With Caution.** Do not use sponges or cloth to wipe spills on a hot cooking area. Use a proper metal scraper.
- **DO NOT use the glass cooktop** surface as a cutting board.
- **DO NOT place or store** items that can melt or catch fire on the glass cooktop, even when it is not being used.
- **Always turn the surface units on after placing cookware.**
- **DO NOT store** heavy items above the cooktop surface that could fall and damage it.

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USE

GLASS/CERAMIC COOKING SURFACES (cont')

- **DO NOT place** aluminum foil or plastic items such as salt and pepper shakers, spoon holders, or plastic wrappings or any other material on the range when it is in use.
- Make sure you turned on the correct surface unit.
- **NEVER cook directly on the glass.** Always use cookware.
- **Always place the pan in the center of the surface unit you are cooking on.**
NEVER leave surface units unattended at high heat setting.
 - Boil overs cause smoking and greasy spillovers that may catch on fire.
- **Always turn the surface units off before removing cookware.**
- **DO NOT use plastic wrap to cover food.**
 - Plastic may melt onto the surface and be very difficult to remove.
- **DO NOT touch surface units until it has cooled down.**
- The surface elements may still be hot and burns may occur if the glass surface is touched before it has cooled down sufficiently.
- Immediately clean the spills on cooking area to prevent a tough cleaning chore later.
- If cabinet storage is provided directly above cooking surface, limit it to items that are infrequently used and can be safely stored in an area subjected to heat. Temperatures may be unsafe for items such as volatile liquids, cleaners or aerosol sprays.
- When warming foods do not use containers that seal. Allow venting for heated air to escape
- **DO NOT use a steel-wool pad.**
 - It will scratch the surface.
- **DO NOT use scrub pads or abrasive cleaning pads.**
 - They may damage your glass cooktop surface.
- **Cookware with rough or bottoms can mark or scratch the cooktop surface.**
- **Do not slide anything metal or glass across the cooktop.**
- **Do not use cookware with dirt or dirt built-up on the bottom.**

IMPORTANT SAFETY INFORMATION


READ ALL INSTRUCTIONS BEFORE USE

SAFETY WHEN CLEANING

- **Open window or turn on a ventilation fan or hood before self cleaning.**
- **Do Not Use Oven Cleaners.** No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- **Before self cleaning the oven.** Remove broiler pan, all oven racks, meat probe and any other utensils from the oven cavity.
- **Never keep pet birds in the kitchen.** The health of birds is extremely sensitive to the fumes released during an oven self clean cycle. Fumes may be harmful or fatal to birds. Move birds to well-ventilated room.
- Clean in the self clean cycle only parts listed in this manual. Before self clean the oven, remove the broiler pan and any utensils of foods from the oven.
- It is normal for the cooktop of the range to become hot during a self clean cycle. Therefore, touching the cooktop during a clean cycle should be avoided.
- **Important Instruction.** In the event the self clean error code F is displayed, and three long beeps sound, the oven is malfunctioning in the self clean mode. Switch off the electrical power to the main fuse or breaker and have serviced by a qualified technician.
- **Make sure oven lights are cool before cleaning.**

SURFACE CONTROLS COOKING

LOCATIONS OF SURFACE ELEMENTS AND CONTROLS

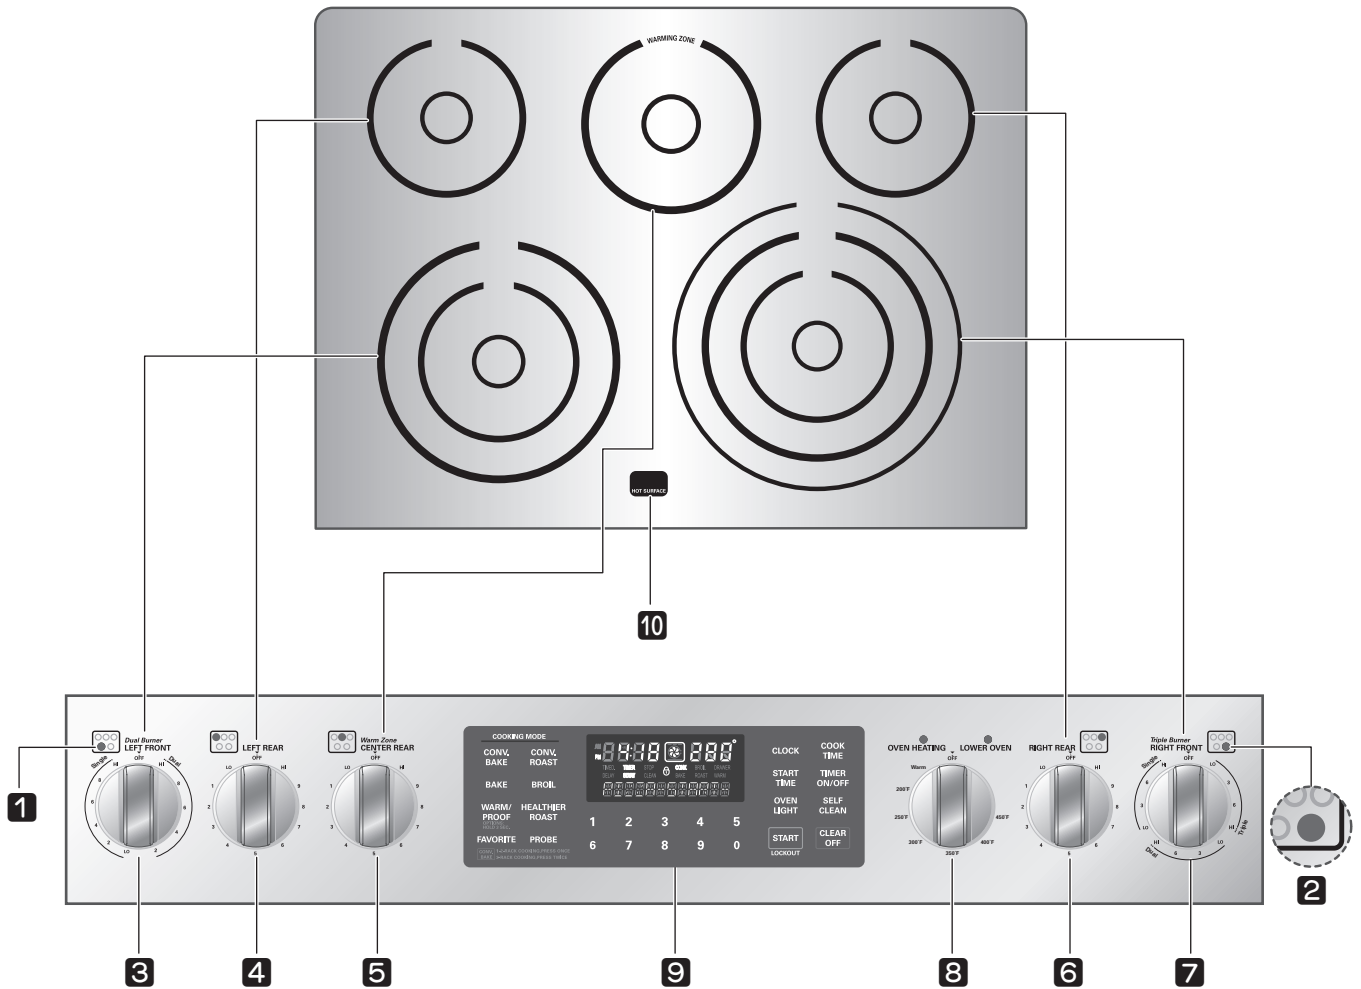

1 SURFACE COOKING AREA LOCATOR : Identify which element the knob controls.

2 ELEMENT ON/OFF INDICATOR LIGHT : Shows whether the surface element is turned on/off or hot.

3 LEFT FRONT (DUAL) CONTROL KNOB : Use to control Left Front Element.

4 LEFT REAR (SINGLE) CONTROL KNOB : Use to control Left Rear Element.

5 CENTER (WARM) CONTROL KNOB : Use to control Center Element.

6 RIGHT REAR (SINGLE) CONTROL KNOB : Use to control Right Rear Element.

7 RIGHT FRONT (TRIPLE) CONTROL KNOB : Use to control Right Front Element.

8 LOWER OVEN CONTROL KNOB : Use to control LOWER OVEN.

9 ELECTRIC OVEN CONTROL : Use to control Electric Oven.

10 HOT SURFACE INDICATOR LIGHT : It will glow as long as any surface cooking area is too hot to touch.

SURFACE CONTROLS COOKING

SETTING SURFACE CONTROLS

 
Use to operate the surface elements. The control knobs can be set anywhere between HI and LO.

- 1 Place pan on surface element.
- 2 Push in and turn the knob in either direction to the desired heat setting.



NOTE:
The Control Panel is marked to identify where the element is.

- 3 There are element indicator lights above the each knob on the control panel. When any control knob is turned on, the light will glow.



- 4 After cooking, turn knob to OFF

HOT SURFACE INDICATOR



A Hot Surface indicator light will glow when the surface is too hot to touch because of the heating element. It will remain on after the element is turned off and the surface has cooled to approximately 150 deg F.

CAUTION


- **DO NOT touch surface elements until it has cooled down sufficiently.**
- The surface elements may still be hot and burns may occur.

USING THE ELEMENT

To turn on a **SINGLE** surface unit:
(Left Rear, Right Rear)



- 1 Push the knob in.
- 2 Turn the knob in either direction to the setting you want.
The control knob clicks when it is positioned at both **OFF** and **HI**.

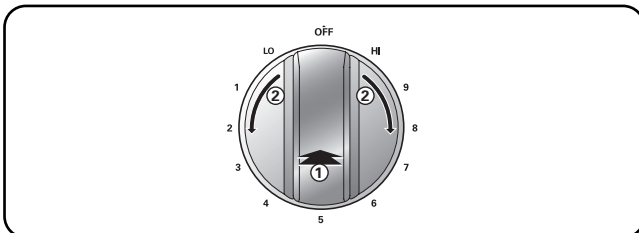

CAUTION


- **NEVER leave food unattended at high or medium-high setting.**
- Boil overs can cause smoke.
Greasy spillovers may catch on fire.

To turn on a **DUAL** surface unit:
(Left Front)



There is one dual element located in the left front position. This allows you to change the size of element.

- 1 Push the knob in.
- 2—A Turn the knob counterclockwise to the **SINGLE** surface unit settings.
- 2—B Turn the knob clockwise to the **DUAL** surface unit settings

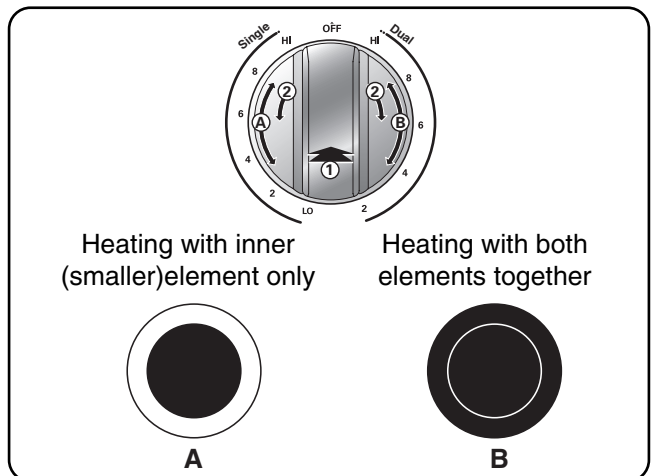

SURFACE CONTROLS COOKING


USING THE ELEMENT (cont')

To turn on a TRIPLE surface unit: (Right Front)



There is one triple element located in the right front position. This allows you to change the size of element.

- 1 Push the knob in.
- 2-A Turn the knob counterclockwise to the **SINGLE** surface unit settings.
- 2-B Turn the knob clockwise or counterclockwise to the **DUAL** surface unit settings.
- 2-C Turn the knob clockwise to the **TRIPLE** surface unit settings.

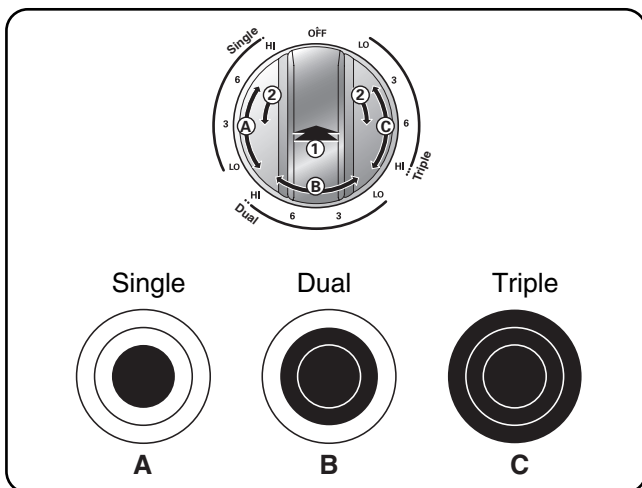

To turn on the Warming Zone: (Center)



There is the Warming Zone element located in the back center of the glass surface. It will keep hot cooked food at serving temperature.

- 1 Push the knob in.
- 2 Turn the knob in either direction to the setting you want.

CAUTION

- Use only cookware and dishes recommended as safe for oven and cooktop use.
- Always use oven mitts when removing food from the warming center as cookware and plates will be hot.
- When warming foods do not use containers that seal. Allow venting for heated air to escape.
- **DO NOT use plastic wrap to cover foods.**
 - Plastic may melt onto the surface and be very difficult to clean.
- Food should be kept in its container and covered with a lid or aluminum foil to maintain food quality.
- **DO NOT warm food on the warming zone for more than 2 hours.**
 - Placing uncooked or cold food on the warming zone could result in foodborne illness.

RECOMMENDED SURFACE COOKING SETTING

Element	Lv	Recommended Use	Element	Lv	Type of Cooking
Dual Triple	-	<ul style="list-style-type: none"> • Large diameter cookware • Large quantities of food • Home canning 	Warm	Hi	<ul style="list-style-type: none"> • Fried Foods • Hot Beverage • Soups (Liquid)
Single Dual Triple	Hi	<ul style="list-style-type: none"> • Bring liquid to a boil • Start cooking 		Med	<ul style="list-style-type: none"> • Dinner Plate with Food • Sauces • Soups (Cream) • Stew • Vegetables • Meats
	8	<ul style="list-style-type: none"> • Hold a rapid boil, frying, deep fat fry • Quickly brown or sear food 			
	5	<ul style="list-style-type: none"> • Maintain a slow boil • Fry or saute foods • Cook soups, sauces and gravies 			
	2	<ul style="list-style-type: none"> • Stew or steam food • Simmer 		Lo	<ul style="list-style-type: none"> • Bread/Pastries • Gravies • Casseroles • Eggs
Lo	<ul style="list-style-type: none"> • Keep food warm • Melt chocolate or butter 				

SURFACE CONTROLS COOKING

TIPS TO PROTECT THE GLASS/CERAMIC COOKTOP SURFACE

Cleaning

(See pages 40~42 for more information).

Before first use, clean the cooktop.

Clean your cooktop daily or after each use. This will keep your cooktop looking good and can prevent damage.

If a spillover occurs while cooking, immediately clean the spill from the cooking area while it is hot to prevent a tough cleaning. Using extreme care, wipe spill with a clean dry towel.

Do not allow spills to remain on the cooking area or the cooktop trim for a long period of time.

Do not use abrasive cleansing powders or scouring pads which will scratch the cooktop.

Do not use chlorine bleach, ammonia, or other cleansers not specifically recommended for use on glass-ceramic.

To Prevent Other Damages

Do not allow plastic, sugar, or foods with high sugar content to melt onto the hot cooktop. Should this happen, clean immediately. (See Cleaning pages 40~42.)

Do not let a pan boil dry as this will damage the surface and pan.

Do not use cooktop as a work surface or cutting board.

Do not cook food directly on the surface.

To Prevent Marks and Scratches

Do not use glass pans. They may scratch the surface.

Do not place a trivet or wok ring between the surface and pan. These items can mark or scratch the top.

Do not slide aluminum pans across a hot surface. The pans may leave marks which need to be removed promptly.

(See Cleaning pages 40~42).

Make sure the surface and the pan bottom are clean before turning on to prevent scratches.

To prevent scratching or damaging to the glass-ceramic top, do not leave sugar, salt, or fats on the cooking area. Wipe the cooktop surface with a clean cloth or paper towel before using.

Do not slide heavy metal pans across the surface since these may scratch.

To Prevent Stains

Do not use a soiled dish cloth or sponge to clean the cooktop surface. A film will remain which may cause stains on the cooking surface after the area is heated.

Continuously cooking on a soiled surface will result in result in a permanent stain.

GLASS/CERAMIC COOKTOP SURFACE

Cooktop Surface Notes:

- **Cooktop may emit light smoke and odor** the first few times the cooktop is used. This is normal.
- **Glass cooktops retain heat for a period of time after the elements are turned off.** Turn the elements off a few minutes before food is completely cooked and use the retained heat to complete cooking. When the hot surface light turns off, the cooking area will cool down enough to touch. Because of the way the cooktop retains heat, the elements will not respond to changes in the settings as quickly as coil elements.
- In the event of a potential boilover, remove the pan from the cooking surface.
- **Do not attempt to lift the cooktop.**
- The smoothtop surface may appear discolored when it is hot. This is normal and will disappear when the surface cools.

SURFACE CONTROLS COOKING


COOKING AREAS

The cooking areas on your range are identified by permanent circles on the glass cooktop surface. For the most efficient cooking, fit the pan size to the element size.

Pans should not extend more than 1/2 to 1-inch beyond the cooking area.

When a control is turned on, a glow can be seen through the glass cooktop surface. **The element will cycle on and off to maintain the preset heat setting, even on Hi.**

For more information on cookware, refer to Cookware Recommendations.

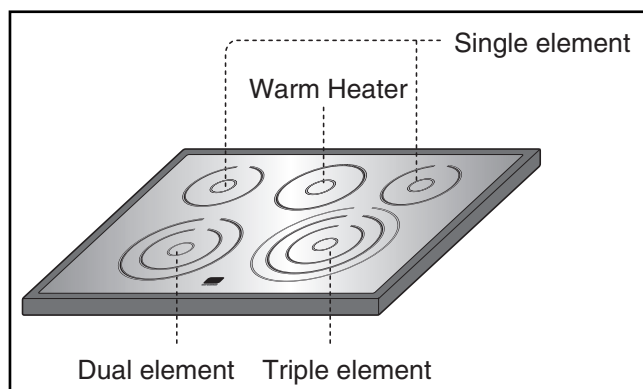


USING THE PROPER COOKWARE

Using the right cookware can prevent many problems, such as food taking longer to cook or achieving inconsistent results. Proper pans will reduce cooking times and cook food more evenly. Stainless steel is recommended.

Check pans for flat bottoms by using a straight edge or ruler

- ❶ Place a ruler across the bottom of the pan.
- ❷ Hold it up to the light.
- ❸ No light should be visible under the ruler.

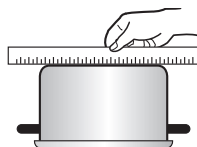

NOTE:

- Do not use a small pan on a large element. Not only does this waste energy, but it can also result in spillovers burning onto the cooking area which requires extra cleaning.
- Do not use non-flat specialty items that are oversized or uneven such as round bottom woks, rippled bottom, and/or oversized canners and griddles.
- Do not use foil or foil-type containers. Foil may melt onto the glass. If metal melts on the cooktop, do not use. Call an authorized Service agent.

Recommended	Incorrect
Flat bottom and straight sides.	Curved, grooved, or warped pan bottoms. Pans with uneven bottoms do not cook efficiently and sometimes may not boil liquid.
Heavy-gauge pans.	Very thin-gauge metal or glass pans.
Pan sizes match the amount of food to be prepared and the size of the surface element.	Pans are smaller or larger than the element.
Weight of handle does not tilt pan. Pan is well balanced.	Cookware with loose or broken handles. Heavy handles that tilt the pan.
Tight-fitting lids.	Loose-fitting lids.
Flat bottom woks.	Woks with a ring-stand bottom.

HOME CANNING TIPS

Be sure the canner is centered over the surface unit. Make sure the canner is flat on the bottom.

The base must not be more than 1 inch larger than the element. Use of water bath canners with rippled bottoms may extend the time required to bring the water to a boil and cooktops may be damaged.

Some canners are designed with smaller bases for use on smooth top surfaces.

Use the high heat setting only until the water comes to a boil or pressure is reached in the canner.


Reduce to the lowest heat setting that maintains the boil, or pressure. If the heat is not turned down, the cooktop may be damaged.

LOWER OVEN CONTROLS


USING THE LOWER OVEN

The purpose of the Lower Oven is to bake foods using the same cooking times and temperatures you would in a standard oven. Foods ideal for baking in the lower oven drawer include pizza, frozen foods, casseroles, biscuit, rolls and many desserts.


To set the Lower oven control:

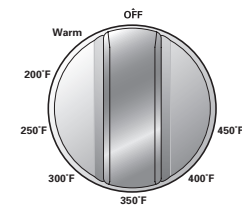


- 1 Push the knob in.
- 2 Turn the knob to any desired setting between **Warm to 450°F**.

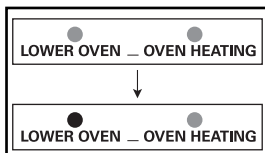

- 3 When the knob is in the on position, the **“LOWER OVEN”** indicator light will glow. It remains ON until the knob is moved to the OFF position.

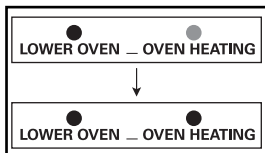

- 4 The **“OVEN HEATING”** indicator light glows when heating elements in the drawer are active. Food can continue to cook when the indicator light is on.

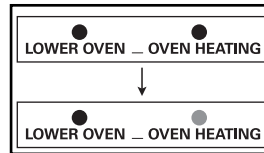

- 5 Preheat is complete after the **“OVEN HEATING”** signal has turned off.

NOTE:


- The Lower Oven does not shut off automatically.
- The maximum food height that can be placed in the Lower Oven is 4 inches.
- When turning the knob to use WARM function, check the **“OVEN HEATING”** signal is ON.
- Opening the door may cause heat loss. Repeatedly opening may result in poor cooking results.

The Lower Oven uses less energy than a standard oven. It takes more time for preheating than a standard oven. Allow the following approximate times for preheating:

Lower oven Temperature	Preheat Time
Warm	10 Minutes
350°F	20 minutes
425°F	30 minutes

CAUTION

- **Always use the drawer rack when using the Lower oven.**
 - This will provide for some air space between the drawer and the food.


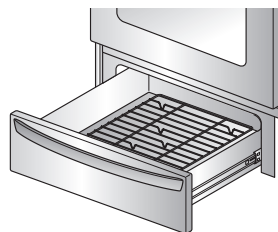


- **When cooking food in the Lower oven always use a baking sheet or pan with 4 raised sides.**
 - This will prevent food from sliding off.
- **Always use pot holders or oven mitts when removing food from the Lower oven.**
 - You can be burned as cookware and plates will be hot.

- **Do not put food, foil or cookware directly on the bottom of the Lower oven.**
 - This may result in damage to your drawer.
- **Do not use plastic wrap to cover food.**
 - Plastic may melt onto the drawer or surrounding areas. It is very difficult to clean. Use only a lid or aluminum foil able to with-stand baking temperature.
- **Do not put liquid or water in the Lower oven.**
- **Never place plastics, paper, canned foods or combustible material in the Lower Oven.**
- **Should a drawer fire occur, leave the drawer closed and turn the drawer off. If the fire continues, throw baking soda on the fire or use a fire extinguisher.**
- **DO NOT put water or flour on the fire.**
 - Flour may be explosive and water can cause a grease fire to spread and cause personal injury.


PARTS AND FEATURES

PARTS AND FEATURES

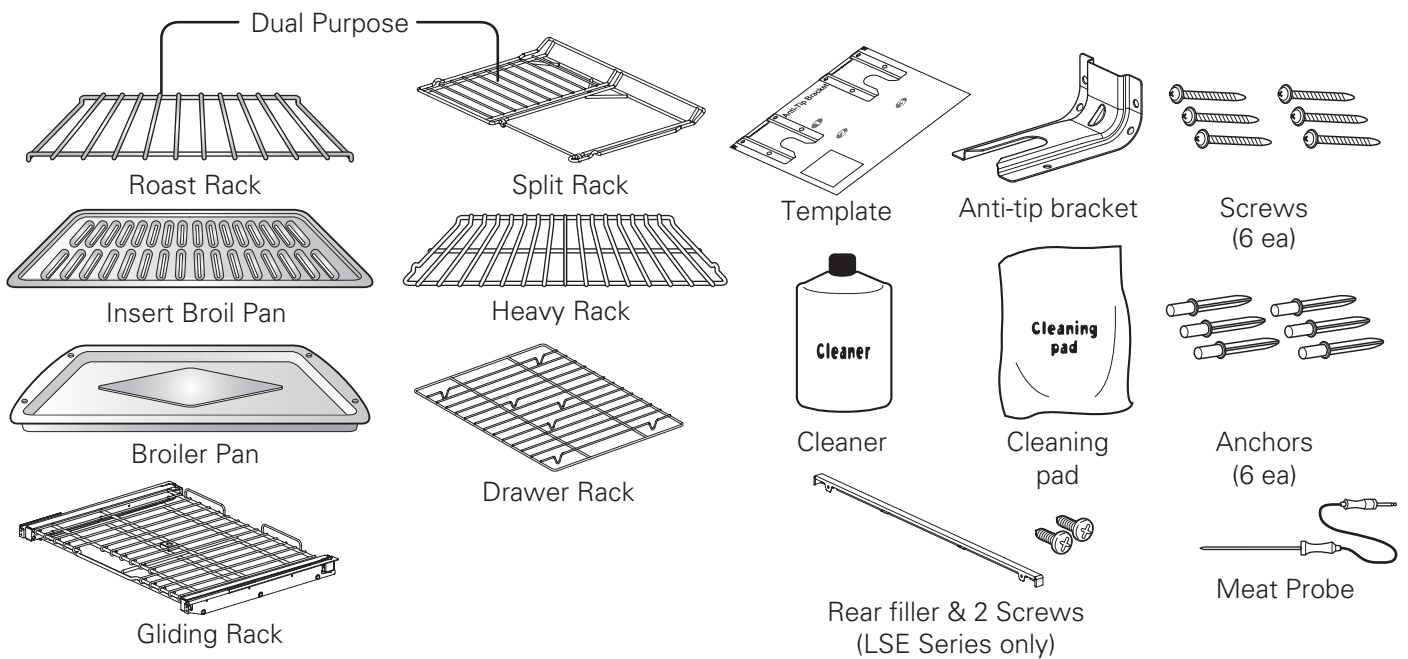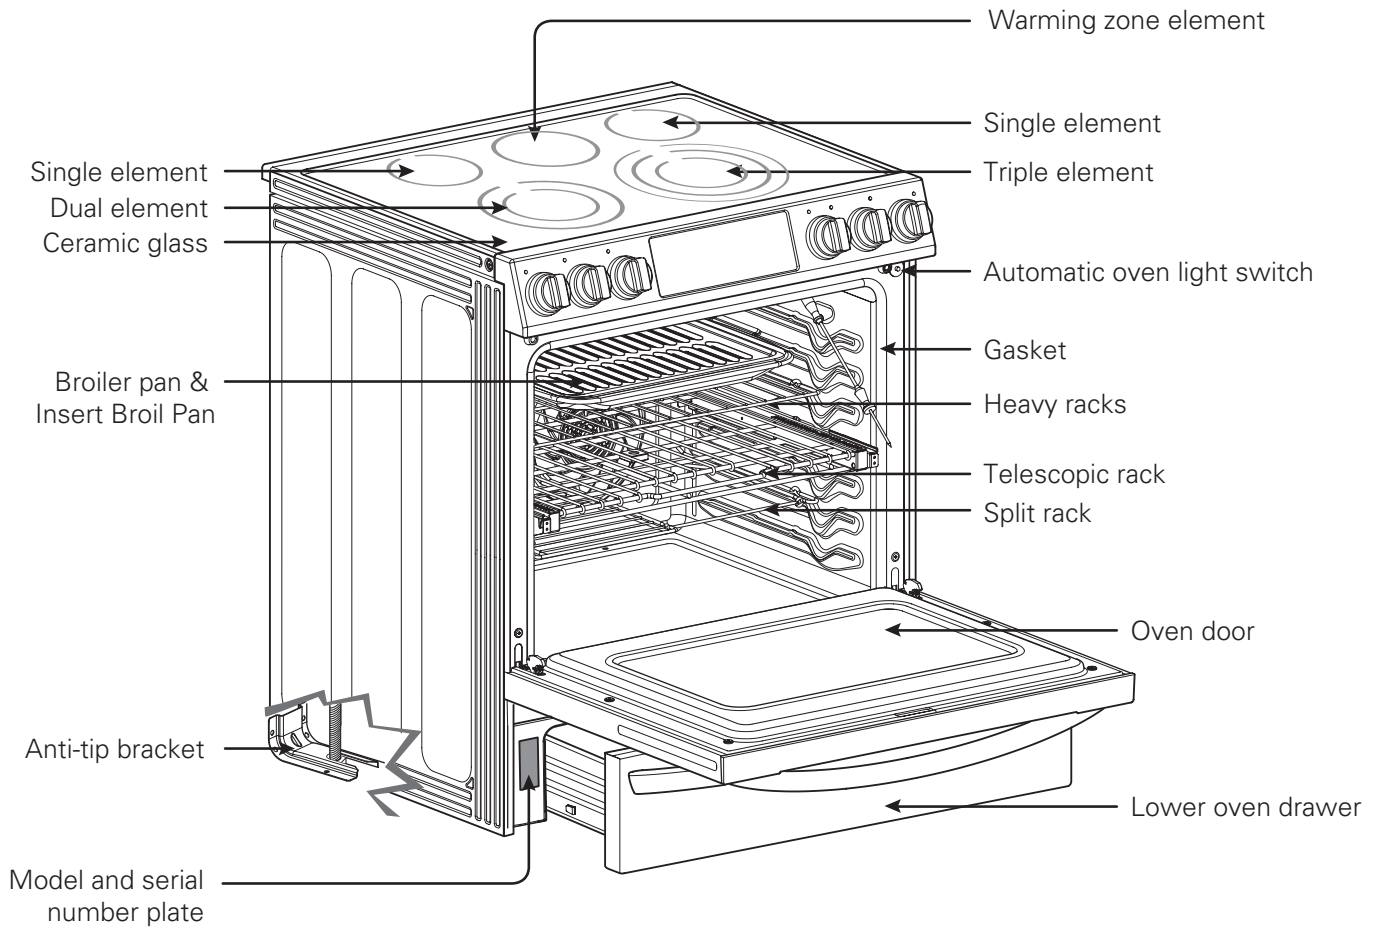

CONTROL PANEL FEATURES

READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN. For satisfactory use of your oven, become familiar with the various features and functions of the oven as described below. **Detailed instructions for each feature and function are listed in this Owner's Manual.**

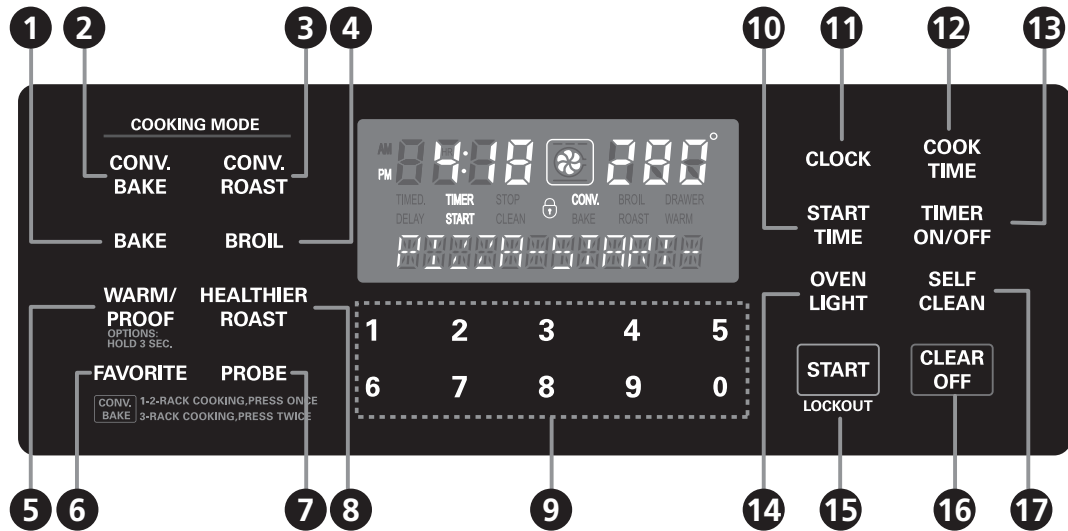

- 1 BAKE** : Use to select the Bake function.
- 2 CONV. BAKE** : Use to select the Conv. Bake function.
- 3 CONV. ROAST** : Use to select the Conv. Roast function.
- 4 BROIL** : Use to select the Broil function.
- 5 WARM/PROOF (OPTIONS)**
 - Use to select the Warm/Proof function.
 - Use to change the special settings (Press and hold for 3 seconds)
- 6 FAVORITE** : Use to select the Favorite Cooking.
- 7 PROBE** : Use to select the Probe function.
- 8 HEALTHIER ROAST** : Use to select Healthier Roast function.
- 9 NUMBER PADS** : Use to enter temperature and all times.
- 10 START TIME** : Use to set Delay Time (Bake and Conv Bake)
- 11 CLOCK** : Use to set the Time of Day.
- 12 COOK TIME** : Use to set the amount of cook time. The oven will shut off automatically.
- 13 TIMER ON/OFF** : Use to set or cancel the timer.
- 14 OVEN LIGHT** : Use to turn the oven lights on and off.
- 15 START** : Use to START all oven functions. To activate CONTROL LOCKOUT press and hold for 3 seconds.
- 16 CLEAR OFF** : Use to stop cooking, cancel settings.
- 17 SELF CLEAN** : Use to select the Self Cleaning function.

NOTE:

If F- and a number appear in the display and the oven control signals, this indicates a function error code.

See page 46.

Touch the CLEAR/OFF pad. Allow the oven to cool for one hour. Put the oven back into operation.

If the function error code repeats, disconnect the power to the oven and call for service.

If your oven was set for a timed oven operation and a power outage occurred, the clock and all programmed functions must be reset.

The time of day will flash in the display when there has been a power outage.

OPERATING INSTRUCTIONS

CLOCK

How to set the Clock

The clock must be set to the correct time of day for the automatic oven timing functions to work properly. The time of day cannot be changed during a timed baking or Self Clean cycle.

- CLOCK**
- 1 Touch the **CLOCK** pad once to set.
 - 2 Touch the **number** pad to enter the time. Touch the number pad with the correct time of day. For example, to set 12:34, touch the number pad **1, 2, 3** and **4**. If number pad is not touched within 30 seconds after you touch the **CLOCK** pad, the display reverts to the original setting. If this happens, touch the **CLOCK** pad and reenter the time of day.

- START**
LOCKOUT
- 3 Touch **START**. This enters the time and starts the clock.

To check the time of day when the display is showing other information, simply touch the **CLOCK** pad.

How to change hour mode on Clock (12HR or 24HR)

Your control is set to use a 12-hour clock. If you would prefer to have a 24-hour time clock, follow the steps below.

- CLOCK**
- 1 Touch the **CLOCK** pad for 3 seconds.
 - 2 Touch the number **1** pad for 12-hour, **2** pad for 24-hour.
 - 3 Touch the **START** pad to accept the desired change.
- START**
LOCKOUT

Power outage

If a flashing time is in the display, you have experienced a power failure. Reset the clock.

Touch the **CLOCK** pad once to reset. Enter the correct time of day by touching the appropriate number pads. Touch the **START** pad.

MINIMUM & MAXIMUM DEFAULT SETTINGS

All of the features listed have minimum and maximum time or temperature settings that may be entered into the control. An entry acceptance beep will sound each time a control pad is touched.

An entry error tone (2 short melody) will sound if the entry of the temperature or time is below the minimum or above the maximum settings for the feature.

FEATURE		MIN. TEMP. /TIME	MAX. TEMP. /TIME	Default
CLOCK TIME	12 Hr.	1:00 Hr. / Min.	12:59 Hr. / Min.	
	24 Hr.	0:00 Hr. / Min.	23:59 Hr. / Min.	
KITCHEN TIMER	12 Hr.	0:01 Min.	11:59 Hr. / Min.	
	24 Hr.	0:01 Min.	11:59 Hr. / Min.	
COOKING TIME	12 Hr.	0:01 Min.	11:59 Hr. / Min.	
	24 Hr.	0:01 Min.	11:59 Hr. / Min.	
CONVECTION BAKE		300°F / 150°C	550°F / 285°C	12 Hr.
CONVECTION ROAST		300°F / 150°C	550°F / 285°C	12 Hr.
BROIL TEMP.		Lo - 400°F	Hi - 550°F	3 Hr.
BAKE TEMP.		170°F / 80°C[77]	550°F / 285°C[288]	12 Hr.
PROOF				12 Hr.
WARM			170°F/75°C, 3 hours	3 Hr.
SELF CLEAN		2 Hr.	4 Hr.	3 Hr.

OPERATING INSTRUCTIONS

TIMER ON/OFF

The **TIMER ON/OFF** serves as an extra timer in the kitchen that will beep when the set time has run out. It does not start or stop cooking.

The **TIMER ON/OFF** feature can be used during any of the other oven control functions.

To set the Timer (example for 5 minutes):

 
TIMER ON/OFF

- 1 Touch **TIMER ON/OFF** twice.
0:00 and **HR** inside **O** will appear and **TIMER** will flash in the display.



5

- 2 Touch **5** in the number pad.
You can see **0:05** in the display



TIMER ON/OFF

- 3 Touch **TIMER** to start the Timer.
The time will count down with 5:00 and the time will show in the display.



NOTE:

If **TIMER ON/OFF** is not touched, the timer will return to the time of day.

TIMER ON/OFF

- 4 When the set time has run out, **End** will show in the display. The indicator tones will sound every 15 seconds until **TIMER ON/OFF** is touched.

NOTE:

If the remaining time is not in the display, recall the remaining time by touching the Timer ON/OFF.

NOTE:

1. If you touch **TIMER ON/OFF** once, it allows you to set the time in seconds.
(for example: if you touch 50, it means 50 seconds)



- If you touch **TIMER ON/OFF** twice, it allows you to set the time in minutes.
(for example: if you touch 5, it means 5 minutes)



To cancel the Timer before the set time has run out:

TIMER ON/OFF

- 1 Touch **TIMER ON/OFF** once.
The display will return to the time of day.

OPERATING INSTRUCTIONS

SPECIAL FEATURES OF YOUR OVEN CONTROL

Your new touch pad control has additional features that you may choose to use. The following pages describe these features and how you may activate them.

The special feature modes can only be activated while the display is showing the time of day.

They remain in the control's memory until the steps are repeated.

When the display shows your choice, touch the **START** pad. The special features will remain in memory after a power failure.

How to set convection auto conversion function

When using convection bake and roast, the Convection Auto Conversion feature will automatically convert entered regular baking temperatures to convection baking temperatures.

This feature is activated so that the display will show the actual converted (reduced) temperature. For example, if you enter a regular recipe temperature of 350°F and press the START function, the display will show the converted temperature of 325°F.



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.



- 2 Touch the # 1 pad to ENABLE or touch the # 2 pad to DISABLE.



- 3 Touch the **START** pad to accept the change.

How to adjust the oven thermostat

You may find that your new oven cooks differently than the one it replaced. Use your new oven for a few weeks to become more familiar with it. If you still think your new oven is too hot or too cold, you can adjust the thermostat yourself.

Do not use thermometers, such as those found in grocery stores, to check the temperature setting of your oven. These thermometers may vary 20–40 degrees.

NOTE:

This adjustment will not affect the broiling or the Self Clean temperatures. The adjustment will be retained in memory after a power failure.

The oven temperature can be increased (+) or decreased (-) as much as 35°F or 19°C.

NOTE:

Once the temperature is increased or decreased, the display will show the adjusted temperature until it is readjusted.

NOTE:

The thermostat adjustment for Bake will also affect Convection Bake or Convection Roast.

To Adjust the Oven Temperature



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.

 
- 2 Touch the **WARM/PROOF** pad 1 time and "Adj" will be displayed.



- 3 Using the **number** pad enter the temperature correction you wish to adjust. For example, to adjust the oven temperature 15 degrees, touch 1 and 5.



- 4 Touch **WARM/PROOF** once to increase (+) or twice to decrease (-) the temperature.



- 5 Touch the **START** pad to accept the change.

OPERATING INSTRUCTIONS

 
SPECIAL FEATURES OF YOUR OVEN CONTROL

How to select language

Your oven control is set to display in English but you may change this to display in Spanish or French.



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.
- 2 Touch the **WARM/PROOF** pad 2 times and "Lng" will be displayed.
- 3 Touch the # 1 pad for English, touch the # 2 pad for Spanish, touch the # 3 pad for French.




- 4 Touch the **START** pad to accept the change.

How to adjust beeper volume

The beeper volume feature allows you to adjust the volumes to a more acceptable volume. There are four possible volume levels, loud, normal, low and mute.



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.
- 2 Touch the **WARM/PROOF** pad 4 times and "BEEP" will be displayed.
- 3 Touch the # 1 pad for LOUD, touch the # 2 pad for NORMAL, touch the # 3 pad for LOW, and touch the # 4 pad for MUTE.

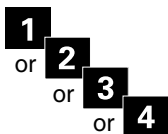

- 4 Touch the **START** pad to accept the change.

How to set preheating alarm light ON/OFF

The interior oven light automatically turn on when the oven door is opened.

Once the oven is preheated, the oven lamp will flash until the door is opened.

You can activate or deactivate smart oven light feature. Default Setting is On.



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.
- 2 Touch the **WARM/PROOF** pad 3 times and "PrE" will be displayed.
- 3 Touch the # 1 pad for ON or touch the # 2 pad for OFF.



- 4 Touch the **START** pad to accept the change.

How to select fahrenheit or celsius temperature

Your oven control is set to use the Fahrenheit temperature. This can be changed to Celsius.



- 1 Touch and hold the **WARM/PROOF** pad for 3 seconds. "AUTO" will appear in the display.
- 2 Touch the **WARM/PROOF** pad 5 times and "UNIT" will be displayed.
- 3 Touch the # 1 pad for F (Fahrenheit) or touch the # 2 pad for C (Celsius).



- 4 Touch the **START** pad to accept the change.

OPERATING INSTRUCTIONS

BEFORE USING OVEN RACKS

The upper oven has four racks. Two heavy racks, one telescopic rack and one split rack. The heavy duty rack and split rack have turned up back edge to prevent the rack from complete coming out when sliding back and forth.

To remove racks:

- 1 Pull the rack straight out until it stops.
- 2 Lift up the front of the rack and pull it out.

To replace racks.

- 1 Place the end of the rack on the support.
- 2 Tilt the front end up and push the rack in.

CAUTION


- **DO NOT cover a rack with aluminum foil or any other material or place on the oven bottom.**
 - This will result in poor baking by disturbing heat circulation and may damage the oven bottom.
- **Always arrange oven racks when the oven is cool.**

OPERATING INSTRUCTIONS

TELESCOPIC RACK

The fully extendable Telescopic Rack makes food preparation easier, especially when preparing heavier dishes. The Telescopic Rack has 2 glide tracks that allow you to extend the food out the oven with touching the sides of the oven walls.


Closed and Engaged Position

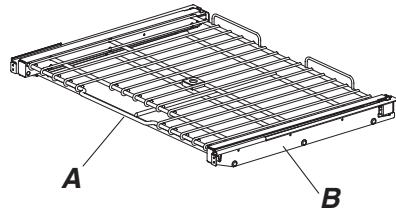


A. Sliding shelf
B. Frame

Installing the Telescopic Rack

With the sliding rack in the “Closed” position, carefully insert the Telescopic Rack between the guides until the rack reaches the back.

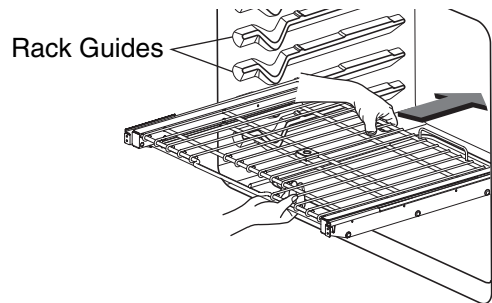


Open Position

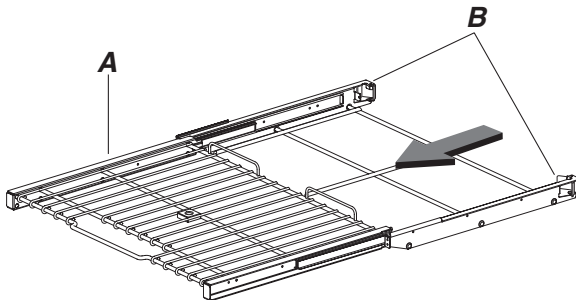

A. Sliding shelf
B. Frame


NOTE:

When using the Telescopic Rack in the oven, be sure only to pull on the handle of the rack to slide in and out. If the frame is grasped while using the rack, the entire Telescopic Rack will be removed.

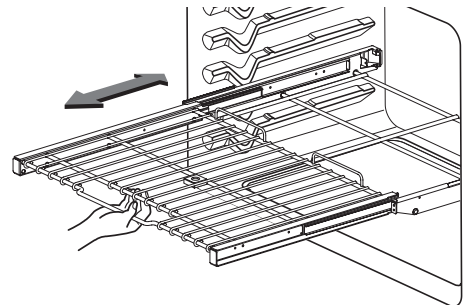


NOTE:

The telescopic rack can be used in any rack positions except the lowest rack position in the oven

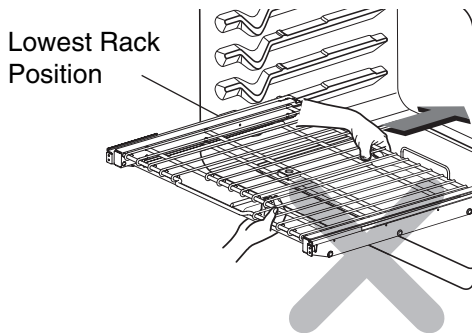

Removing the Telescopic Rack

With the sliding rack in the “Closed” position, grasp the rack and frame and pull both forward to remove.

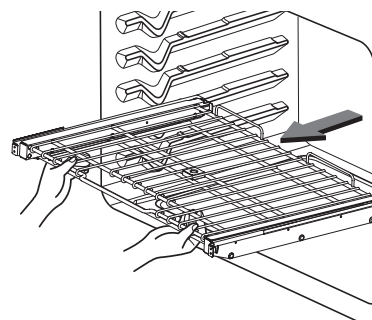

OPERATING INSTRUCTIONS

BAKE

Baking is cooking with just lower element except during preheat. Bake can be used to prepare foods like pastries, bread, casseroles and roast meats.

The oven can be programmed to bake at any temperature from 170°F (77°C) to 550°F (288°C). Default temperature is 350°F (177°C).

To set the Bake Temperature to 375°F

BAKE

❶ Touch **BAKE**.

3 7 5

❷ Set the oven temperature (Touch **3**, **7** and **5**).

START
LOCKOUT

❸ Touch **START**.

The word **PREHEATING** and **100°** will be displayed. As the oven preheats, the display will the temperature in 5 deg increments. Once the oven reaches the desired temperature, a tone will sound and the oven light will flash on and off.

PREHEATING

Place the food in the oven after preheating. Preheating is necessary for better cooking results.

CLEAR OFF

❹ When cooking is finished, touch **CLEAR OFF**.

❺ Remove food from the oven.

To change the Bake Temperature while cooking (example changing from 375°F to 425°F):

BAKE

❶ Touch **BAKE**.

4 2 5

❷ Set the oven temperature (Touch **4**, **2** and **5**).

START
LOCKOUT

❸ Touch **START**.

NOTE:

- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

Tips for baking

Follow the recipe or convection food directions for baking temperature, time and rack position. Baking time and temperature will vary depending on the ingredients, size, and shaped of the baking pan used.

- For best results, food should be bake food on a single rack with at least 1" to 1 1/2" of air space between the pans and oven walls.
- Check for doneness at the minimum time.
- Use metal bakeware (with or without a nonstick finish), heatproof glass-ceramic, ceramic or other bakeware recommended for oven use.
- Dark metal pans or nonstick coatings will cook faster with more browning. Insulated bake ware will slightly lengthen the cooking time for most foods.

OPERATING INSTRUCTIONS

BAKING LAYER CAKES

Baking results will be better if baking pans are centered in the oven as much as possible. If baking with more than one pan, place the pans so each has at least 1" to 1½" of air space around it.

If cooking on multiple racks, place the oven racks in positions B and D (for 2 racks). Place in positions B, D, and F (for 3 racks). Place the cookware as shown in Fig.1, 2.

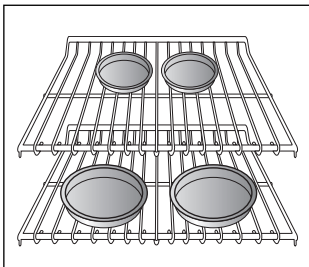


Figure 1


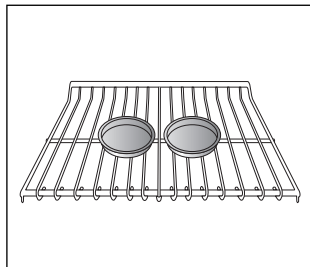


Figure 2

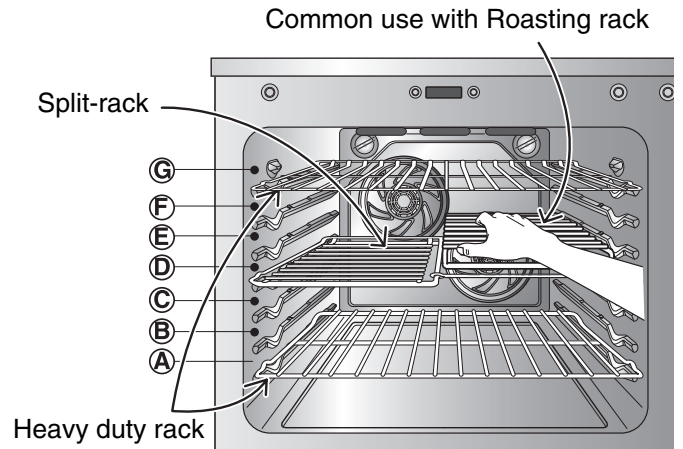

ENGLISH

Baking Chart

· Do not reduce recipe temperature.

Food	Oven Temperature	Shelf position	Baking time
Cakes			
- Layer cakes	350°F	D	- 32~35mins.
- Bundt cake	350°F	C	- 37~43mins.
Cakes, Specialty			
- Cup cakes	350°F	C	- 20~30mins.
- Pound cakes	350°F	C	- 48~52mins.
- Carrot Cake, scratch	350°F	C	- 30~45mins.
Cookies			
- Sugar	350°F	D	- 9~16mins.
- Chocolate Chip	350°F	D	- 9~16mins.
- Brownies	350°F	D	- 30~35mins.
Pizza			
- Fresh	425°F	C	- 10~15mins.
- Frozen	400°F	C	- 23~27mins.
Breads			
- Biscuit, canned	350°F	D	- 13~17mins.
- Biscuit, scratch	425°F	D	- 10~12mins.
- Muffins	425°F	D	- 9~15mins.
Fruits and Vegetables			
- Apples, Baked	375°F	C	- 40~45mins.
- Potatoes, Baked	375°F	C	- 60~80mins.

OPERATING INSTRUCTIONS

BROIL


Broil uses an intense heat radiated from the upper heating element. The Broil function works best when broiling thing tender cuts of meat (1" or less), poultry or fish.

IMPORTANT NOTE:

- Your oven is designed for CLOSE DOOR Broiling
- Meat probe cannot be used with this mode

Before Broiling.

- 1 Place the meat or fish on the broiler grid of the broiler pan.
- 2 Follow suggested shelf positions in the Broiling Guide.
- 3 The oven door must be closed during broiling

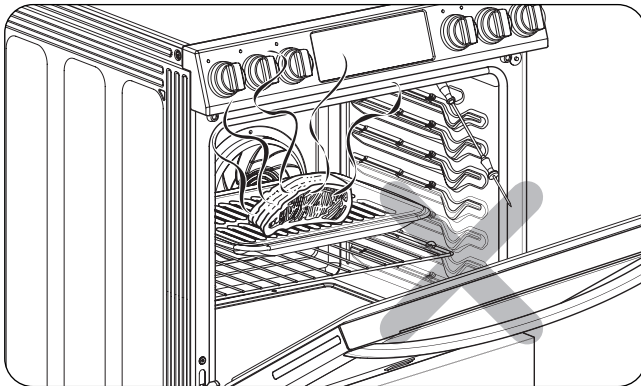

NOTE:

If the oven door is opened when broiling, the control will display "Close the door to continue broil" promptly. A warning beep will occur every 15 seconds until the door is closed.

To set the oven to Broil.

BROIL

- 1 Touch **BROIL** once for **Hi** broil or twice for **Lo** broil.

START

LOCKOUT

- 2 Touch **START**. The oven will begin to broil.
- 3 Broil on one side until food is browned; turn and cook on the other side.

NOTE:


Always pull the rack out to the stop position before turning or removing food.

**CLEAR
OFF**

- 4 When broiling is finished, touch **CLEAR/OFF**.

Tips for broiling:

- Preheat oven 5~7 minutes for best broiling results.
- Brush fish and poultry with butter or oil to prevent sticking.
- Always use the broiler pan and grid that came with your oven. Do not cover the grid with aluminum foil.

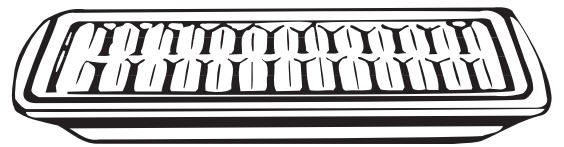

The broiler grid is designed to prevent smoking and spattering by trapping juices (fats and oils) from foods in the lower part of the broiling pan.

- Use Broil LO to broil foods such as poultry and thick cuts of meat to cook thoroughly with out over cooking them.

NOTE:

- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

CAUTION

- **Should an oven fire occur, leave the oven door closed and turn the oven off. If the fire continues, throw baking soda on the fire or use a fire extinguisher.**
- **DO NOT put water or flour on the fire.**
 - Flour may be explosive and water can cause a grease fire to spread and cause personal injury.
- **DO NOT use the broiler pan without the grid.**
- **DO NOT cover the grid with aluminum foil.**

OPERATING INSTRUCTIONS

RECOMMENDED BROILING GUIDE

The size, weight, thickness, starting temperature, and your preference of doneness will affect broiling times.

This guide is based on meats at refrigerator temperature.

For best results when broiling, use a pan designed for broiling (refer to the Fig.1)


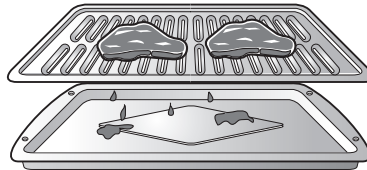


Fig.1

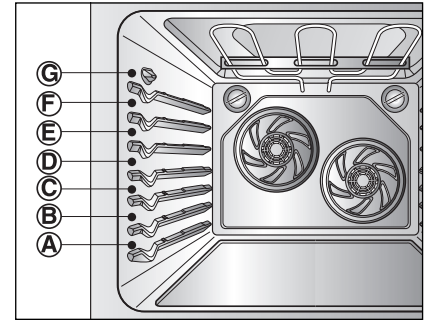

ENGLISH

Broiling Chart

Food	Quantity and/ or Thickness	Shelf Position	First Side Time (min.)	Second Side Time (min.)	Comments
Ground Beef Well Done	1 lb. (4 patties) ½ to ¾" thick	F	7-9	3-5	Space evenly. Up to 8 patties may be broiled at once.
Beef Steaks Rare Medium Well Done	1" thick 1 to 1½ lbs.	F F F	6 7 8	2-3 2-3 3-4	Steaks less than 1" thick cook through before browning. Pan frying is recommended. Slash fat.
Rare Medium Well Done	1½" thick 2 to 2½ lbs.	D D D	10 12 14	4-6 6-8 8-10	
Chicken	1 whole cut up 2 to 2½ lbs., split lengthwise 2 Breasts	C C	20 20	6-8 6-10	Broil skin-side-down first.
Lobster Tails	2-4 10 to 12 oz. each	C	12-14	Do not turn over.	Cut through back of shell. Spread open. Brush with melted butter before broiling and after half of broiling time.
Fish Fillets	¼ to ½" thick	E	5	3-4	Handle and turn very carefully. Brush with lemon butter before and during cooking, if desired.
Ham Slices (precooked)	½" thick	D	5	3-5	Increase time 5 to 10 minutes per side for 1½" thick or home-cured ham.
Pork Chops Well Done	2 (½" thick) 2 (1" thick) about 1 lb.	E D	7 9-10	6-8 7-9	Slash fat.
Lamb Chops Medium Well Done	2 (1" thick) about 10 to 12 oz.	E E	6 8	4-6 7-9	Slash fat.
Medium Well Done	2 (1½" thick) about 1 lb.	E E	11 13	9 9-11	
Salmon Steaks	2 (1" thick) 4 (1" thick) about 1 lb.	D D	8 9	3-4 4-6	Grease pan. Brush steaks with melted butter.


OPERATING INSTRUCTIONS

DUAL CONVECTION BAKE

Dual Convection baking uses two fans to circulate the oven's heat evenly and continuously within the oven. Improved heat distribution allows for even cooking and excellent results using multiple racks at the time. Foods cooked on a single oven rack will generally cook faster and more evenly with Dual Convection Bake. Multiple oven rack cooking may slightly increase cook times for some foods, but the overall result is time saved.

Benefits of Dual Convection Bake:

- 1 Some foods cook up to 40% faster, saving cooking time.
- 2 Foods with Dual Convection Bake cook more evenly compared to non convection.
- 3 Multiple rack baking.
- 4 No special pans or bakeware needed.

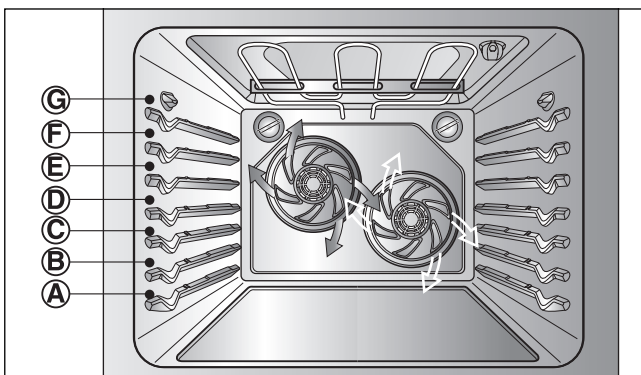

The **CONV. BAKE** pad controls the Dual Convection Bake feature. Use the Dual Convection Bake feature when cooking speed is desired. The oven can be programmed for Dual Convection Bake at any temperature between 300°F (150°C) to 550°F (285°C).

To set the oven for Convection Bake and temperature to 375°F:



- 1 Touch **CONV. BAKE**. The display will flash **350 deg F**.
- 2 Set the oven temperature (Touch **3**, **7** and **5**).
- 3 Touch **START**. The display will show **CONV BAKE** and the converted temperature starting at 100°F. As the oven preheats, the display will the temperature in 5 deg increments. Once the oven reaches the desired adjusted temperature, a tone will sound and the oven light will flash on and off. The display will show the auto converted oven temperature **350 deg F**, **CONV BAKE** and the fan icon.

Tips for Convection Bake

- Time reductions will vary depending on the amount and type of food to be cooked. Cookies and biscuits should be baked on pans with no sides or very low sides to allow heated air to circulate around the food. Food baked on pans with a dark finish will cook faster.
- When using Convection Bake with a single rack, place oven rack in position D. If cooking on multiple racks, place the oven racks in positions B and D (for 2 racks). Place in positions B, D, and F (for 3 racks).
- Cakes have better results when baked using the **BAKE** function. You can still (you can still use multiple racks when baking multiple cake layers at the same time).
- Cookies, muffins, biscuits and other quickbreads give very good results when using multiple racks.

NOTE:

- The convection fan stops during a convection bake cycle to allow for more even heating. This is normal.
- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

To use 3-rack position mode

You can bake with 3 racks using the Conv Bake function.

If you have to bake much food same time, you can use 3-rack position mode in conv. bake.



- 1 Touch **CONV. BAKE** twice, and then you can see "3 racks" in the display.
- 2 Set the oven temperature.
- 3 Touch **START**.

OPERATING INSTRUCTIONS

DUAL CONVECTION BAKE (cont')

NOTE:

- Reduce standard recipe temperature by 25°F for Convection Bake. Temperatures have been adjusted in this chart. oven rack cooking may slightly increase cook times for some foods, but the overall result is time saved.

Convection Baking Chart

Food	Oven Temperature	Shelf position	Baking time
Cakes			
- Layer cakes	325°F	D	- 32~35mins.
- Bundt cake	325°F	C	- 37~43mins.
Cakes, Specialty			
- Popovers	400°F	C	- 25~35mins.
- Cup cakes	325°F	C	- 20~25mins.
- Pound cakes	325°F	C	- 48~55mins.
Cookies			
- Sugar	325°F	D	- 9~16mins.
- Chocolate Chip	325°F	D	- 9~16mins.
- Brownies	325°F	D	- 30~35mins.
Pizza			
- Fresh	400°F	C	- 10~15mins.
- Frozen	375°F	C	- 23~27mins.
Breads			
- Biscuit, canned	325°F	D	- 13~17mins.
- Biscuit, scratch	425°F	D	- 8~12mins.
- Muffins	400°F	D	- 9~15mins.
- White bread, loaf	350°F	B	- 30~38mins.
Pastry Crust			
- Scratch	425°F	C	- 9~12mins.
- Refrigerator	425°F	C	- 9~11mins.
Desserts			
- Fruit Crisps and Cobblers, scratch	350°F	C	- 30~40mins.
- Pies, scratch, 2 crust fruit	350°F	C	- 60~70mins.

- This chart is a guide. Follow recipe or package directions and reduce temperatures appropriately.

OPERATING INSTRUCTIONS

CONVECTION ROAST

The **CONV Roast** feature is designed to give optimum roasting performance. The Convection Roast feature combines a cooking with the convection fan to roast meats and poultry. The heated air circulates around the food from all sides, sealing in juices and flavors.

Foods are crispy brown on the outside while staying moist on the inside.

- Convection Roast is especially good for large tender cuts of meat, uncovered.

To set the Convection Roast feature (example for Meats to cook at 375°F):



- 1 Arrange oven racks and place food in oven.
- 2 Touch **CONV. ROAST**. The display will flash **350 deg F**.
- 3 Set the oven temperature (Touch **3, 7** and **5**).
- 4 Touch **START**. The display will show **CONV ROAST** and the changing temperature starting at 100°F. As the oven preheats, the display will the temperature in 5 deg increments. Once the oven reaches the desired adjusted temperature, a tone will sound and the oven light will flash on and off. The display will show the auto converted oven temperature **350 deg F, CONV BAKE** and the fan icon.

Touch **CLEAR/OFF** to cancel this function at any time.

NOTE:

 
- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

Roasting Rack Instructions


When preparing meats for convection roasting, use the broiler pan and grid along with the roasting rack. The broiler pan will catch grease spills and the grid will help prevent grease splatters. The roasting rack will allow the heat to circulate around the meat.

CAUTION


- **DO NOT use the roasting rack when broiling.**
 - To prevent food from coming in contact with the broil element and grease from splattering.
- 1 Place oven rack on bottom or next to the bottom rack position.
- 2 Place the grid in the broiler pan. The roasting rack fits on the grid allowing the heated air to circulate under the food for even cooking and helps to increase browning on the underside. Make sure the roasting rack is securely seated on the grid in the broiler pan. **DO NOT** use the broiler pan without the grid. **DO NOT** cover the grid with aluminum foil.
- 3 Position food (fat side up) on the roasting rack.
- 4 Place the broiler pan on the oven rack.



 Roasting rack
(Right side of the split rack)



Grid

 

Broiler Pan

OPERATING INSTRUCTIONS

TIMED COOK

This feature is available only for BAKE, CONVECTION BAKE, CONVECTION ROAST and FAVORITE mode. The oven will turn on immediately and cook for a selected length of time. At the end of the cooking time, the oven will turn off automatically.

To set the oven to begin cooking immediately and shut off automatically: (example below to bake at 300°F for 30 minutes):

- 1 Be sure the clock is set for the correct time of day.
- 2 Touch **BAKE**, 350°F will appear in the display.
- 3 Set the oven temperature (Touch **3**, **0** and **0**).
- 4 Touch **COOK TIME**. **TIMED** will flash. **BAKE, 0:00** and **300°F** will appear in the display.
- 5 Set the desired baking time (Touch **3** and **0**).
NOTE:
Baking time can be set for any amount of time between 1 minute to 11 hours and 59 minutes.
- 6 Touch **START**. The oven will turn on, and the display will show the cooking time countdown. The oven will continue to cook for the set amount of time, then turn off automatically, unless the **WARM** feature was set. Refer to the Setting the **WARM** feature section on page 33.

BAKE

3 0 0

COOK TIME

3 0

START
LOCKOUT

To change the cooking time while cooking (example changing from 30 minutes to 1 hour 30 minutes)

COOK TIME

1 3 0

START
LOCKOUT

- 1 Touch **Cook Time**.
- 2 Set the changed baking time (Touch **1**, **3** and **0**).
- 3 Touch **start** to accept the change or thoch **Clear** to reset the time you input.

When Timed Cook finishes:

- 1 **END OF CYCLE** and the time of day will show in the display. The oven will shut off automatically.
- 2 The **COOK END** indicator tone will sound every 60 seconds until the **CLEAR/OFF** is touched.

CLEAR OFF

NOTE:

- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

Touch **CLEAR/OFF** to cancel this function at any time.

OPERATING INSTRUCTIONS

DELAYED TIMED COOK

This feature is available only for BAKE, CONVECTION BAKE and CONVECTION ROAST mode. The automatic timer of the Delayed Timed Cook will turn the oven ON and OFF at the time you select in advance.

**To set the oven for a Delayed Start .
(example for baking at 300°F for 30 minutes
and starting at 4:30 pm):**

- 1 Be sure that the clock is set with the correct time of day.
- 2 Arrange interior oven rack(s) and place the food in the oven.
- 3 Touch BAKE. 350°F will appear in the display.

BAKE

3 0 0

- 4 Set the oven temperature (Touch 3, 0 and 0).

COOK
TIME

- 5 Touch COOK TIME.

NOTE:

If you want to change cook time, repeat steps 5~6 and touch START.

3 0

- 6 Set the desired baking time (Touch 3, 0 and 0).

NOTE:

Baking time can be set for any amount of time from 1 minute to 11 hours and 59 minutes.

START
TIME

4 3 0

- 7 Touch START TIME.

- 8 Set the desired start time (Touch 4, 3 and 0).

START
LOCKOUT

- 9 Touch START. At the set time, a short beep will sound. The oven will begin to Bake.

When the Delayed Timed Cook finishes:

- 1 END OF CYCLE and the time of day will show in the display. The oven will shut off automatically.
- 2 The COOK END indicator tone will sound every 60 seconds until the CLEAR/OFF is touched.

CLEAR
OFF

NOTE:

- During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.
- If you set 12-hours clock, the maximum hours you can delay will be just 12-hours. If you set 24 hours clock, you can delay the cook for 24 hours.

CAUTION

- Use caution with the TIMED BAKE or DELAYED TIMED BAKE features. Use the automatic timer when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, such as milk, eggs, fish, meat or poultry, should be chilled in the refrigerator first. Even when chilled, they should not stand in the oven for more than 1 hour before cooking begins, and should be removed promptly when cooking is completed.
- Eating spoiled food can result in sickness from food poisoning.

Touch CLEAR/OFF to cancel Delayed Timed Bake at any time.

OPERATING INSTRUCTIONS

WARM

The WARM function will maintain an oven temperature of 170°F. This function should not be used to reheat cold food. The Warm function will keep cooked food warm for serving up to 3 hours after cooking has finished. After 3 hours the WARM function will shut the oven OFF automatically. The Warm function may be used without any other cooking operations or can be used after cooking has finished using TIMED BAKE (CONV. BAKE, CONV. ROAST) or DELAYED TIMED BAKE (CONV. BAKE, CONV. ROAST).

To set Warm:



❶ Touch the **WARM/PROOF** once.



❷ Touch **START**.



❸ To turn Warm off, touch **CLEAR/OFF** at any time.

To set Warm feature after timed cooking

❶ Set the cooking feature that you want to use: **TIMED (BAKE, CONV. BAKE, CONV. ROAST), DELAYED TIMED (BAKE, CONV. BAKE, CONV. ROAST)** refer to the relevant previous page.



❷ Touch **START**.



❸ Touch **WARM/PROOF** once. **COOK & WARM** mode is set to turn on automatically after completing the **TIMED COOKING** or **DELAYED TIMED COOKING**.



❹ To turn Cook & Warm off at any time touch **CLEAR/OFF**.

PROOF

The Proof feature maintains a warm environment for rising yeast leavened products before baking. To avoid lowering the oven temperature and lengthening proofing time, do not open the oven door unnecessarily. Check bread products early to avoid over-proofing.

Before Proof.

Place the covered dough in a dish in the oven on rack B or C.

NOTE:

For best results, cover the dough with a cloth or with plastic wrap (the plastic may need to be anchored underneath the container so the oven fan does not blow it off).

NOTE:

- Do not use the proofing mode for warming food or keeping food hot. The proofing oven temperature is not hot enough to hold foods at safe temperatures. Use the WARM feature to keep food warm.
- Proofing will not operate when oven is above 125°F. Oven is Hot will show in the display.

To set Proof:



❶ Touch **WARM/PROOF** Twice.



❷ Touch **START** The proof feature automatically provides the optimum temperature for the proof process, and therefore does not have a temperature adjustment.



❸ When proofing is finished, touch **CLEAR/OFF**.

OPERATING INSTRUCTIONS

HEALTHIER ROAST

This Healthier Roast function is designed to give cooking results of fat, results lower in fat for roasting meats and poultry. Healthier Roast can reduce the fat up to 20% compared to regular roasting. The amount of fat reduced from the meat may vary depending on the type and cut of meat. Test results are based on beef roasts by a certified organization.

Preheating is not necessary for meats and poultry. Heating system of the healthier roast feature makes the food from all sides, sealing in juices and flavors. Foods are crispy brown on the outside while staying moist on the inside. Extra cooking time may be needed for this feature.

The meat probe should be used in this feature. (Refer to the HEALTHIER ROASTING CHART)

NOTE:

PROBE will flash in the display when the oven probe is plugged into the socket.

To set the Healthier Roast feature (example for Beef with probe temperature 140°F):

❶ Before using this feature, insert the meat probe into the meats or poultry.

HEALTHIER
ROAST

❷ Touch **Healthier Roast**.

HEALTHIER
ROAST

❸ Select menu by touching **Healthier Roast** (Beef, Pork, Lamb, Chicken, Turkey)

1 4 0

❹ Set the probe temperature. (Touch **1**, **4** and **0**.)

START
LOCKOUT

❺ Touch **START** to run this feature. The display will show the current probe temperature.

CLEAR
OFF

❻ When the meat probe temperature reaches the set temperature, the roasting cycle is complete. The indicator tones will sound and the display will show **End of Cycle**. The indicator tones will sound every minute until **CLEAR/OFF** is touched.

NOTE:

• During oven operation, it is possible that the oven cooling fan will operate to cool the control panel. This is normal operation.

When preparing meats for roasting, use the broiler pan and grid. The broiler pan will catch meat drippings and prevent grease splatters.

Touch **CLEAR/OFF** to cancel Healthier Roast at any time.

HEALTHIER ROASTING CHART


Menu	Meat Probe Temp.	
	Temp. range	Default Temp.
1. Beef	140~170°F (60~77°C)	160°F (71°C)
2. Pork	160~190°F (71~88°C)	170°F (77°C)
3. Lamb	140~170°F (60~77°C)	160°F (71°C)
4. Chicken	165~180°F (74~82°C)	180°F (82°C)
5. Turkey	165~180°F (74~82°C)	175°F (79°C)

OPERATING INSTRUCTIONS

MEAT PROBE

The meat probe accurately measures the internal temperature of meat, poultry and casseroles. It should not be used during broiling, Self Clean, warming or proofing. Always unplug and remove the meat probe from the oven when removing food. Before using, insert the probe into the center of the thickest part of meat or into the inner thigh or breast of poultry, away from fat or bone. Place food in the oven and connect the meat probe to the jack. Keep the probe as far away from heat source as possible.

 To use the Meat Probe feature (example for Roast 375°F with probe temp. 160°F)



- 1 Insert the Meat Probe into the meat
- 2 Connect the Meat Probe to the jack.

Method 1

PROBE

- 3-1 Touch **PROBE**.

1 6 0

- 4-1 Set the probe temperature (Touch 1, 6 and 0).

BAKE

- 5-1 Select Cook mode (Touch **BAKE**).

3 7 5

- 6-1 Set the oven temperature (Touch 3, 7 and 5).

Method 2

BAKE

- 3-2 Select cook mode (Touch **BAKE**).

3 7 5

- 4-2 Set the oven temperature (Touch 3, 7 and 5).

1 6 0

- 5-2 Set the probe temperature (Touch 1, 6 and 0).

START
LOCKOUT

- 7 Touch **START**.

The default probe temperature is 150°F (66°C), but can be changed to any temperature between 80°F (27°C) and 210°F (99°C). The display will show the changing probe temperature. When the set probe temperature is shut off automatically and **End Of Cycle** will appear on the display.

To change the Meat Probe temperature during cooking:

PROBE

- 1 Touch **PROBE**.

1 2 3

- 2 Set the probe temperature.

START
LOCKOUT

- 3 Touch **START**.

To change oven temperature during cooking:

BAKE

- 1 Select cook function. (Touch **BAKE**).

1 2 3

- 2 Set the oven temperature.

START
LOCKOUT

- 3 Touch **START**.

IMPORTANT NOTE:

Touch **CLEAR/OFF** to cancel Meat Probe at any time. To avoid breaking the probe, make sure food is completely defrosted before inserting.

OPERATING INSTRUCTIONS

MEAT PROBE (cont')

CAUTION

- Always use an oven mitt to remove temperature probe. Do NOT touch broil element.
 - Failure to do so can result in severe personal injury.
- To avoid damage to the Meat Probe, DO NOT use tongs to pull on the probe when removing it.
- Do not store the Meat Probe in the oven.

RECOMMENDATION CHART FOR PROBE TEMPERATURE

Doneness	Probe Temp.
Beef, Lamb and Veal	
Rare	140°F (60°C)
Medium Rare	145°F (63°C)
Medium	160°F (71°C)
Well Done	170°F (77°C)
Pork	
Well Done	170°F (77°C)
Poultry	
Breast, Well Done	170°F (77°C)
Thigh, Well Done	180°F (82°C)
Stuffing, Well Done	165°F (74°C)

THE FAVORITE

The FAVORITES feature is used to record and recall your favorite recipe settings. This feature may store and recall up to 3 different settings. The Favorite Setting feature may be used with COOK TIME feature. This feature will not work with any other function including START TIME feature.

❶ Place the food in the oven.

FAVORITE

❷ Touch **FAVORITE** once for Bread, twice for Meat, and 3 times for Chicken. Default temperature will appear and COOK will flash.

Category	How to Select Touch Favorite	Default Temp. (may be changed and recalled)	Operating Feature
1. Bread	Touch FAVORITE pad once.	375°F	BAKE
2. Meat	Touch FAVORITE pad twice.	325°F	Convection Roast
3. Chicken	Touch FAVORITE pad 3 times.	350°F	Convection Roast

❸ 1 2 3

Press the **number** pads to set the desired oven temperature. This temperature will be stored and be recalled next use.

START

LOCKOUT

❹ Press the **START** feature. The preheat indicator tones will sound 3 times when the oven reaches the programmed temperature.

NOTE:

- Only the temperature you selected will be stored, not the cooking time.
- If the oven temperature is changed, the changed temperature will be stored.
- The stored temperature is stored after a power failure.

TO TURN ON or OFF THE OVEN LIGHT

OVEN LIGHT

The oven light automatically turns ON when the door is opened. The oven light may also be manually turned ON or OFF by touching the **OVEN LIGHT** feature.

NOTE:

The oven light cannot be turned on if the self clean feature is active.

OPERATING INSTRUCTIONS

OVEN LOCKOUT FEATURE

The START pad controls the Oven Lockout feature. The Oven Lockout feature automatically, locks the oven door prevents most oven controls from being turned ON. It does not disable the clock, timer or the interior oven light.

Activate the lock out feature:



- 1 Touch and hold **START** pad for 3 seconds.
- 2 Lock melody will sound, **LOCKING** will appear & **“DOOR LOCKED”** will flash in the display. Once the oven door is locked the **“DOOR LOCKED”** indicator will stop flashing and remain on along with the lock icon(🔒) light.

Deactivate normal oven operation:



- 1 Touch and hold **START** pad for 3 seconds. Unlock melody will sound 2 times. The **“DOOR LOCKED”** will continue to flash until the oven door has completely unlocked and the lock icon(🔒) light will clear.
- 2 The oven is again fully operational.

NOTE:

- In case of Oven Lockout mode, Clock, kitchen Timer and Oven light function continue to operate.
- Even if the door is opened, Oven Lockout can be operating because of Key Lock.

OPERATING INSTRUCTIONS

SELF CLEAN

The self clean cycle uses above normal cooking temperatures to clean the oven cavity. You may see some smoke and smell an odor the first few times the oven is cleaned. This is normal and will lessen in time. Smoke may also occur if the oven is heavily soiled. During self clean, the kitchen should be well ventilated to minimize the odors from cleaning.

CAUTION

- **DO NOT leave small children unattended near the appliance.**

- During the self cleaning cycle, the outside of the range can become very hot to touch.

- **Move Birds to another well-ventilated room.**

- The health of some birds is extremely sensitive to the fumes given off during the Self Cleaning cycle of any range.

- **DO NOT line the oven walls, racks, bottom or any other part of the range with aluminum foil or any other material.**



- Doing so will destroy heat distribution, produce poor baking results and cause permanent damage to the oven interior (aluminum foil will melt to the interior surface of the oven).

- **DO NOT force the door open.**

- This can damage the automatic door locking system. Use care when opening the oven door after the Self Cleaning cycle. Stand to the side of the oven when opening the door to allow hot air or steam to escape. The oven may still be VERY HOT.

CAUTION


- The oven broil element may appear to have cooled after it has been turned OFF. The element may still be hot and burn may occur if this element is touched before it has cooled sufficiently.

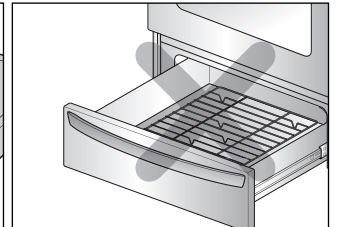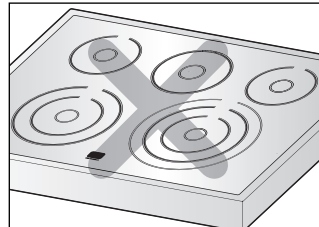

During the self clean cycle, the cooktop elements and lower oven cannot be used.

NOTE:

Remove oven racks and accessories before starting the self clean cycle.

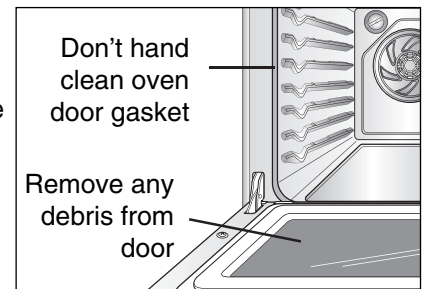

Before a Self Clean Cycle

We recommend venting your kitchen with an open window or using a ventilation fan or hood during the first self clean cycle.

Remove the oven racks, broiler pan, broiler grid, all cookware, and aluminum foil or any other material from the oven.

- If oven racks are left in the oven cavity during the self clean cycle, they will discolor and become difficult to slide in and out.
- Clean the frame of the oven and door with hot soapy water. Rinse well.
- Do not clean the gasket. The fiberglass material of the oven door gasket cannot withstand abrasion. It is essential for the gasket to remain intact. If you notice it becoming worn or frayed, replace it.
- Wipe up any heavy spillovers on the oven bottom.
- Make sure the oven light bulb cover is in place and the oven light is off.

OPERATING INSTRUCTIONS

SELF CLEAN (cont')

The **SELF CLEAN** pad is used to start a Self Clean cycle. When used with **START TIME** pad, a delayed Self Clean cycle may also be programmed. The Self-Clean function has cycle times of 2, 3, or 4 hours.

To start an immediate Self Clean cycle and shut off automatically

- 1 Be sure the clock is set with the correct time of day, the oven is empty and the oven door is closed.
- 2 Touch **SELF CLEAN** once for a 3-hour clean time, twice for a 2-hour clean time, or 3 times for 4-hour clean time. A 3-hour selfclean time is recommended for use when cleaning small, contained spills. A self clean time of 4 hours is recommended for heavily soiled ovens.
- 3 Touch **START**. The **DOOR LOCKED** icon will flash.
- 4 Once the **SELF CLEAN** is set, the oven door will lock automatically. You will not be able to open the oven door until the oven is cooled. The lock will release automatically.



SELF
CLEAN



START
LOCKOUT



SELF
CLEAN

During the Self Clean cycle

- You may see some smoke and smell an odor the first few times the oven is cleaned. This is normal and will lessen in time. Smoke may also occur if the oven is heavily soiled or if a broiler pan was left in the oven.
- As the oven heats, you may hear sounds of metal parts expanding and contracting. This is normal and will not damage the oven.
- Do not force the oven door open when **LOCKED** is displayed. The oven door will remain locked until the oven temperature has cooled. Forcing the door open will damage the door.

To set a delay start time



 
SELF
CLEAN

- 1 Touch **SELF CLEAN**. Select the desired self clean time by touching **SELF CLEAN**.



START
TIME

- 2 Press **START TIME**. **DELAY** is flashing



1 2 3

- 3 Set the desired start time.



START
LOCKOUT

- 4 Touch **START**. **DELAY** and **CLEAN** will remain on.

- 5 Self Cleaning cycle will turn on automatically at the set time.

OPERATING INSTRUCTIONS

SELF CLEAN (cont')

If it becomes necessary to stop or interrupt a selfcleaning cycle due to excessive smoke or fire in the oven:

A rectangular button with a dark background and white text that reads "CLEAR OFF".

- 1 Touch **CLEAR/OFF**.
- 2 After the oven has cooled down, the **DOOR LOCK** will automatically release allowing you to open the oven door.

NOTE:

When using the Self Clean feature:

- A Self Clean cycle cannot be started if Oven Lockout feature is active.
- Once the SELF CLEAN is set, the oven door will lock automatically. You will not be able to open the oven door until the oven is cooled. The lock will release automatically.
- Once the door has been locked the LOCKED indicator light will stop flashing and remain on. Allow about 15 seconds for the oven door lock to close.
- If your clock is set for normal 12 hours display mode the Delayed Self Clean can never be set to start more than 12 hours in advance. To set for a delayed Self Clean cycle 12- 24 hours in advance, see page 18 for instructions to set the control for the 24 hours time of day display mode.

When the self clean cycle is done

- It will not be possible to open the oven door until oven temperature has cooled.
- It is recommend to use 2 hour self clean cycle for light soil, 3 hours cycle for average soil, and 4 hours cycle for heavy soil.
- Additional time is needed to cool the oven down. Therefore, the oven door will not release from the lock position until after it has cooled.

After the Self Clean cycle

- You may notice some white ash in the oven. Wipe it off with a damp cloth or a soap-filled steel wool pad after the oven cools. If the oven is not clean after one clean cycle, repeat the cycle.
- If oven racks were left in the oven and do not slide smoothly after a clean cycle, wipe racks and rack supports with a small amount of vegetable oil to make them glide easier.
- Fine lines may appear in the porcelain because it went through heating and cooling. This is normal and will not affect performance.


CARE & CLEANING

Changing the Oven Light

The oven light is a standard 40-watt appliance bulb. It will come on when the oven door is open. When the oven door is closed, press Oven LIGHT to turn it on or off.

To replace:

- Make sure oven and bulb are cool.
- 1. Unplug range or disconnect power.
- 2. Turn the glass bulb cover in the back of the oven counterclockwise to remove.
- 3. Turn bulb counterclockwise to remove from socket.
- 4. Replace bulb and bulb cover by turning clockwise.
- 5. Plug in range or reconnect power.

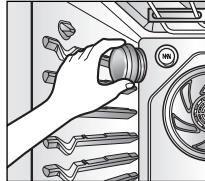

WARNING

- **Before replacing your oven light bulb, DISCONNECT the electrical power to the range at the main fuse or circuit breaker panel.**
 - Failure to do so can result in severe personal injury, death, or electrical shock.
- **Make sure oven and bulb are cool.**

WARNING



- **DO NOT step or sit on the door. Install the Anti-Tip Bracket packed with range.**
 - The range could be tipped and injury might result from spilled hot liquid, food, or the range itself.
 - If the range is pulled away from the wall for cleaning, service, or any other reason, ensure that the Anti-Tip Device is properly reengaged when the range is pushed back against the wall.

Painted and Decorative Trim

For general cleaning, use a cloth with hot soapy water. For more difficult soils and built-up grease, apply a liquid detergent directly onto the soil. Leave on soil for 30 to 60 minutes. Rinse with a damp cloth and dry.

DO NOT use abrasive cleaners on any of these materials; they can scratch.

 
Stainless Steel Surfaces (on some models)

Do not use a steel-wool pad; it will scratch the surface.

1. Using a Stainless Steel Appliance cleaner or polish, place a small amount on a damp cloth or paper towel.
2. Clean a small area, rubbing with the grain of the stainless steel if applicable.
3. Dry and buff with a clean, dry paper towel or soft cloth.
4. Repeat as necessary.

Broiler Pan and Grid

Do not clean the broiler pan or grid in a selfcleaning mode.



Do not store a soiled broiler pan and grid anywhere in the range. (Optional)

After broiling, remove the broiler pan from the oven. Remove the grid from the pan. Carefully pour out the grease from the pan into a proper container.

Wash and rinse the broiler pan and grid in hot water with a soap-filled or plastic scouring pad.

If food has burned on, sprinkle the grid with cleaner while hot and cover with wet paper towels or a dishcloth. Soaking the pan will remove burned-on foods.

Both the broiler pan and grid may be cleaned with a commercial oven cleaner.

Both the broiler pan and grid can also be cleaned in a dishwasher.

MAINTENANCE


CARE & CLEANING (cont')

Oven Racks

Remove the oven racks before operating the selfclean cycle.

Leaving the racks in place could cause discoloration, and, if food is spilled into the tracks, could cause the racks to become stuck. If left, clean by using a mild, abrasive cleaner. Rinse with clean water and dry.

If the racks are cleaned in the self clean cycle, their color will turn slightly blue and the finish will be dull. After the self clean cycle is complete, and the oven has cooled, rub the sides of the racks with wax paper or a cloth containing a small amount of oil. This will make the racks glide easier into the rack tracks.

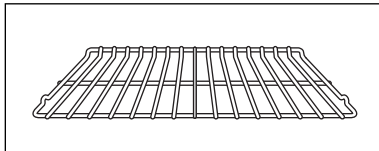


DO NOT clean the oven door gasket. The oven door gasket is made of a woven material which is essential for a good seal. Care should be taken not to rub, damage, or remove this gasket.

CAUTION

- DO NOT use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface.
 - It may result in shattering of the glass.

Oven door

Use soap and water to thoroughly clean the top, sides, and front of the oven door. Rinse well. You may use a glass cleaner on the outside glass of the oven door. DO NOT immerse the door in water. DO NOT spray or allow water or the glass cleaner to enter the door vents. DO NOT use oven cleaners, cleaning powders, or any harsh abrasive cleaning materials on the outside of the oven door.

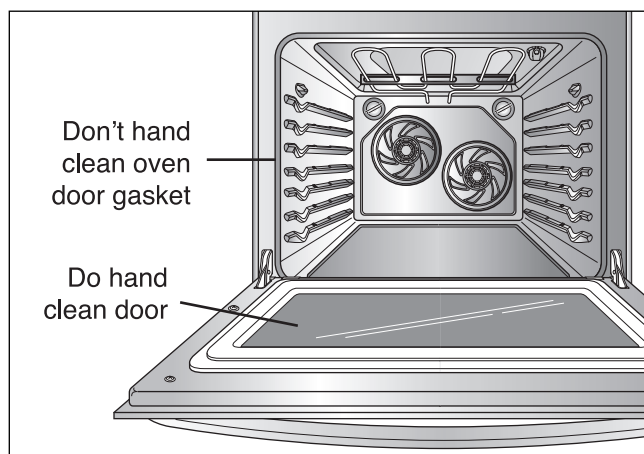

CLEANING THE GLASS/CERAMIC COOKTOP

Normal Daily Use Cleaning

Use Ceramic Cooktop Cleaner on the glass cooktop. Other creams may not be as effective or may scratch, damage or stain the cooktop surface.

To maintain and protect the surface of your glass cooktop, follow these steps:

1. Before using the cooktop for the first time, clean with a ceramic cooktop cleaner. This helps protect the top and makes cleanup easier.
2. Daily use of ceramic cooktop cleaner will help keep the cooktop looking new.
3. Shake the cleaning cream well. Apply a few drops of cleaner directly to the cooktop.
4. Use a paper towel to clean the entire cooktop surface.
5. Rinse with clear water and use a dry cloth or paper towel to remove all cleaning residue.

NOTE:

DO NOT heat the cooktop until it has been cleaned thoroughly.

CAUTION

- DO NOT use scrub pads or abrasive cleaning pads.
 - They may damage your glass cooktop surface.
- For your safety please wear an oven mitt potholder while cleaning the hot cooking surface.


CLEANING THE GLASS/CERAMIC COOKTOP (cont')

Burned-On Residue

To clean the glass/ceramic cooktop

Step. 1

First remove any burnt-on deposits or spilled food from your glass/ceramic cooking surface with a suitable metal razor scraper (similar to scraping paint off of your windowpanes in your home - it will not damage the decorated cooking surface). Hold the scraper at approximately a 30° angle to the cooktop.

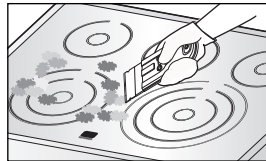


NOTE:

Do not use a dull or nicked blade. For your safety, please wear an oven mitt potholder while using the metal scraper.

Step. 2

When the cooking surface has cooled down apply a few dabs (about the size of a dime) of an approved cleaner in each burner area and work the cleaning cream over the cooktop surface with a damp paper towel as if you were cleaning a window.

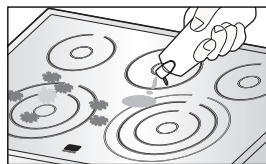

NOTE: Approved cleaners

Weiman CookTop Cleaning Cream
(www.weiman.com)

Cerama Bryte (www.ceramabryte.com)

Golden Ventures Cerama Bryte
Easy-Off 3 in 1 Glass Top Cleaner Spray
(www.easyoff.us).

Step. 3

As a final step, clean with clear water and wipe the cooktop surface with a clean, dry paper towel.



IMPORTANT:


If any sugar or food containing sugar (preserves, ketchup, tomato sauce, jellies, fudge, candy, syrups, chocolate, etc.), a plastic item or kitchen foil accidentally melts on the hot surface of your cooktop, remove the molten material IMMEDIATELY with a metal razor scraper (it will not damage the decorated cooking surface) while the cooking surface is still hot to avoid the risk of damage to the glass-ceramic surface. For your safety please wear an oven mitt potholder while cleaning the hot cooking surface.

Metal Marks and Scratches

1. Be careful not to slide pots and pans across your cooktop. It will leave metal markings on the cooktop surface. These marks are removable using the Ceramic Cooktop Cleaner with the Cleaning Pad for Ceramic Cooktops.
2. If pots with a thin overlay of aluminum or copper are allowed to boil dry, the overlay may leave black discoloration on the cooktop. This should be removed immediately before heating again or the discoloration may be permanent.

CAUTION

- Cookware with rough or uneven bottoms can mark or scratch the cooktop surface.
- Do not slide metal or glass across the cooktop surface.
- Do not use cookware with any dirt build up on bottom.

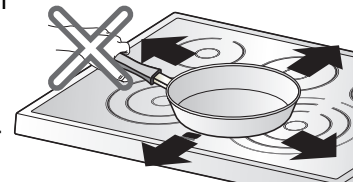

Cooktop Seal

To clean the cooktop seal around the edges of the glass, lay a wet cloth on it for a few minutes, then wipe clean with nonabrasive cleaners.

REMOVING & REPLACING THE LIFT-OFF OVEN DOOR

CAUTION

- Be careful when removing and lifting the door.
- DO NOT lift the door by the handle.
 - The door is very heavy.


To remove the door:

Step. 1

Open the door fully.

Step. 2

Pull the hinge locks up toward the door frame to the unlocked position.

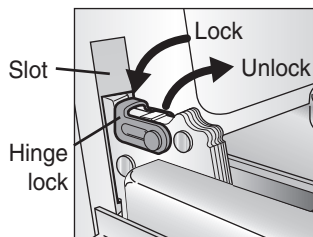


Step. 3

Firmly grasp both sides of the door at the top.

Step. 4

Close door to the door removal position, which is approximately 5 degrees.

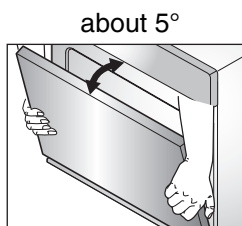

Step. 5

Lift door up and out until the hinge arm is clear of the slot.


To replace the door:

Step. 1

Firmly grasp both sides of the door at the top.

Step. 2

With the door at the same angle as the removal position, seat the indentation of the hinge arm into the bottom edge of the hinge slot. The notch in the hinge arm must be fully seated into the bottom edge of the slot.

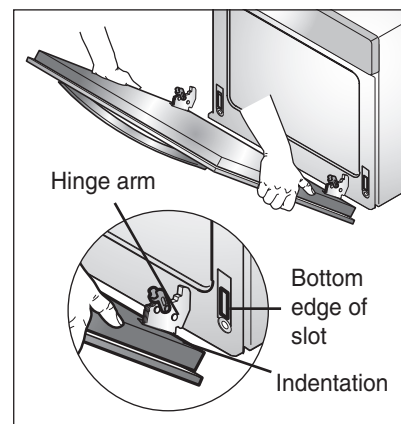


Step. 3

Open the door fully. If the door will not open fully, the indentation is not seated correctly in the bottom edge of the slot.

Step. 4

Push the hinge locks down against the front frame of the oven cavity to the locked position.

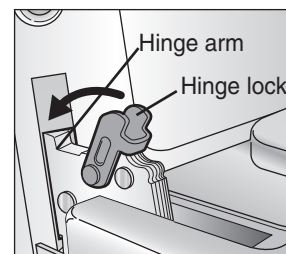

Step. 5

Close the oven door.

DOOR CARE INSTRUCTIONS

- Most oven doors contain glass that can break.

Read the following recommendations:

1. Do not close the oven door until all the oven racks are fully in place.
2. Do not hit the glass with pots, pans, or any other object.
3. Scratching, hitting, jarring, or stressing the glass may weaken its structure causing an increased risk of breakage at a later time.

REMOVING & REPLACING THE LOWER OVEN DRAWER




⚠ WARNING

- Turn **POWER OFF** before removing the Lower Oven Drawer.
 - Failure to do so can result in severe personal injury, death, or electrical shock.

Most cleaning can be done with the drawer in place. However, the drawer may be removed if further cleaning is needed. Use warm water to thoroughly clean.

To remove the drawer:

- 1 Open the drawer to the fully opened position.
- 2 Remove the 2 screws (right and left sides). (refer to the illustration)
- 3 Locate glide lever on each side of drawer, push down on the left glide lever and pull up on the right glide lever.
- 4 Pull the Lower Oven away from the range.

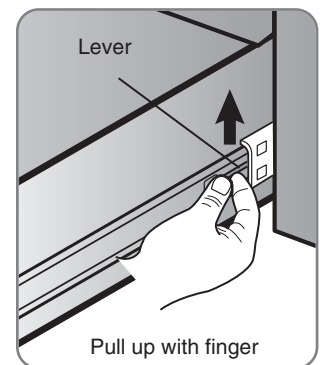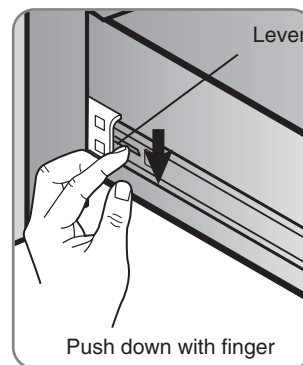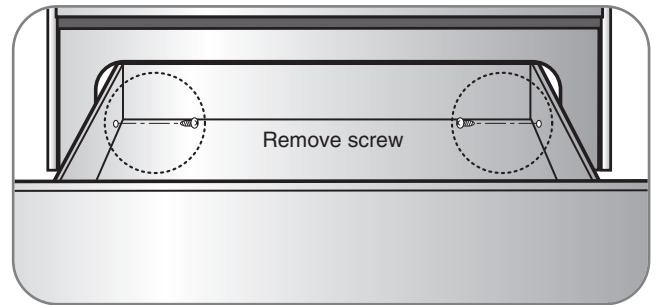

To replace the drawer:

- 1 Replace shield on the right glide of the drawer body.
- 2 Pull the bearing glides to the front of the chassis glide.
- 3 Align the glide on each side of the drawer with the glide slots on the range.
- 4 Push the drawer into the range until levers “click” (approximately 2 inch). Pull the drawer open again to seat bearing glides into position.

If you do not hear the levers “click” or the bearing glides do not feel seated remove the drawer and repeat steps 2-4.

This will minimize possible damage to the bearing glides.
- 5 Replace the two screws.

TROUBLESHOOTING

BEFORE CALLING FOR SERVICE

Before you call for service, review this list. It may save you time and expense. The list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Problem	Possible Causes / Solutions									
Range is not level.	<ul style="list-style-type: none"> • Poor installation. Place oven rack in center of oven. Place a level on the oven rack. Adjust leveling legs at base of range until the oven rack is level. • Be sure floor is level and strong and stable enough to adequately support range. • If floor is sagging or sloping, contact a carpenter to correct the situation. • Kitchen cabinet alignment may make range appear unlevel. Be sure cabinets are square and have sufficient room for range clearance. 									
Cannot move appliance easily. Appliance must be accessible for service.	<ul style="list-style-type: none"> • Cabinets not square or are built in too tightly. Contact builder or installer to make appliance accessible. • Carpet interferes with range. Provide sufficient space so range can be lifted over carpet. 									
Oven control beeps and displays any F code error.	<ul style="list-style-type: none"> • Electronic control has detected a fault condition. Touch CLEAR/OFF to clear the display and stop beeping. Reprogram oven. If fault recurs, record fault number. Touch CLEAR/OFF and contact a Service agent. 	<table border="1"> <thead> <tr> <th data-bbox="1141 912 1219 944">CODE</th> <th data-bbox="1219 912 1536 944">CAUSE</th> </tr> </thead> <tbody> <tr> <td data-bbox="1141 944 1219 981">F-3</td> <td data-bbox="1219 944 1536 981">Shorted keypad</td> </tr> <tr> <td data-bbox="1141 981 1219 1049">F-10</td> <td data-bbox="1219 981 1536 1049">Door locking system don't operate</td> </tr> <tr> <td data-bbox="1141 1049 1219 1085">F-11</td> <td data-bbox="1219 1049 1536 1085">No heating</td> </tr> </tbody> </table>	CODE	CAUSE	F-3	Shorted keypad	F-10	Door locking system don't operate	F-11	No heating
CODE	CAUSE									
F-3	Shorted keypad									
F-10	Door locking system don't operate									
F-11	No heating									
Surface units will not maintain a rolling boil or cooking is not fast enough	<ul style="list-style-type: none"> • Improper cookware being used. <ul style="list-style-type: none"> - Use pans which are flat and match the diameter of the surface unit selected. • In some areas, the power (voltage) may be low. <ul style="list-style-type: none"> - Cover pan with a lid until desired heat is obtained. 									
Surface units do not work properly	<ul style="list-style-type: none"> • A fuse in your home may be blown or the circuit breaker tripped. <ul style="list-style-type: none"> - Replace the fuse or reset the circuit breaker. • Cooktop controls improperly set. <ul style="list-style-type: none"> - Check to see the correct control is set for the surface unit you are using. 									
Surface unit stops glowing when changed to a lower setting	<ul style="list-style-type: none"> • This is normal. The unit is still on and hot. 									
Areas of discoloration on the cooktop	<ul style="list-style-type: none"> • Food spillovers not cleaned before next use. <ul style="list-style-type: none"> - See Cleaning the glass cooktop section. • Hot surface on a model with a light-colored cooktop. <ul style="list-style-type: none"> - This is normal. The surface may appear discolored when it is hot. This is temporary and will disappear as the glass cools. 									
Frequent cycling on and off of surface units	<ul style="list-style-type: none"> • This is normal. <ul style="list-style-type: none"> - The element will cycle on and off to maintain the heat setting. 									

TROUBLESHOOTING

BEFORE CALLING FOR SERVICE (cont')

Problem	Possible Causes / Solutions
Oven will not work	<ul style="list-style-type: none"> • Plug on range is not completely inserted in the electrical outlet. <ul style="list-style-type: none"> - Make sure electrical plug is plugged into a live, properly grounded outlet. • A fuse in your home may be blown or the circuit breaker tripped. <ul style="list-style-type: none"> - Replace the fuse or reset the circuit breaker. • Oven controls improperly set. <ul style="list-style-type: none"> - See the Using the oven section. • Oven too hot. <ul style="list-style-type: none"> - Allow the oven to cool to below locking temperature.
Appliance does not operate.	<ul style="list-style-type: none"> • Make sure cord is plugged correctly into outlet. Check circuit breakers. • Service wiring is not complete. Contact your appliance Servicer for assistance. • Power outage. Check house lights to be sure. Call your local electric company for service.
Oven control displays PF message.	<ul style="list-style-type: none"> • The PF message will appear whenever there has been a power interruption to the appliance. To clear the PF message touch CLEAR/OFF control pad and be sure to reset the clock with the correct time of day.
Oven light does not work.	<ul style="list-style-type: none"> • Replace or tighten bulb. See Changing Oven Light section in this Owner's manual.
Oven smokes excessively during broiling.	<ul style="list-style-type: none"> • Control not set properly. Follow instructions under Setting Oven Controls. • Meat too close to the element. Reposition the rack to provide proper clearance between the meat and the element. Preheat broil element for searing. • Meat not properly prepared. Remove excess fat from meat. Cut remaining fatty edges to prevent curling. • Insert on broiler pan wrong side up and grease not draining. Always place grid on the broiler pan with ribs up and slots down to allow grease to drip into pan. • Grease has built up on oven surfaces. Regular cleaning is necessary when broiling frequently. <ul style="list-style-type: none"> Old grease or food spatters cause excessive smoking.
Food does not bake or roast properly	<ul style="list-style-type: none"> • Oven controls improperly set. <ul style="list-style-type: none"> - See the using the oven section. • Rack position is incorrect or the rack is not level. <ul style="list-style-type: none"> - See the using the oven section. • Incorrect cookware or cookware of improper size being used. <ul style="list-style-type: none"> - See the using the oven section. • Oven sensor needs to be adjusted. <ul style="list-style-type: none"> - See the adjusting your oven temperature in option section.
Food does not broil properly	<ul style="list-style-type: none"> • Oven controls improperly set. <ul style="list-style-type: none"> - Make sure you touch the BROIL pad. • Improper rack position being used. <ul style="list-style-type: none"> - See the Broiling Guide, page 27. • Cookware not suited for broiling. <ul style="list-style-type: none"> - Use the broiling pan and grid that came with your range.

TROUBLESHOOTING

BEFORE CALLING FOR SERVICE (cont')

Problem	Possible Causes / Solutions
Food does not broil properly	<ul style="list-style-type: none"> • Aluminum foil used on the the broiling pan and grid has not been fitted properly and slit as recommended. <ul style="list-style-type: none"> - See the Using the Oven section. • In some areas the power voltage may be low. <ul style="list-style-type: none"> - Preheat the broil element for 5-7 minutes - See the Broiling Guide, page 27.
Oven temperature too hot or too cold	<ul style="list-style-type: none"> • Oven Sensor needs to be adjusted. <ul style="list-style-type: none"> - See the adjusting your oven Temperature in option section.
Scratches or abrasions on cooktop surface	<ul style="list-style-type: none"> • Coarse particles such as salt or sand between cooktop and utensils can cause scratches. Be sure cooktop surface and bottoms of utensils are clean before usage. Small scratches do not affect cooking and will become less visible with time. • Cleaning materials not recommended for ceramic-glass cooktop have been used. See Cleaning The Glass Cooktop in the MAINTENANCE section, page 42-43. • Cookware with rough bottom has been used. Use smooth, flat-bottomed cookware.
Metal marks	<ul style="list-style-type: none"> • Scraping of metal utensils on cooktop surface. Do not slide metal utensils on cooktop surface. Use a ceramic-glass cooktop cleaning creme to remove the marks. See Cleaning The Glass Cooktop in the MAINTENANCE section, page 42-43.
Brown streaks or specks	<ul style="list-style-type: none"> • Boilovers are cooked onto surface. Use the blade scraper to remove soil. See Cleaning The Glass Cooktop in the MAINTENANC section, page 42-43.
Areas of discoloration with metallic sheen	<ul style="list-style-type: none"> • Mineral deposits from water and food. Remove using a ceramic-glass cooktop cleaning creme. Use cookware with clean, dry bottoms.
Oven will not self clean	<ul style="list-style-type: none"> • The oven temperature is too high to set a self clean operation. <ul style="list-style-type: none"> - Allow the range to cool and reset the controls. • Oven controls improperly set. <ul style="list-style-type: none"> - See the using the self cleaning oven section. • A self clean cycle cannot be started if the oven lockout feature is active.
“Crackling” or “popping” sound	<ul style="list-style-type: none"> • This is the sound of the metal heating and cooling during both the cooking and Self Clean functions. <ul style="list-style-type: none"> - This is normal.
Fan noise	<ul style="list-style-type: none"> • A convection fan may automatically turn on and off. <ul style="list-style-type: none"> - This is normal.
Oven racks are difficult to slide	<ul style="list-style-type: none"> • Apply a small amount of vegetable oil to a paper towel and wipe the edges of the ovenracks with the paper towel.
Convection Fan stops	<ul style="list-style-type: none"> • Convection fan stops during a convection bake cycle. <ul style="list-style-type: none"> - This is normal and is done to allow for more even heating during the cycle. This is not a failure of the range and should be considered normal operation.

TROUBLESHOOTING

BEFORE CALLING FOR SERVICE (cont')

Problem	Possible Causes / Solutions
Excessive smoking during a self clean cycle	<ul style="list-style-type: none"> • Excessive soil. <ul style="list-style-type: none"> - Press the CLEAR/OFF pad. Open the windows to rid the room of smoke. Wait until the self clean mode is cancelled. Wipe up the excess soil and reset the clean.
Oven door do not open after a self clean cycle	<ul style="list-style-type: none"> • Oven is too hot. <ul style="list-style-type: none"> - Allow the oven to cool below locking temperature.
Oven not clean after a self clean cycle	<ul style="list-style-type: none"> • Oven controls not properly set. <ul style="list-style-type: none"> - See the Self Clean section, page 38. • Oven was heavily soiled. <ul style="list-style-type: none"> - Clean up heavy spillovers before starting the clean cycle. Heavily soiled ovens may need to self clean again or for a longer period of time.
CLEAN and door flash in the display	<ul style="list-style-type: none"> • The self clean cycle has been selected but the door is not closed. <ul style="list-style-type: none"> - Close the oven door.
LOCKED is on in the display when you want to cook	<ul style="list-style-type: none"> • The oven door is locked because the temperature inside the oven has not dropped below the locking temperature. <ul style="list-style-type: none"> - Press the CLEAR/OFF pad. Allow the oven to cool.
Burning or oily odor emitting from the vent	<ul style="list-style-type: none"> • This is normal in a new oven and will disappear in time. <ul style="list-style-type: none"> - To speed the process, set a self clean cycle for a minimum of 3 hours. See the self clean section, page 38.
Oven racks are difficult to slide	<ul style="list-style-type: none"> • The shiny, silver-colored racks were cleaned in a self clean cycle. <ul style="list-style-type: none"> - Apply a small amount of vegetable oil to a paper towel and wipe the edges of the oven racks with the paper towel.
Oven door will unlock after selfclean cycle	<ul style="list-style-type: none"> • Oven interior is still hot. Allow about one hour for the oven to cool after the completion of a self clean cycle. The door can be opened when the LOCK indicator word is not displayed. • The control and door may be locked. See pages 37 to unlock.
Moisture collects on oven window or steam comes from oven vent.	<ul style="list-style-type: none"> • This is normal when cooking foods high in moisture. • Excessive moisture was used when cleaning the window.

LG ELECTRIC OVEN LIMITED WARRANTY – USA

LG Electronics Inc. will repair or replace your product, at LG's option, if it proves to be defective in material or workmanship under normal use, during the warranty period set forth below, effective from the date of original consumer purchase of the product. This limited warranty is good only to the original purchaser of the product and effective only when used in U.S.A.

WARRANTY PERIOD:	HOW SERVICE IS HANDLED:
One Year From the date of the original purchase	Any part of the oven which fails due to a defect in materials or workmanship. During this full one-year warranty , LG will also provide, free of charge , all labour and in-home service to replace the defective part.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. LG WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS, IN CONNECTION WITH THE PRODUCT. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace house fuses or correct house wiring, or to replace owner-accessible light bulbs.
2. Repairs when your appliance is used in other than normal, single-family household use.
3. Pickup and delivery. Your appliance is designed to be repairable in the home.
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, improper installation, acts of God, or use of products not approved by LG Corporation.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Replacement parts or repair labour costs for units operated outside the United States.
7. Any labour costs during the limited warranty period.

This warranty is extended to the original purchaser for products purchased for home use within the USA. In Alaska, the warranty excludes the cost of shipping or service calls to your home.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs or your state's Attorney General.

CUSTOMER ASSISTANCE INFORMATION:

To Prove Warranty Coverage	Retain your Sales Receipt to prove date of purchase. A copy of your Sales Receipt must be submitted at the time warranty service is provided.
To Obtain Nearest Authorized Service Center or Sales Dealer, or to Obtain Product, Customer, or Service Assistance	Call 1-800-243-0000 (Phone answered 24 hours - 365 days a year) and choose the appropriate prompt from the menu; or visit our website at: http://us.lgservice.com .