


Installation Instructions

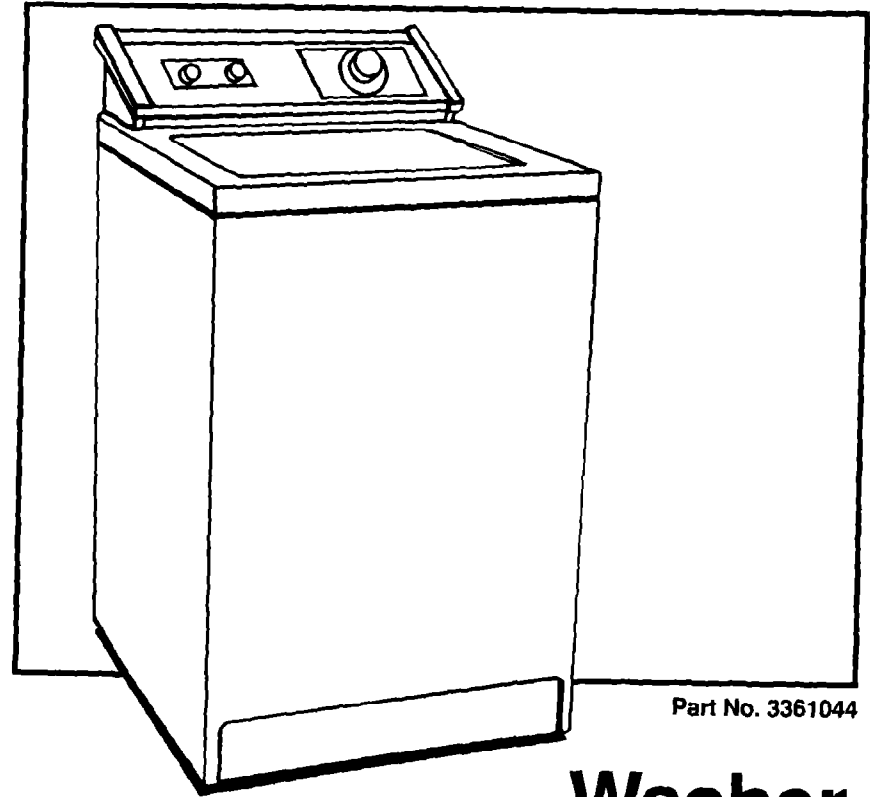

Part No. 3361044

Washer

IMPORTANT:
Read and save
these instructions.

IMPORTANT:

Installer: Leave Installation Instructions with the homeowner.

Homeowner: Keep Installation Instructions for future reference.

Save Installation Instructions for local electrical inspector's use.

Before you start...

Check location where washer will be installed. Proper installation is your responsibility. Make sure you have everything necessary for correct installation.

Grounded electrical outlet is required. See Electrical requirements.

Standpipe drain system: needs 5 cm (2") minimum diameter standpipe with minimum carry-away capacity of 65 liters (14 Imperial gallons) per minute. Top of standpipe must be at least 87 cm (34") high and no higher than 183 cm (72") from bottom of washer. **Do not tape hose into standpipe or close the standpipe completely. An air path is required to prevent siphoning.**

Floor drain system: Requires a siphon break, Part No. 285320, available from authorized distributors.

Untape and open washer lid. Remove all material from washer.

Hot and cold water faucets: Must be within 1.2 meters (4') of the back of the washer and provide water pressure 34 to 690 KPa (5-100 PSI).

Laundry tub drain system: Needs a 75 liter (16.5 Imperial gallon) laundry tub. Top of tub must be at least 87 cm (34") high and no higher than 183 cm (72") from bottom of washer.

If a longer drain hose is needed, a drain hose (Part No. 388423) and hose extension kit (Part No. 285442) are available from authorized parts distributors at additional cost. If drain hose must be shortened, use kit (Part No. 285442).

Important: Observe all governing codes and ordinances.

Water heater: Set to deliver 60°C (140°F) water to the washer.

Level floor: Maximum slope under entire washer - 2.5 cm (1").

Support: Floor must be sturdy enough to support washer weight of 143 kilograms (315 lb).

SEE RECESSED AREA INSTRUCTIONS ON PANEL A.

CAUTION

Product Damage

Do Not store or operate washer below 32°F (0°C) (some water may remain in washer).


See Use & Care Guide for "Winterizing" information.

Failure to follow above may result in product damage.


Tools needed for installation:



Parts supplied for installation:

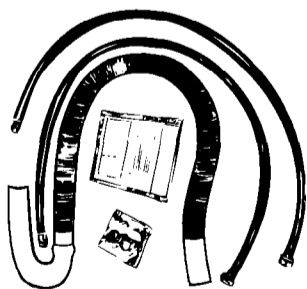

Remove parts from packages. Check that all parts were included.

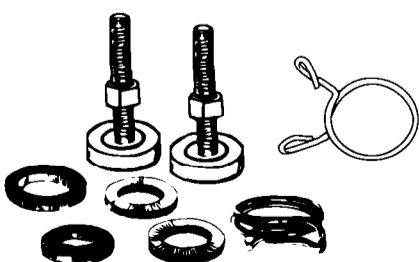

1 small clamp
1 literature package
1 drain hose
1 hose clamp
2 inlet hoses

4 flat water hose washers
2 front-leveling legs with nuts

Electrical requirements

120-volt, 60-Hz, AC-only, 15 or 20 ampere fused electrical supply is required. (Time-delay fuse or circuit breaker is recommended.) It is recommended that a separate circuit serving only this appliance be provided.

Grounding method

WARNING

Electrical Shock Hazard

- **Electrical ground is required on this appliance.**
- **Improper connection of the equipment-grounding conductor can result in fire, electrical shock or other personal injury.**
- **Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.**
- **Do Not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.**
- **Do Not use an extension cord with this appliance.**
- **Do Not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in an electrical shock.**

Failure to follow these instructions could result in a fire, electrical shock or other personal injury.

Recommended grounding method

For your personal safety, this appliance must be grounded. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong grounding-type wall receptacle, grounded in accordance with the appropriate Canadian Electrical Codes, and local codes and ordinances. If a mating wall receptacle is not available, it is the obligation of the customer to have a properly grounded 3-prong wall receptacle installed by a qualified electrician. See Figure 1.


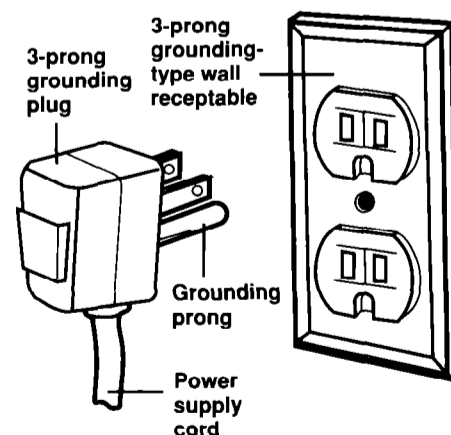


Figure 1


Now start...

With washer in laundry area.

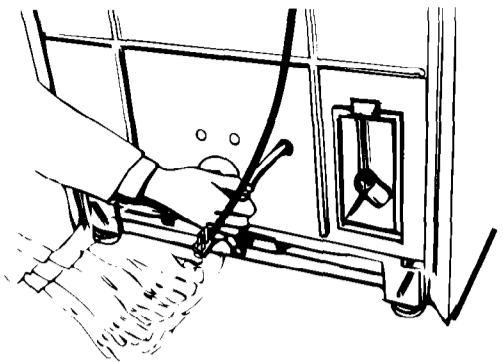

Pull the strap completely out of the washer.


1. Read, then remove label that covers yellow shipping strap and power supply cord. Pull to completely remove the shipping strap with 2 cotterpins from the inside of the washer. The power cord is attached to the shipping strap.

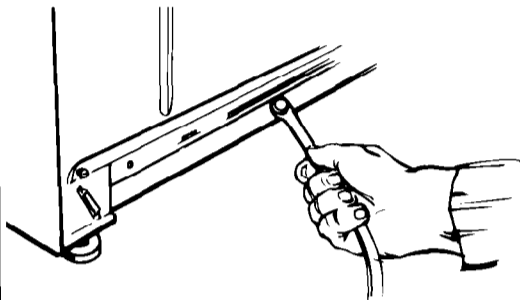

Pull firmly to remove the other end of the shipping strap from the back of the washer. The shipping strap plug must be completely removed from the washer for the self-leveling legs to be released.


Save the shipping strap for use in Step 16.

Use new hoses and washers that came with your washer.

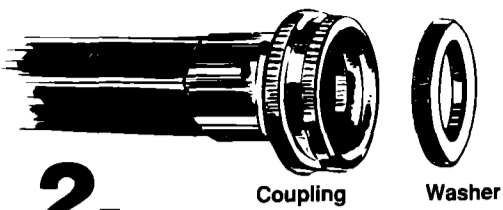

2.

Insert a flat washer into each end of the inlet hoses. Check that washers are firmly seated in couplings.

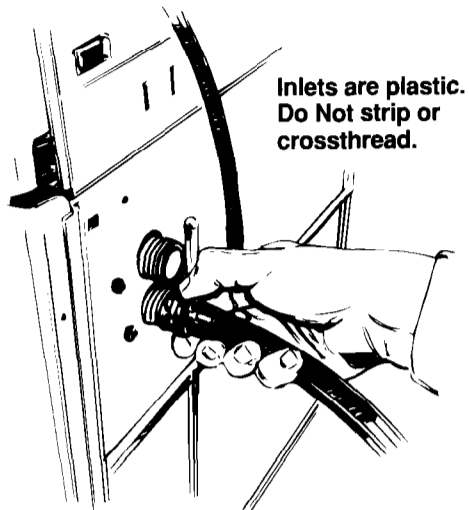


Inlets are plastic. Do Not strip or crossthread.

3.

Attach hose to bottom inlet valve opening first; then attach second hose to top inlet. Tighten couplings by hand. Then use pliers to make an additional two-thirds turn.


IMPORTANT: THIS PROCEDURE MUST BE FOLLOWED TO ASSURE PROPER INSTALLATION.

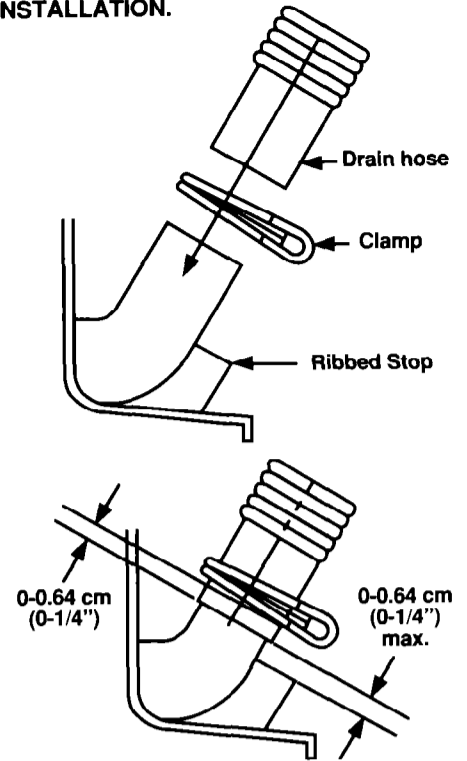


4. Install the drain hose following these instructions:

1. Wet the inside end of the drain hose with tap water. **DO NOT USE ANY OTHER LUBRICANT.**
2. Squeeze ears of clamp with pliers to open and place clamp over the end of the drain hose.
3. While holding clamp open, work end of drain hose onto drain connector until drain hose is within 0.64 cm (1/4") of ribbed stop.
4. When the end of the drain hose is within 0.64 cm (1/4") of ribbed stop, position clamp on drain hose so that the bottom of the clamp is 0.64 cm (1/4") from the end of the hose, release pliers.


Literature rack not supplied with all models.

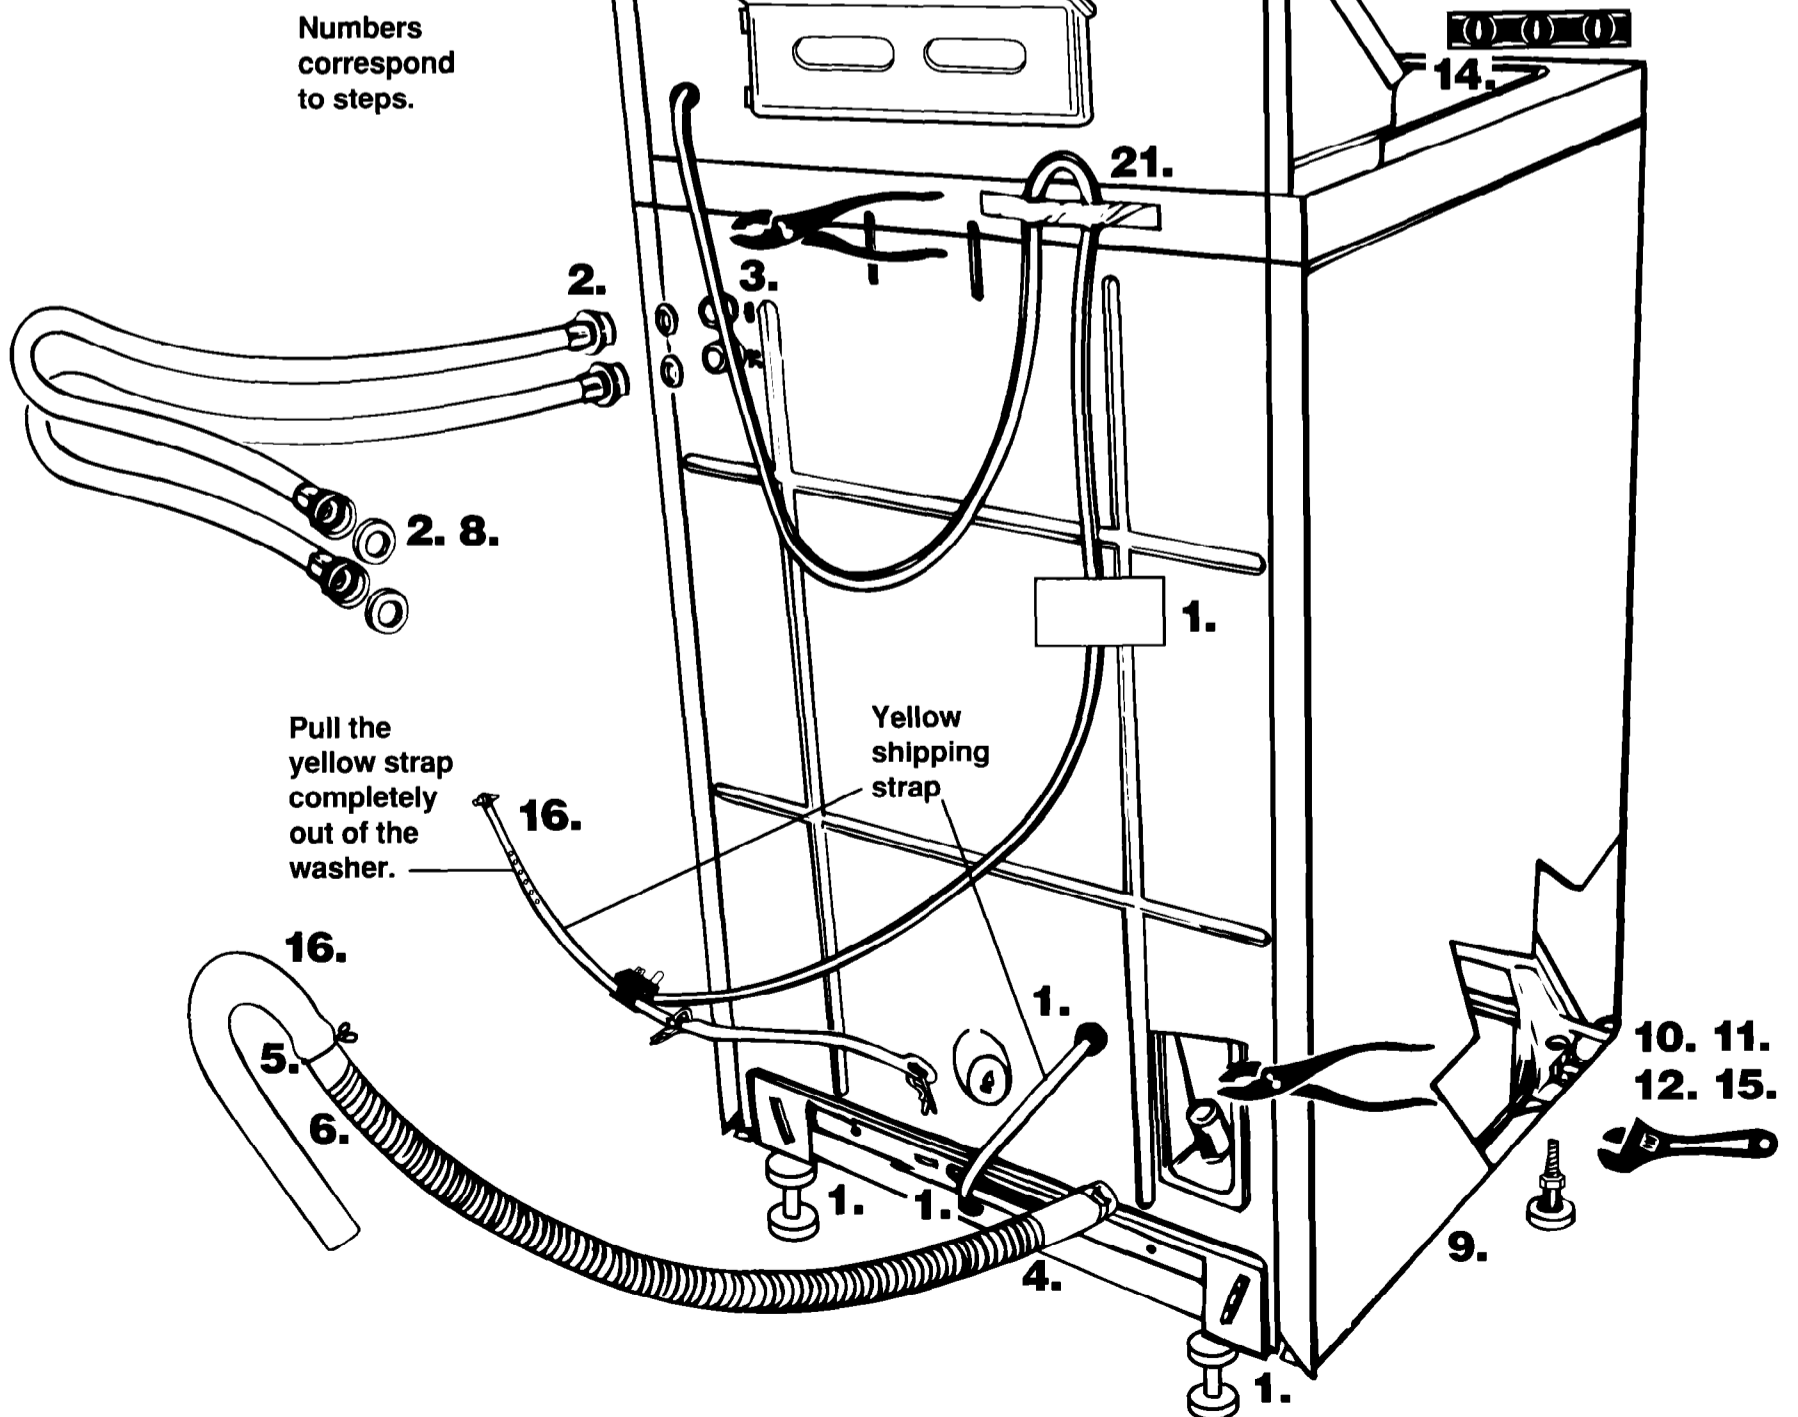


Numbers correspond to steps.

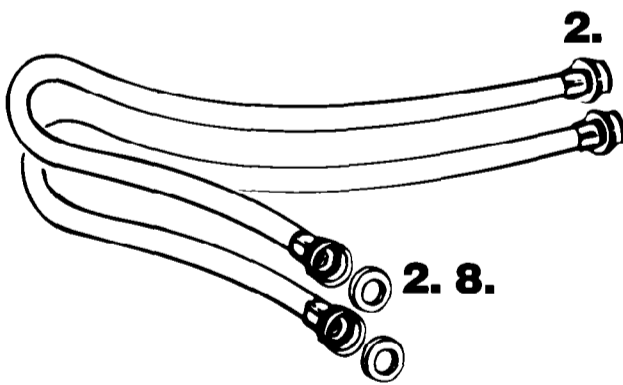

Pull the yellow strap completely out of the washer.

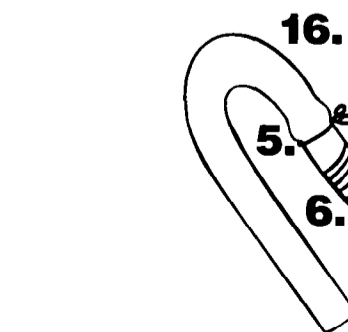

5. Open clamp and slide over "hook" end of drain hose to secure the rigid and corrugated sections together.

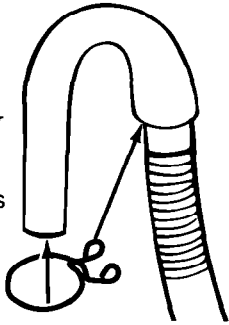

CAUTION

Floor Damage
Slide washer onto cardboard or hardboard before moving across floor.
Failure to do so may cause damage to floor covering.


6. Move washer close to final position. Put "hook" end of drain hose into laundry tub or standpipe. Check for proper length of drain hose.

DO NOT FORCE EXCESS LENGTH OF DRAIN HOSE DOWN THE STANDPIPE. THIS COULD CAUSE SIPHONING.




7. Before attaching water inlet hose, run water through both faucets into a bucket. This will get rid of particles in the water lines that might clog hoses. Mark which is the hot water faucet.

8. Attach bottom hose (inlet marked "H") to hot water faucet. Attach top hose (inlet marked "C") to cold water faucet. Tighten couplings to faucets by hand, then use pliers to make final two-thirds turn.

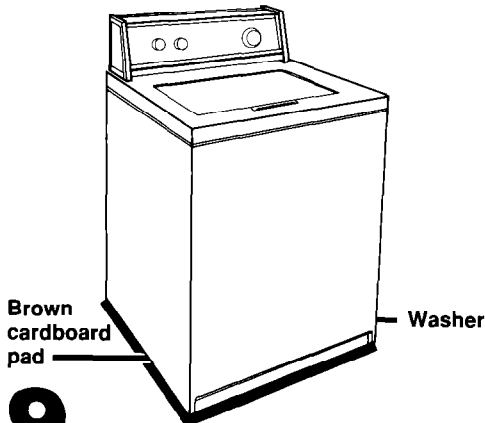


9. Read before removing brown cardboard pad (not supplied with all models).

- Tilt washer back on rear feet.
- Pull brown cardboard pad down and away from bottom of machine.
- Firmly grip brown cardboard pad and pull out to remove.

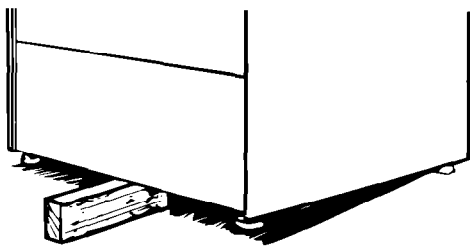

10. Carefully tilt washer backward until front of washer is 7.5-10 cm (3-4 inches) off of floor. Insert piece of wood as brace.

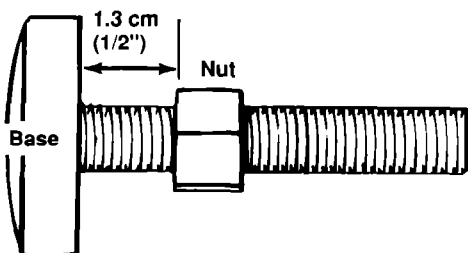

11. Use legs and nuts from parts package. Screw nut down to within 1.3 cm (1/2") of base.

12.


Insert legs into correct holes at each front corner of washer until nuts touch washer. Do not tighten nuts until Step 15.

13.

Tilt washer backward and remove wood block. Gently lower washer to floor.


Move washer to its final location.

Remove cardboard or hardboard from under washer.

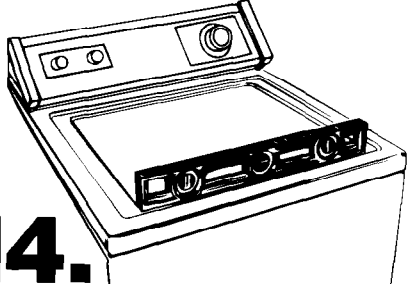

14.

Tilt washer forward, raising back legs 2.5 cm (1") off of floor to adjust rear self-leveling legs. Gently lower washer to floor. Check levelness at the washer front and from front to back on each side, using a carpenter's level.

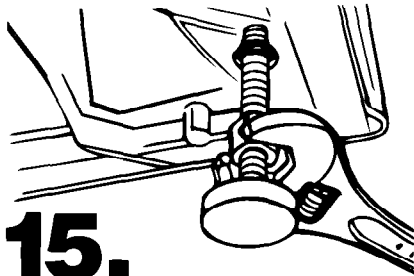


15.

If washer is not level, adjust the front legs up or down. Make final check with level.

When washer is level, use wrench to turn nuts on front legs up tightly against washer base. If nuts are not tight against washer base, the washer may vibrate.


CAUTION

Property Damage
Secure the drain hose to the tub or standpipe with the shipping strap removed from the back of the washer.
Failure to properly secure drain hose could result in water damage.

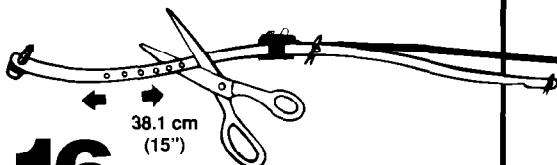


16. After strap has been removed from washer, measure and mark a point approximately 38.1 cm (15") from the plug end of the shipping strap. Cut the shipping strap at this point. Remove power supply cord plug from strap.

Check that hose is not twisted or kinked and is securely in place.

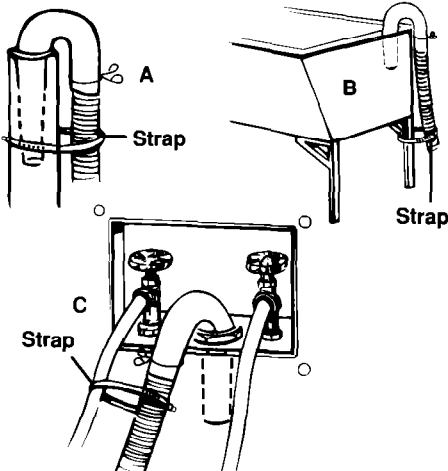

Put "hook" end of drain hose in tub or standpipe. Tightly wrap the shipping strap around the drain hose and tub or standpipe or inlet hose as shown in Figures A-C. Push plug into the nearest hole in the shipping strap.

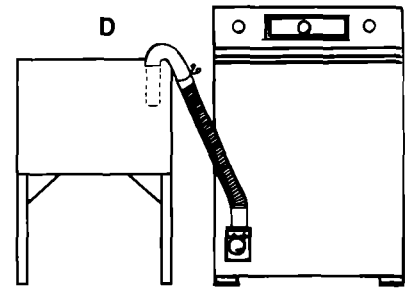


If drain hose cannot be strapped in place, it must be of exact length so the "hook" end is held tightly over the edge of the tub or standpipe. See Figure D.

If a longer drain hose is needed, drain hose (Part No. 388423) and hose extension kit (Part No. 285442) are available from authorized parts distributors. If drain hose must be shortened, use hose kit (Part No. 285442).

Note: If washer is moved to adjust drain hose, the washer must be leveled again. Repeat Steps 14-15. Place cardboard under the washer and carefully move washer to avoid damaging floor covering.

17.

CHECK ELECTRICAL REQUIREMENTS. BE SURE YOU HAVE CORRECT ELECTRICAL SUPPLY AND RECOMMENDED GROUNDING METHOD.

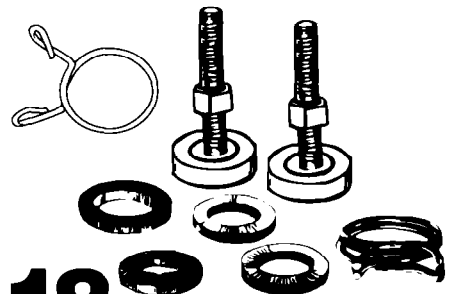


18.

Check that all parts are now installed. See parts list, Panel B. If there is an extra part, go back through steps to see which step was skipped.

19.

Turn on water faucets and check for leaks. Tighten couplings if there is leaking. Do Not overtighten, this could cause faucet damage.

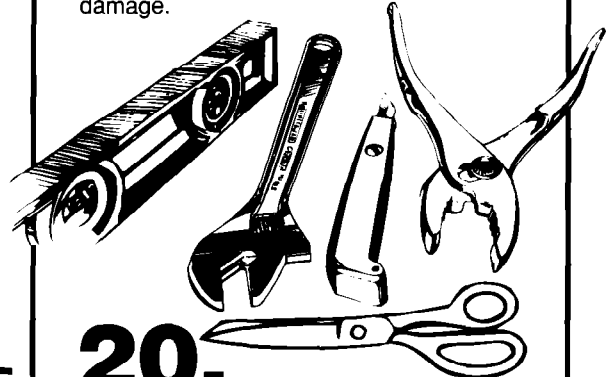

20.

Check that you have all of your tools. Check that the shipping strap with 2 cotterpins and plug was removed from the back of the washer and used to secure the drain hose.

21.

Untape power supply cord and plug into grounded outlet.

22.

Take a few minutes and read the Use and Care Guide to fully understand your new washer. Now start the washer and allow it to complete the regular cycle. (Literature rack not supplied with all models.)

You have successfully installed your new washer. To get the most efficient use from your new washer, read your Use and Care Guide.

Congratulations!

Keep Installation Instructions and Guide. The instructions will make reinstalling your washer in another home as easy as the first installation.

Recessed area instructions.

This washer may be installed in a recessed area or closet.


The installation spacing is the minimum allowable. Additional spacing should be considered for ease of installation and servicing.

If closet door is installed, the minimum air openings in top and bottom are required. Louvered doors with air openings in top and bottom are acceptable.

Companion appliance spacing should be considered.

If you need assistance...

Call your dealer or local authorized service company. When you call, you will need the model number and serial number. Both numbers can be found on the serial/rating plate located under the washer lid and on the top of the washer.

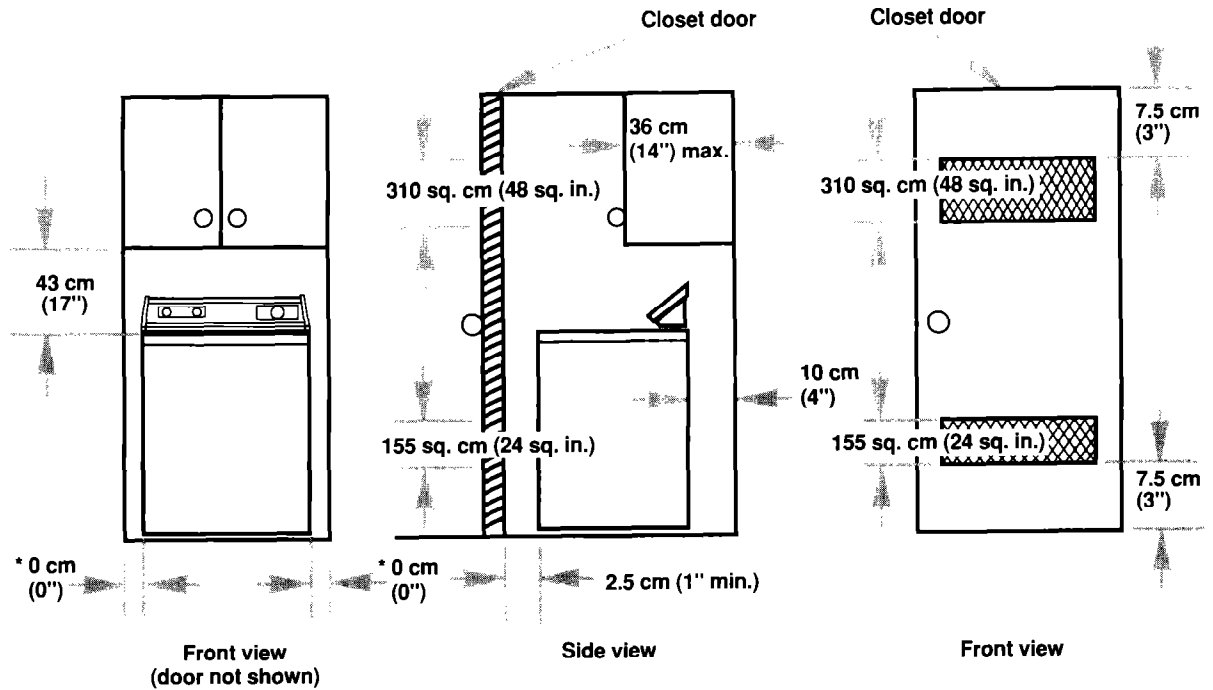

* Additional clearances for wall, door and floor moldings may be required.

Minimum installation spacing