


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



# Grand Hall CCH07A090 Owner's Manual

**[Shop genuine replacement parts for Grand Hall  
CCH07A090](#)**

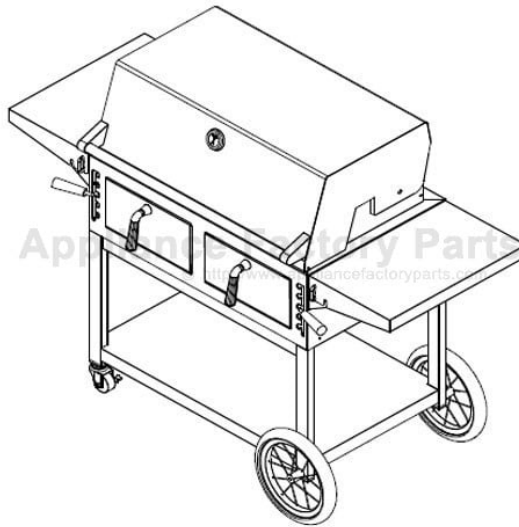

**[Find Your Grand Hall Grill Parts - Select From 203 Models](#)**


----- Manual continues below -----



## OPERATOR'S MANUAL

### Charcoal Grill

MODEL CCH07A090

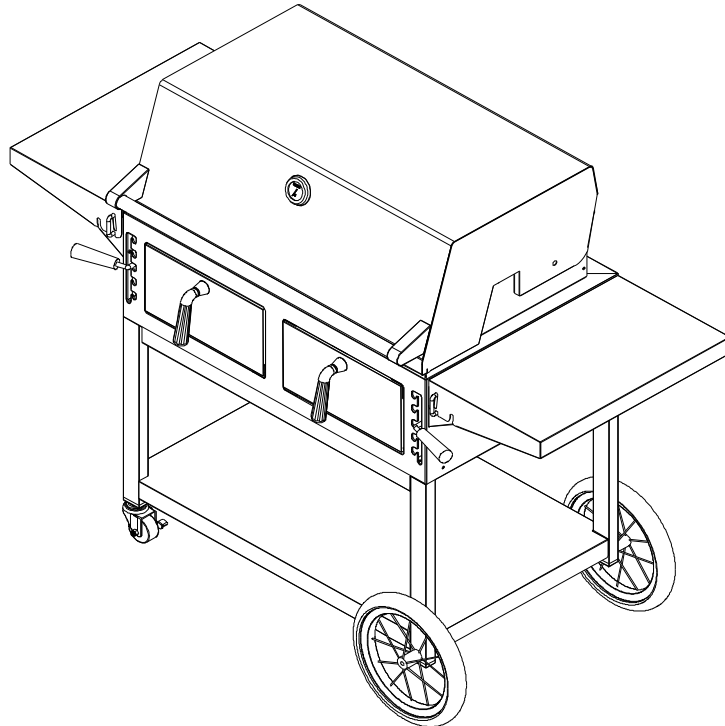

#### FREE HELP FROM THE GRILL EXPERTS

At Grand Hall we're the experts on this product and trained to help you with:

- Assembly Questions
- Grill Operation
- Replacement of Damaged or Missing parts

visit [www.grandhall.com](http://www.grandhall.com) or call:

1-877-934-7455

Monday - Friday 8:00am-4:30pm CST

#### IMPORTANT:

• **NOTE TO ASSEMBLER/INSTALLER:**

Leave this manual with the consumer.

• **NOTE TO CONSUMER:**

Keep this manual for future reference.

• **RECORD YOUR SERIAL#** \_\_\_\_\_

(see silver CSA label on main body of grill)



#### WARNING



- Whether this grill was assembled by you or someone else, you must read this entire manual before using your grill to ensure the grill is properly assembled and installed.
- Obtain assistance from another person when handling the large or heavy pieces.
- Some parts may contain sharp edges, wear protective work gloves if necessary.
- Combustion byproducts produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
- THIS APPLIANCE IS DESIGNED FOR OUTDOOR USE ONLY
- **CARBON MONOXIDE HAZARD** - Burning charcoal inside gives off carbon monoxide without odor that can kill you. NEVER burn charcoal inside homes, vehicles or tents.
- This product contains chemicals known to the State of California to cause birth defects or other reproductive harm.

## Table of Contents

Primary Safety Warnings .....	1-2
Part Diagrams and Lists .....	3-6
Assembly Instructions.....	7-12
Use & Care Instructions:	
Cleaning and Maintenance .....	13
Warranty Terms.....	Back Cover



## WARNING



- This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.
- Read and follow all warnings and instructions before assembling and using the appliance.
- Follow all warnings and instructions when using the appliance.
- Keep this manual for future reference.



## WARNING



Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliances.



## WARNING



Use your grill at least 3 feet away from any wall or surface. Use your grill at least 3 feet away from combustible objects that can melt or catch fire (such as vinyl or wood siding, fences and overhangs) or sources of ignition including pilot lights on water heaters and live electrical appliances.



## DANGER

 


- Never allow children to operate your grill. Do not allow children or pets to play near your grill.
- In the event of rain, move grill to a **covered** area.
- Use your grill on a level, stable surface in an area clear of combustible materials.
- Most surfaces on this grill are hot when in use. Always wear protective clothing to prevent injury.
- Do not leave grill unattended when in use.
- Do not move the appliance when **in use**.
- Allow the grill to cool before moving or storing.
- Do not use your grill as a heater.
- Do not use water to extinguish the coals. Close the lid and vents to cut off the air flow to the coals.
- This grill is not intended to be installed in or on recreational vehicles and/or boats.
- Never substitute gasoline, kerosene or alcohol for charcoal starter. In some states, the use of charcoal starter is prohibited by law. In this case, paraffin-based starter cubes can be **substituted** for charcoal starter fluid. Never use charcoal starter fluid with an electric starter.


## Hardware Pack Parts List for CCH07A090

PART #	PART DESCRIPTION	QTY	PURPOSE OF PART
P06002012A	Hardware Pack	1	For use in assembly
S112G04061	Phillips Head Screw 1/4"x3/8"	16	Installs Cart Legs
P05515015L	Wrench	1	Tightens Casters
S411M10221	Plain Washer M10.5	2	Installs into Wheel Axle
S112G04061	Phillips Head Screw 1/4"x3/8"	4	Installs Grease/Ash Tray Bracket
		8	Installs Grease/Ash Tray Tracks
S182G04081	Pan Head with Cross Recess Screw 1/4"x1/2"	13	Installs Grill Bowl
P05515016B	Hex Key Wrench	1	Tightens Hex Socket Set Screws
S112G04081	Phillips Head Screw 1/4"x1/2"	8	Installs Side Shelves
S112G03061	Phillips Head Screw 3/16"x3/8"	6	Assembles Grease/Ash Tray Handle


## Hardware Pack Diagram for CCH07A090



 Phillips Head Screw 1/4"x3/8"  
Qty. 28  
Part # S112G04061



 
Pan Head with Cross Recess Screw 1/4"x1/2"  
Qty. 13  
Part # S182G04081




Phillips Head Screw 1/4"x1/2"  
Qty. 8  
Part # S112G04081



Phillips Head Screw 3/16"x3/8"  
Qty. 6  
Part # S112G03061

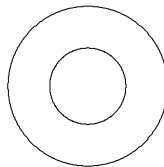

Plain Washer M10.5  
Qty. 2  
Part # S411M10221

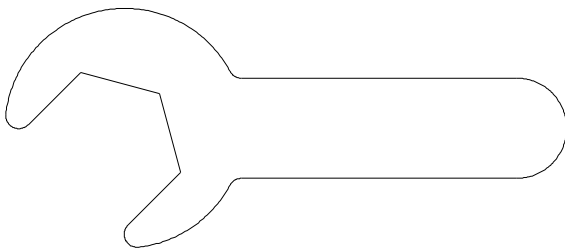


Wrench  
Qty. 1  
Part # P05515015L



Hex Key Wrench  
Qty. 1  
Part # P05515016B

# Parts Diagram for Model CCH07A090

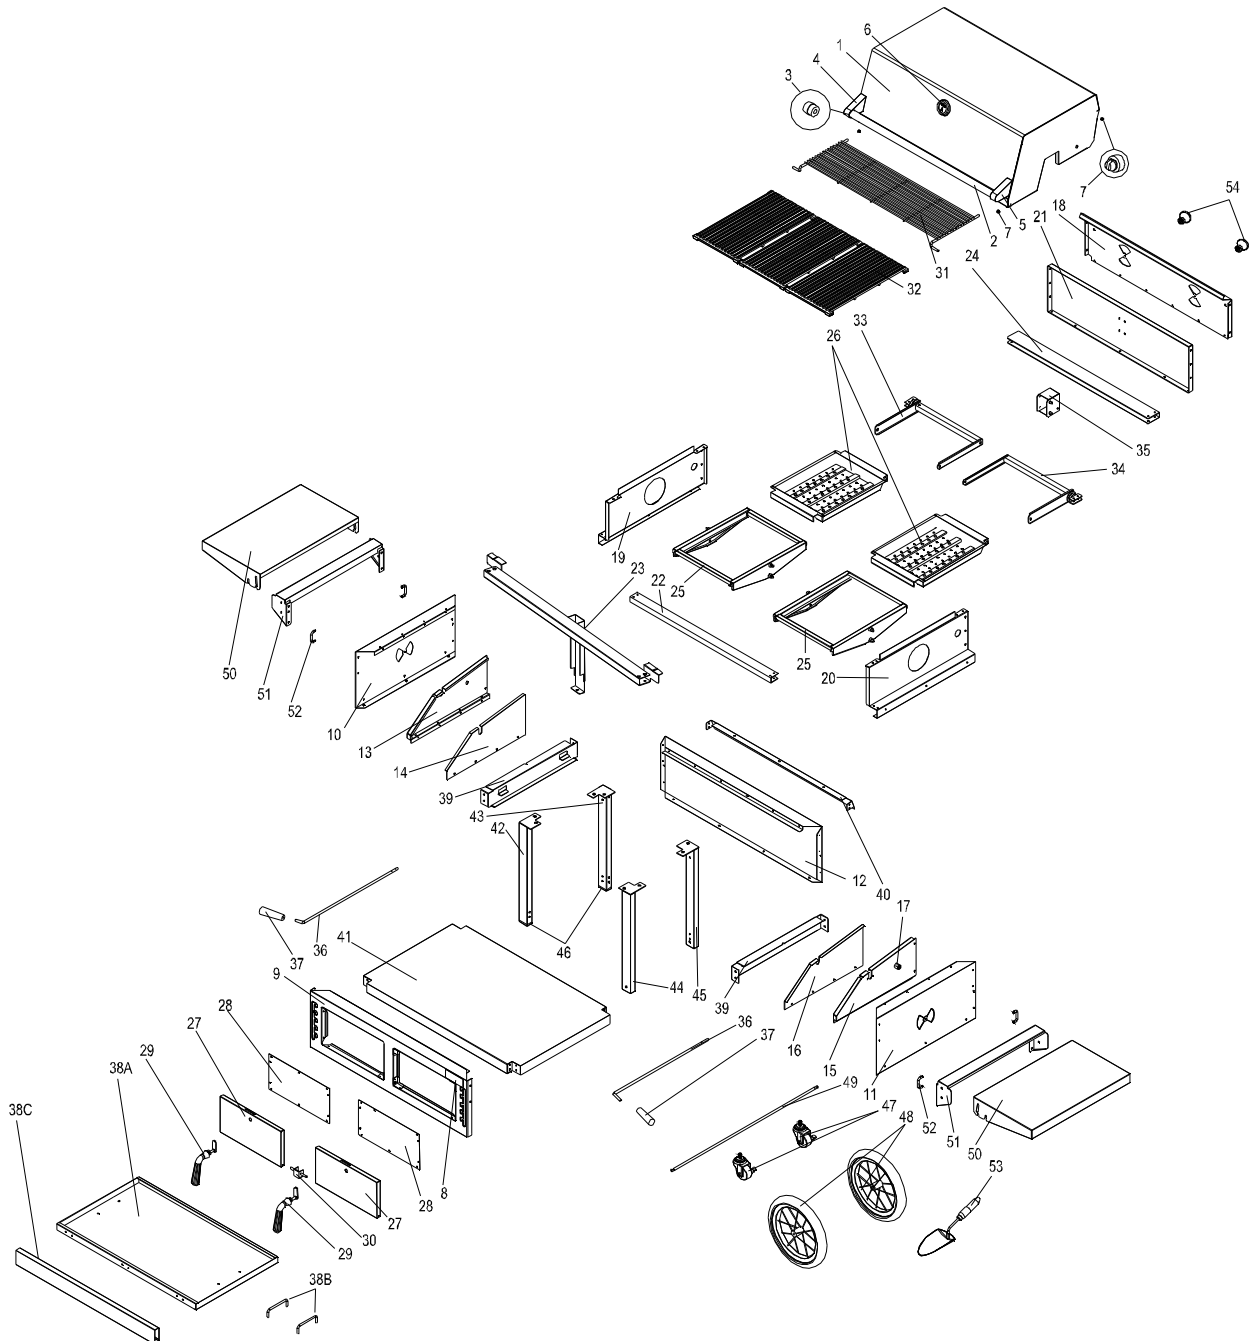

## Parts List for Model CCH07A090

KEY	DESCRIPTION	PART#	QTY
1	Lid Assembly	Y0110035	1
2	Lid Handle	P00205005B	1
3	Lid Handle Heat-Insulating Spacer	P06801002A	2
4	Lid Handle Bracket, Left	P00301016E	1
5	Lid Handle Bracket, Right	P00302016E	1
6	Temperature Gauge	P00601171A	1
7	Protective Pad	P05518002I	4
8	Name Plate	P00407010D	1
9	Bowl Frame Panel, Front	P0073821FC	1
10	Bowl Frame Panel, Left	P0072019FC	1
11	Bowl Frame Panel, Right	P0072119FC	1
12	Bowl Frame Panel, Rear	P0072536FC	1
13	Bowl Panel, Left	P0072021EC	1
14	Bowl Side Panel/Trim Plate/Left	P07514006A	1
15	Bowl Panel, Right	P0072122EC	1
16	Bowl Side Panel/Trim Plate/Right	P07514007A	1
17	Lid Hinge with Nut	P05511006A	2
18	Bowl Panel, Rear	P00725406C	1
19	Charcoal Tray Side Panel, Left	P01304005M	1
20	Charcoal Tray Side Panel, Right	P01305006M	1
21	Charcoal Tray Panel, Rear	P01319001M	1
22	Charcoal Tray Panel Bracket, Front Lower	P03305012H	1
23	Charcoal Tray Panel Bracket, Front Upper	P03305083C	1
24	Charcoal Tray Panel Bracket, Rear	P03305014H	1
25	Charcoal Tray Support	P01714002E	2
26	Charcoal Tray	P01705010E	2
27	Charcoal Tray Access Door	P04301023A	2
28	Charcoal Tray Access Door Trim Plate	P07510009A	2
29	Charcoal Tray Access Door Handle Assembly	Y0010009	2
30	Charcoal Tray Access Door Stop	P05510012A	1
31	Cooking Rack/Secondary	P01507003E	1
32	Cooking Grid	P01615023E	3
33	Charcoal Tray Support Bracket, Left	P04106001C	1
34	Charcoal Tray Support Bracket, Right	P04106002C	1
35	Charcoal Tray Adjusting Arm Shaft	P04103002C	1

## Parts List for Model CCH07A090

KEY	PART DESCRIPTION	PART#	QTY
36	Charcoal Tray Adjusting Arm	P04102002D	2
37	Charcoal Tray Adjusting Arm Handle	P05508076E	2
38A	Grease/Ash Tray Body	P02717671A	1
38B	Grease/Ash Tray Handle	P00210002H	2
38C	Grease/Ash Tray Trim Plate	P02720063C	1
39	Grease/Ash Tray Track, Left/Right	P05330010E	2
40	Grease/Ash Tray Bracket	P05330011E	1
41	Cart Bottom Shelf	P01010015C	1
42	Cart Leg, Left Front	P00917001B	1
43	Cart Leg, Left Back	P00918001B	1
44	Cart Leg, Right Front	P00919001B	1
45	Cart Leg, Right Back	P00920001B	1
46	Caster Seat	P04507002A	2
47	Caster, 4 in., with Brake	P05120003E	2
48	Wheel, 10 in.	P05121001K	2
49	Wheel Axle	P05509001A	1
50	Side Shelf	P01105030B	2
51	Side Shelf Bracket, Left/Right	P01208001A	2
52	Side Shelf Lock	P05501003A	4
53	Charcoal Shovel	P06612003F	1
54	Vent Handle	Y0010018	2
	Cover	P07007058B	1
	Hardware Pack	P06002012A	1
	Operator's Manual	P80170005A	1

For the repair or replacement parts you need:

Call 8am to 4.30pm CST **1-877-934-7455** Monday through Friday

To obtain the correct replacement parts for your grill, please refer to the part numbers in this parts list. The following information is required to ensure you receive the correct parts:

1. Model and Serial Number (see label on grill)
2. Part Number
3. Part Description
4. Quantity of parts needed

 

**Important:** Use only authorized parts. The use of any part that is not factory authorized can be dangerous and will also void your product warranty. Keep this Operator's Manual for convenient referral and for part replacement.

# Assembly Instructions

## 1 Install Cart Legs onto Cart Bottom Shelf

- ☐ Have an assistant help you with positioning the Cart Legs (Left Back, Left Front, Right Front, Right Back) onto the Cart Bottom Shelf.
- ☐ Use 4 Phillips Head Screws 1/4"x3/8" to secure each Cart Leg.
- ☐ Note: The legs are not interchangeable. They must be installed in a particular order, or the casters and wheels can not be installed correctly. **The Left Cart Legs have black casters seats on one end. The Right Cart Legs have one end open.** Refer to the diagram for more information.



**Key:** A & B: Left Front and Left Back Cart Legs.  
C & D: Right Front and Right Back Cart Legs.

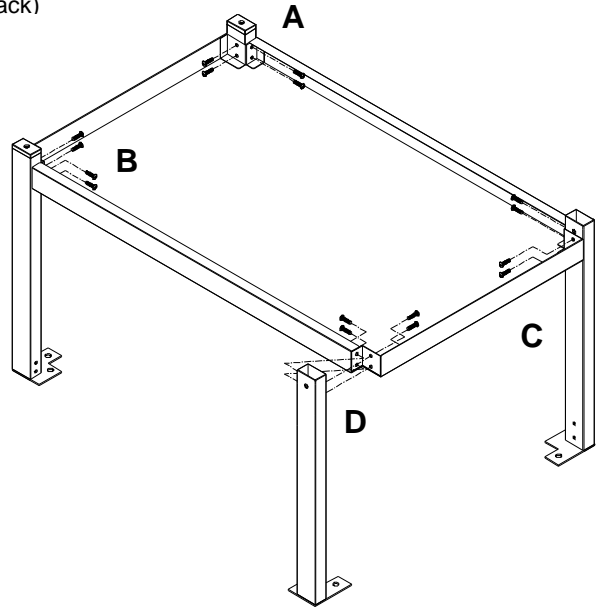


Phillips Head Screw 1/4"x3/8"  
Qty. 16  
Part # S112G04061

## 2 Install Casters and Wheels


- ☐ Install two Casters into the threaded holes on the Caster Seats. Turn the threaded stem by hand, clockwise until it stops. Tighten securely using Wrench provided.
- ☐ Insert the Wheel Axle through the axle holes on Right Front and Right Back Cart Legs.
- ☐ Attach Plain Washers and Wheels onto Axle. Press down on the silver Wheel Clips then push the Wheel fully onto the Axle until it stops.
- ☐ **Important:** Once the Wheels are fully installed, you must lock them onto the Axle by pulling the silver Wheel Clips until you hear a clicking sound.

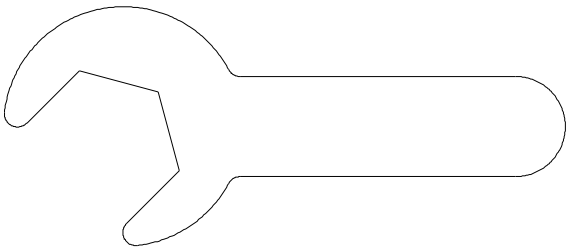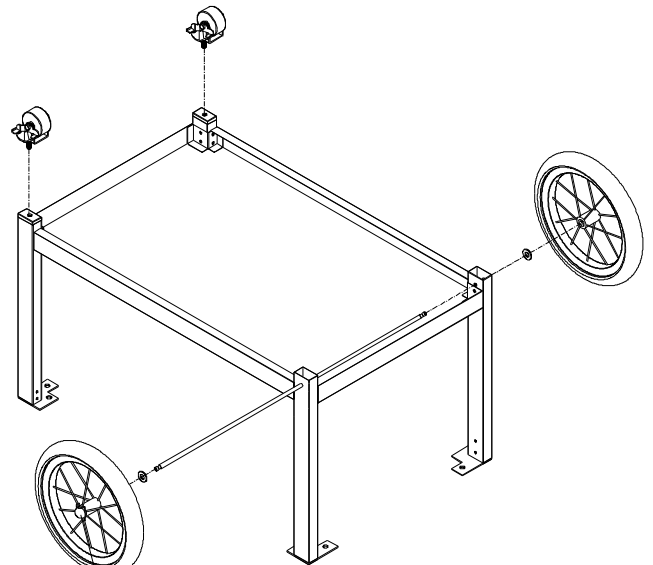

Wrench  
Qty. 1  
Part # P05515015L

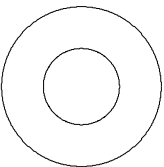


Plain Washer M10.5  
Qty. 2  
Part # S411M10221

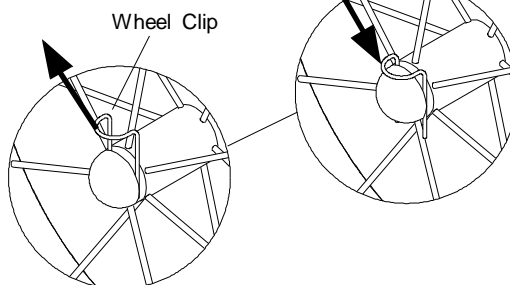


**3****Install Grease/Ash Tray Bracket**

 
- ☐ Install Grease/Ash Tray Bracket onto Cart Legs as shown using 4 Phillips Head Screws 1/4"x3/8".




Phillips Head Screw 1/4"x3/8"  
Qty. 4  
Part # S112G04061

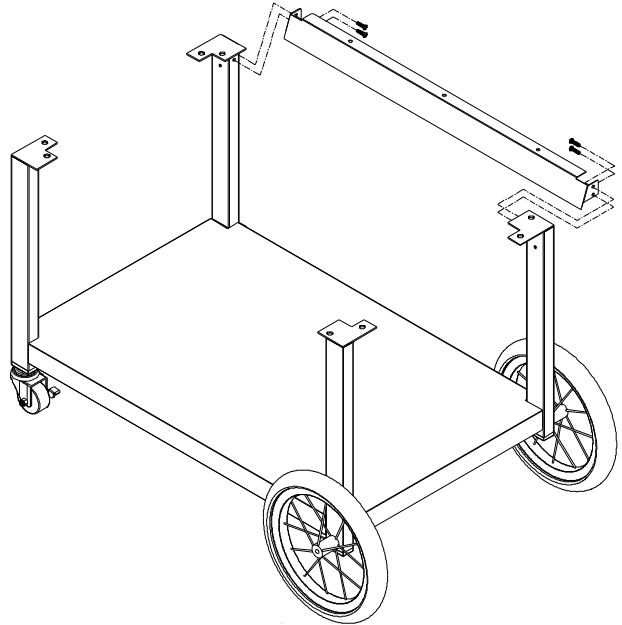**4****Install Grease/Ash Tray Tracks**

 - ☐ Install 1 Grease/Ash Tray Track onto the Left Cart Legs using 4 Phillips Head Screws 1/4"x3/8".
- ☐ Repeat step for installing the right Grease/Ash Tray Track.




Phillips Head Screw 1/4"x3/8"  
Qty. 8  
Part # S112G04061

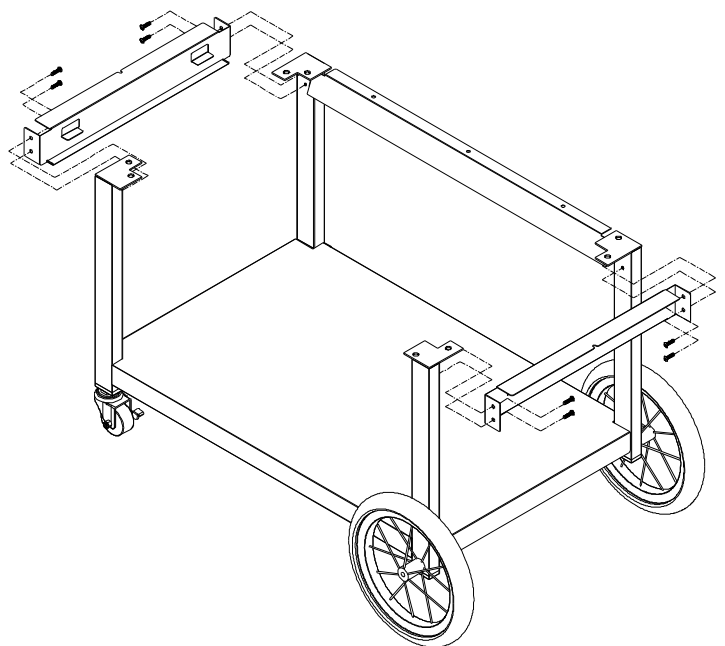


## 5

### Install Grill Bowl

 - ☐ Remove Cooking Grids and Secondary Cooking Rack from Grill Bowl.
- ☐ With an assistant, lift and position the Grill Bowl onto the Cart as shown.
- ☐ Secure the Grill Bowl by using 13 Pan Head with Cross Recess Screws 1/4"x1/2" as shown.




Pan Head with Cross Recess Screw  
1/4"x1/2"  
Qty. 13  
Part # S182G04081

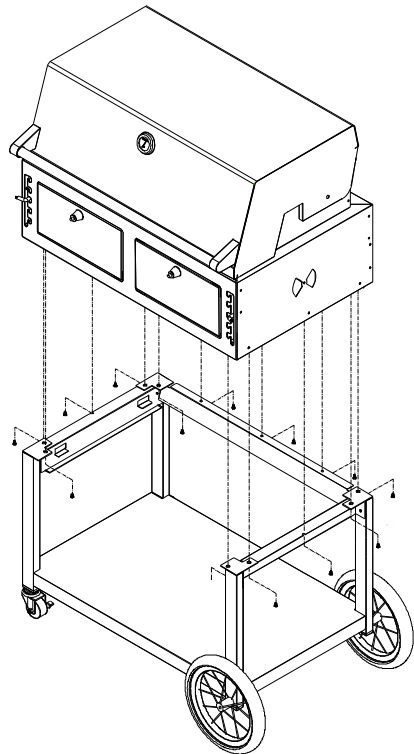



## 6

### Install Charcoal Tray Adjusting Arm Handles, Charcoal Tray Access Door Handles, and Vent Handles

- ☐ Turn the Charcoal Tray Adjusting Arm Handles into the threaded Adjusting Arm, clockwise until it stops.
- ☐ Install the Charcoal Tray Access Door Handles onto the Charcoal Tray Doors. Use the Hex Key Wrench to secure the 2 Hex Screws inserted in the handles.
- ☐ Install 2 Vent Handles into the threaded Adjusting Arm on the Rear Bowl Panel, clockwise until it stops. (See Figure Below)

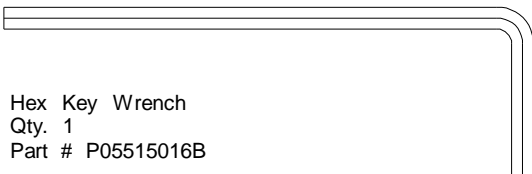


Hex Key Wrench  
Qty. 1  
Part # P05515016B

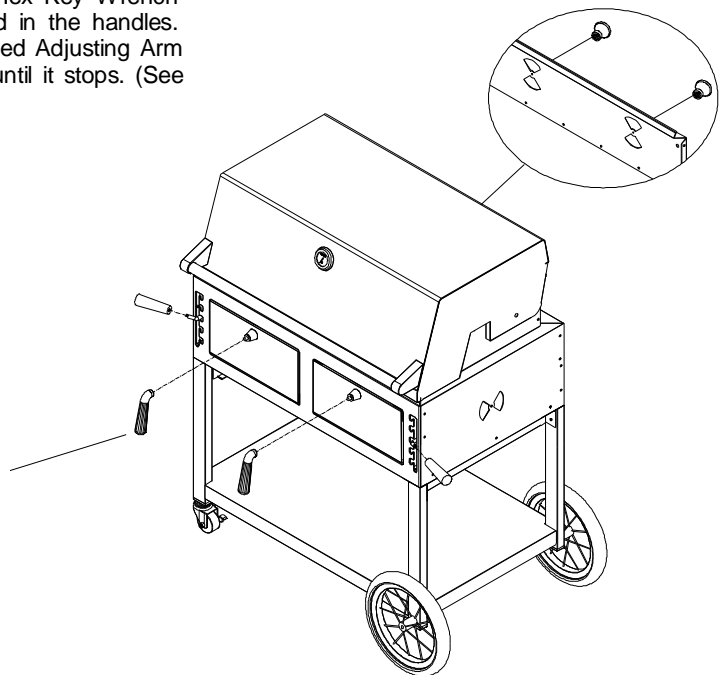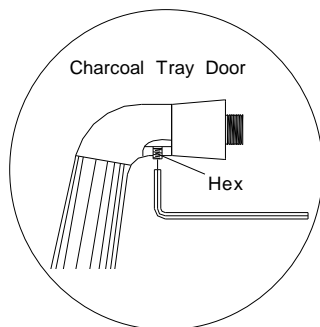


## 7

### Install Side Shelves

 - ☐ Align the 4 holes on the Left Side Shelf with the threaded holes on the Cart. Insert 4 Phillips Head Screws 1/4"x1/2" from the inside of the Side Shelf and tighten securely.
- ☐ Repeat for Right Side Shelf.




Phillips Head Screw 1/4"x1/2"  
Qty. 8  
Part # S112G04081

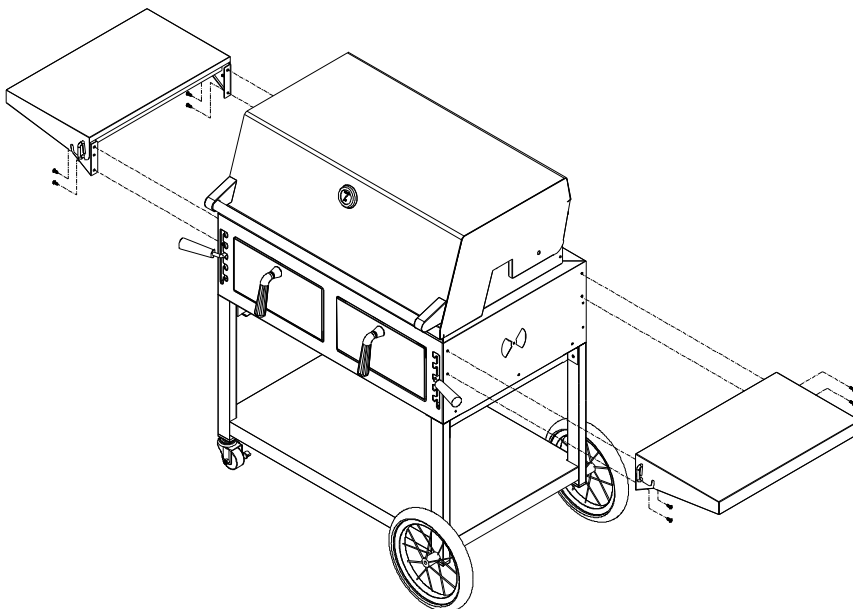

## 8

### Install Charcoal Trays

- ☐ Open the Access Doors and install two Charcoal Trays. When installing the Charcoal Trays, make sure the sloped handles are placed in front so that they are facing the Access Doors.

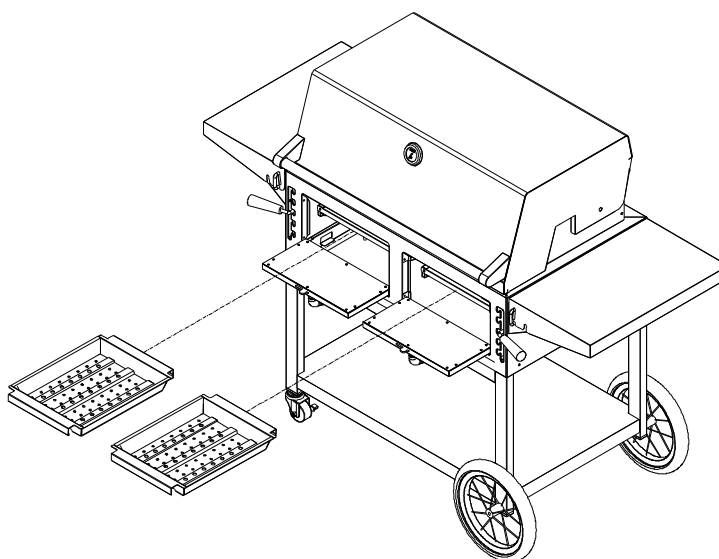

**9****Assemble Grease/Ash Tray Handle onto the Grease/Ash Tray**


- ☐ Install Grease/Ash Tray Handle onto Grease/Ash Tray. Secure the Handle using 6 Phillips Head Screws 3/16"x3/8".




Phillips Head Screw 3/16"x3/8"

Qty. 6

Part # S112G03061

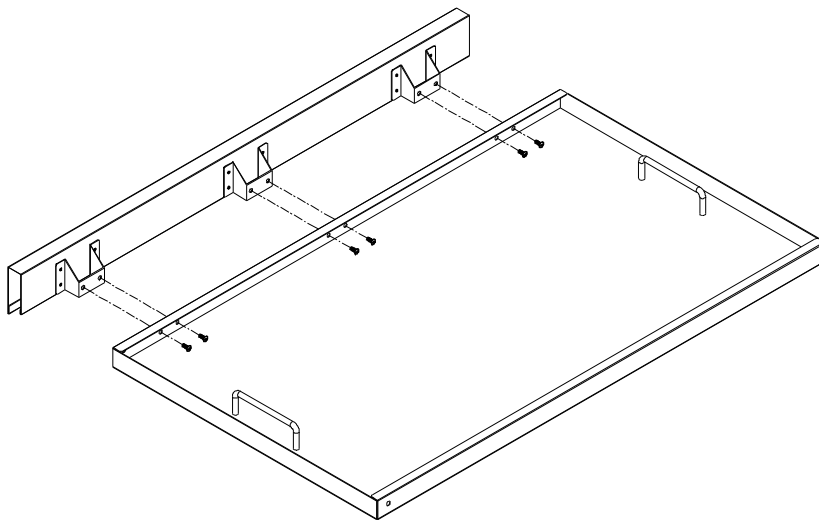**10****Install Grease/Ash Tray**

- ☐ Slide the assembled Grease/Ash Tray over the Grease/Ash Tray Tracks.

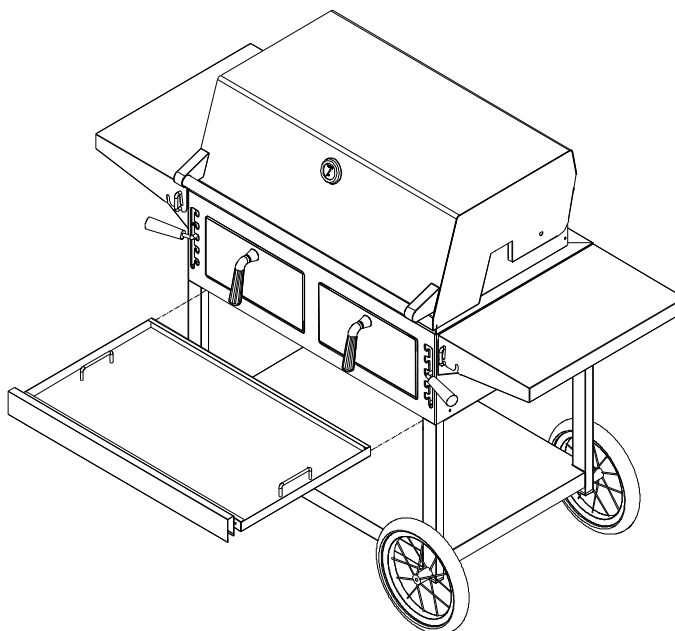

# 11

## Install Cooking Components

- ☐ Place Cooking Grids on bowl ledge.
- ☐ Place the Secondary Cooking Rack into the slots on Grill Bowl Side Panels.
- ☐ Congratulations. Your Charcoal Grill is now ready to use.

## Final Grill Assembly Step

When you have finished assembling your grill be sure that all screws are tightened for safe operation of your grill.



### CAUTION




Failure to comply with these instructions may result in a hazardous situation which, if not avoided, may result in injury.

Keep grill area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Do not obstruct the flow of air for combustion and ventilation.

Keep the ventilation openings of the grill free and clear of debris.

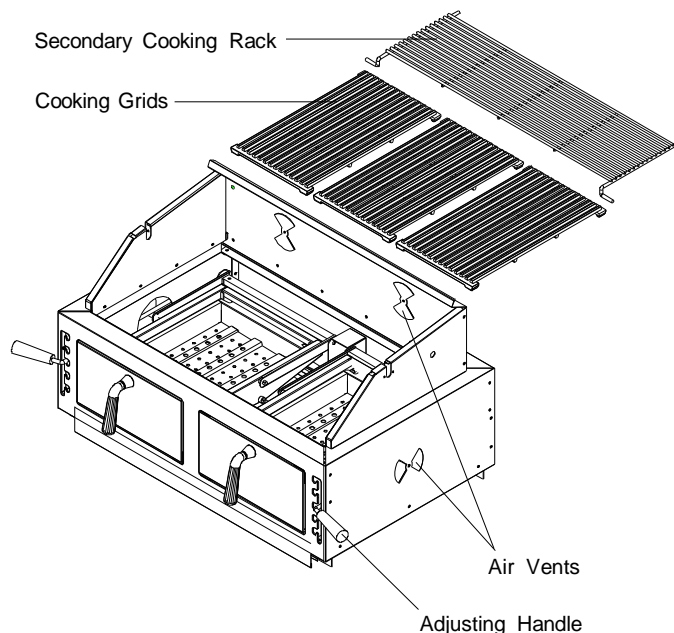

### WARNING



#### Carbon Monoxide Hazard


**Burning charcoal inside will kill you. It gives off carbon monoxide, which is odorless and colorless. Never burn charcoal inside homes, tents and vehicles.**



### WARNING



- **Use your grill at least 3 feet away from any wall or surface.** Use your grill at least **3 feet away** from combustible objects that can melt or catch fire (such as vinyl or wood siding, fences and overhangs) or sources of ignition including pilot lights on water heaters and live electrical appliances.
- **Never** use your grill in a garage, porch, shed, breezeway or any other enclosed area.
- **Never** obstruct the flow of ventilation air around your grill housing.

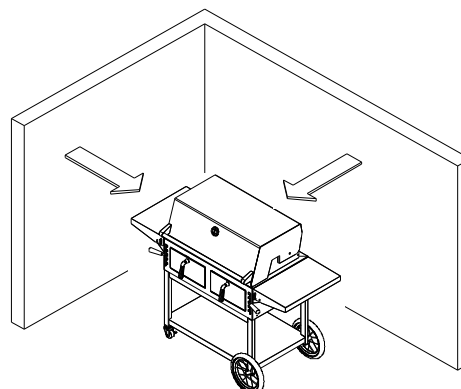

## USE AND CARE INSTRUCTIONS

### USING YOUR CHARCOAL GRILL

#### Using Charcoal

- ☐ Open Access Door. Slide the Charcoal Tray out from Charcoal Tray Support. Place Charcoal in each Charcoal Tray. Do not build too large of a fire. We recommend starting a fire with a maximum of 3.5 pounds of charcoal and adding more as needed during cooking. **Never fill charcoal above the upper level of the Tray.**
- ☐ You can easily add charcoal to the Grill during cooking. We recommend you wear flame retardant BBQ mitts to avoid hot **surfaces**.
- ☐ You can adjust the Vent **Handles** to control the flow of air into your grill. By controlling the flow of air, you can adjust the flame level in your grill. (Ex: Opening the Vent Handles will allow you to build a bigger fire.)
- ☐ You can use the Charcoal Tray Adjusting Arm Handles to adjust the Charcoal Tray to different levels to control grilling temperature.

#### Preparing Your Grill For Initial Use

- ☐ Before cooking on your grill for the first time, you should burn off the grill to eliminate any odor or foreign matter. Build a small fire on the Charcoal Trays. Close the lid and position the air vents approximately one quarter open. This burn should be sustained for at least 30 minutes. Begin increasing the temperature by opening the air vent halfway and adding charcoal through the charcoal access doors. Your charcoal grill is now ready for use.

#### Charcoal Grilling

- ☐ Always wear a flame retardant BBQ mitt when cooking on your grill or when adding charcoal to the Charcoal Trays. Charcoal is recommended, however wood or a combination of both may be used as a fuel source for grilling.
- ☐ Remove the Cooking Grids when starting the fire (see Using Charcoal). Ignite the charcoal and allow the fire to burn down before adding more charcoal. Use flame retardant BBQ mitts when replacing the Cooking Grids.
- ☐ Adjust the air vents to regulate the temperature (open the vents to get a higher flame, and gradually close the air vents to lower the flame).
- ☐ Adjust the height of the Charcoal Trays by moving the Charcoal Tray Adjusting Arms up or down.
- ☐ By adjusting the height of the Charcoal Trays, you can control how close the heat is to your food. Placing the Charcoal Trays at the highest position is ideal for searing. Placing the Charcoal Trays at lower positions allows you to roast or smoke your food.

### CLEANING AND MAINTENANCE

Proper care and maintenance will keep your grill in top operating condition and prolong its life. Follow these cleaning procedures on a timely basis and your grill will stay clean and operate with minimum effort.

**CAUTION:** Make sure coals are completely extinguished and the grill is cool before cleaning.

#### Cleaning Exterior Stainless Steel Surfaces

- ☐ Weathering and extreme heat can cause exterior stainless steel surfaces to turn tan in color. Machine oils used in the manufacturing process of stainless steel can also cause this tanning color. Before initial use, and after removing any protective PVC from the Grill Lid, use a Stainless Steel Cleaner to polish the stainless steel surfaces of your grill. Never use a stiff wire brush, brass brush or abrasive cleaners because they will scratch the stainless steel surface of your grill.

#### Cleaning The Cooking Grids

- ☐ Before initial use, and **periodically**, wash your Cooking Grids in a mild soap and warm water solution. You can use a wash cloth or vegetable brush to clean your Cooking Grids. Then coat both sides of the Cooking Grids with a light coat of vegetable oil.

#### Cleaning The Grease/Ash Tray

- ☐ To reduce the chance of fire, the Grease/Ash Tray should be visually inspected before each grill use. Remove any grease and ash, then wash Grease/Ash Tray with a mild soap and warm water solution.

#### Cleaning The Inside of The Grill Lid

- ☐ Grease can have a tendency to build up on the inside of the Grill Lid and could **drip** onto deck or patio when the lid is opened. Visually inspect the inside of the Grill Lid and bowl before each grill use. Remove any grease and wash with a mild soap and warm water. Never use a **stiff** wire brush, brass brush, or abrasive cleaners because they will scratch the stainless steel or cause it to rust.

#### Cleaning of The Grill Interior

- ☐ Frequency of clean up is determined by how often the grill is used. However, at least every 3 months you must give the entire grill a thorough cleaning to minimize your risk of fire and keep the grill in top shape. Follow these steps:
  - ✓ Make sure coals are completely extinguished and the grill is cool before cleaning.
  - ✓ Remove and clean the Cooking Grids and Grease/Ash Tray following the instructions provided above.
  - ✓ Clean the inside of the grill lid as described above. Brush the inside and bottom of the grill with a fiber pad or nylon brush and wash with a mild soap and warm water solution. Rinse thoroughly and let dry.
  - ✓ **Remove charcoal and food remnants from Charcoal Trays. Clean the Trays with a fiber pad or nylon brush and wash with a mild soap and warm water solution. Rinse thoroughly and let dry.**

## Grand Hall Limited Warranty

Grand Hall will warrant to the ORIGINAL PURCHASER of this product that it will be free of defects in material and workmanship for set periods below from the date of purchase when used under normal outdoor use and correct assembly:

### **1 Year Full Warranty**

### **All SS Parts-Limited Lifetime Warranty**

### **All Other Grill Parts-2 Years**

Grand Hall will require reasonable proof of your date of purchase. Therefore, you should send in the owner registration card or register online at [www.grandhall.com](http://www.grandhall.com). Save your receipt in case it is required as proof of purchase.

This Limited Warranty is limited to replacement of parts at Grand Hall's option that proved to be defective under normal use and service.

Grand Hall may require the return of defective parts for examination before issuing replacement parts. If you are required to return defective parts, shipping charges must be prepaid. No returns will be accepted without prior authorization from Grand Hall.

Upon examination and to Grand Hall's satisfaction, if the original part is proven defective, Grand Hall may approve your claim and elect to replace such parts without charge. You will be charged for shipping and handling of the replacement parts.

This Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, vandalism, improper installation, maintenance, operation or service, as set out in the Operator's Manual.

This Warranty does not cover cosmetic wear and tear such as scratches, dents, corrosion or discoloration caused by weather, heat, chemicals, paint loss, or surface rust. Deterioration or damage due to severe weather conditions such as hail, hurricanes, earthquakes, tsunamis, tornadoes, Act of God or terrorism is not covered by this Limited Warranty.

### **To Obtain Warranty:**

**Call 1-877-934-7455**

**Monday through Friday**

**8am - 4:30pm CST**

### **Warranty Restrictions**

- This Warranty is non-transferable and is void if product is used for commercial or rental purposes.
- This Warranty applies only when the product is used in the United States or Canada.
- This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Manufacturer:

**Grand Hall Enterprise Co., Ltd.**

9th Fl., No. 298, Rueiguang Rd., Neihu,  
Taipei, Taiwan (114)