 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# PANASONIC SR-G18FG Owner's Manual

[Shop genuine replacement parts for PANASONIC SR-G18FG](#)

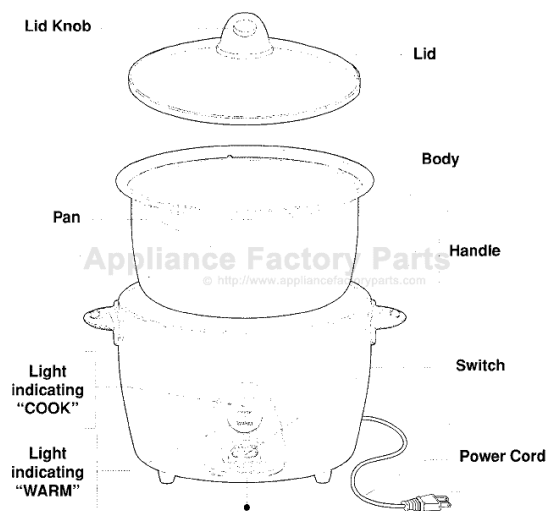

[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

Thank you very much for purchasing  
Panasonic Rice Cooker/Steamer

感謝您購買  
Panasonic 西施 飯煲

구매를 매우 감사 드립니다  
파나소닉 전기밥솥/스티머(점통)

Merci d'avoir choisi ce produit  
culseur de riz / à vapeur Panasonic

Muchas gracias por haber comprado  
la Olla para Cocer y Vaporizar Arroz de Panasonic

Rice Cooker/Steamer  
Operating Instructions

西施 飯煲  
操作指示

전기밥솥/스티머  
사용 설명

Culseur de riz / à vapeur  
Manuel d'utilisation

Olla para Cocer y Vaporizar Arroz  
Instrucciones de Operación

## CONTENTS

Important Safeguards.....	2
Cautions.....	3-4
Parts Identification.....	5
How to cook.....	6
How to steam food (For Model SR-G10FG/ SR-G18FG).....	7
How to clean.....	8
Troubleshooting.....	9
Specifications.....	9

Before operating this unit,  
please read these instructions  
completely.

## 目录

緊要安全注意事項.....	10
注意重點.....	11-12
零件確認.....	13
煮的方法.....	14
蒸的方法 (型號 SR-G10FG/SR-G18FG).....	15
如何清理.....	16
問題處理.....	17
規格.....	17

在开始使用此锅前，请详细阅读各项  
指示。

## 목차

중요한 안전 대책.....	18
경고.....	19-20
부분 설명.....	21
취사 방법.....	22
음식을 찌는 방법 (모델 SR-G10FG/ SR-G18FG).....	23
닦는 방법.....	24
고장 수리.....	25
제품 사양.....	25

본 제품을 사용하기 전에,  
다음의 설명을 모두  
읽어보시기 바랍니다.

Model No. : SR-G06FG/SR-G10FG/SR-G18FG



## SOMMAIRE

Mises en garde importantes.....	26
Précautions.....	27-28
Identification des pièces.....	29
Comment effectuer la cuisson.....	30
Comment cuire les aliments à la vapeur (Pour le modèle SR-G10FG/SR-G18FG).....	31
Comment nettoyer.....	32
Guide de dépannage.....	33
Spécifications.....	33

Prière de lire entièrement ces  
instructions avant de faire  
fonctionner l'appareil.

## CONTENIDO

Medidas de seguridad importantes.....	34
Precauciones.....	35-36
Identificación de Partes.....	37
Cómo cocer.....	38
Cómo vaporizar los alimentos (Para los modelos SR-G10FG/SR-G18FG).....	39
Cómo Limpiar.....	40
Resolución de Problemas.....	41
Especificaciones.....	41

Antes de operar esta unidad, por  
favor lea estas instrucciones  
completamente.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

## 14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

 
### NOTE

- A. A short power-supply cord (or cord set) is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
  - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
  - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug: (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

# Cautions : To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.

Before use, remove the paper located between the cast heater and the pan. Be sure to keep the rice cooker out of the reach of children especially when cooking rice.

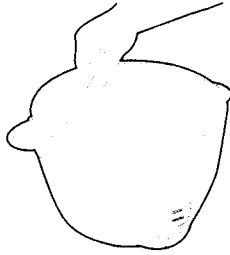


ENGLISH


Always keep the outside bottom of the pan and the cast heater clean and dry. Any foreign matter found should be removed immediately.



 Avoid exposing the rice cooker to water or placing the rice cooker near water supply. The rice cooker should not be covered with cloth or any object while in use.

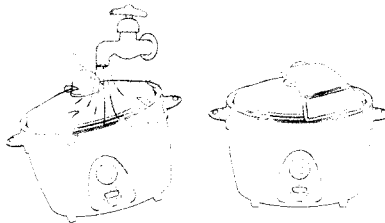

 The rice cooker should not be placed on uneven surface. Do not use the pan directly on an open flame.

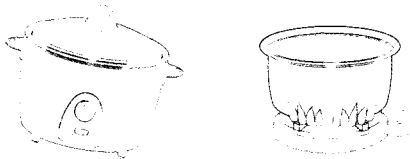

# Cautions : To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.

ENGLISH

If the indicator light does not turn on while pressing the switch, do not place any object on the switch, as it may cause the rice cooker to malfunction. The problem should be corrected by a qualified electrician. Be careful of the steam when the rice cooker is being used.

other object



 
Do not damage the power cord and do not attempt to repair it if it is damaged. Consult your nearest authorized service facility for repair the cord of plug. Ensure that the plug fits all the way into the wall outlet.




Prevent ants or insects getting in the rice cooker, as they may cause the rice cooker to malfunction.

Do not substitute the pan with other container, as it will cause the rice cooker to malfunction. Only the pan included with the rice cooker should be used.

Do not leave the lid overturned in a place where it can reflect the sunlight. This may cause damage to walls or furniture.

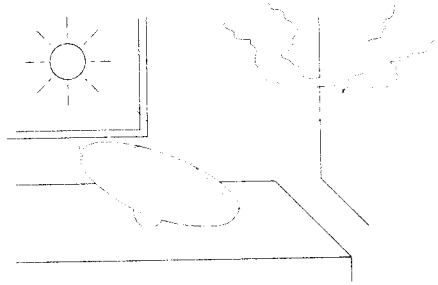


 Do not apply force onto the center of pan. It will be damaged.

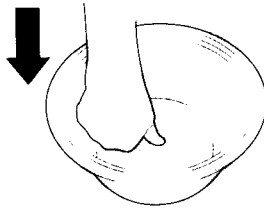

# Parts Identification

 ENGLISH

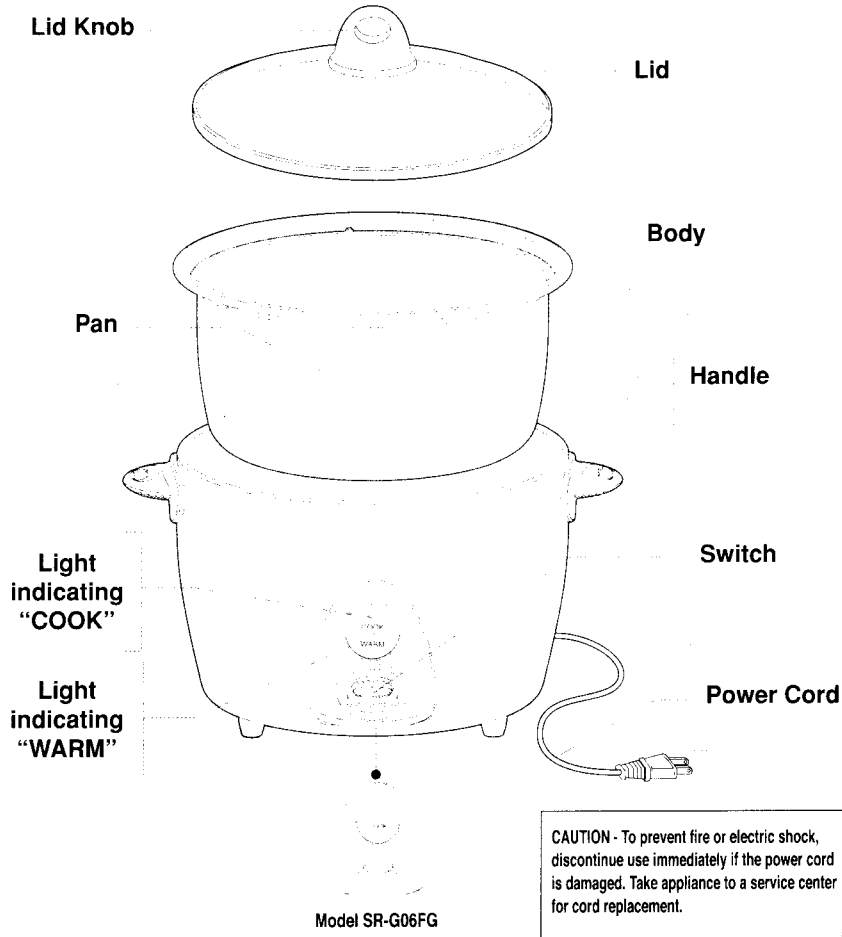


## Accessories



Measuring Cup  
(Approximately 180 ml)



 Scoop




Steaming Basket

For Model SR-G10FG/  
SR-G18FG

# How to cook

 ENGLISH

**1** Measure rice with the measuring cup provided. Then rinse the rice thoroughly using other container.



Correct Incorrect

**2** Put the rinsed rice in the pan and add water according to the scales shown in the table below.

**Scales by Graduations on the Pan**

Example: To cook 6 cups of rice, add water up to the Graduation "6".

 
Level Indicator  
Maximum level  
Do not cook with more than this level of water

Note: Capacity (liter) varies according to the size of each models.

- Adjust the quantity of water to your personal taste.


- Soak rice in water at least for 30 minutes.

**3** Place the pan into the body. Make sure the pan is directly in contact with the cast heater by turning it slightly from right to left until it settles properly.

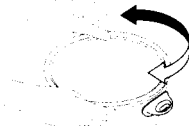

- Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. Any foreign matter between the pan and cast heater may damage the unit.

 
**4** Close the lid firmly.

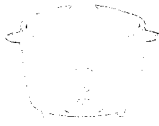

- If lid is not securely closed, cooking will be affected.

- Do not open the lid when in use.

 **5** Plug in and press the switch. The light indicating "COOK" will be on. The cooking will start immediately.



- Do not plug in the unit until you are ready to cook. Otherwise, rice may be ruined.

- If the pan is not in the unit, cooking will not begin.

**6** When the rice is cooked, the switch will move up to the keep warm, and the light indicating "WARM" will be on instead. This shows that the warming function is working. After the switch moves up, leave the lid closed for at least 15 minutes to fully steam the rice. Scoop and mix the rice well.



- Only Model SR-G06FG does not have warming function. The light indicating "COOK" will be off when the rice is cooked.

- The warming function continues until the unit is unplugged.

**7** Unplug.



**1** Add water into the pan and place the steaming basket on the pan. Slightly turn or adjust the steaming basket to the left and right until it fits onto the ribs at the edge of the pan.

■ If cooking rice at the same time DO NOT cook beyond following capacity.

	Rice (cups)
1.0 L	3
1.8 L	4

**2** Place the pan into the body and add foods (place in dish if required).

■ Wipe the surface of the pan before use. If it is wet, it may cause noise while steaming. Any foreign matter between the pan and cast heater may damage the unit.

**3** Close the lid firmly.

■ If the lid is not securely closed, steaming will be affected.  
■ Do not open the lid when in use.

**4** Plug in and press the switch. The light indicating "COOK" will be on. The steaming will start immediately.

■ Do not plug in until you are ready to steam.  
■ If the pan is not in the unit, steaming will not begin.

**5** Time the steaming manually. The unit will automatically switch to "WARM" when water in the pan has completely evaporated.

■ When the food is cooked, the steaming can be canceled by unplugging the unit.

**6** Unplug.

■ The warming function continues until the unit is unplugged.

**7** Remove foods, then the steaming basket and finally pour out remaining water.

■ Be careful of the hot water in the pan.

# How to clean

ENGLISH

 
Unplug before cleaning. Check if there is any dirt sticking on the plug and cord. The dirt should be removed immediately. Do not use benzine or thinner in wiping and cleaning the rice cooker.

## Body / Lid

Wipe with a damp cloth. Do not immerse the unit in water.

## Pan


Soak the pan with warm water and wash with a sponge. Do not use scrubbers in cleaning.

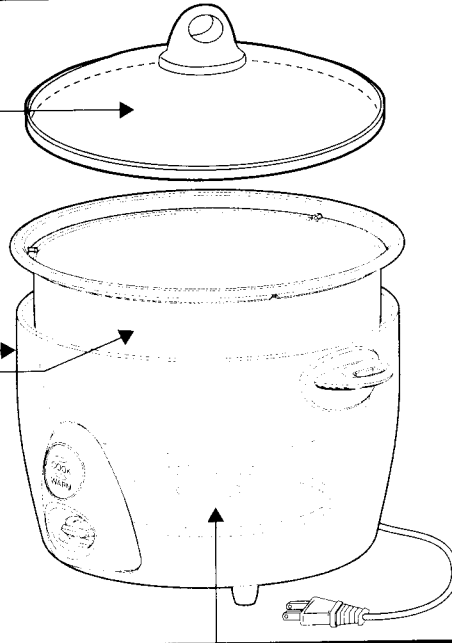

## Cast Heater

Remove any foreign matter on the bottom of pan or cast heater should be removed immediately, as it may cause the rice cooker to malfunction.

 
## Accessories



Measuring Cup



 Scoop



Steaming Basket

Always wash with dishwashing liquid and sponge after use.

# Troubleshooting

■ Case of equipment failure? Check according to the following item :

ENGLISH

Problems Description	Cooking Problems						Keep Warm Problems			No power	Emits strange sounds
	Rice too hard	Rice not cooked to the center	Rice too soft	Viscous liquid overflows	Bottom is scorched	Rice has unusual smell	Rice changes color	Rice is too dry			
Possible Cause											
Rice to Water ratio not correct	●	●	●	●	●						
Rice not rinsed well enough				●	●	●	●				
Pan bottom dented or uneven	●	●			●						
Foreign matters between pan and heater	●	●	●		●	●	●				
Rice Cooked with oil	●	●			●	●	●				
Rice not fluffed (mixed) after cooking	●		●		●						
Keep Warm is used for longer than 5 hrs or amount of rice being kept warm is too small						●	●	●			
Foreign matters left in pan during Keep Warm						●					
Rice being kept warm was at room temperature or colder or cold rice added to warm rice						●					
Lid is not securely closed?						●			●		
Pan was not clean or odors from previous cooking remain in pan					●	●					
Power cord was unplugged or the switch was turned off during cooking		●					●				

Popping sounds are caused when water trapped between the pan and the cast heater evaporates. This can cause damage to the pan and cast heater.  
 Unplugging the unit from the wall socket. Check circuit breaker. If circuit breaker is ok then take unit to the nearest authorized service center.

# Specifications

Model	SR-G06FG	SR-G10FG	SR-G18FG	
Power Supply	120 V 60 Hz			
Power Consumption	Cooking	310 W	450 W	650 W
	Warming	-	44 W	45 W
Capacity	0.18 - 0.6 L	0.18 - 1.0 L	0.54 - 1.8 L	
Net weight (approx.)	1.5 kg	2.1 kg	2.7 kg	

# Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicecenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

**<http://www.panasonic.com/consumersupport>**

or, contact us via the web at:

**<http://www.panasonic.com/contactinfo>**

You may also contact us directly at:

1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

**For hearing or speech impaired TTY users, TTY : 1-877-833-8855**

## Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

**<http://www.pasc.panasonic.com>**

or, send your request by E-mail to:

**[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)**

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday-Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, America Express, and Personal Checks)

**For hearing or speech impaired TTY users, TTY : 1-866-605-1277**

## Service in Puerto Rico

***Panasonic Puerto Rico, Inc.***

***Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985***

***Phone (787)750-4300, Fax (787)768-2910***

**Panasonic Corporation of North America**

USA : <http://www.panasonic.com/consumersupport>

CANADA : <http://www.panasonic.ca>

QY00A287  
MAT0504-0