

Tip Bracket

The tip bracket is a safety feature designed to help keep the oven stable when the door is open. Proper installation is important!

- Position the oven in its final location.
- As you are looking at the back of the oven, position the tip bracket on the bottom back right side of the oven (Fig. 1).
- Use the existing hole on the back of the oven to secure the tip bracket to the oven back.
- Anchor the bracket to the counter surface.

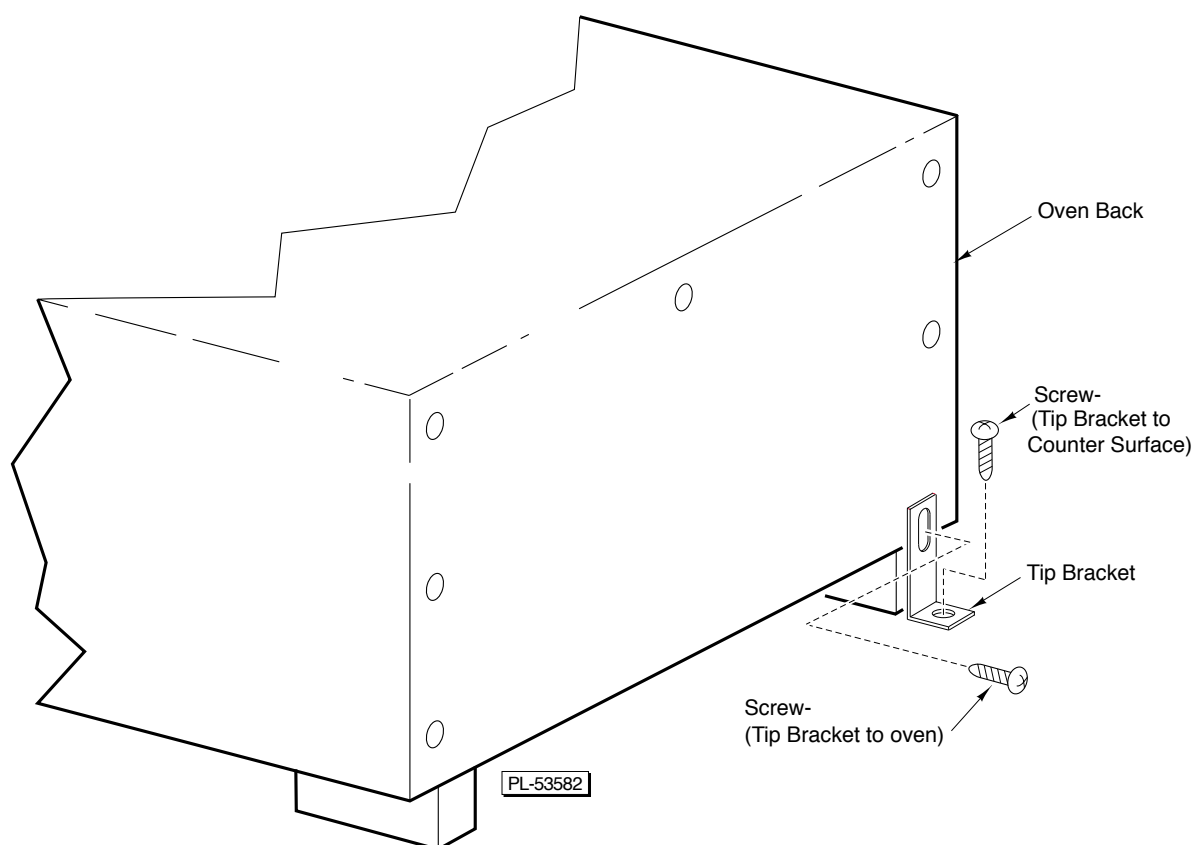


Fig. 1