

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



GE AGE12DJG1 Owner's Manual

[Shop genuine replacement parts for GE AGE12DJG1](#)



[Find Your GE Air Conditioner Parts - Select From 2757 Models](#)

----- Manual continues below -----

Technical Data

AGE12DJG1

3828A20875C

DISCONNECT POWER BEFORE SERVICING
IMPORTANT - RECONNECT ALL GROUNDING DEVICES

All parts of this appliance capable of conducting electrical current are grounded. If grounding wires, screws, straps, clips nuts or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

IMPORTANT SAFETY NOTICE

This information is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

WARNING

DISCONNECT UNIT FROM ELECTRICAL POWER SUPPLY BEFORE MAKING ANY ELECTRICAL CHECKS.

MAXIMUM CURRENT LEAKAGE:

0.75 MILL.AMP - ALL MODELS

MAXIMUM GROUND PATH RESISTANCE:

0.1 OHM - ALL MODELS

CURRENT- TEMPERATURE CHECK DATA(230V)

AIR TEMPERATURE CONDENSER IN °F	COOLING CURRENT	
	MIN.	MAX.
80	4.95	5.12
95	5.75	5.91
110	6.72	6.92

TEMPERATURE DIFFERENTIAL CHECK DATA(230V)

EVAPORATOR AIR TEMP. IN °F(COOLING)	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	46.9	47.8
80	55.7	55.9
90	61.1	62.2

TEMPERATURE DIFFERENTIAL CHECK DATA(230V)

EVAPORATOR AIR TEMP. IN °F(HEATING)	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	97.7	98.9

POWER SUPPLY

RATED VOLTAGE	VOLTAGE LIMITS
230/208	187 - 253

R-22 19.2 OZ

WARNING - COMPRESSOR DIRECT CHECK

CAUTION:

1. Keep head clear of terminal area when cover is removed.
2. Check windings first. If open or grounded, "DO NOT" apply power to compressor terminals.

