

Technical Data

AGE07AHG1

3828A20518N

DISCONNECT POWER BEFORE SERVICING
IMPORTANT - RECONNECT ALL GROUNDING DEVICES
All parts of this appliance capable of conducting electrical current are grounded. If grounding wires, screws, straps, clips nuts or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

IMPORTANT SAFETY NOTICE
This information is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

WARNING
DISCONNECT UNIT FROM ELECTRICAL POWER SUPPLY BEFORE MAKING ANY ELECTRICAL CHECKS.
MAXIMUM CURRENT LEAKAGE:
0.75 MILLI.AMP - ALL MODELS
MAXIMUM GROUND PATH RESISTANCE:
0.1 OHM - ALL MODELS

CURRENT- TEMPERATURE CHECK DATA(115V)

AIR TEMPERATURE CONDENSER IN °F	COOLING CURRENT	
	MIN.	MAX.
80	6.47	6.49
95	7.20	7.23
110	9.21	9.25

POWER SUPPLY

RATED VOLTAGE	VOLTAGE LIMITS
115	103 - 207


TEMPERATURE DIFFERENTIAL CHECK DATA(115V)

EVAPORATOR AIR TEMP. IN °F (COOLING)	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	41.92	42.32
85	55.94	56.02
90	61.0	61.8

TEMPERATURE DIFFERENTIAL CHECK DATA(115V)

EVAPORATOR AIR TEMP. IN °F (HEATING)	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	97.9	99.0

- WARNING - COMPRESSOR DIRECT CHECK**
CAUTION:
1. Keep head clear of terminal area when cover is removed.
 2. Check windings first. If open or grounded, "DO NOT" apply power to compressor terminals.

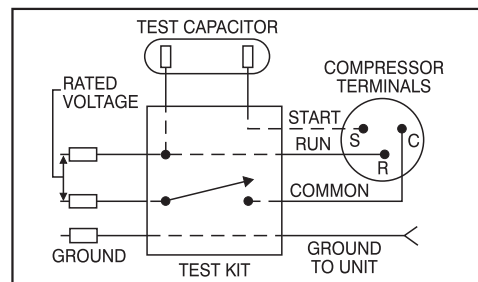

AGE07AHG1

3828A20518N

