

Technical Data

AGM14AHG1

3828A20518A

DISCONNECT POWER BEFORE SERVICING
IMPORTANT - RECONNECT ALL GROUNDING DEVICES
All parts of this appliance capable of conducting electrical current are grounded. If grounding wires, screws, straps, clips nuts or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

IMPORTANT SAFETY NOTICE
This information is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

WARNING
DISCONNECT UNIT FROM ELECTRICAL POWER SUPPLY BEFORE MAKING ANY ELECTRICAL CHECKS.
MAXIMUM CURRENT LEAKAGE:
0.75 MILL. AMP - ALL MODELS
MAXIMUM GROUND PATH RESISTANCE:
0.1 OHM - ALL MODELS

POWER SUPPLY	
RATED VOLTAGE	VOLTAGE LIMITS
115	103-127


CURRENT- TEMPERATURE CHECK DATA(115V)

AIR TEMPERATURE CONDENSER IN °F	COOLING CURRENT	
	MIN.	MAX.
80	10.51	10.53
95	11.85	11.95
110	14.33	14.44

TEMPERATURE DIFFERENTIAL CHECK DATA(115V)

EVAPORATOR AIR TEMP. IN °F (COOLING)	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	48.7	49.1
80	56.8	57.4
90	64.8	65.1

- WARNING - COMPRESSOR DIRECT CHECK**
CAUTION:
1. Keep head clear of terminal area when cover is removed.
 2. Check windings first. If open or grounded, **"DO NOT"** apply power to compressor terminals.

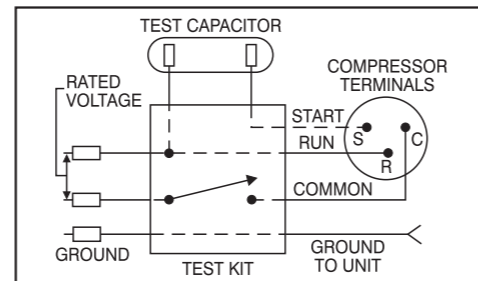

AGM14AHG1

3828A20518A

