

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# LG LWX123CNAA1 Owner's Manual

[Shop genuine replacement parts for LG LWX123CNAA1](#)



[Find Your LG Air Conditioner Parts - Select From 2328 Models](#)

----- Manual continues below -----

# Technical Data

AGE12DHG1

3828A20518P

**DISCONNECT POWER BEFORE SERVICING**  
**IMPORTANT - RECONNECT ALL GROUNDING DEVICES**  
All parts of this appliance capable of conducting electrical current are grounded. If grounding wires, screws, straps, clips nuts or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

**IMPORTANT SAFETY NOTICE**

This information is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

**WARNING**

DISCONNECT UNIT FROM ELECTRICAL POWER SUPPLY BEFORE MAKING ANY ELECTRICAL CHECKS.

**MAXIMUM CURRENT LEAKAGE:**

0.75 MILL.AMP - ALL MODELS

**MAXIMUM GROUND PATH RESISTANCE:**

0.1 OHM - ALL MODELS

**CURRENT-TEMPERATURE CHECK DATA(230/208V)**

AIR TEMPERATURE CONDENSER IN °F	COOLING CURRENT	
	MIN.	MAX.
80	4.95	4.97
95	5.75	5.91
110	6.72	6.92

**POWER SUPPLY**

RATED VOLTAGE	VOLTAGE LIMITS
230/208	187 - 253

**TEMPERATURE DIFFERENTIAL CHECK DATA(230/208V)**

EVAPORATOR AIR TEMP. IN °F	EVAP. AIR TEMP. OUT °F	
	MIN.	MAX.
70	46.9	47.8
80	55.7	55.9
90	61.1	62.2

**WARNING - COMPRESSOR DIRECT CHECK**

**CAUTION:**

1. Keep head clear of terminal area when cover is removed.
2. Check windings first. If open or grounded, "DO NOT" apply power to compressor terminals.

