

Repair Parts List

MODEL NUMBER

A882

WASHER

When requesting service or ordering parts, always provide the following information:

- Product Type
- Part Number
- Model Number
- Part Description

MAYTAG®

©2005 Maytag Services

 
Section: TOP

Model: A882

Section: TOP

P/N 1600021

Models: ALL MODELS

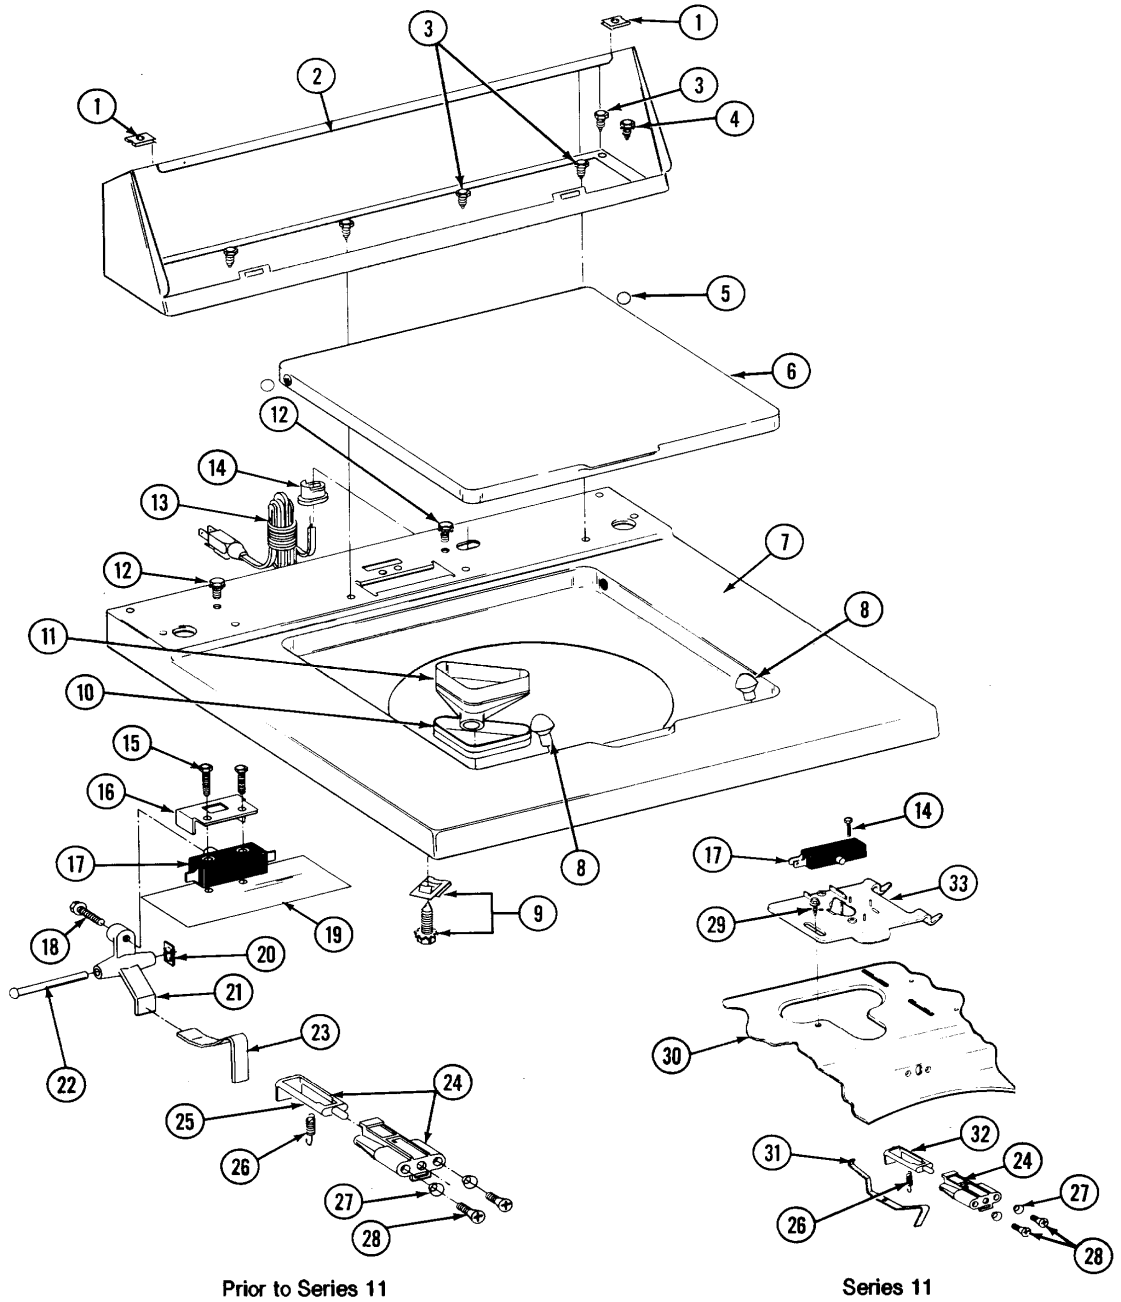

11/91

Section: TOP

| No. | Part No. | Description | Series | Qty |
|-----|----------|---|--------|-----|
| 1 | 215075 | FASTENER,CNTRL PNL TO CONSOLE Note: FASTENER, CONTROL PANEL | 00 | 2 |
| 2 | N 205635 | CONSOLE (WHT) | 00 | 1 |
| 3 | 211294 | SCREW | 00 | 5 |
| 4 | N 313551 | SCREW, CONSOLE GROUND | 00 | 1 |
| 5 | 211726 | HINGE, BALL | 00 | 1 |
| 6 | 212073 | LID-WHITE Note: LID (WHT) | 00 | 1 |
| 7 | 205537 | TOP COVER-WHITE Note: TOP COVER (WHT) | 00 | 1 |
| 8 | 212716 | BUMPER, LID | 00 | 2 |
| 9 | 204445 | SCREW & FASTENER ASY. Note: SCREW & FASTENER ASSEMBLY | 00 | 2 |
| 10 | 214436 | GASKET Note: GASKET | 00 | 1 |
| 11 | 214437 | BLEACH INLET Note: INLET, BLEACH | 00 | 1 |
| 12 | 210186 | SCREW, GROUND WIRE TO BASE--NA | 00 | 2 |
| 13 | 204590 | POWER CORD | 00 | 1 |
| 14 | 211881 | GROMMET, CORD | 00 | 1 |
| 15 | 213501 | SCREW, #6-20 X 1-1/8 INCH | 00 | 2 |
| 16 | 214898 | COVER FOR LID SWITCH Note: COVER, LID SWITCH | 00 | 1 |
| 17 | 205415 | SWITCH, LID (W/O TUB LIGHT) | 00 | 1 |
| 18 | 911267 | SCREW, PUMP COVER | 00 | 1 |
| 19 | 214987 | MOISTURE BARRIER FOR SWITCH Note: MOISTURE BARRIER, SWITCH | 00 | 1 |
| 20 | 410635 | FASTENER | 00 | 1 |
| 21 | 214813 | LEVER FOR LID SWITCH Note: LEVER, LID SWITCH | 00 | 1 |
| 22 | 214805 | PIN FOR UNBALANCE LEVER Note: PIN, UNBALANCE LEVER | 00 | 1 |
| 23 | 215236 | UNBALANCE LEVER Note: LEVER, UNBALANCE | 00 | 1 |
| 24 | 204968 | PLUNGER & BRACKET ASSEMBLY | 00 | 1 |
| 25 | 213718 | LID SWITCH PLUNGER Note: PLUNGER, LID SWITCH | 00 | 1 |
| 26 | 213720 | SPRING | 00 | 1 |
| 27 | 211500 | WASHER,BRACKE TO TOP COVER Note: WASHER, BRACKET | 00 | 2 |
| 28 | 910182 | SCREW | 00 | 2 |
| 29 | 207159 | SCREW | 00 | 1 |
| 30 | N 207170 | TOP COVER Note: TOP COVER ASSEMBLY (WHT) | 11 | 1 |
| 31 | 215704 | UNBALANCE LEVER Note: LEVER, UNBALANCE | 11 | 1 |
| 32 | N 215700 | LID SWITCH PLUNGER Note: PLUNGER, LID SWITCH | 11 | 1 |
| 33 | Y215699 | BRACKET,SWITCH & FUSE Note: BRACKET, SWITCH & FUSE | 11 | 1 |

 
*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

Section: CABINET

Model: A882

Section: CABINET
Models: ALL MODELS

P/N 160002

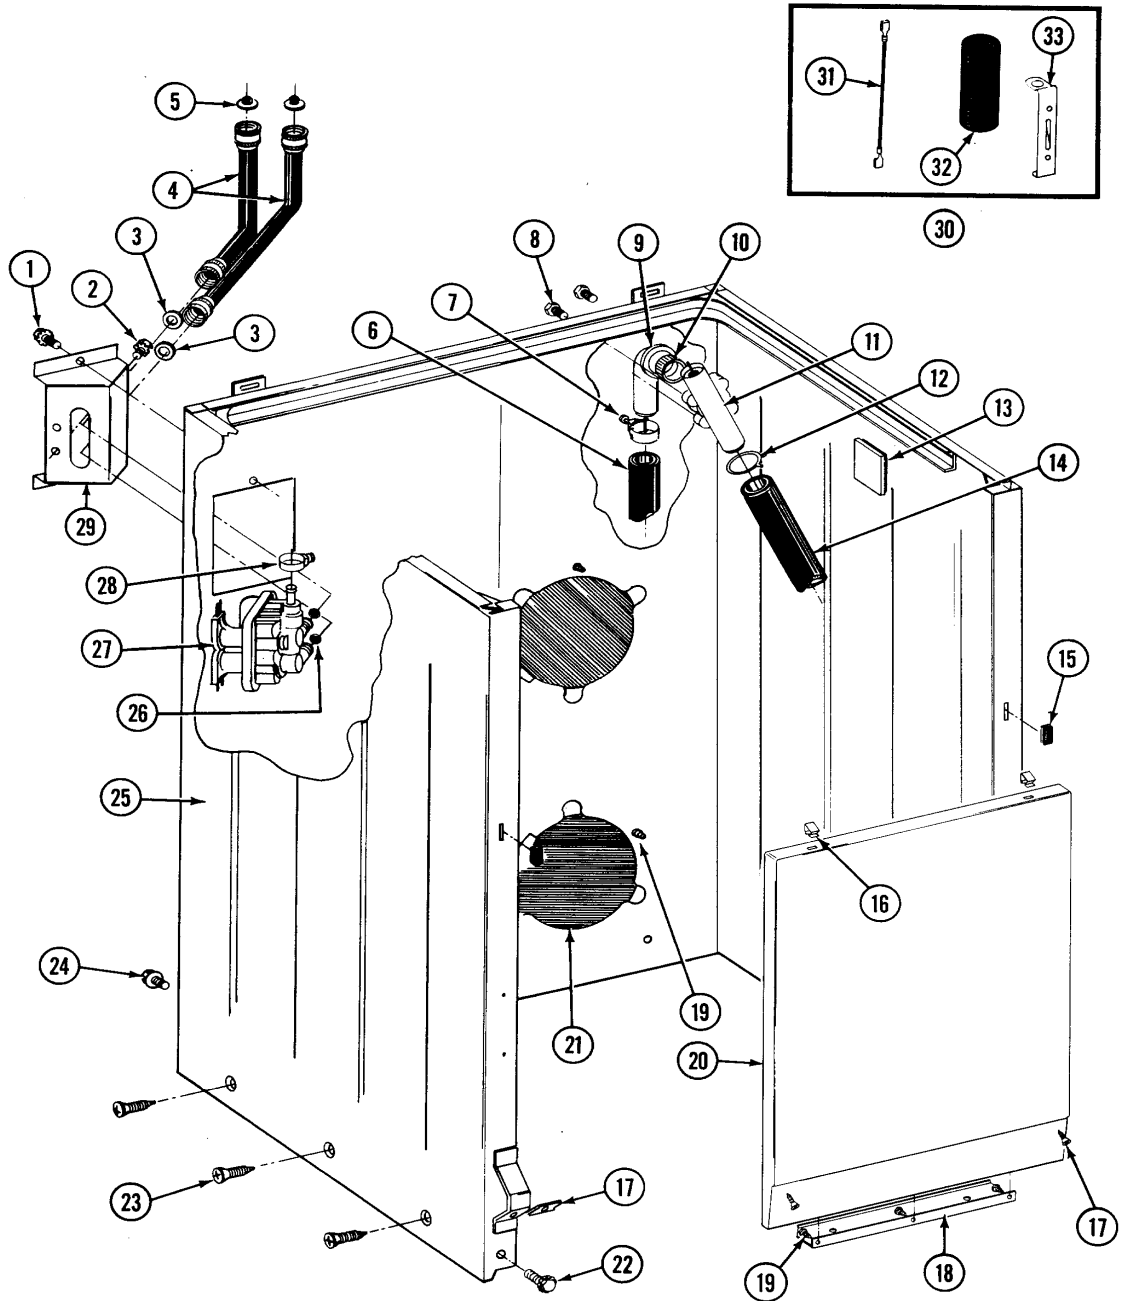

11/91

16

MA67D3

Section: CABINET

| No. | Part No. | Description | Series | Qty |
|-----|----------|--|--------|-----|
| 1 | 212276 | SCREW | 00 | 1 |
| 2 | N 313561 | SCREW----NA | 00 | 2 |
| 3 | Y013783 | GASKET, INLET HOSE Note: WASHER, INLET HOSE | 00 | 2 |
| 4 | 202860 | INLET HOSE ASSY. Note: INLET HOSE ASSEMBLY | 00 | 2 |
| 5 | 200961 | SCREEN WASHER, INLET HOSE | 00 | 2 |
| 6 | 215279 | HOSE, DRAIN | 00 | 1 |
| 7 | 200461 | HOSE CLAMP - 1-5/8 INCH Note: CLAMP, HOSE 1-5/8 INCH | 00 | 1 |
| 8 | Y014874 | SCREW | 00 | 4 |
| 9 | 214764 | SIPHON BREAK ELBOW Note: ELBOW, SIPHON BREAK | 00 | 1 |
| 10 | 214765 | GASKET, SIPHON BREAK | 00 | 1 |
| 11 | 206638 | SIPHON BREAK(W/CLAMP) | 00 | 1 |
| 12 | 200461 | HOSE CLAMP - 1-5/8 INCH Note: CLAMP, HOSE 1-5/8 INCH | 00 | 1 |
| 13 | 215058 | PAD, CABINET BUMPER | 00 | 2 |
| 14 | 214767 | HOSE,PUMP TO SIPHON BREAK Note: HOSE, PUMP | 00 | 1 |
| 15 | 214376 | SPACER, FRONT PANEL | 00 | 2 |
| 16 | 212982 | FASTENER, PANEL | 00 | 2 |
| 17 | 204439 | SCREW & FSTNER ASSY(FRT.PANEL) | 00 | 2 |
| 18 | 213846 | GUARD, BELT | 00 | 1 |
| 19 | 211294 | SCREW | 00 | 5 |
| 20 | 212998 | FRONT PANEL-WHITE Note: FRONT PANEL (WHT) | 00 | 1 |
| 21 | N 211878 | PLATE, ACCESS | 00 | 2 |
| 22 | 213122 | SCREW,CBNT.TO FRNT OF BASE--NA Note: SCREW, CABINET | 00 | 2 |
| 23 | 213007 | SCREW, CABINET | 00 | 6 |
| 24 | 213121 | SCREW | 00 | 3 |
| 25 | N 203319 | CABINET-WHITE Note: CABINET (WHT) | 00 | 1 |
| 26 | 214337 | SCREEN, VALVE | 00 | 2 |
| 27 | 205613 | WATER VALVE Note: VALVE, WATER | 00 | 1 |
| 28 | 201575 | HOSE CLAMP Note: CLAMP, HOSE | 00 | 1 |
| 29 | 214812 | BRACKET,WATER VALVE Note: BRACKET, WATER VALVE | 00 | 1 |
| 30 | 206103 | CAPACITOR KIT | 00 | 1 |
| 31 | 203237 | #17 WIRE WITH TERMINAL | 00 | 1 |
| 32 | 200832 | CAPACITOR | 00 | 1 |
| 33 | 211149 | CLIP, CAPACITOR | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
 
 
 
Section: TUB-WATER INLET & TUB COVER

Model: A882

Section: TUB-WATER INLET & TUB COVER

P/N 160002

Models: ALL MODELS

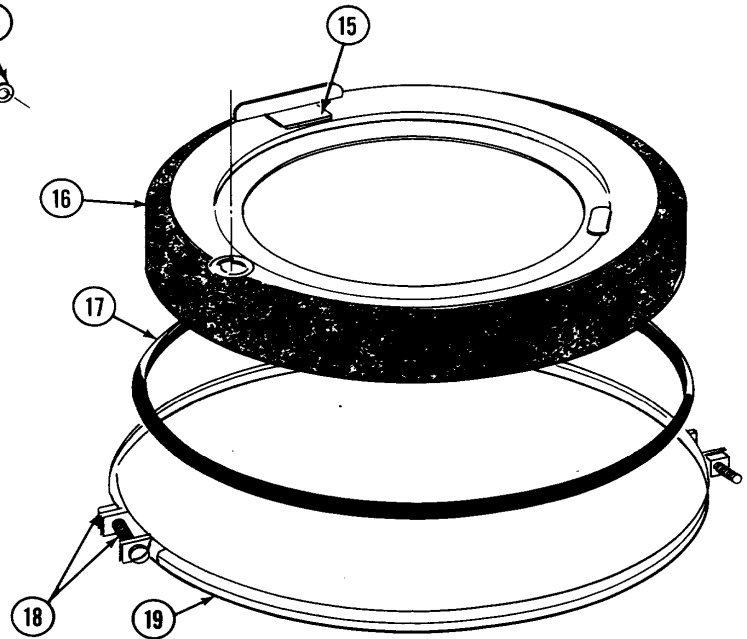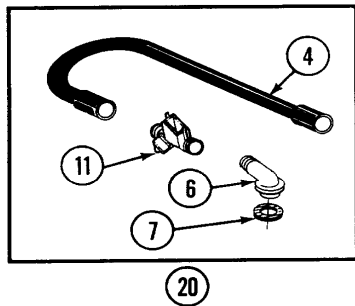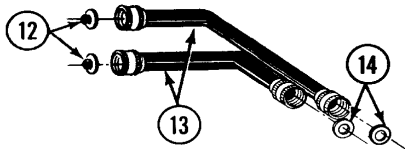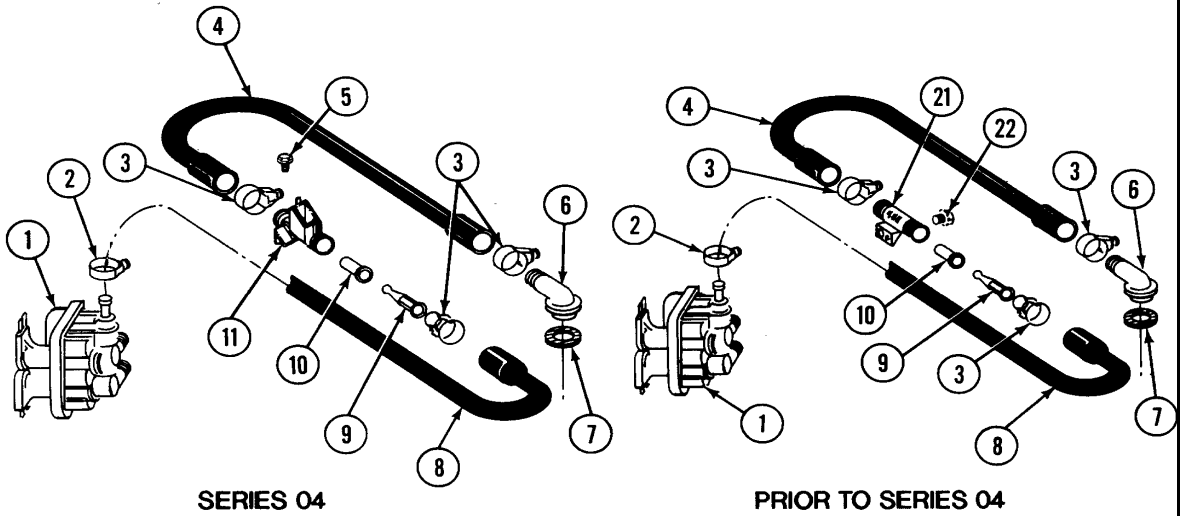

11/91

18

MA67D5

Section: TUB-WATER INLET & TUB COVER

| No. | Part No. | Description | Series | Qty |
|-----|----------|--|--------|-----|
| 1 | 205613 | WATER VALVE Note: VALVE, WATER | 00 | 1 |
| 2 | 201575 | HOSE CLAMP Note: CLAMP, HOSE | 00 | 1 |
| 3 | 202515 | HOSE CLAMP - 1-1/16 INCH Note: CLAMP, HOSE 1-1/16 INCH | 00 | 3 |
| 4 | 215234 | INJECTOR FILL HOSE Note: FILL HOSE, INJECTOR | 00 | 1 |
| 5 | 312620 | SEMS SCREW, #10-16 X 1/2" | 00 | 1 |
| 6 | 215235 | INJECTOR TUBE Note: TUBE, INJECTOR | 00 | 1 |
| 7 | 215233 | SEAL FOR INJECTOR TUBE Note: SEAL, INJECTOR TUBE | 00 | 1 |
| 8 | 213013 | HOSE, INJECTOR Note: HOSE, INJECTOR | 00 | 1 |
| 9 | 213015 | INJECTOR NOZZLE Note: NOZZLE, INJECTOR | 00 | 1 |
| 10 | 213016 | VALVE FOR INJECTOR SUB Note: VALVE, INJECTOR | 00 | 1 |
| 11 | 215447 | SLEEVE FOR INJECTOR Note: SLEEVE, INJECTOR | 04 | 1 |
| 12 | 200961 | SCREEN WASHER, INLET HOSE | 00 | 2 |
| 13 | 202860 | INLET HOSE ASSY. Note: SNLET HOSE ASSEMBLY | 00 | 2 |
| 14 | Y013783 | GASKET, INLET HOSE Note: WASHER, INLET HOSE | 00 | 2 |
| 15 | 215232 | UNBALANCE BUMPER Note: BUMPER, UNBALANCE | 00 | 1 |
| 16 | 206380 | TUB COVER Note: COVER, TUB | 00 | 1 |
| 17 | 211232 | SEAL Note: SEAL | 00 | 1 |
| 18 | 205529 | NUT & BOLT KIT FOR TUB CLAM | 00 | 2 |
| 19 | 200846 | CLAMP - TUB COVER Note: CLAMP, TUB COVER | 00 | 2 |
| 20 | 206683 | INJECTOR HOSE KIT | 00 | 1 |
| 21 | 213057 | SLEEVE FOR INJECTOR Note: SLEEVE, INJECTOR | 00 | 1 |
| 22 | 310632 | SCREW | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
Section: TUB-INNER & OUTER

Model: A882

Section: TUB-INNER & OUTER

P/N 160002

Models: ALL MODELS

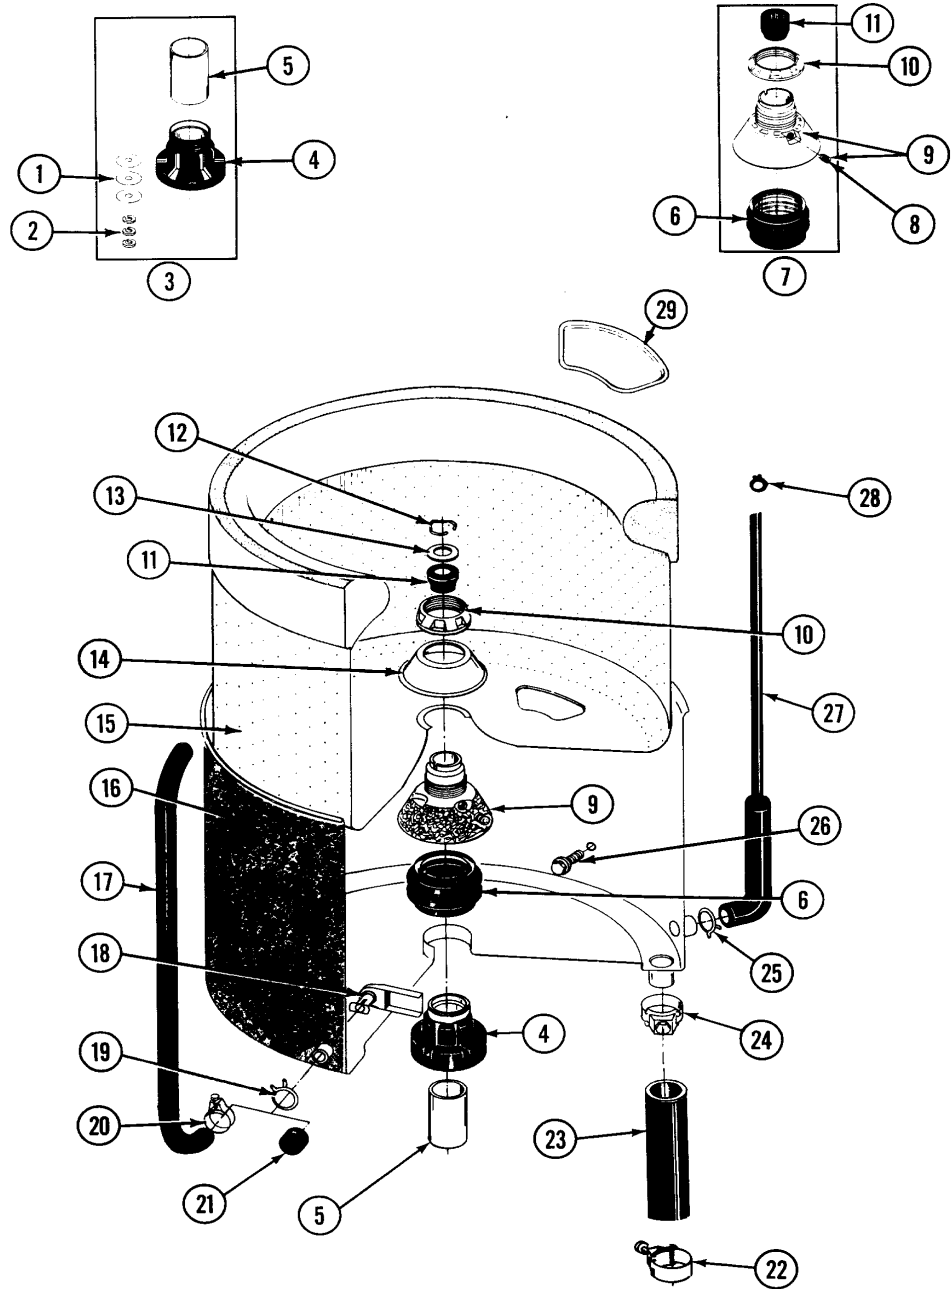

11/91

Section: TUB-INNER & OUTER

| No. | Part No. | Description | Series | Qty |
|-----|----------|--|--------|-----|
| 1 | 211100 | WASHER, CUSHION | 00 | 3 |
| 2 | Y054867 | WASHER, LOCK | 00 | 3 |
| 3 | 204013 | TUB BEARING REPAIR KIT | 00 | 1 |
| 4 | 200824 | BEARING, TUB | 00 | 1 |
| 5 | 211130 | LINER, TUB BEARING | 00 | 1 |
| 6 | 201537 | SEAL AND SPRING | 00 | 1 |
| 7 | 204012 | MOUNTING STEM REPAIR KIT | 00 | 1 |
| 8 | 211618 | SET SCREW, MTG. STEM Note: SET SCREW, MOUNTING STEM | 00 | 1 |
| 9 | 202521 | MOUNTING STEM Note: STEM, MOUNTING | 00 | 1 |
| 10 | 211047 | NUT, CLAMPING (INNER TUB) | 00 | 1 |
| 11 | Y0A4298 | SEAL, AGITATOR DRIVE SHAFT | 00 | 1 |
| 12 | Y015667 | RETAINING RING | 00 | 1 |
| 13 | 015666 | WASHER,RETAINING(CENTER SEAL)- Note: WASHER, RETAINING | 00 | 1 |
| 14 | 211210 | WASHER,CLAMPING NUT(STAINLESS) Note: WASHER, CLAMPING NUT(STNLS) | 00 | 1 |
| 15 | 207831 | INNER TUB W/PLUG Note: TUB, INNER | 00 | 1 |
| 16 | 205484 | OUTER TUB Note: TUB, OUTER | 00 | 1 |
| 17 | 214433 | TUBE, INLET TO TUB Note: TUBE, BLEACH INLET | 00 | 1 |
| 18 | 214434 | SPOUT, DEFLECTOR | 00 | 1 |
| 19 | 214739 | SPRING HOSE CLAMP Note: CLAMP, SPRING HOSE | 00 | 1 |
| 20 | 205161 | CLAMP - 15/16" Note: CLAMP, BLEACH HOSE | 00 | 1 |
| 21 | 214725 | CAP FOR SPOUT-OUTER TUB Note: CAP, SPOUT | 00 | 1 |
| 22 | 200461 | HOSE CLAMP - 1-5/8 INCH Note: CLAMP, HOSE 1-5/8 INCH | 00 | 1 |
| 23 | 213045 | DRAIN HOSE-TUB TO PUMP Note: HOSE, OUTER TUB | 00 | 1 |
| 24 | 200900 | CLAMP, SPRAY ARM HOSE | 00 | 1 |
| 25 | 211641 | CLAMP, 1-1/16" | 00 | 1 |
| 26 | 205254 | BOLT & GASKET ASSEMBLY (LONG) Note: (LONG) | 00 | 2 |
| 26 | 200744 | BOLT & GASKET ASSY.(SHORT) Note: BOLT & GASKET ASSM.(SHORT) | 00 | 1 |
| 27 | 212942 | AIR DOME AND TUBE | 00 | 1 |
| 28 | 410296 | CLAMP,WATER LEVEL SWTCH TUBE Note: CLAMP, TUBE | 00 | 1 |
| 29 | 215980 | PLUG, FILTER HOLE Note: PLUG, FILTER HOLE | 00 | 2 |

 
*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

Section: TRANSMISSION-HELICAL DRIVE

Model: A882

Section: TRANSMISSION-HELICAL DRIVE
Models: ALL MODELS

P/N 1600021

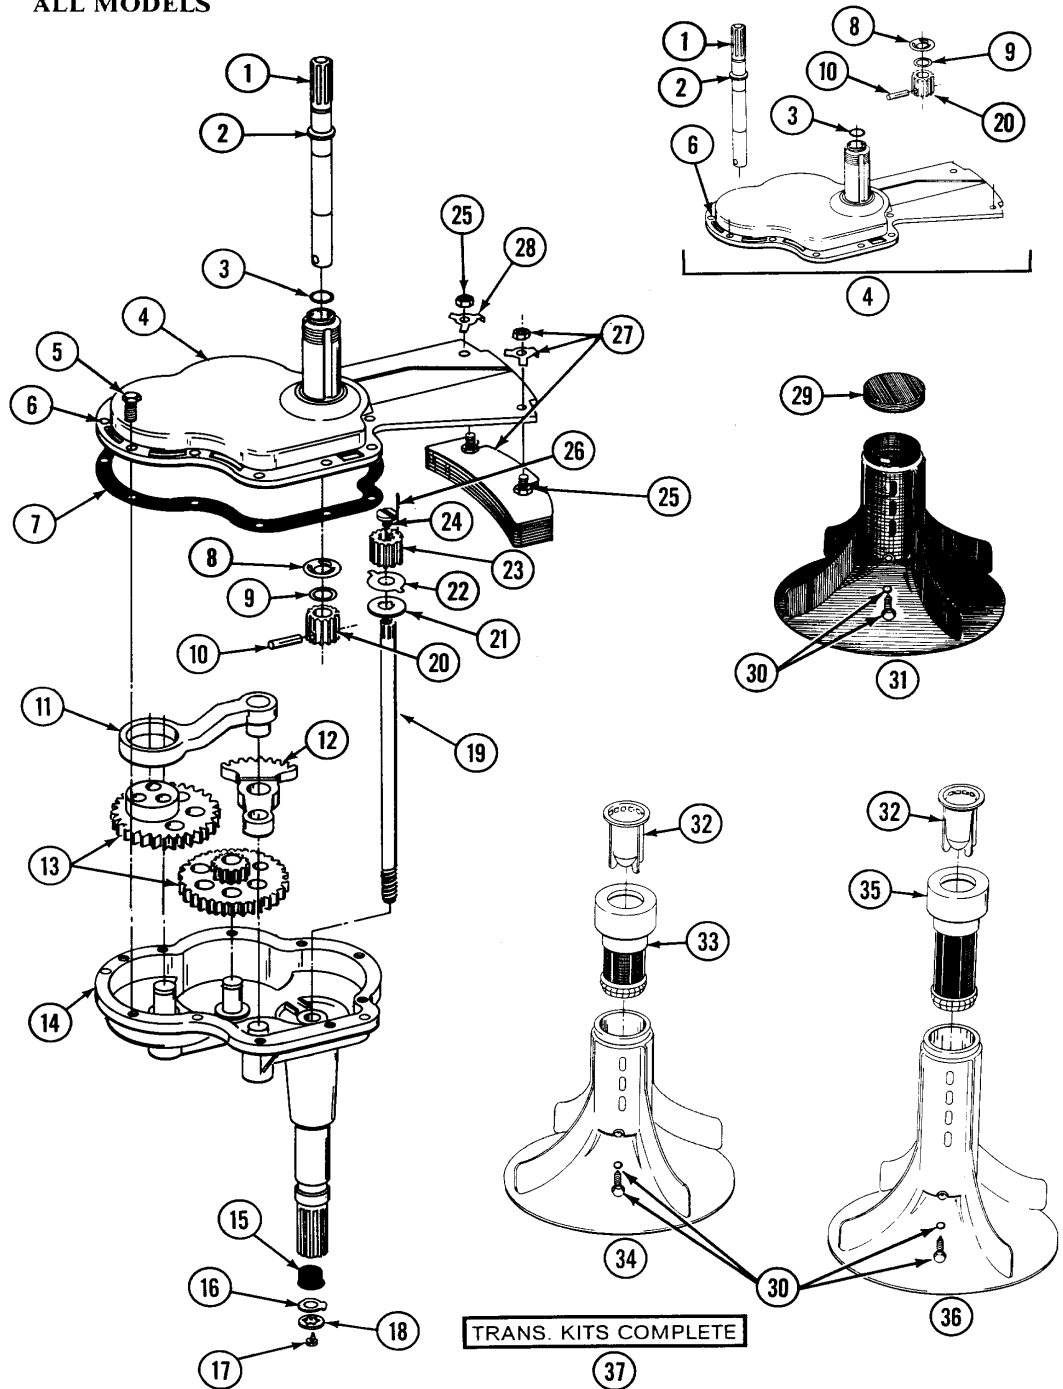

11/91

Section: TRANSMISSION-HELICAL DRIVE

| No. | Part No. | Description | Series | Qty |
|-----|----------|--|--------|-----|
| 1 | 200730 | AGITATOR SHAFT Note: SHAFT, AGITATOR | 00 | 1 |
| 2 | 014839 | COLLAR-DRIVE SHAFT Note: COLLAR, DRIVE SHAFT | 00 | 1 |
| 3 | 210690 | SEAL, RUBBER | 00 | 1 |
| 4 | N 200813 | GEAR CASE COVER ASSEMBLY | 00 | 1 |
| 5 | Y015629 | BOLT, GRINDING CHAMBER-DRAI Note: BOLT, GRINDING CHAMBER | 00 | 10 |
| 6 | N 015639 | DOWEL PIN Note: PIN, DOWEL | 00 | 2 |
| 7 | 210632 | GASKET | 00 | 1 |
| 8 | Y015902 | SPRING FOR AGITATOR Note: SPRING, AGITATOR | 00 | 1 |
| 9 | Y014827 | WASHER-CENTER SHAFT Note: WASHER, CENTER SHAFT | 00 | 1 |
| 10 | 210183 | GROOV-PIN, 1/4 X 1-1/4 | 00 | 1 |
| 11 | N 201463 | PITMAN WITH WRIST PIN | 00 | 1 |
| 12 | N 210670 | SEGMENT | 00 | 1 |
| 13 | 204967 | GEAR KIT-POWER FIN AGITATOR | 00 | 1 |
| 14 | N 203193 | GEAR HOUSING W/STUDS & TUBE Note: HOUSING, GEAR | 00 | 1 |
| 15 | 206602 | SEAL, LIP (CENTER SHAFT) | 00 | 1 |
| 16 | 211089 | LUG, STOP | 00 | 1 |
| 17 | 211375 | SCREW,STOP LUG(CENTER SHAFT) Note: SCREW, STOP LUG | 00 | 1 |
| 18 | 211090 | WASHER, LOCK | 00 | 1 |
| 19 | 213044 | CENTER SHAFT Note: SHAFT, CENTER | 00 | 1 |
| 20 | 210054 | PINION | 00 | 1 |
| 21 | 211483 | WASHER, SPLINED | 00 | 1 |
| 22 | 211484 | LUG WASHER Note: WASHER, LUG | 00 | 1 |
| 23 | 210315 | PINION | 00 | 1 |
| 24 | 211486 | SCREW, 3/8-16 X 1/2 INCH | 00 | 1 |
| 25 | Y052740 | NUT | 00 | 4 |
| 26 | N 211487 | GROOV-PIN | 00 | 1 |
| 27 | N 205811 | COUNTERWEIGHT | 00 | 1 |
| 28 | N 210172 | LOCK WASHER Note: WASHER, LOCK | 00 | 2 |
| 30 | 206478 | SCREW & WASHER FOR AGITATOR Note: SCREW & WASHER, AGITATOR | 00 | 1 |
| 32 | 212815 | DISPENSER CUP Note: CUP, DISPENSER | 00 | 1 |
| 35 | 203265 | LINT FILTER-DISPENSER Note: FILTER, LINT | 00 | 1 |
| 36 | 203323 | AGITATOR - TURQUOISE Note: AGITATOR | 00 | 1 |
| 37 | 203438 | TRANS & CENTER ASSM. LG TUB | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
Section: TRANSMISSION-ORBITAL

Model: A882

Section: TRANSMISSION-ORBITAL

P/N 160002

Models: ALL MODELS

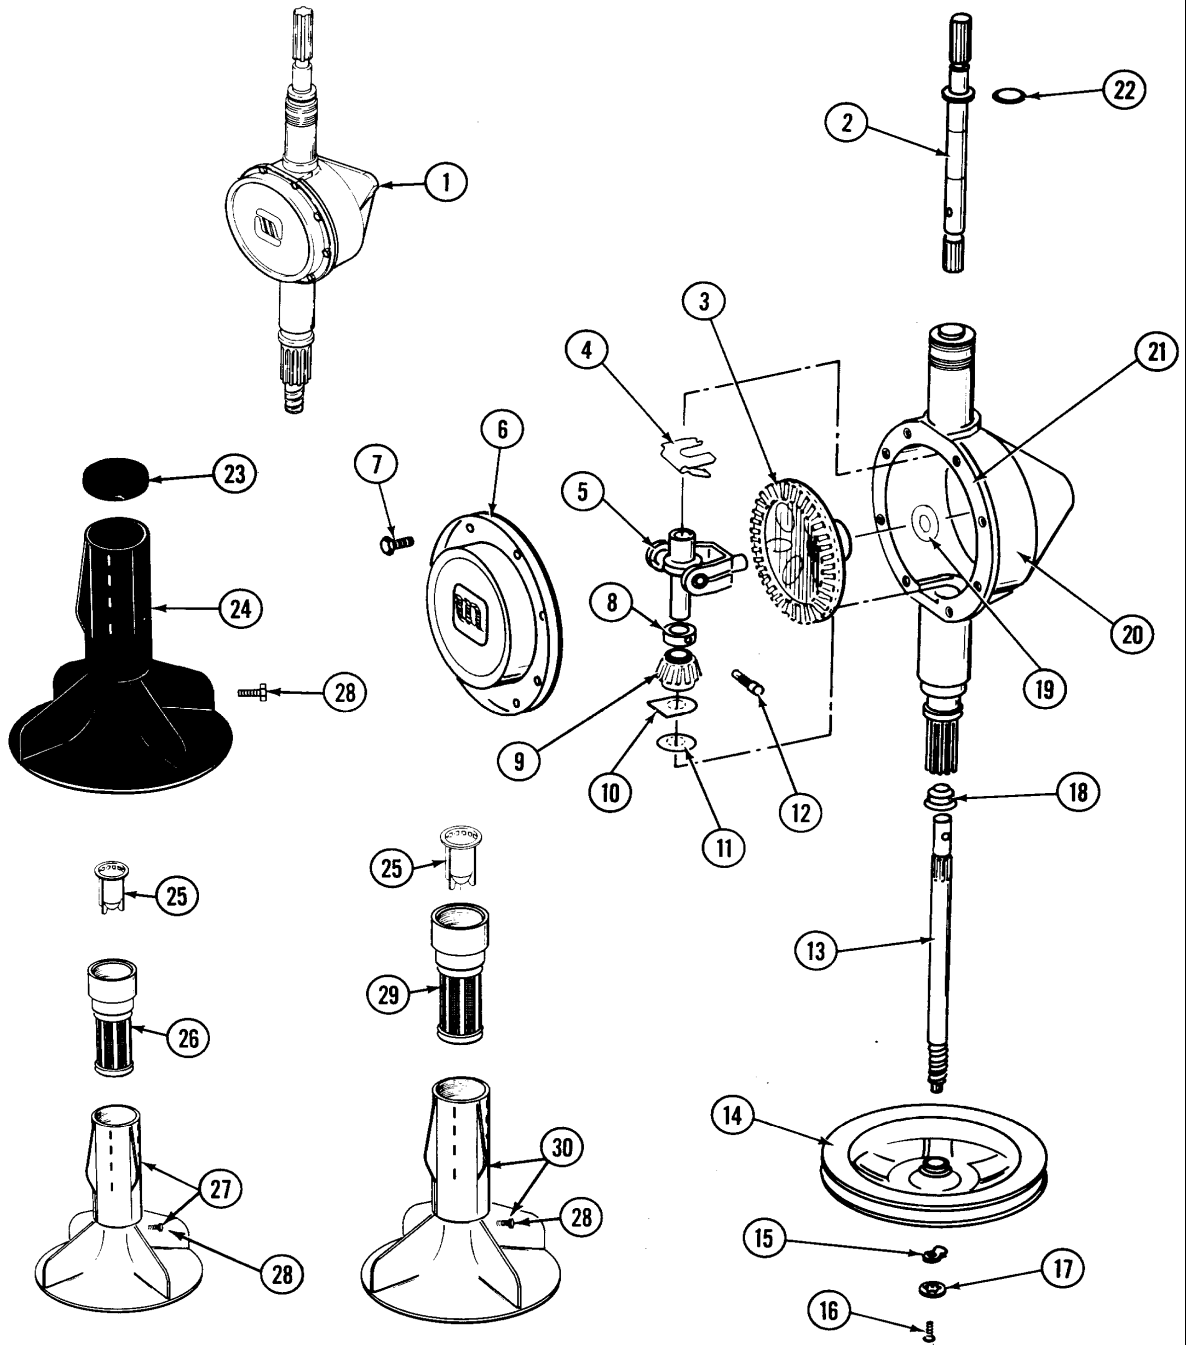

11/91

24

MA67D11

Section: TRANSMISSION-ORBITAL

| No. | Part No. | Description | Series | Qty |
|-----|----------|--|--------|-----|
| 1 | 206707 | TRANSMISSION, ORBITAL | 10 | 1 |
| 2 | 207153 | SHAFT, AGITATOR (W/SPRING) | 10 | 1 |
| 3 | 206713 | GEAR, BEVEL | 10 | 1 |
| 4 | 215581 | SPRING, AGITATOR SHAFT | 10 | 1 |
| 5 | 206685 | BLOCK, TORQUE AND YOKE ASSEMBL | 10 | 1 |
| 6 | 206628 | COVER, TRANSMISSION | 10 | 1 |
| 7 | 215417 | SCREW, TRANSMISSION COVER | 10 | 8 |
| 8 | 215415 | COLLAR, LOWER | 10 | 1 |
| 9 | 215401 | PINION | 10 | 1 |
| 10 | 215395 | PLATE, CLUTCH | 10 | 1 |
| 11 | 211483 | WASHER, SPLINED | 10 | 1 |
| 12 | 206629 | PIN, COLLAR | 10 | 1 |
| 13 | 215410 | CENTER SHAFT - LARGER Note: SHAFT, CENTER (LARGER) | 10 | 1 |
| 14 | 211059 | PULLEY, DRIVE | 10 | 1 |
| 15 | 211089 | LUG, STOP | 10 | 1 |
| 16 | 211375 | SCREW,STOP LUG(CENTER SHAFT) | 10 | 1 |
| 17 | 211090 | WASHER, LOCK | 10 | 1 |
| 18 | 206602 | SEAL, LIP (CENTER SHAFT) | 10 | 1 |
| 19 | 215394 | WASHER, BEVEL GEAR | 10 | 1 |
| 20 | 206624 | HOUSING, TRANSMISSION | 10 | 1 |
| 21 | Y058700 | SILASTIC,ADH.SEALANT Note: SILASTIC, ADHESIVE SEALANT | 10 | 1 |
| 22 | 210690 | SEAL, RUBBER | 10 | 1 |
| 25 | 215733 | DISPENSING CUP Note: CUP, DISPENSING | 10 | 1 |
| 28 | 206478 | SCREW & WASHER FOR AGITATOR Note: SCREW & WASHER, AGITATOR | 10 | 1 |
| 30 | 207228 | AGITATOR W/LOCK SCREW | 10 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
Section: BASE

Model: A882

Section: BASE

P/N 160002

Models: ALL MODELS

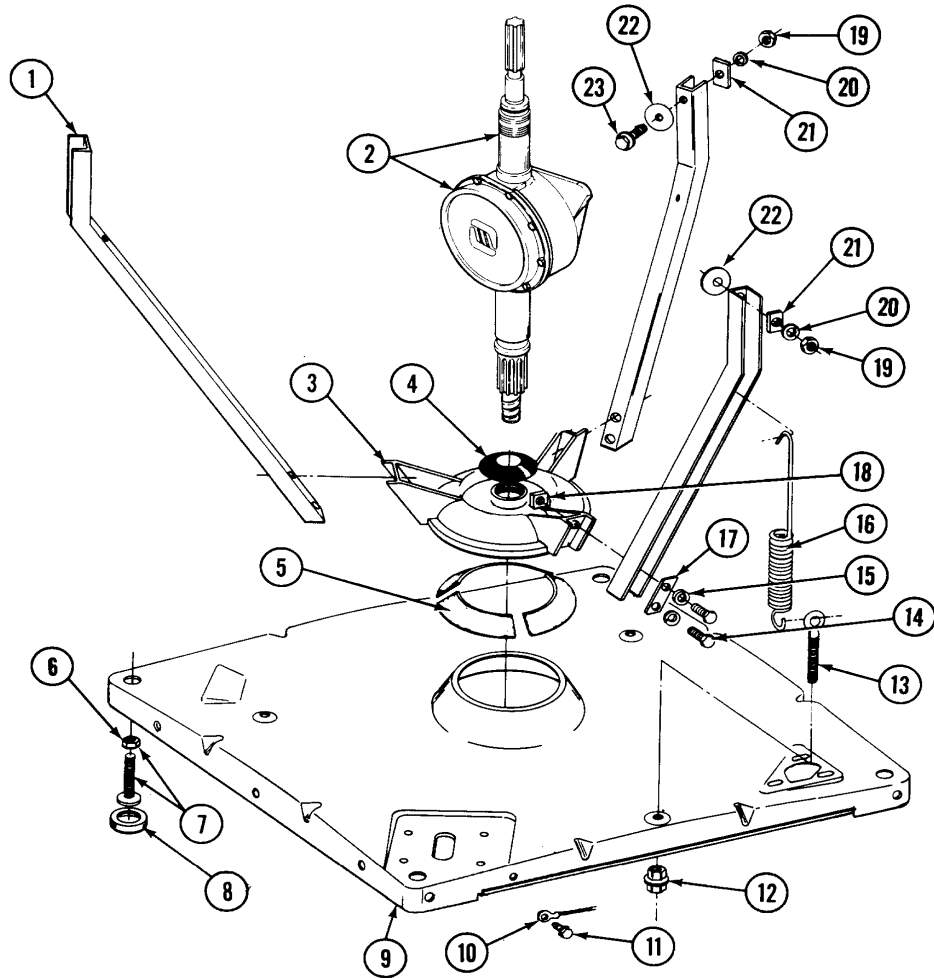

11/91

26

MA67D13

Section: BASE

| No. | Part No. | Description | Series | Qty |
|-----|----------|---|--------|-----|
| 1 | 213053 | BRACE, TUB | 00 | 3 |
| 2 | 206707 | TRANSMISSION, ORBITAL | 00 | 1 |
| 3 | 203725 | DAMPER W/BOLT & CLIP | 00 | 1 |
| 4 | 211028 | DEFLECTOR,WATER (DRIVE TUBE) | 00 | 1 |
| 5 | 203956 | DAMPER PAD KIT (W/POLY LUBE) | 00 | 1 |
| 6 | 210385 | NUT, LOCK | 00 | 4 |
| 7 | 302699 | LEG, ADJUSTABLE (W/NUT) | 00 | 4 |
| 8 | 210684 | FOOT, RUBBER | 00 | 4 |
| 9 | 203274 | BASE WITH DAMPER PADS | 00 | 1 |
| 10 | 204807 | GRND.WIRE,SUPP.PLTE TO TOP CVR Note: WIRE, GROUND | 00 | 1 |
| 11 | 210186 | SCREW, GROUND WIRE TO BASE--NA Note: SCREW, GROUND WIRE | 00 | 1 |
| 12 | 211949 | NUT, EYEBOLT | 00 | 3 |
| 13 | 213120 | EYE BOLT FOR CENTER SPRING Note: EYE BOLT, CENTER SPRING | 00 | 3 |
| 14 | Y015627 | SCREW, HEX HD CAP 5/16 X 5/8 | 00 | 6 |
| 15 | 911852 | WASHER, LOCK (BRACE) | 00 | 6 |
| 16 | 213054 | CENTERING SPRING - 3 USED Note: SPRING, CENTERING | 00 | 3 |
| 17 | 213073 | WASHER, DOUBLE Note: WASHER, DOUBLE | 00 | 3 |
| 18 | Y052785 | NUT,BRACE TO DAMPER Note: NUT, BRACE TO DAMPER | 00 | 6 |
| 19 | Y052734 | NUT Note: NUT, BRACE TO TUB | 00 | 3 |
| 20 | Y054867 | WASHER, LOCK | 00 | 3 |
| 21 | 212979 | WASHER, TUB BRACE | 00 | 3 |
| 22 | 211100 | WASHER, CUSHION | 00 | 3 |
| 23 | 200744 | BOLT & GASKET ASSY.(SHORT) Note: BOLT & GASKET ASSM.(SHORT) | 00 | 1 |
| 23 | 205254 | BOLT & GASKET ASSEMBLY (LONG) Note: (LONG) | 00 | 2 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
Section: MOTOR & PUMP ASSEMBLY

Model: A882

Section: MOTOR & PUMP ASSEMBLY

P/N 1600021

Models: ALL MODELS

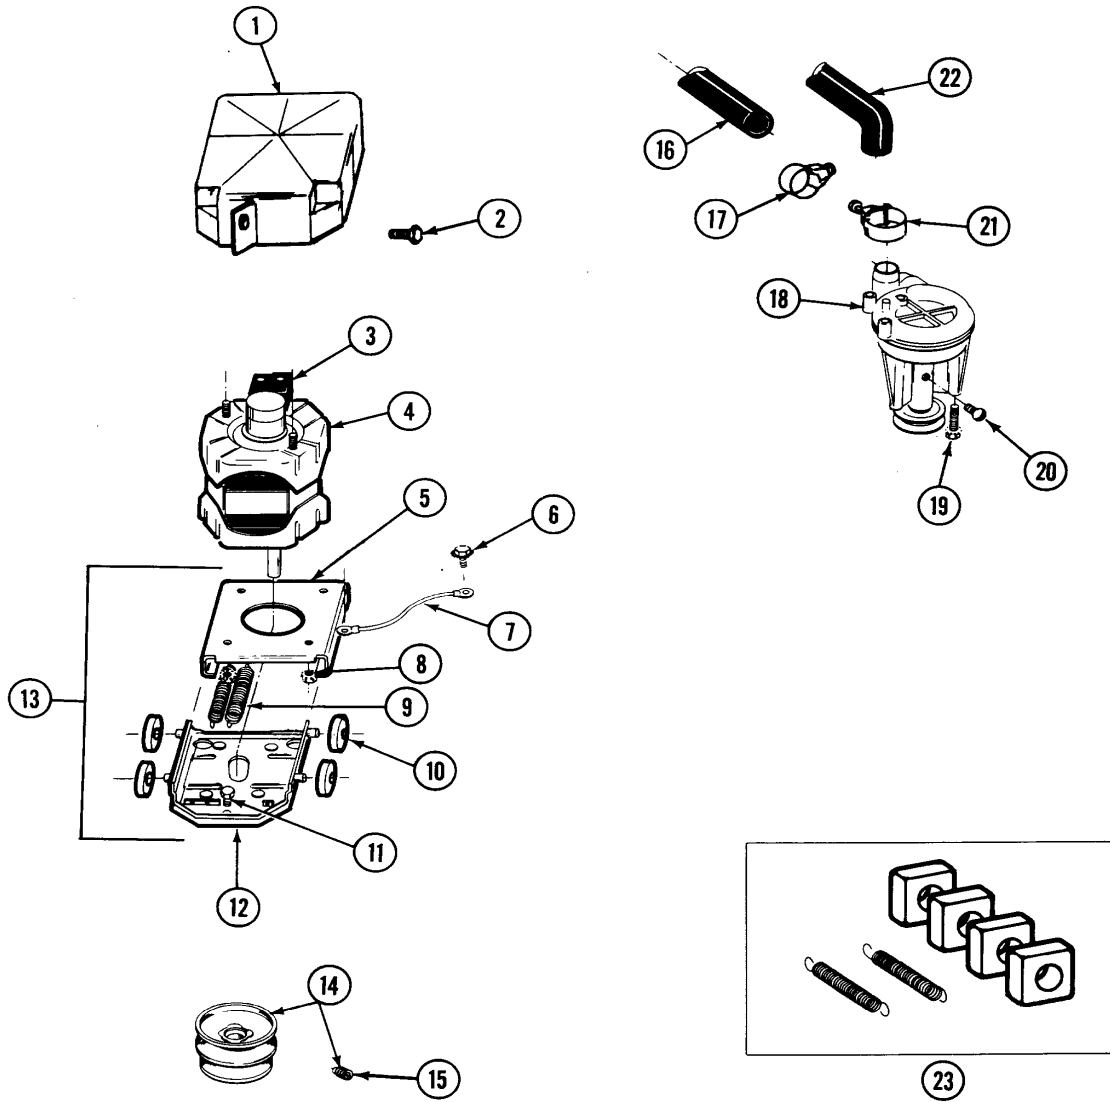

11/91

Section: MOTOR & PUMP ASSEMBLY

| No. | Part No. | Description | Series | Qty |
|------|----------|---|--------|-----|
| 1 | 215098 | SHIELD, MOTOR | 00 | 1 |
| 2 | 213121 | SCREW | 00 | 1 |
| 3 | 206504 | MOTOR EXTERNAL START SWITCH Note: SWITCH, MOTOR START (PROD. #2-1664-11, #2-1664-13 & #2-5463-1) | 00 | 1 |
| 3 N | 205133 | MOTOR EXTERNAL START SWITCH Note: SWITCH, MOTOR START (PROD.#2-1664-8 & #2-5463) | 00 | 1 |
| 3 | 205131 | SWITCH, MOTOR START Note: (PROD.#2-1666-2, #2-1666-11, #2-1666-12, #2-1666-14 & #2-5464-2) | 00 | 1 |
| 3 N | 205134 | MOTOR EXTERNAL START SWITCH Note: SWITCH, MOTOR START (PROD.#2-1664-8 & #2-5463) | 00 | 1 |
| 3 | 205132 | SWITCH, MOTOR START Note: (PROD. #2-1664-4, #2-1664-4, #2-1664-9, #2-1664-10, #2-1664-12 & #2-5463-2) | 00 | 1 |
| 4 | 201805 | MOTOR (ONE SPEED) | 00 | 1 |
| 5 | 214956 | MOUNT, MOTOR/UPPER Note: PLATE, UPPER MOTOR MOUNT | 00 | 1 |
| 6 | 210186 | SCREW, GROUND WIRE TO BASE--NA Note: SCREW, GROUND WIRE | 00 | 1 |
| 7 | 901220 | WIRE, GROUND | 00 | 1 |
| 8 | 311426 | NUT, WASHERED LOCK Note: KEPS NUT, MOTOR BASE | 00 | 4 |
| 9 | 202718 | TENSION SPRINGS Note: SPRINGS, TENSION | 00 | 1 |
| 10 | 204998 | GLIDE KIT (4 W/POLY LUBE) | 00 | 1 |
| 11 N | 313561 | SCREW----NA | 00 | 3 |
| 12 | 205908 | LOWER MOTOR MOUNT Note: MOUNT, LOWER MOTOR | 00 | 1 |
| 13 | 205999 | MOTOR MOUNT ASSM COMPLETE Note: MOTOR MOUNT ASSEMBLY | 00 | 1 |
| 14 | 200816 | PULLEY, MOTOR (W/SET SCREW) | 00 | 1 |
| 15 | Y053241 | SET SCREW, PULLEY | 00 | 1 |
| 16 | 214767 | HOSE,PUMP TO SIPHON BREAK Note: HOSE, PUMP | 00 | 1 |
| 17 | 200461 | HOSE CLAMP - 1-5/8 INCH Note: CLAMP, HOSE 1-5/8 INCH | 00 | 1 |
| 18 | 202203 | PUMP AS PAK | 00 | 1 |
| 19 | 211880 | SCREW, HEX HD #10 X 1/2 INC | 00 | 3 |
| 20 | Y015408 | SCREW, BEARING INSERT | 00 | 1 |
| 21 | 202574 | CLAMP, HOSE | 00 | 1 |
| 22 | 213045 | DRAIN HOSE-TUB TO PUMP Note: HOSE, OUTER TUB | 00 | 1 |
| 23 | 205000 | GLIDE & SPRING KIT | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
Section: CLUTCH, BRAKE & BELTS

Model: A882

Section: CLUTCH, BRAKE & BELTS

P/N 1600021

Models: ALL MODELS

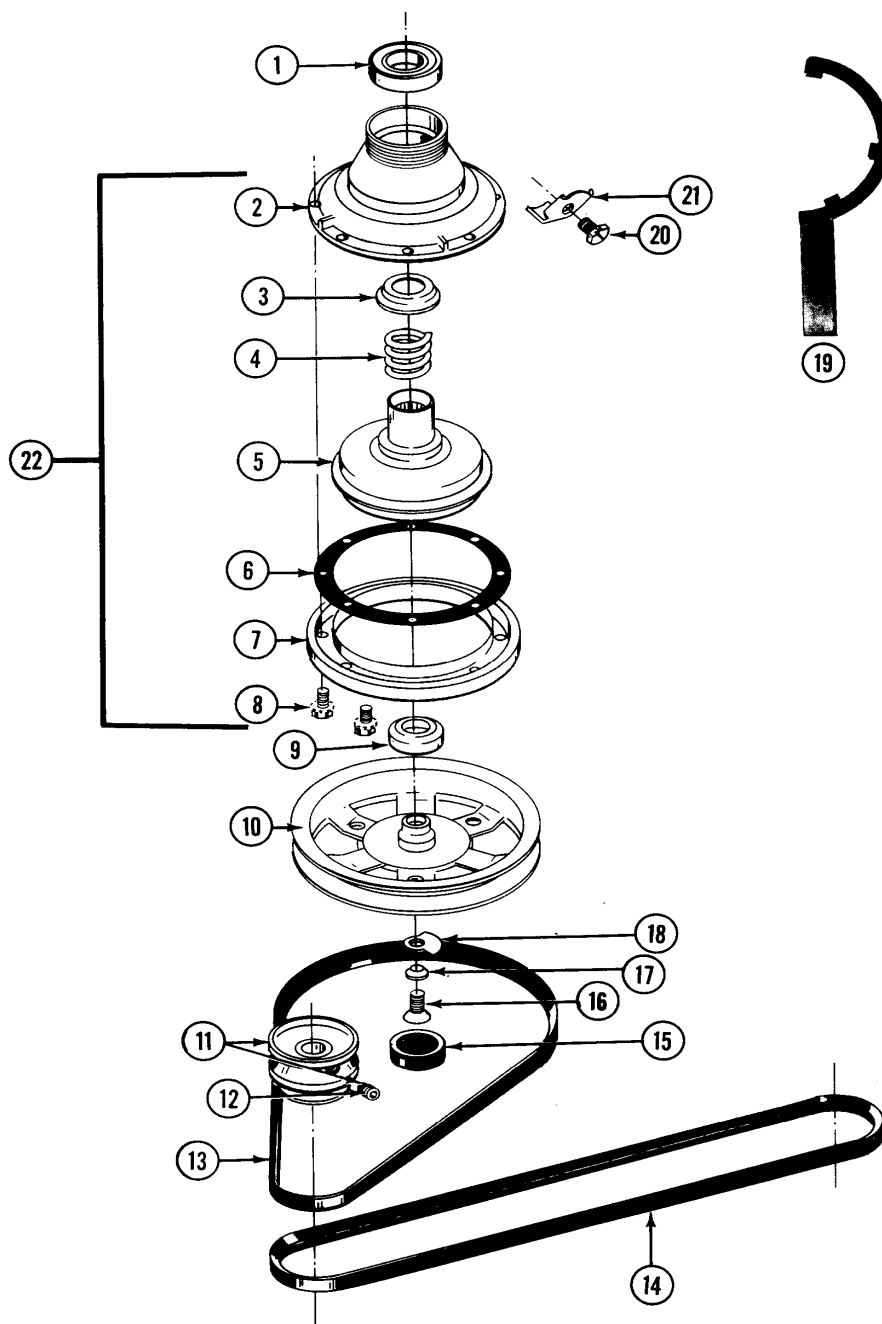

11/91

30

MA67E3

Section: CLUTCH, BRAKE & BELTS

| No. | Part No. | Description | Series | Qty |
|------|----------|--|--------|-----|
| 1 | 200720 | BALL BEARING, RADIAL | 00 | 1 |
| 2 | 211045 | HOUSING, BRAKE | 00 | 1 |
| 3 | 211039 | RETAINER, BRAKE SPRING | 00 | 1 |
| 4 | 211041 | SPRING, BRAKE | 00 | 1 |
| 5 | 201126 | ROTOR, BRAKE (W/FACING) | 00 | 1 |
| 6 | 211042 | GASKET, BRAKE DRUM | 00 | 1 |
| 7 | 211043 | DRUM, BRAKE | 00 | 1 |
| 8 | 211000 | SCREW,HEX HEAD (BRAKE DRUM) | 00 | 8 |
| 9 | 200835 | BEARING, BRAKE ROTOR | 00 | 1 |
| 10 | 211059 | PULLEY, DRIVE | 00 | 1 |
| 11 | 200816 | PULLEY, MOTOR (W/SET SCREW) | 00 | 1 |
| 12 | Y053241 | SET SCREW, PULLEY | 00 | 1 |
| 13 | 211125 | V BELT,DRIVE PULLEY | 00 | 1 |
| 14 | 211124 | V BELT, PUMP | 00 | 1 |
| 15 N | 211038 | CAP, OIL RETAINER | 00 | 1 |
| 16 | 211375 | SCREW,STOP LUG(CENTER SHAFT) | 00 | 1 |
| 17 | 211090 | WASHER, LOCK | 00 | 1 |
| 18 | 211089 | LUG, STOP | 00 | 1 |
| 19 | Y038315 | TOOL, BRAKE PKG ASSY Note: TOOL, BRAKE PACKAGE | 00 | 1 |
| 20 | 213326 | SCREW, RETAINING CLIP Note: BOLT, RETAINING CLIP | 00 | 1 |
| 21 | 213325 | CLIP, RETAINER | 00 | 1 |
| 22 | 201190 | BRAKE ASSEMBLY | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available

 
 
Section: CONTROL PANEL

Model: A882

Section: CONTROL PANEL

P/N 1600021

Models: A506 A882

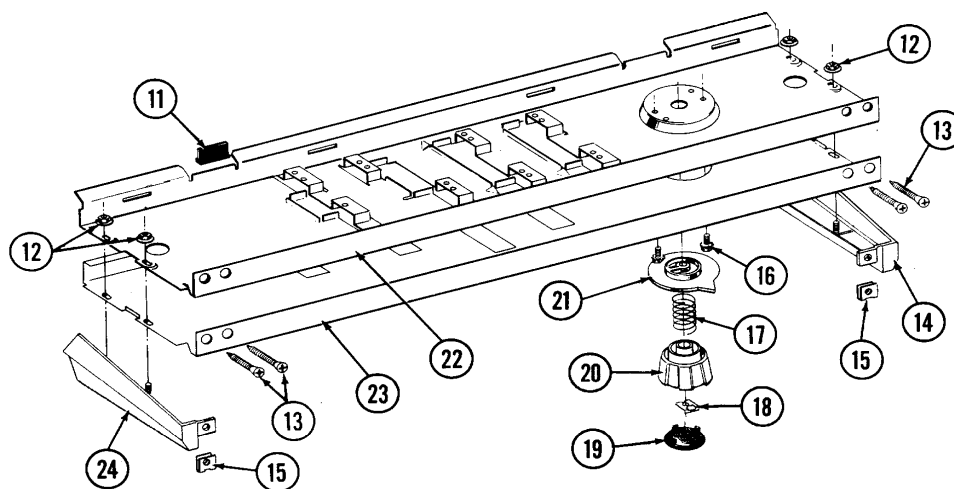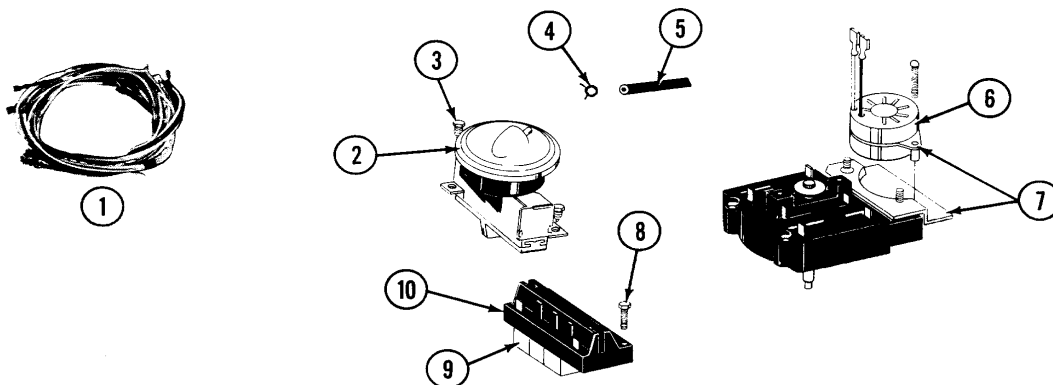

11/91

Section: CONTROL PANEL

| No. | Part No. | Description | Series | Qty |
|-----|----------|---|--------|-----|
| 1 | N 206231 | WIRE HARNESS Note: HARNESS, WIRE | 00 | 1 |
| 2 | 206223 | INFINITE WATER LEVEL SWITCH Note: SWITCH, WATER LEVEL | 00 | 1 |
| 3 | 211168 | SCREW, #8 X 5/16 INCH | 00 | 2 |
| 4 | 410296 | CLAMP,WATER LEVEL SWTCH TUBE Note: CLAMP, TUBE | 00 | 1 |
| 5 | 212942 | AIR DOME AND TUBE | 00 | 1 |
| 6 | 205033 | TIMER MOTOR 120-60 Note: MOTOR, TIMER 120-60 | 00 | 1 |
| 7 | 206230 | TIMER | 00 | 1 |
| 8 | 213117 | SCREW-TEMP. SWITCH TO PANEL Note: SCREW, TEMPERATURE SWITCH | 00 | 2 |
| 9 | 215211 | BUTTON FOR SWITCH Note: BUTTON, SWITCH | 00 | 3 |
| 10 | 206216 | WATER TEMPERATURE SWITCH Note: SWITCH, WATER TEMPERATURE | 00 | 1 |
| 11 | N 214897 | PAD, CONTROL PANEL | 00 | 2 |
| 12 | 214872 | PALNUT, END CAP | 00 | 4 |
| 13 | 210932 | SCREW, #8 X 9/16 CTSK | 00 | 4 |
| 14 | 214816 | END CAP F/CONTROL PANEL-RH Note: CAP, END (RH) | 00 | 1 |
| 15 | 214894 | FASTENER, END CAP | 00 | 2 |
| 16 | 213966 | SCREW-TIMER TO CONTROL PANE Note: SCREW, TIMER | 00 | 2 |
| 17 | 211065 | SPRING, TIMER KNOB | 00 | 1 |
| 18 | 211605 | RETAINER, TIMER KNOB | 00 | 1 |
| 19 | 215163 | CAP FOR KNOB Note: CAP, KNOB | 00 | 1 |
| 20 | 215162 | TIMER KNOB Note: KNOB, TIMER | 00 | 1 |
| 21 | 215161 | TIMER DIAL INDICATOR Note: INDICATOR, TIMER DIAL | 00 | 1 |
| 22 | 214809 | BACK UP PLATE Note: PLATE, BACK UP | 00 | 1 |
| 23 | N 206706 | CONTROL PANEL Note: PANEL, CONTROL | 00 | 1 |
| 24 | N 214815 | END CAP F/CONTROL PANEL-LH Note: CAP, END (LH) | 00 | 1 |

*Color Code (-)=Not Shown #=Series, Serial Prefix or Run No., N=Not Available