


KITCHENAID KBSS271TSS0 Owner's Manual


[Shop genuine replacement parts for KITCHENAID
KBSS271TSS0](#)

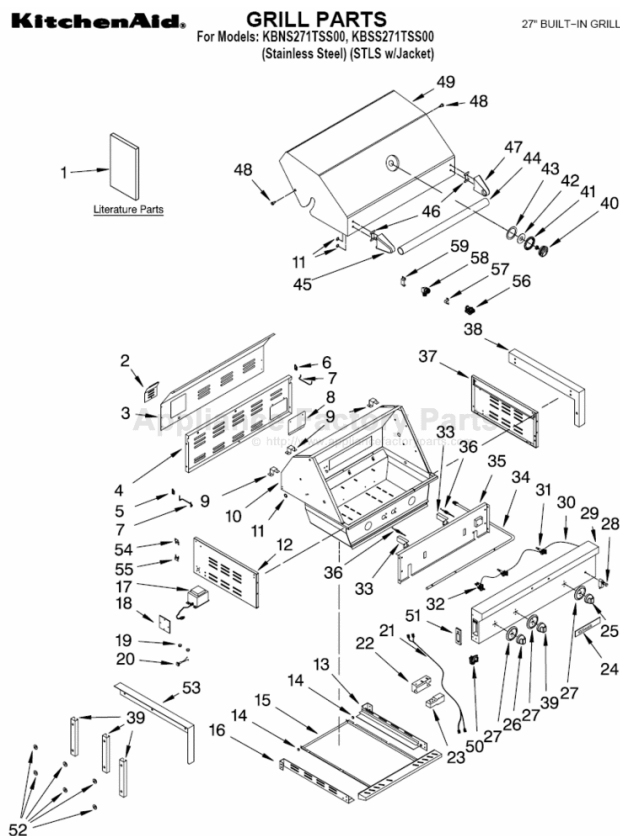

[Find Your KITCHENAID Grill Parts - Select From 200 Models](#)

----- Manual continues below -----

For Models: KBNS271TSS00, KBSS271TSS00
(Stainless Steel) (STLS w/Jacket)

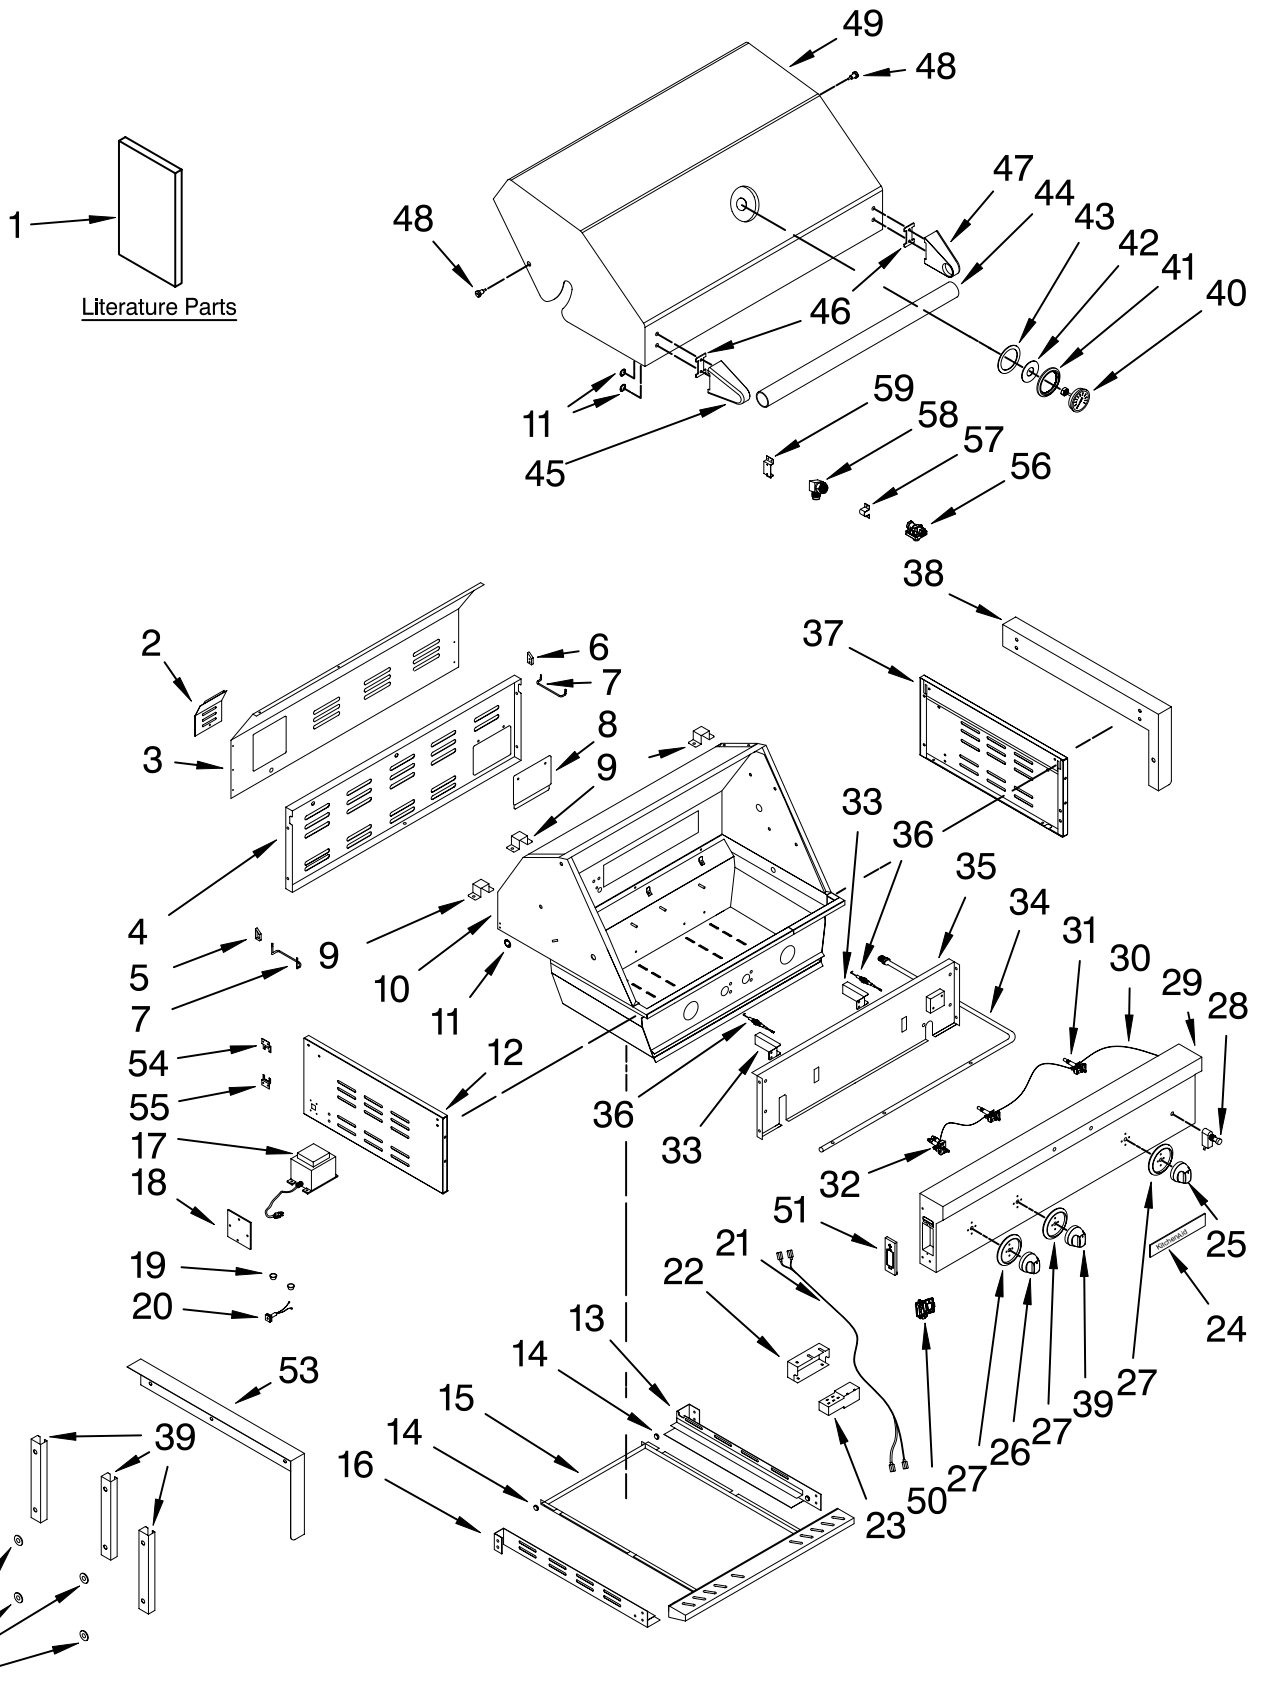

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GRILL PARTS

For Models: KBNS271TSS00, KBSS271TSS00
(Stainless Steel) (STLS w/Jacket)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	19		Bushing	40	W10128777	Thermometer
	W10110724	Use & Care Guide		W10132691	Plastic (#SB22)	41	W10128779	Bezel, Thermometer
	W10110730	Conversion Instr. (LP to Natural)		W10132692	Plastic (#SB19)	42	W10128780	Insulator, Thermometer(Small)
2	W10128619	Cover, Rear	20	W10132693	Outlet,Transformer	43	W10128782	Insulator, Thermometer(Large)
3	W10128620	Panel, Rear	21	W10128663	Harness, Wire Light	44	W10128783	Handle, Hood
4	W10128632	Panel, Access	22	W10128664	Cover, Igniter	45	W10128785	Endcap, Handle (Left)
5	W10128634	Bracket, Panel Left	23	W10128665	Igniter	46	W10128786	Spacer, Handle
6	W10128635	Bracket, Panel Right	24	W10128751	Nameplate	47	W10128787	Endcap, Handle (Right)
7	W10128636	Bracket, Warming Rack	25	W10128753	Knob, Main Burner	48	W10128788	Hinge, Lid
8	W10128637	Cover, Access Panel	26	W10128756	Knob, Rear Burner	49	W10128789	Hood
9	W10128638	Clip, Wire	27	W10128759	Bezel, Knob	50	W10128715	Box, Battery
10	W10128639	Hood Assy	28	W10128761	Switch, Light	51	W10128711	Cover, Battery Box
11	W10128640	Hole Plug	29	W10128762	Panel, Control	52	W10132698	Washer
12	W10132699	Panel, Side Left	30	W10128763	Harness, Wire Control	53	W10132696	Flange (LF)
13	W10128644	Bracket, Grease Tray (Right)	31	W10128764	Valve, Main Brnr	54	W10132694	Brkt,Trnsfrmr(Top)
14	W10128655	Roller, Drip Tray	32	W10128766	Valve, Rear Brnr	55	W10132695	Brkt,Trnsfrmr(Btm)
15	W10128656	Drip Tray Assy (Includes Rollers)	33	W10128767	Igniter, Main Gas	56	W10132702	Regulator (NG)
16	W10128657	Bracket, Grease Tray (Left)	34	W10128768	Manifold	57	W10128747	Fixture,Manifold
17	W10128669	Transformer	35	W10128769	Baffle, Front	58	W10128748	Connector (Brass)
18	W10132690	Cover, Wire Terminal	36	W10128770	Electrode, Main Burner	59	W10128749	Base, Manifold Fixture
			37	W10132700	Side Panel, Right			
			38	W10132701	Flange (RT)			
			39	W10132697	Bracket, Flange			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BURNERS, GRATES, AND LIGHTS PARTS

For Models: KBNS271TSS00, KBSS271TSS00

(Stainless Steel) (STLS w/Jacket)

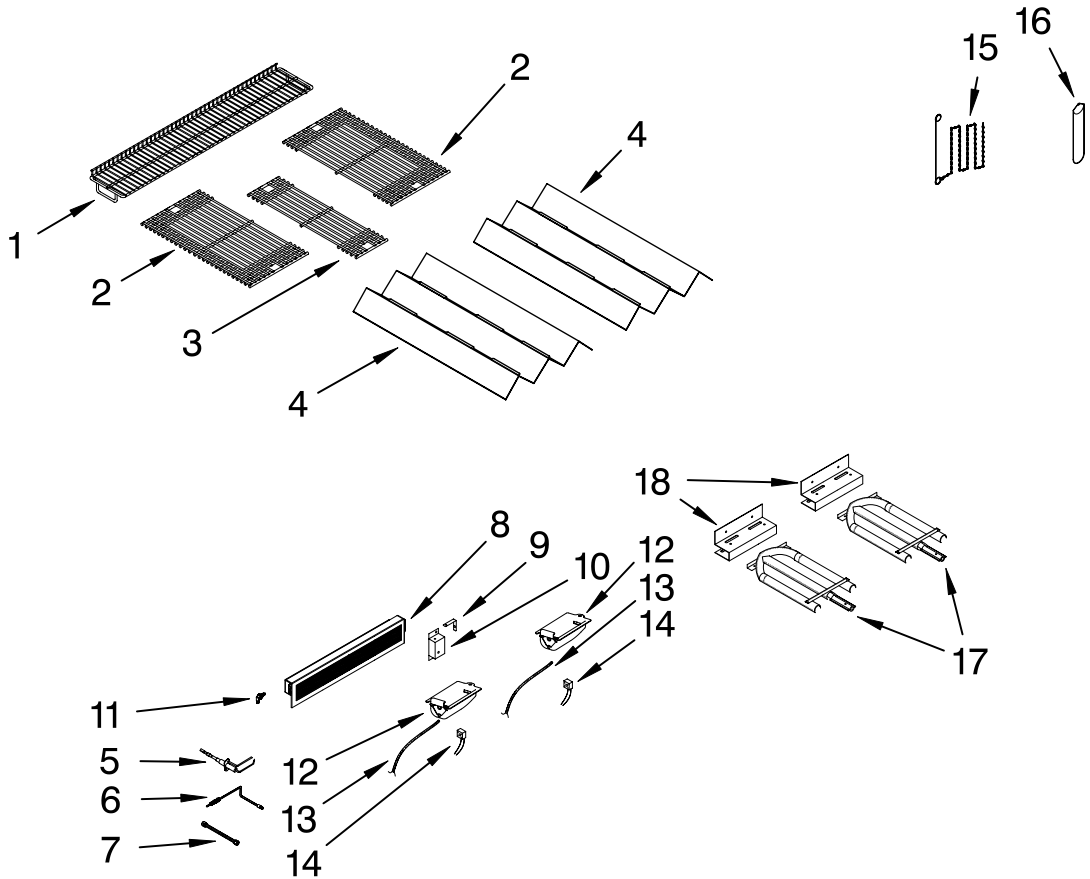

Illus. No.	Part No.	DESCRIPTION
1	W10128611	Rack, Warming
2	W10128614	Rack, Large
3	W10128616	Rack, Small
4	W10128618	Plate, Sear
5	W10128621	Electrode, Rear
6	W10128622	Thermocouple, Rear Burner
7	W10128623	Flex Tube, Rear Burner
8	W10128624	Burner, Rear
9	W10128625	Bracket, Rear Thermocouple
10	W10128626	Cover, Rear Thermocouple
11	W10128627	Orifice, Rear Burner
12	W10128628	Light, Grill
13	W10128630	Light, Grill(Set)
14	W10128631	Socket, Light
15	W10128704	Rod, Lighting
16	W10128703	Bag, Lighting Rod
17	W10128775	Burner, Main
18	W10128776	Bracket, Main Bnr

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS
For Models: KBNS271TSS00, KBSS271TSS00
(Stainless Steel) (STLS w/Jacket)

Illus.	Part	
No.	No.	DESCRIPTION

Miscellaneous

4396540	Altitude 2K-5K LP
4396541	Altitude 5K-8K LP
4396542	Altitude 8K-10K LP
4396544	Altitude 2K-5K NG
4396545	Altitude 5K-8K NG
4396546	Altitude 8K-10K NG
W10118099	Conv.Kit (NG-LP)
W10118098	Conv.Kit(LP-NG)
KBDU271TSS	Smoker Box
KFKU271TSS	27" Rotiss. Kit
W10136969	27" Insulated Jacket

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST