


KITCHENAID KBDS100T0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KBDS100T0](#)

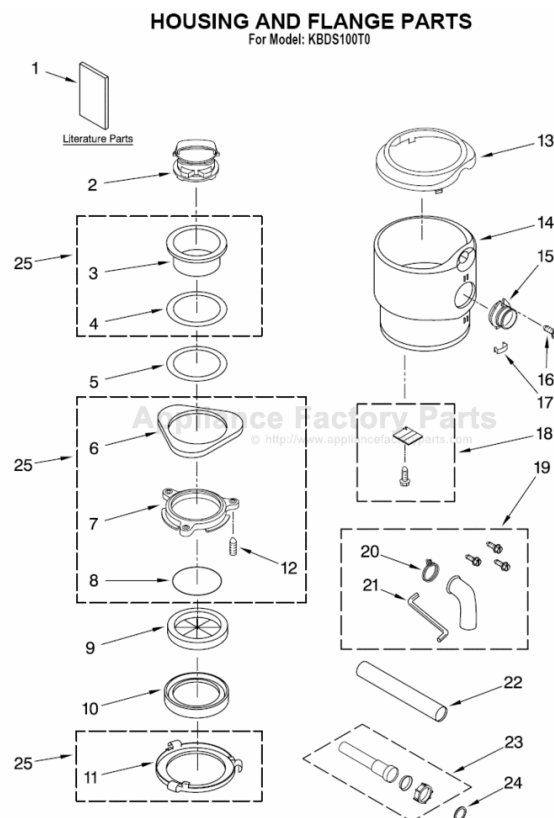

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----

KitchenAid®



KITCHENAID® SUPERBA® KBDS100T


US 1-800-422-1230
Canada 1-800-807-6777

(R)Registered trademark/TM Trademark of KitchenAid, U.S.A., KitchenAid Canada licensee in Canada.
© 2009 All rights reserved.

(R)Marca registrada/TM Marca comercial de KitchenAid, EE. UU., KitchenAid Canada concesionario en Canadá.
© 2009 Todos los derechos reservados.

®Marque déposée/TM Marque de commerce de KitchenAid, U.S.A., Emploi sous licence par KitchenAid Canada au Canada.
©2009. Tous droits réservés.

Includes/Incluye/Comprend

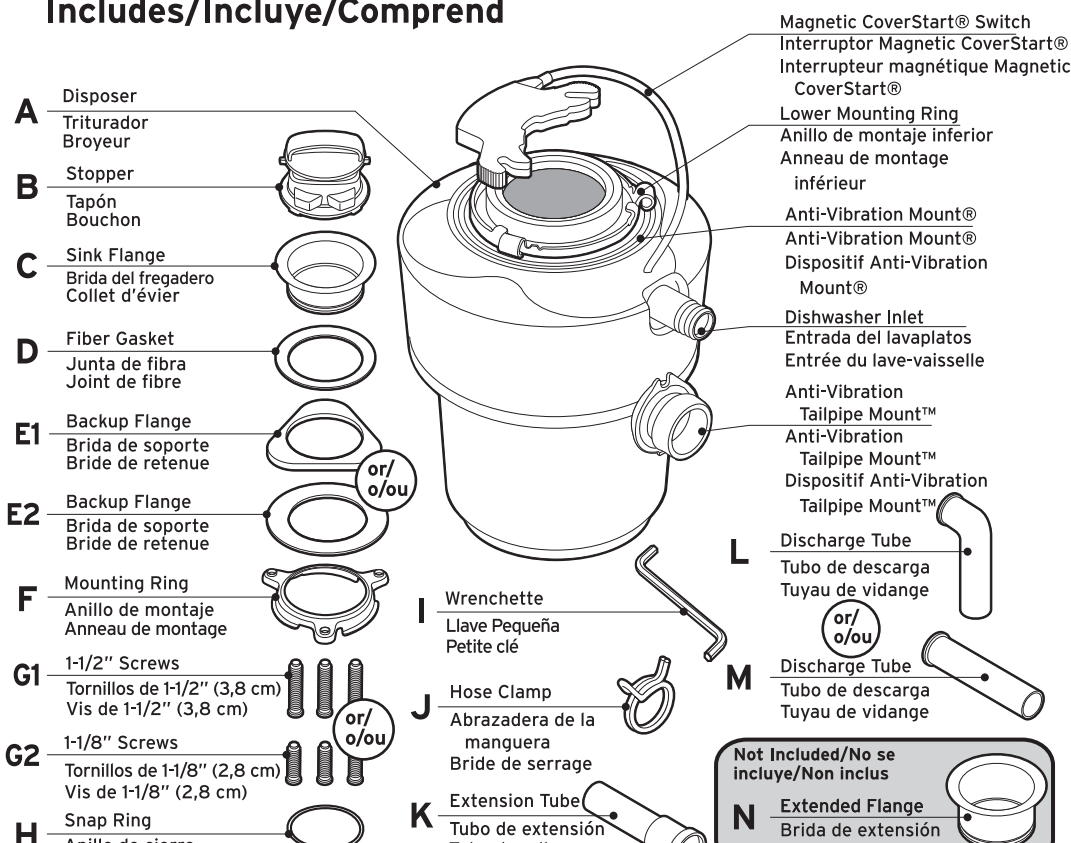

Installation instructions/

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

⚠ This is the safety alert symbol.


This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:


⚠ DANGER You can be killed or seriously injured if you don't immediately follow instructions.


⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

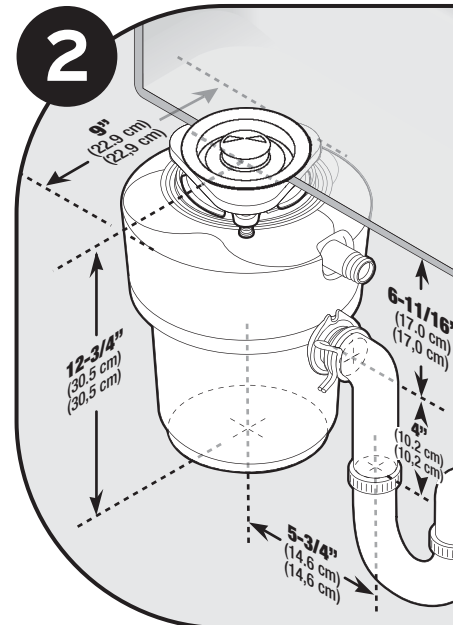


Install flange in sink hole Instale la brida en el orificio Installer le collet dans le trou

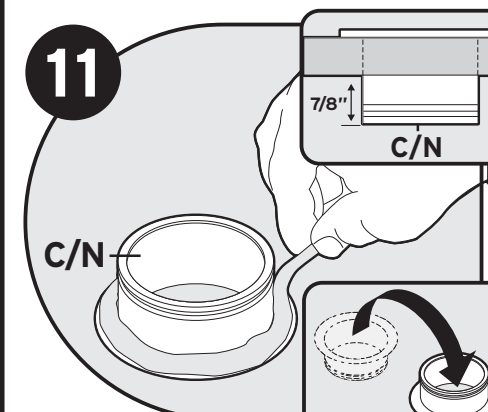

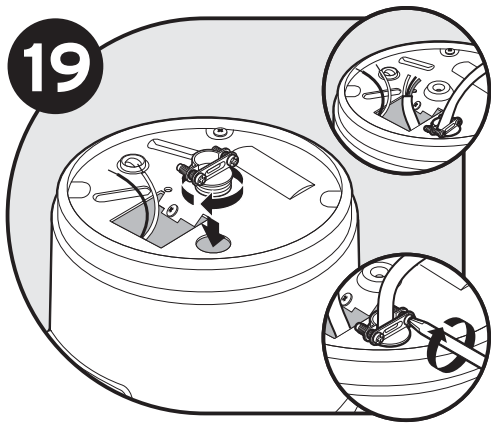

Insert cable connector (not included) and run electrical cable through access hole on bottom of disposer. Tighten cable connector./
 Introduzca el conector del cable (no incluido) y pase el cable eléctrico a través del orificio de acceso en la parte inferior del triturador. Ajuste el conector del cable./
 Insérer le connecteur de câble (non compris) et faire passer le câble électrique par le trou d'accès qui se trouve au fond du broyeur. Serrer le connecteur de câble.

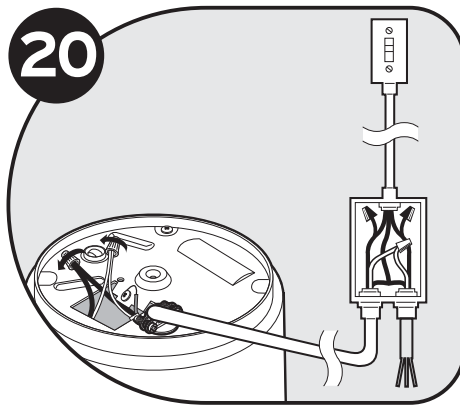

This disposer requires a switch with a marked "Off" position (wired to disconnect all ungrounded supply conductors) installed within sight of the disposer sink opening (1 hp minimum rating)./
 Este triturador requiere un interruptor que tenga la posición "Off" marcada (cableado de modo de desconectar todos los conductores de suministro no conectados a tierra) e instalado no muy lejos de la abertura del fregadero para el triturador (capacidad mínima de 1 hp)./
 Ce broyeur doit être équipé d'un interrupteur sur lequel la position d'arrêt (Off) est indiquée (pour débrancher tous les conducteurs d'alimentation non mis à la terre) et installé à la vue du trou d'évier du broyeur (puissance minimale de 1 HP).

⚠ WARNING



Electrical Shock Hazard

Connect ground wire to green ground screw in wiring box.

Failure to follow these instructions can result in electrical shock.

⚠ ADVERTENCIA

Peligro de Choque Eléctrico

Conecte el cable de conexión a tierra al tornillo verde en la caja de cableado del triturador.

No seguir estas instrucciones puede ocasionar incendio o choque eléctrico.

⚠ AVERTISSEMENT

Risque de choc électrique

Branchez le fil de terre à la vis verte de mise à la terre de la boîte de câblage du broyeur.

Le non-respect de ces instructions peut causer un incendie ou un choc électrique.

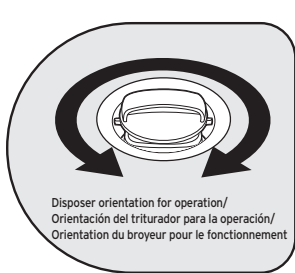


Figure A/
 Figura A/
 Figure A

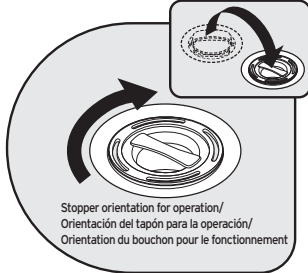


Figure B/
 Figura B/
 Figure B

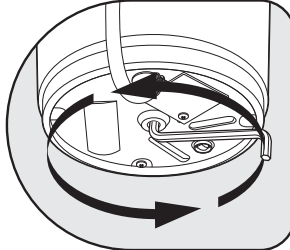


Figure C/
 Figura C/
 Figure C

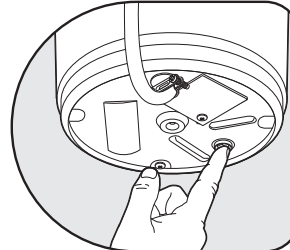


Figure D/
 Figura D/
 Figure D

5. Remove stopper from sink to start disposer. NOTE: If you attempt to power the disposer, there will be a second delay before the disposer starts.

DO...

- First turn on a moderate to strong water flow over the disposer. Continue running water for 15 seconds after grinding is completed to help flush the disposer.
- Grind virtually any food material.
- Grind hard materials such as coffee grounds. The scouring action is created by the water.
- Grind peelings from citrus fruits.
- Use a disposer cleaner, degreaser, or enzyme to relieve objectionable odors caused by food particles.

ENGLISH USE & CARE GUIDE

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

⚠ This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING: When using electric disposers, basic precautions are always to be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is required when a disposer is used near children.
- Do not put fingers or hands into a disposer.
- Turn the power switch to the off position before attempting to clear a jam or remove an object from the disposer.
- When attempting to loosen a jam in a disposer, use a long wooden object such as a spoon or the wooden handle of a broom or mop.
- When attempting to remove objects from a disposer use long-handled tongs or pliers. For a disposer that is magnetically actuated, use nonmagnetic tools.
- When not operating a disposer, leave the drain cover in place to reduce the risk of objects falling into the disposer.
- To reduce the risk of injury by materials that are expellable by a disposer do not put the following into a disposer: clam or oyster shells, caustic drain cleaners or similar products, glass, china, or plastic, large (whole) bones, metal (such as bottle caps, steel shot, tin cans, or utensils), hot grease or other hot liquids.

SAVE THESE INSTRUCTIONS

IMPORTANT: Regularly inspect the disposer for loose fittings for water leaks, as well as for signs of property damage. Manufacturer cannot be held responsible for property damage as a result of misuse.

CLEANING DISPOSER

Over time, food particles may accumulate in the disposer, causing a backup, caused by insufficient water flow.

1. Place stopper in sink opening.
2. Pour 1/4 cup baking soda into the disposer.

This disposer is equipped with a safety feature that prevents the disposer from operating if it is jammed, releasing the disposer JAM.

If motor stops while disposer is operating, follow these steps:

1. Turn off disposer and water.
2. Insert one end of wrenchette into the disposer and turn one revolution. Remove wrenchette.
3. With tongs reach into disposer and remove any objects from disposer bottom (see Figure 5).

SEVEN YEAR WARRANTY

For seven years from the date of purchase, we will provide you with the product, KitchenAid will provide you with a KitchenAid designed repair service.

KITCHENAID WILL NOT PAY FOR:

1. Service calls to correct the installation or to provide information on how to use your product, to correct wiring or plumbing.
2. Repairs when your product is used for commercial or household use. Damage resulting from misuse, abuse (such as fire, floods, acts of God, improper use, etc.)