 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



KITCHENAID KCDB250G Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDB250G](#)

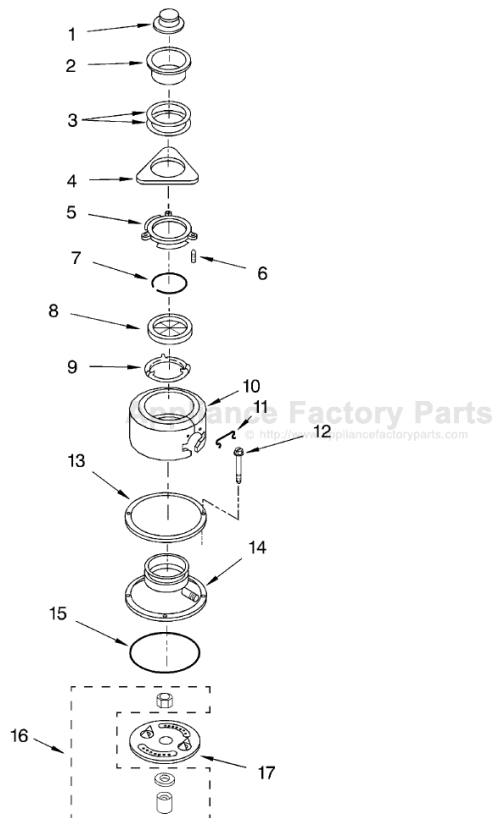

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

 
----- Manual continues below -----

UPPER HOUSING AND FLANGE PARTS

For Model: KCDB250G

DISPOSER



KitchenAid®

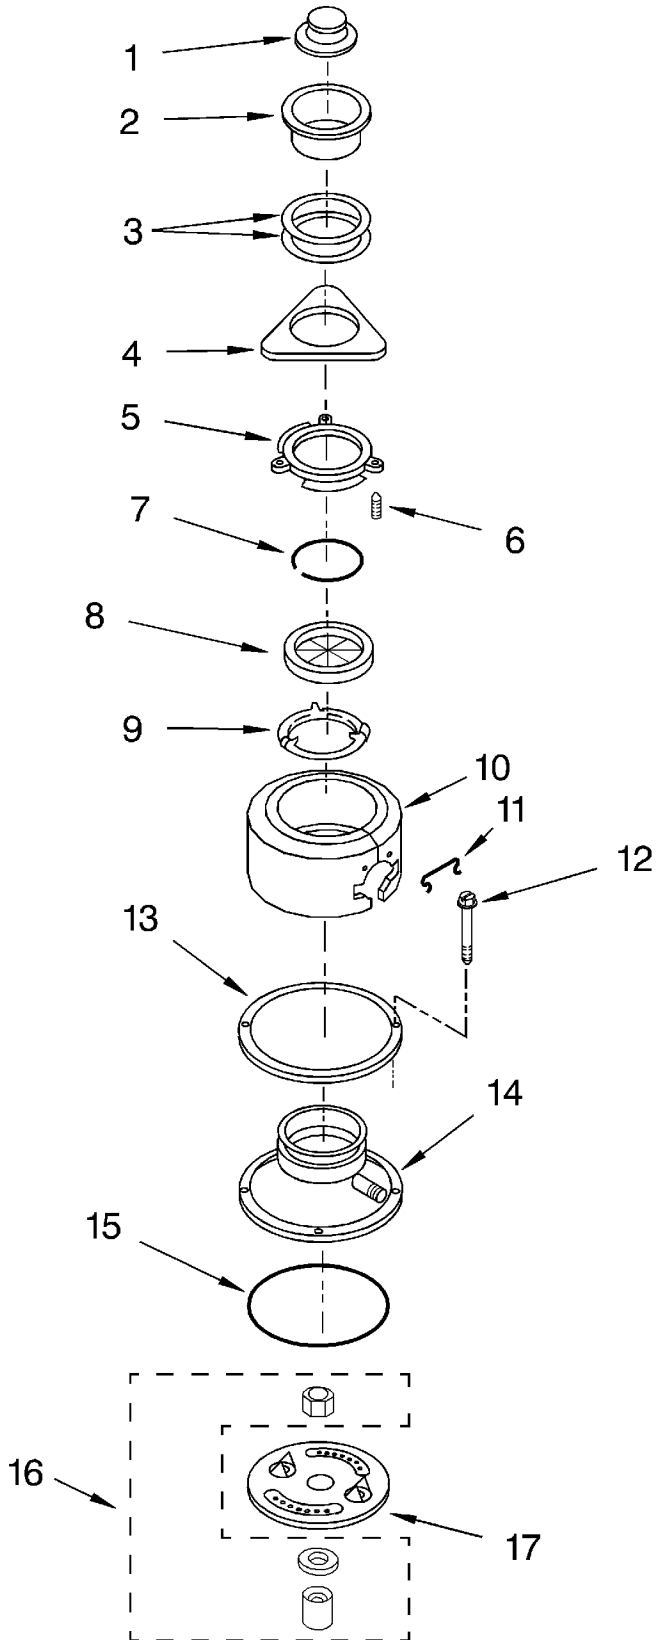

1	4211300	Stopper Assembly
2	4211301	Flange, Strainer
3	4211302	Seal, Sink Flange (2)
4	4211303	Flange, Backup
5	4211304	Flange, Mounting
6	4211305	Screw, Backup (3)
7	4211306	Ring, Retaining
8	4211615	Gasket, Mounting
9	4211308	Flange, Body
10	4211644	Trim, Shell Asm.
11	4211617	Clip, Trim shell
12	4211645	Bolt, Thru
13	4211513	Ring, Clamping
14	4211646	Container, Body Asm. (incl.13)
15	4211310	O-Ring
16	4211578	Sleeve & Seal Kit (incl. Nut, Flange Slinger, Sleeve, & Seal)
17	4211312	Shredder Asm. (Rotating)

LOWER HOUSING AND MOTOR PARTS

  For Model: KCDB250G

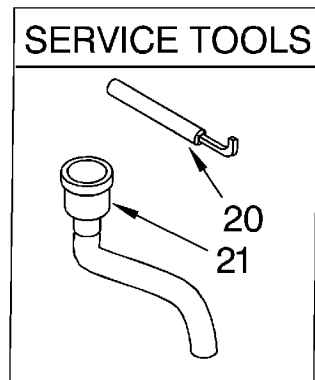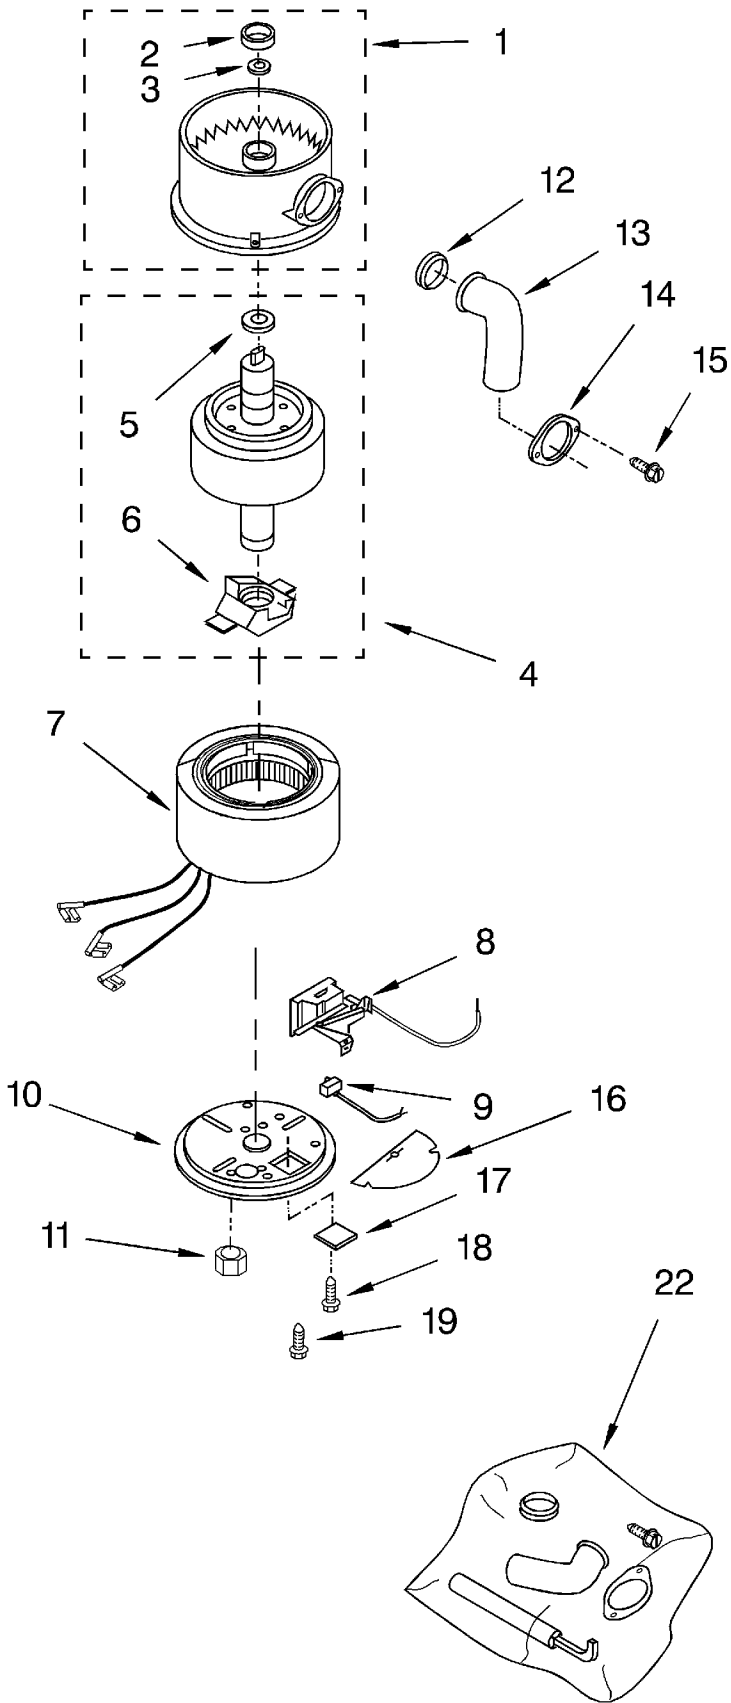

1	4211313	End Bell Assembly, Upper
2	4211314	Seal, Water & Oil
3	4211315	Washer, Thrust
4	4211349	Rotor & Shaft Assembly
5	4211321	Washer
6	4211322	Actuator Assembly, Centrifugal
7	4211350	Stator Assembly
8	4211324	Switch Assembly, Start
9	4211549	Protector, Overload
10	4211647	End Frame Assembly, Lower
11	4211516	Nut (4)
12	4211316	Gasket, Tailpipe
13	4211317	Tailpipe
14	4211318	Flange, Tailpipe
15	4211319	Screw, Tailpipe (2)
16	4211351	Shield, Wire
17	4211611	Cover, Terminal
18	4211612	Screw
19	4211330	Screw, Ground
20	4211397	Emergency, Wrench Assembly
21	4211396	Adapter, Sink Assembly
22	4211564	Kit, Installation (Includes Nos. 12, 13, 14, 15, 20, Instructions and Use and Care Guide)

Following Parts Not Illustrated

LITERATURE PARTS

LIT4211550	Guide, Use And Care
LIT4211652	Instructions, Installation
LIT4211641	Repair Parts List