


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



KITCHENAID KCDB250G1 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDB250G1](#)

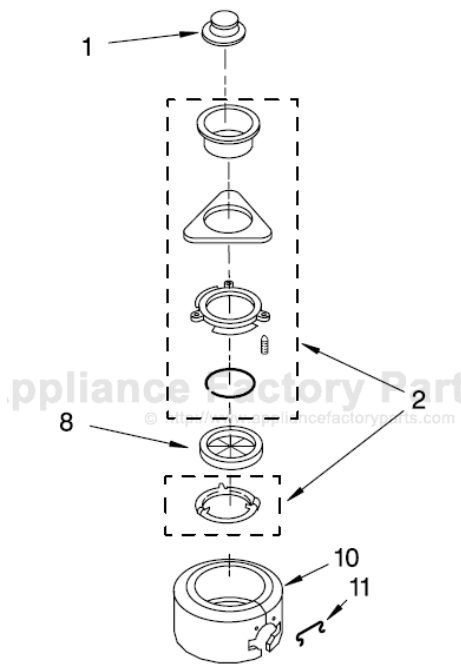

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)


----- Manual continues below -----

UPPER HOUSING AND FLANGE PARTS

DISPOSER

For Model: KCDB250G1

KitchenAid®

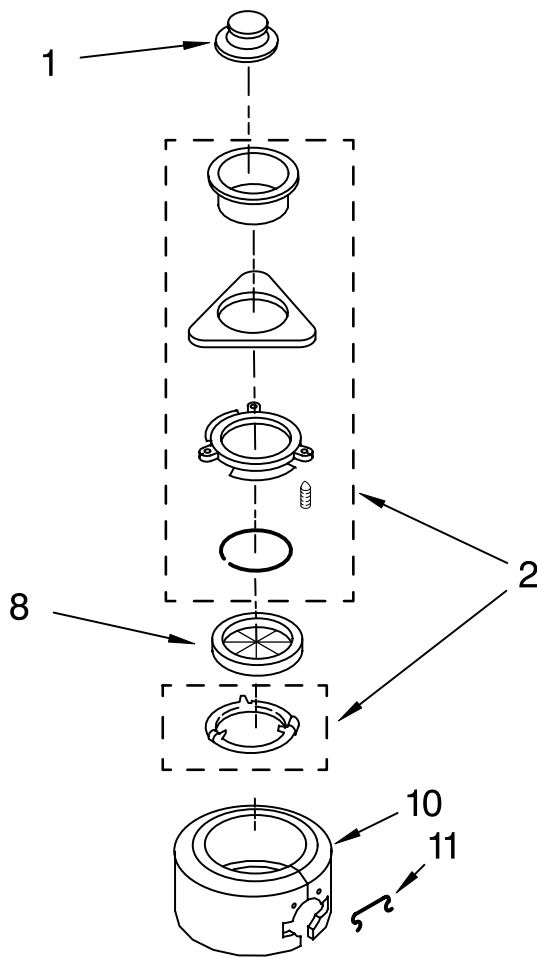


Illus. No.	Part No.	DESCRIPTION
1	4211300	Stopper Assembly
2	8174306	Mounting Assembly
8	4211615	Gasket, Mounting
10	8174307	Trim, Shell Asm.
11	8174308	Clip, Trim shell

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER HOUSING AND MOTOR PARTS

For Model: KCDB250G1

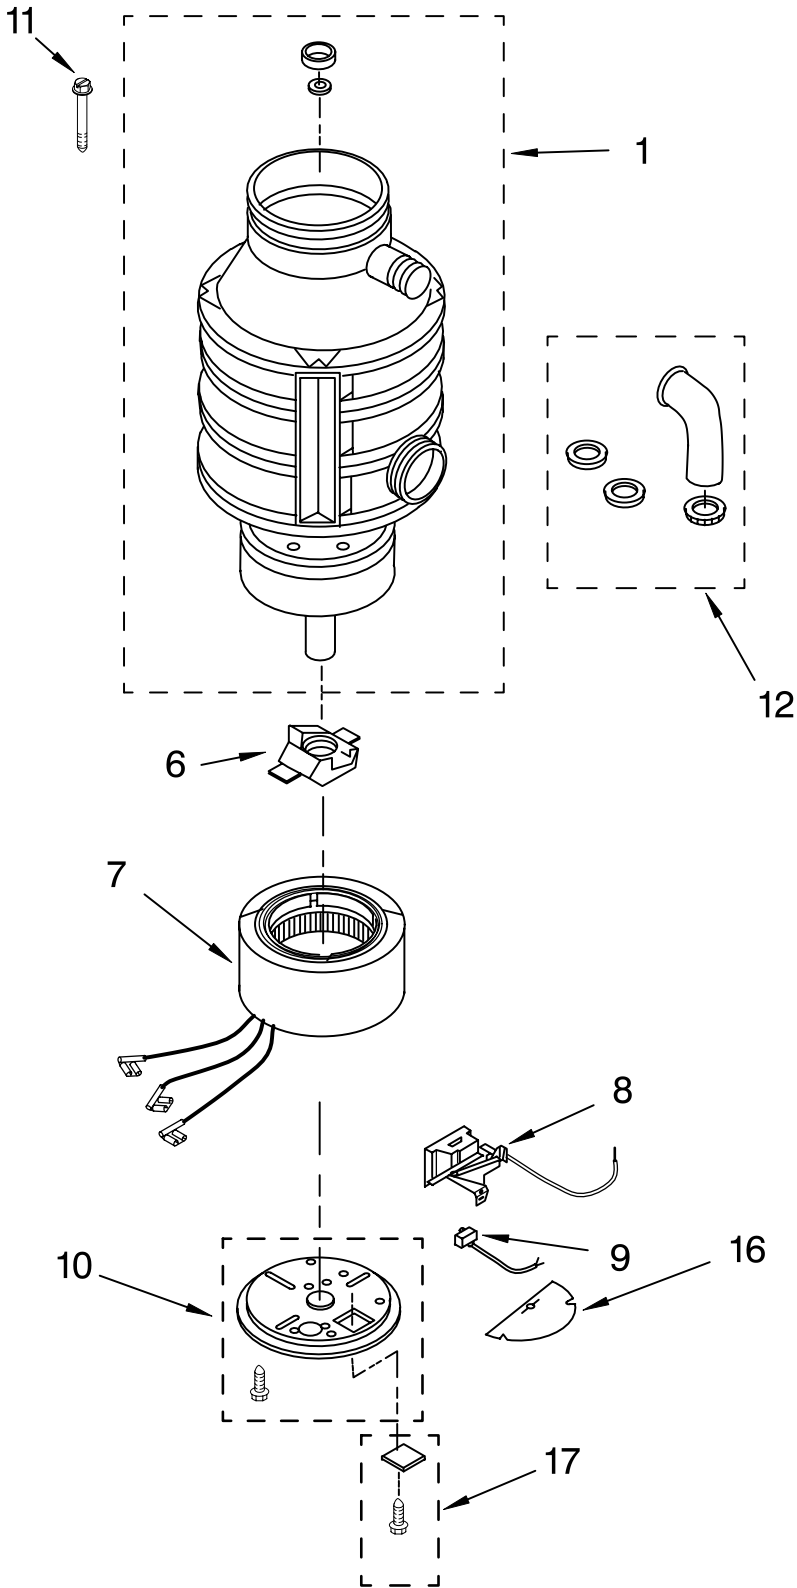


Illus. No.	Part No.	DESCRIPTION
1		Enclosure Assembly (Not Serviceable)
6	4211322	Actuator Assembly, Centrifugal
7	8174316	Stator Assembly
8	8174312	Switch Assembly, Start
9	8174313	Protector, Overload
10	4211647	End Frame Assembly, Lower
11	4211645	Bolt, Thru
12	8174317	Kit, Installation
16	4211351	Shield, Wire
17	8174315	Cover, Terminal Assembly
20	8174310	Emergency, Wrench Assembly

Following Parts Not Illustrated

- LIT4211550 Guide, Use And Care
- LIT4211652 Instructions, Installation

SERVICE TOOLS

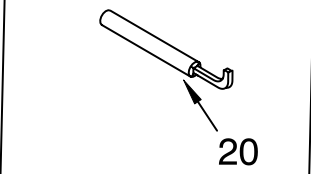

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST