

This Owner's Manual is provided and hosted by Appliance Factory Parts.

 


KITCHENAID KCDB250G3 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDB250G3](#)

UPPER HOUSING AND FLANGE PART

enAid.

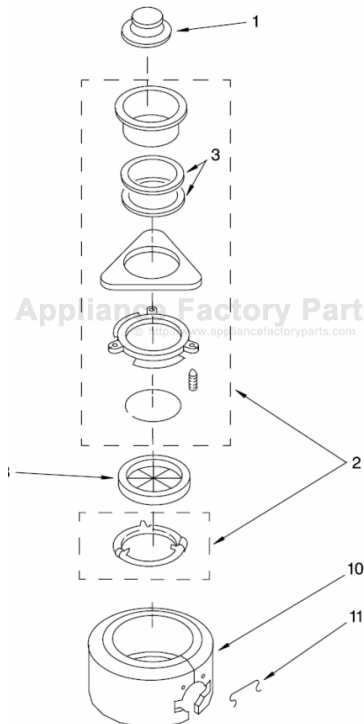

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

 
----- Manual continues below -----

UPPER HOUSING AND FLANGE PARTS

DISPOSER

For Model: KCDB250G3

KitchenAid®

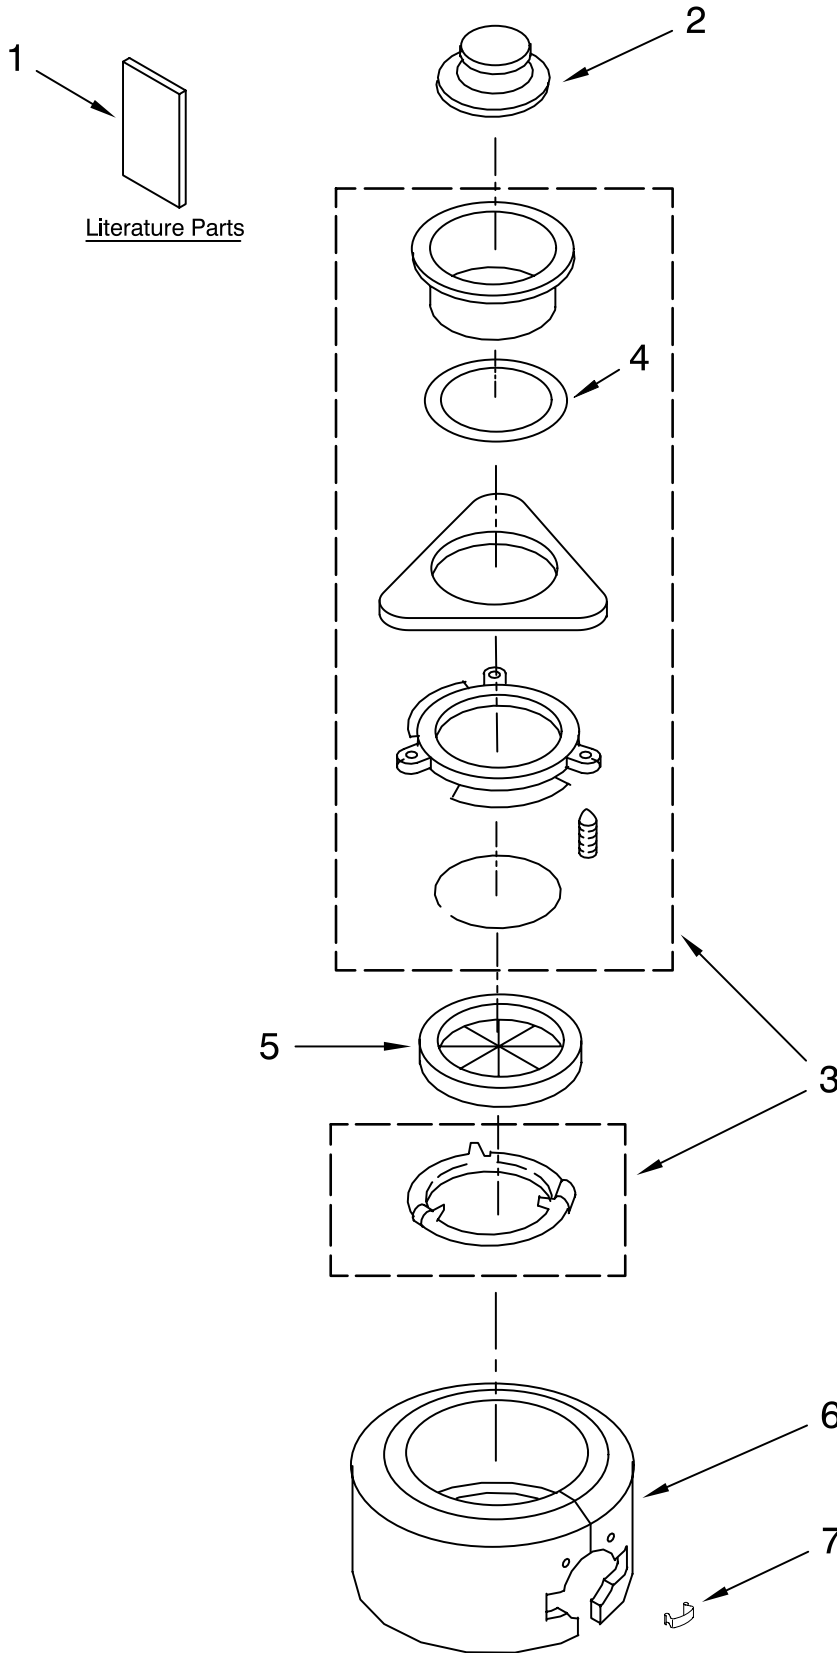


| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|-------------------|
| 1 | | Literature |
| | W10128498 | Guide, Use & Care |
| | W10280320 | Repair Parts List |
| 2 | 4211300 | Stopper Assembly |
| 3 | 8174306 | Mounting Assembly |
| 4 | 4211606 | Gasket, Fiber |
| 5 | 4211615 | Gasket, Mounting |
| 6 | 8174341 | Trim, Shell Asm. |
| 7 | 8174342 | Clip, Trim Shell |


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER HOUSING AND MOTOR PARTS

 For Model: KCDB250G3

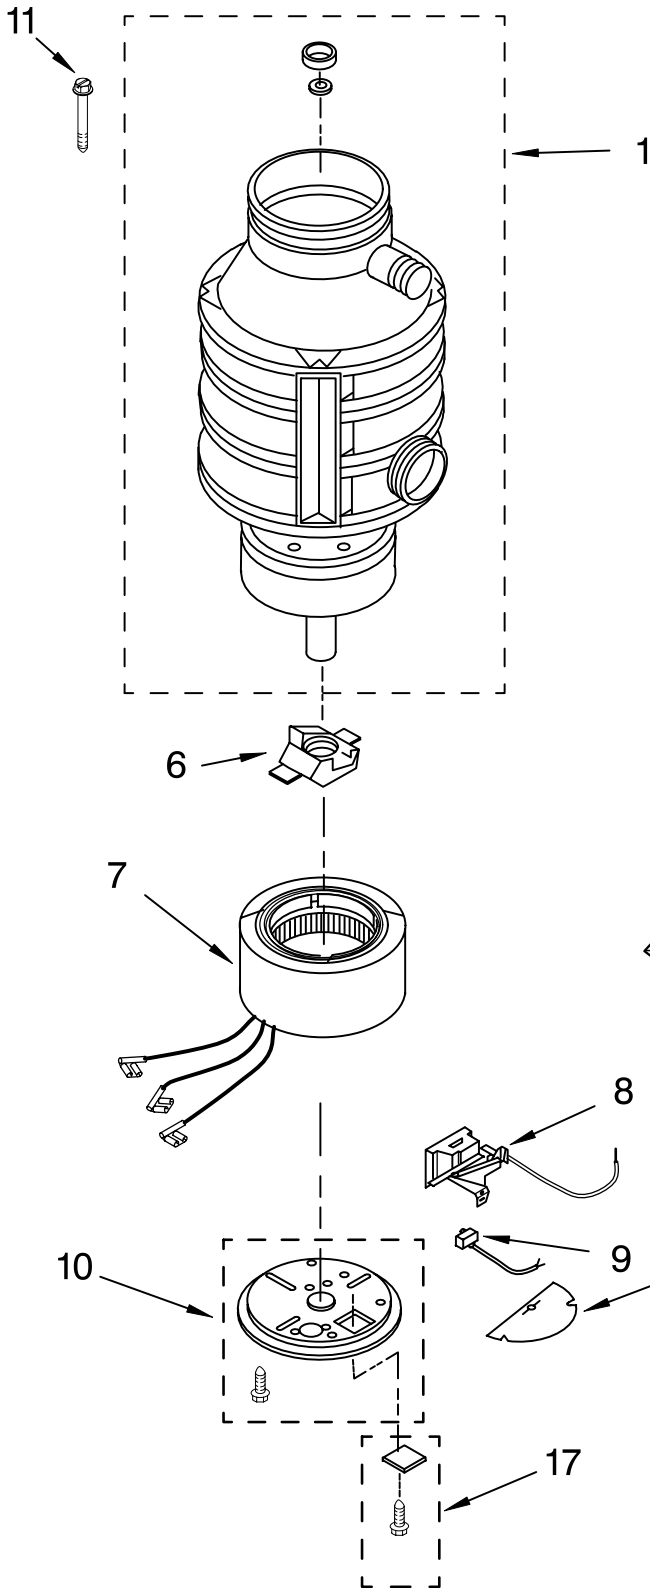

| Illus. No. | Part No. | DESCRIPTION |
|------------|----------|--------------------------------------|
| 1 | | Enclosure Assembly (Not Serviceable) |
| 6 | 4211322 | Actuator Assembly, Centrifugal |
| 7 | 8174316 | Stator Assembly |
| 8 | 8174312 | Switch Assembly, Start |
| 9 | 882726 | Protector, Overload |
| 10 | 8174345 | End Frame Assembly, Lower |
| 11 | 8174354 | Bolt, Thru |
| 12 | 4176802 | Kit, Installation |
| 16 | 4211351 | Shield, Wire |
| 17 | 8174315 | Cover, Terminal Assembly |
| 20 | 8174310 | Emergency, Wrench Assembly |

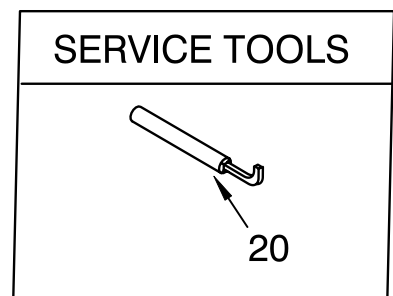 

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST