


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



KITCHENAID KCDB250S0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDB250S0](#)

UPPER HOUSING AND FLANGE PARTS

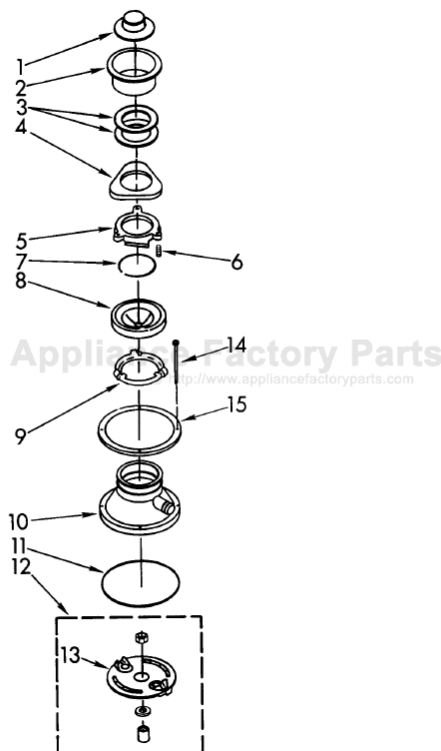

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----


PARTS LIST FOR

KitchenAid

DISPOSER

**MODEL
KCDB250S0**

UPPER HOUSING AND FLANGE PARTS

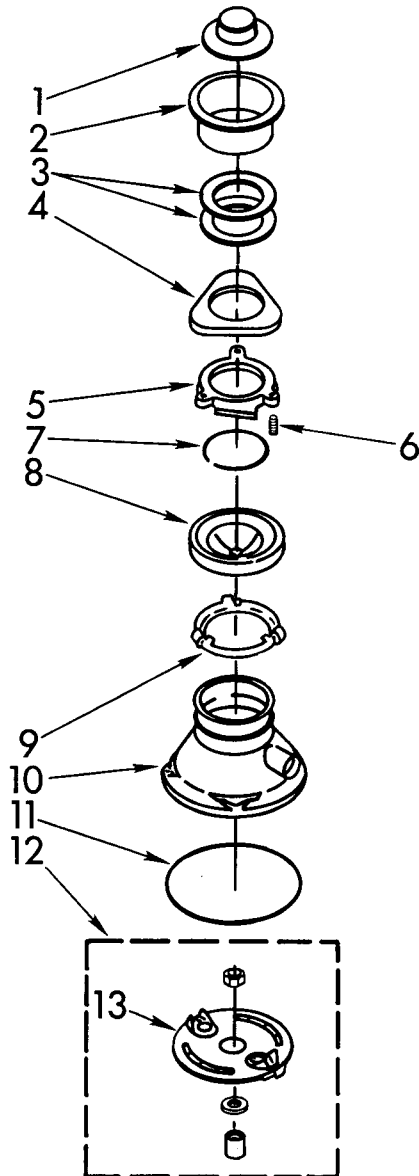

4-92 Litho in U.S.A.

KitchenAid

ST. JOSEPH, MI 49085

©1988, 1992 KITCHENAID





Part No. 4211437 Rev. A

5-92

1	4211300	Stopper Assembly
2	4211301	Flange, Strainer
3	4211302	Seal, Sink Flange (2)
4	4211303	Flange, Backup
5	4211304	Flange, Mounting
6	4211305	Screw, Backup (3)
7	4211306	Ring, Retaining
8	4211307	Gasket, Mounting
9	4211308	Flange, Body
10	4211309	Container, Body Assembly
11	4211310	O-Ring
12	4211311	Kit, Sleeve And Seal (Includes Nut, Slinger & Sleeve)
13	4211312	Shredder Assembly, Rotating

LOWER HOUSING AND MOTOR PARTS

For Model: KCDB250S0

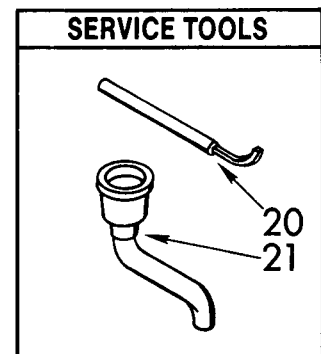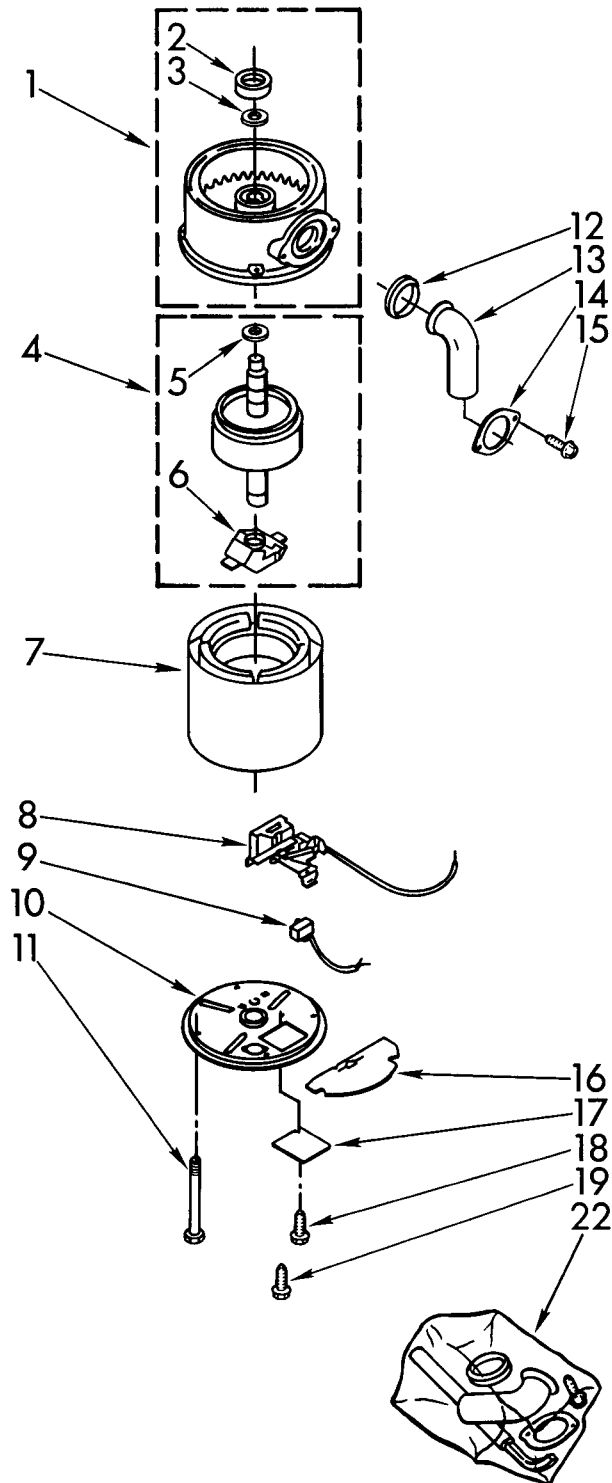

1	4211313	End Bell Assembly, Upper
2	4211314	Seal, Water & Oil
3	4211315	Washer, Thrust
4	4211320	Rotor & Shaft Assembly
5	4211321	Washer
6	4211322	Actuator Assembly, Centrifugal
7	4211323	Stator Assembly
8	4211324	Switch Assembly, Start
9	4211325	Protector, Overload
10	4211327	End Frame Assembly, Lower
11	4211331	Bolt, Thru (4)
12	4211316	Gasket, Tailpipe
13	4211317	Tailpipe
14	4211318	Flange, Tailpipe
15	4211319	Screw, Tailpipe (2)
16	4211326	Shield, Wire
17	4211328	Cover, Terminal
18	4211329	Screw
19	4211330	Screw, Ground
20	4211397	Emergency, Wrench Assembly
21	4211396	Adapter, Sink Assembly
22	4211564	Kit, Installation (Includes Nos. 12, 13, 14, 15, 20, Instructions and Use and Care Guide)

Following Parts Not Illustrated

LIT4171071	Guide, Use And Care
LIT4171069	Instructions, Installation
LIT4211437	Repair Parts List