


UPPER HOUSING AND FLANGE PARTS


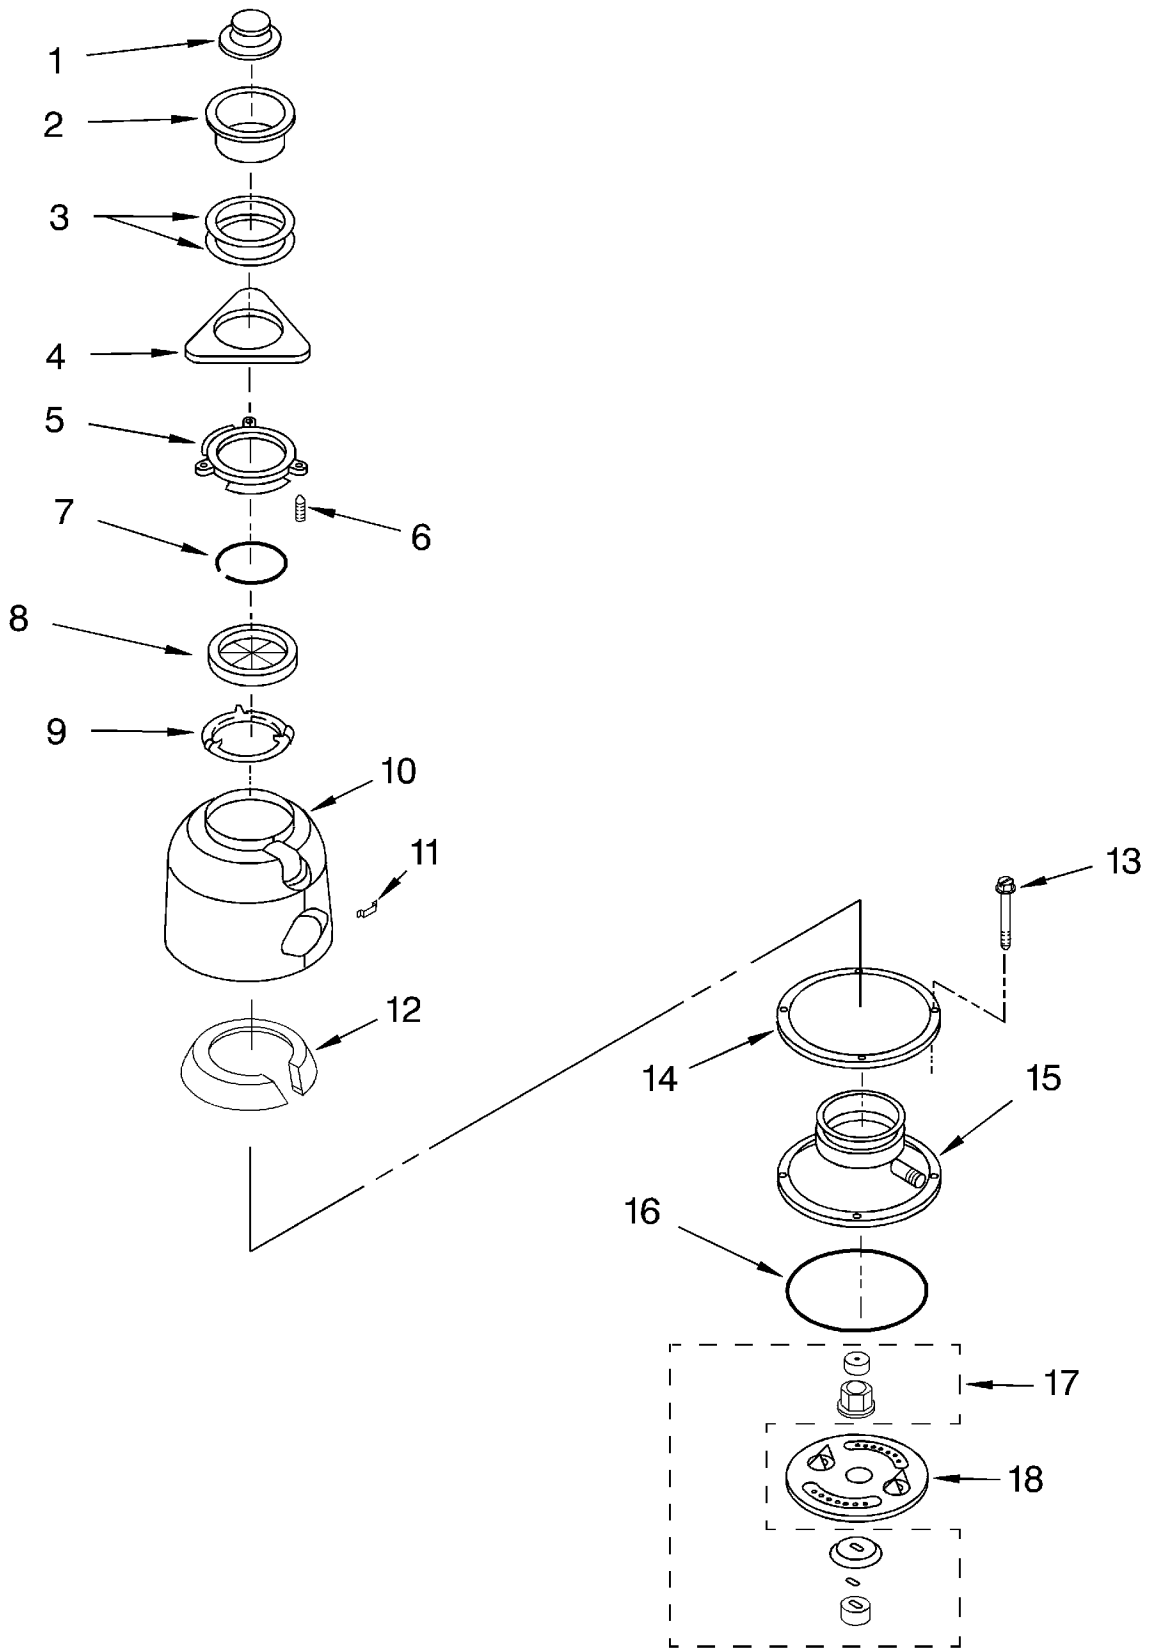


1	4211300	Stopper Assembly
2	4211301	Flange, Strainer
3	4211302	Seal, Sink Flange
4	4211303	Flange, Backup
5	4211304	Flange, Mounting
6	4211305	Screw, Backup (3)
7	4211306	Ring, Retaining
8	4211615	Gasket, Mounting
9	4211308	Flange, Body
10	4211648	Container, Body Assembly
11	4211339	Clip, Trim Band
12	4211649	Insulation
13	4211645	Bolt, thru
14	4211513	Ring, Clamping
15	4211646	Body, Container, (Incl. 14)
16	4211310	O-Ring
17	4211578	Kit, Sleeve & Seal (Incl. Nut, Flange, Slinger, Seal & Sleeve
18	4211618	Shredder Asm., Rotating

LOWER HOUSING AND MOTOR PARTS

For Model: KCDC150G

Illus. Part

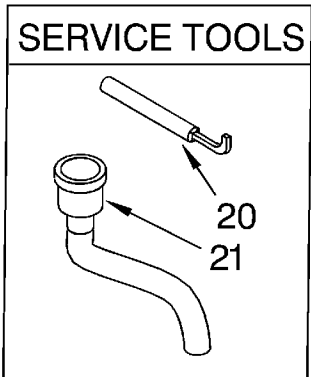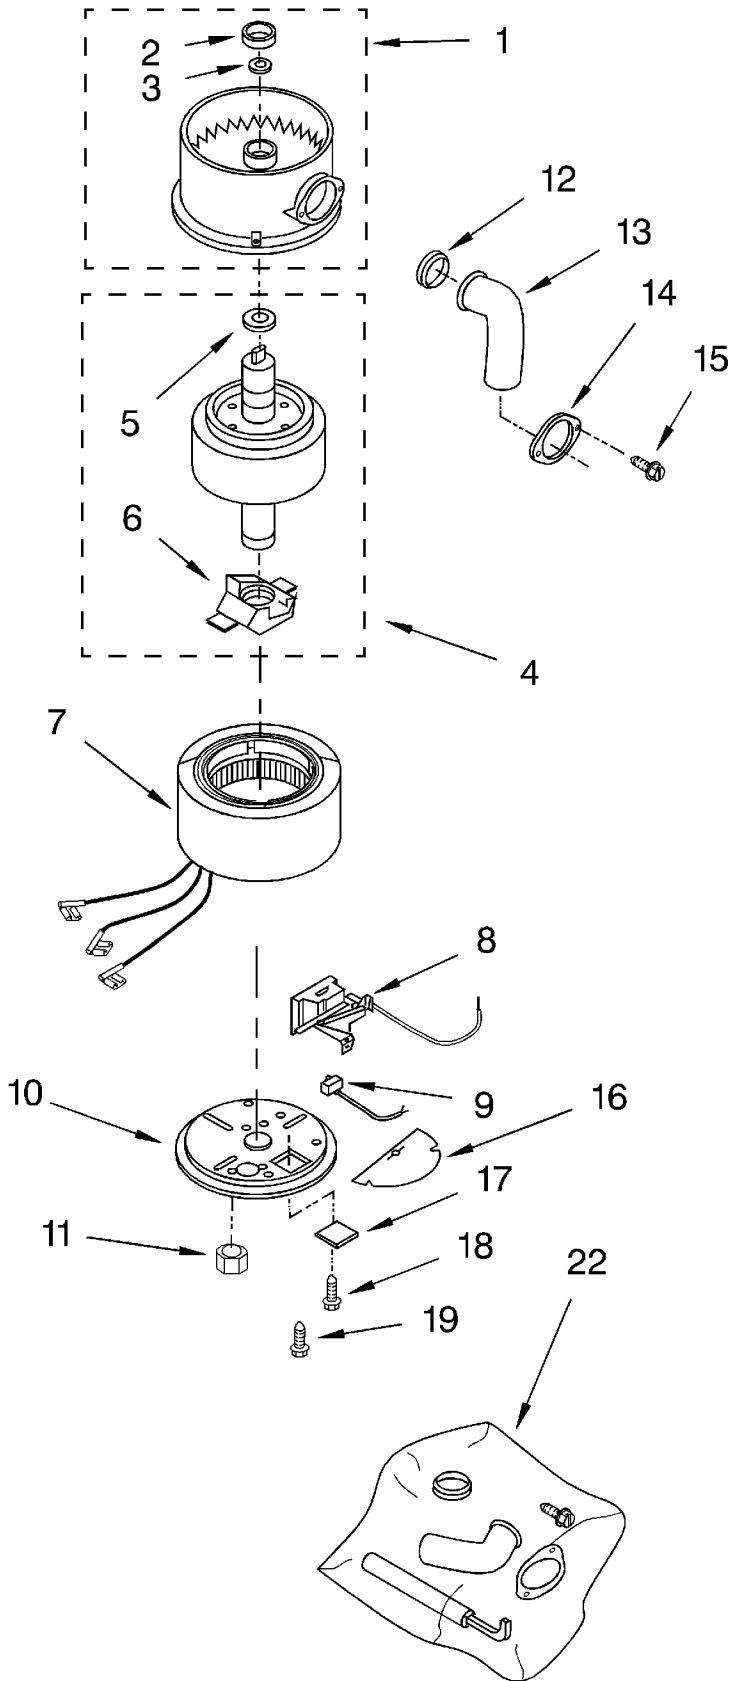

1	4211313	End Bell Assembly, Upper
2	4211314	Seal, Water & Oil
3	4211315	Washer, Thrust
4	4211651	Rotor & Shaft Assembly
5	4211321	Washer
6	4211322	Actuator Assembly, Centrifugal
7	4211650	Stator Assembly
8	4211324	Switch Assembly, Start
9	4211549	Protector, Overload
10	4211647	End Frame Assembly, Lower
11	4211348	Bolt, Thru (4)
12	4211316	Gasket, Tailpipe
13	4211317	Tailpipe
14	4211318	Flange, Tailpipe
15	4211319	Screw, Tailpipe
16	4211326	Shield, Wire
17	4211611	Cover, Terminal
18	4211612	Screw
19	4211330	Screw, Ground
20	4211397	Emergency, Wrench Assembly
21	4211396	Adapter, Sink Assembly
22	4211565	Kit, Installation (Includes Nos. 12, 13, 14, 15, 20, Instructions and Use and Care Guide)

Following Parts Not Illustrated

LITERATURE PARTS

LIT4211550	Guide, Use And Care
LIT4211652	Instructions, Installation
LIT4211640	Repair Parts List