


# UPPER HOUSING AND FLANGE PARTS

DISPOSER

For Model: KCDC150K2

**KitchenAid®**

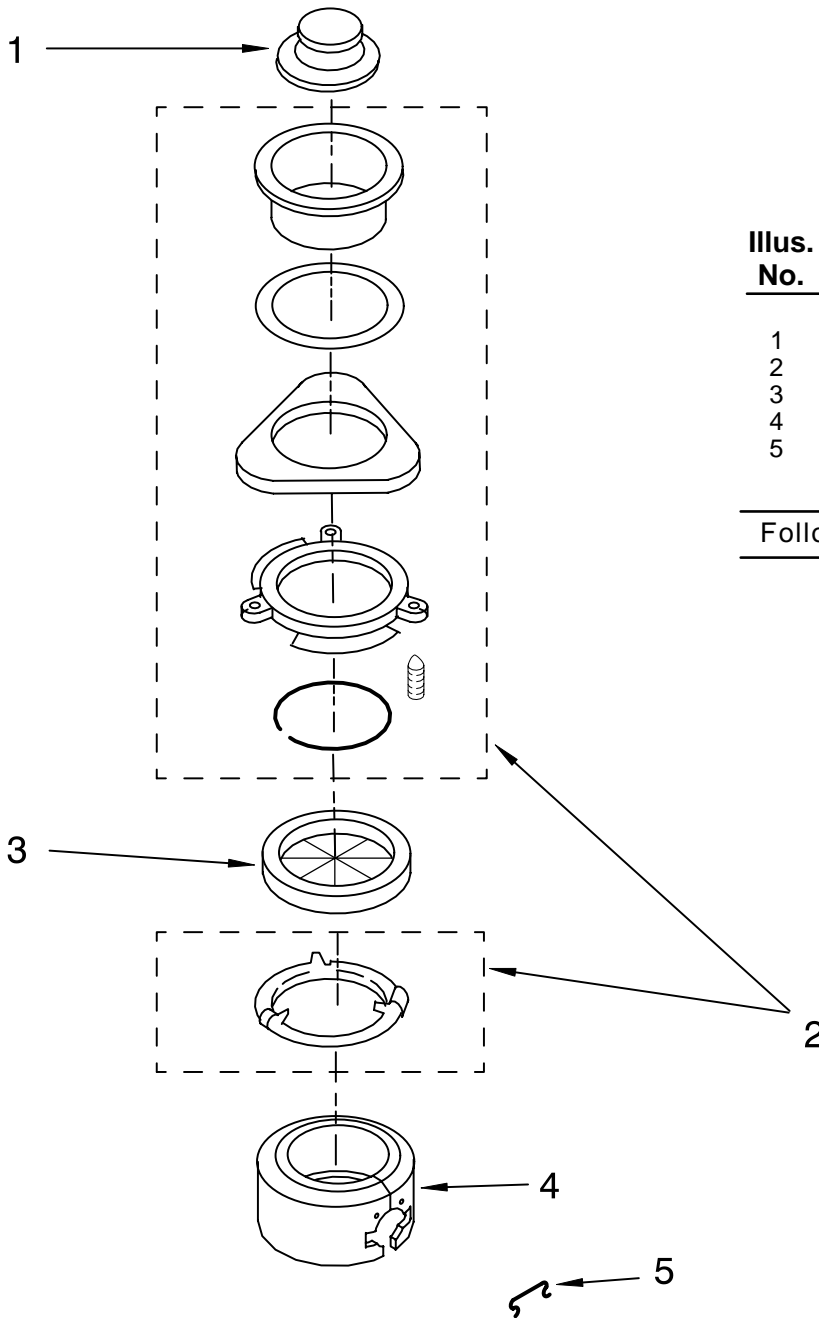

Illus. No.	Part No.	DESCRIPTION
1	4211300	Stopper Assembly
2	8174306	Mounting Assy
3	4211615	Gasket, Mounting
4	8174341	Trim, Shell
5	8174342	Clip, Trim Band


Following Parts Not Illustrated

8174350 Guide, Use & Care

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# LOWER HOUSING AND MOTOR PARTS

For Model: KCDC150K2

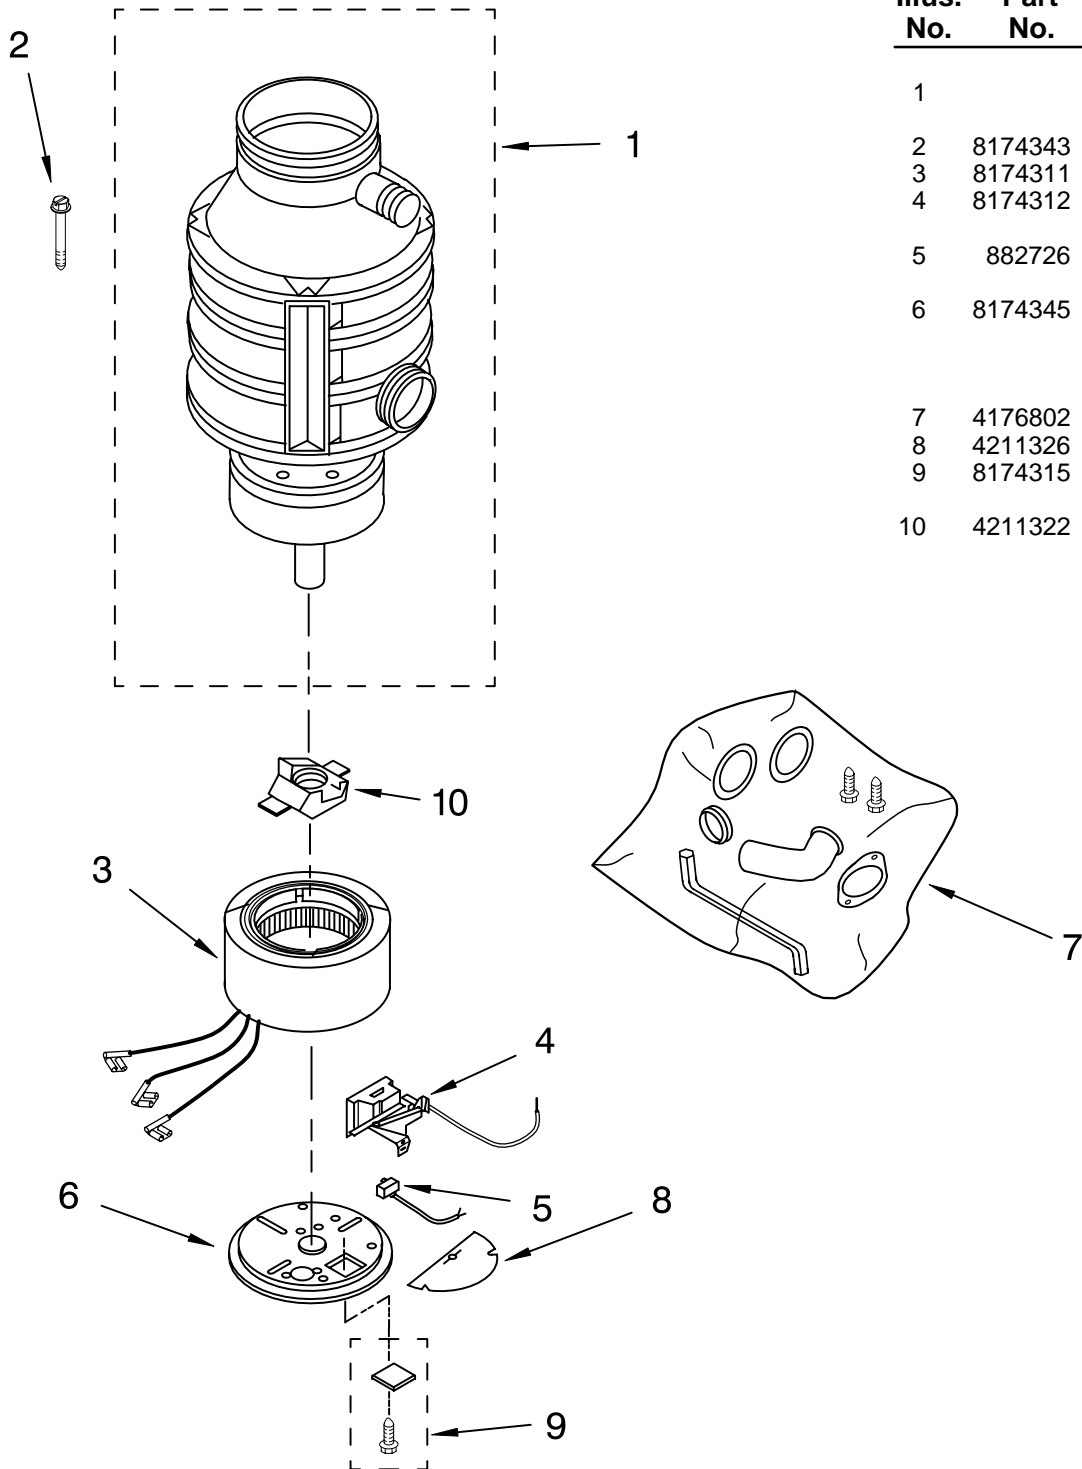

Illus. No.	Part No.	DESCRIPTION
1		Enclosure Assembly (Not Serviceable)
2	8174343	Bolt, Thru
3	8174311	Stator Assembly
4	8174312	Switch Assembly, Start
5	882726	Protector, Overload
6	8174345	End Frame Assembly, Lower (Includes Ground Screw)
7	4176802	Kit, Installation
8	4211326	Shield, Wire
9	8174315	Cover, Terminal (Includes Screw)
10	4211322	Actuator Assembly, Centrifugal

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST