


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# KITCHENAID KCDC150X0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID  
KCDC150X0](#)

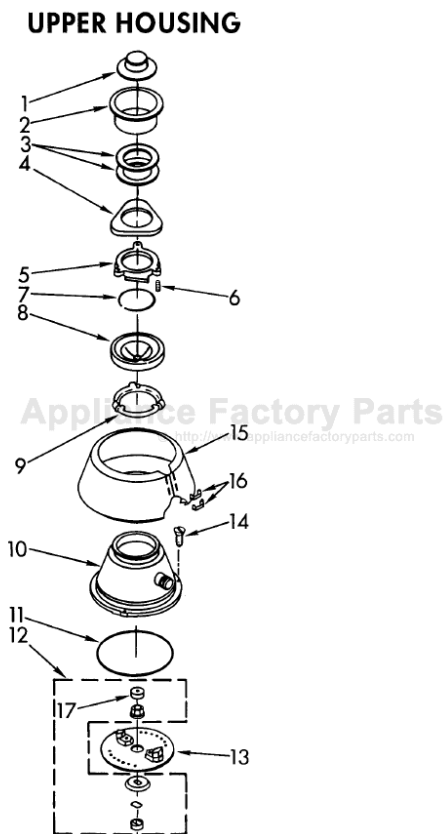

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----


**PARTS LIST FOR**

**KitchenAid®**

**DISPOSER**

**MODEL  
KCDC150X0**

**UPPER HOUSING AND FLANGE PARTS**

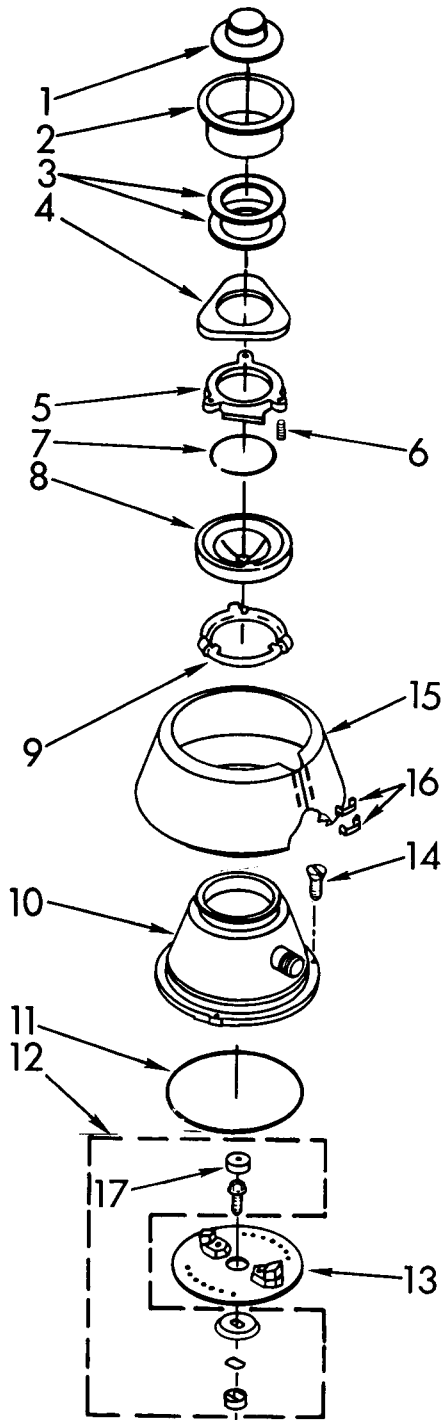

1-93 Litho in U.S.A.

**KitchenAid**  
ST. JOSEPH, MI 49085  
© 1993 KITCHENAID

3-93





Part No. 4211583

1	4211300	Stopper Assembly
2	4211301	Flange, Strainer
3	4211302	Seal, Sink Flange
4	4211303	Flange, Backup
5	4211304	Flange, Mounting
6	4211305	Screw, Backup (3)
7	4211306	Ring, Retaining
8	4211307	Gasket, Mounting
9	4211308	Flange, Body
10	4211581	Container, Body Assembly
11	4211310	O-Ring
12	4211578	Kit, Sleeve And Seal (Includes Bolt, Slinger & Sleeve)
13	4211342	Shredder Assembly, Rotating
14	4211335	Bolt, Thru (4)
15	4211547	Shell, Trim
16	4211339	Clip, Trim Shell
17	4211341	Plug

# LOWER HOUSING AND MOTOR PARTS

For Model: KCDC150X0

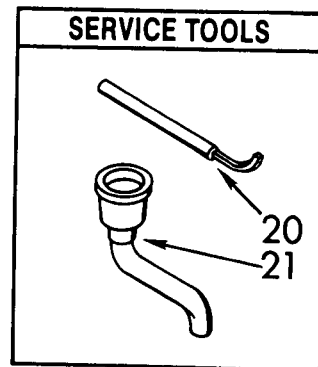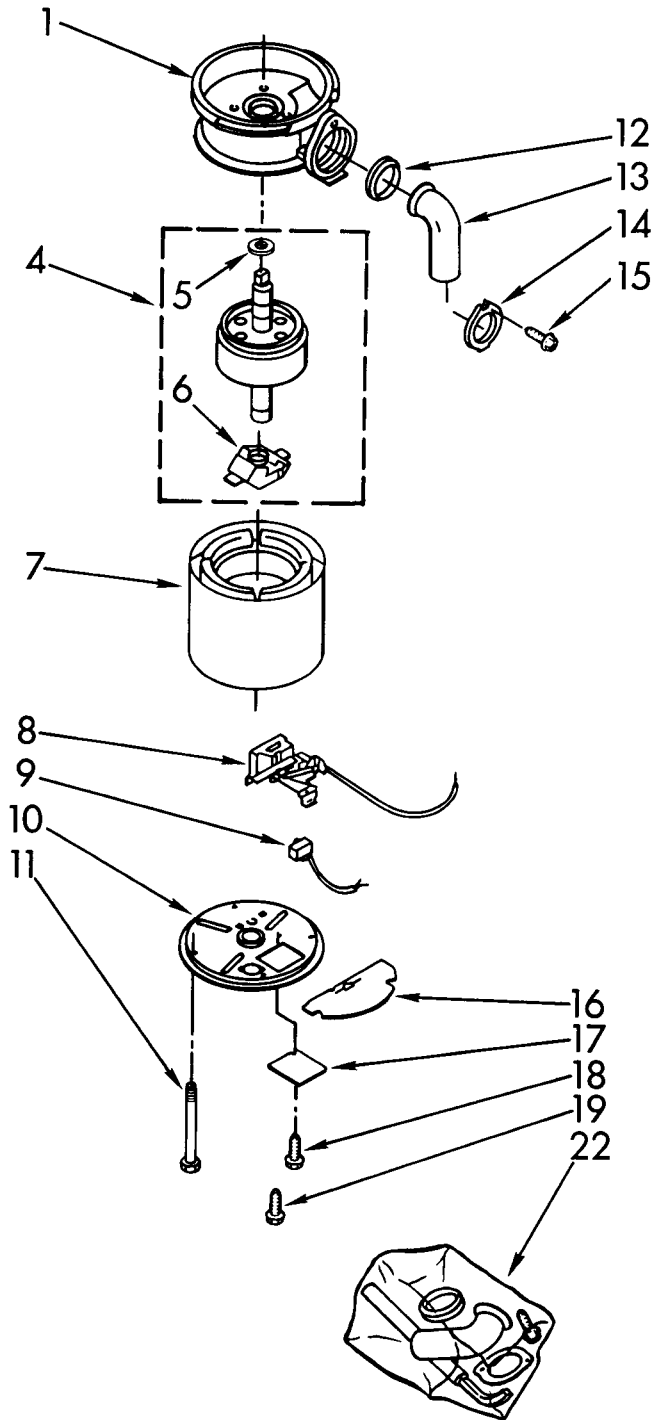

1	4211492	End Bell Assembly, Upper
4	4211582	Rotor & Shaft Assembly
5	4211321	Washer
6	4211322	Actuator Assembly, Centrifugal
7	4211323	Stator Assembly
8	4211324	Switch Assembly, Start
9	4211549	Protector, Overload
10	4211515	End Frame Assembly, Lower
11	4211348	Bolt, Thru (4)
12	4211344	Gasket, Tailpipe
13	4211317	Tailpipe
14	4211345	Flange, Tailpipe
15	4211346	Screw, Tailpipe
16	4211326	Shield, Wire
17	4211328	Cover, Terminal
18	4211329	Screw
19	4211330	Screw, Ground
20	4211397	Emergency, Wrench Assembly
21	4211396	Adapter, Sink Assembly
22	4211565	Kit, Installation (Includes Nos. 12, 13, 14, 15, 20, Instructions and Use and Care Guide)

Following Parts Not Illustrated

LIT4211550	Guide, Use And Care
LIT4211551	Instructions, Installation
LIT4211583	Repair Parts Lis