


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



KITCHENAID KCDC250S0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDC250S0](#)

UPPER HOUSING AND FLANGE PARTS

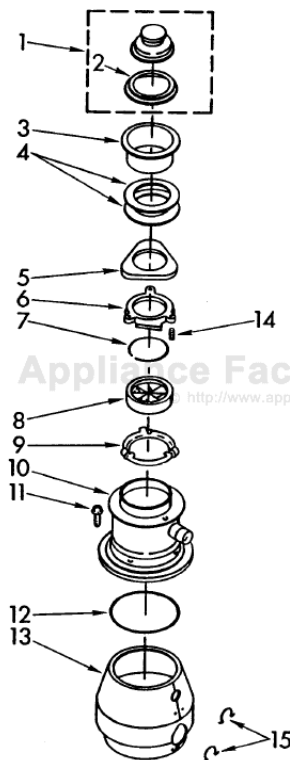

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----


PARTS LIST FOR

KitchenAid

DISPOSER

**MODEL
KCDC250S0**

UPPER HOUSING AND FLANGE PARTS

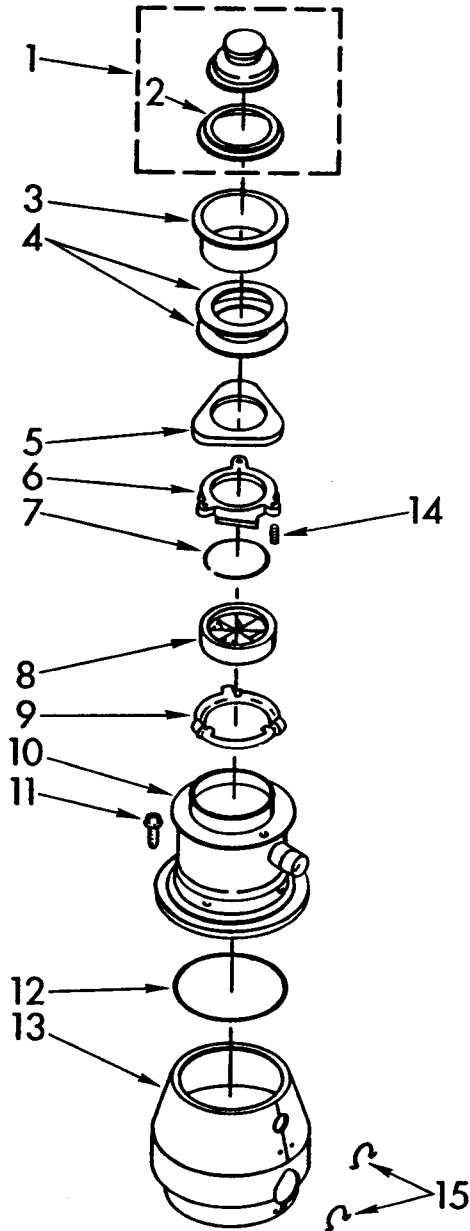

11-91 Litho in U.S.A.

KitchenAid INC.

ST. JOSEPH, MI 49085
© 1991 KITCHENAID





Part No. 4211438

1	4211332	Stopper Assembly
2	4211333	Gasket, Stopper
3	4211301	Flange, Strainer
4	4211302	Gasket, Sink (2)
5	4211303	Flange, Backup
6	4211304	Flange, Mounting
7	4211306	Ring, Retaining
8	4211334	Gasket, Mounting
9	4211308	Flange, Body
10	4211336	Container, Body Assembly
11	4211335	Screw (3)
12	4211337	O-Ring
13	4211338	Trim Shell Assembly (Includes Illus. No. 15)
14	4211305	Screw, Backup (3)
15	4211339	Clip, Trim Shell (2)

LOWER HOUSING AND MOTOR PARTS

For Model: KCDC250S0

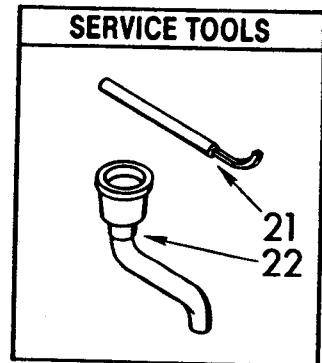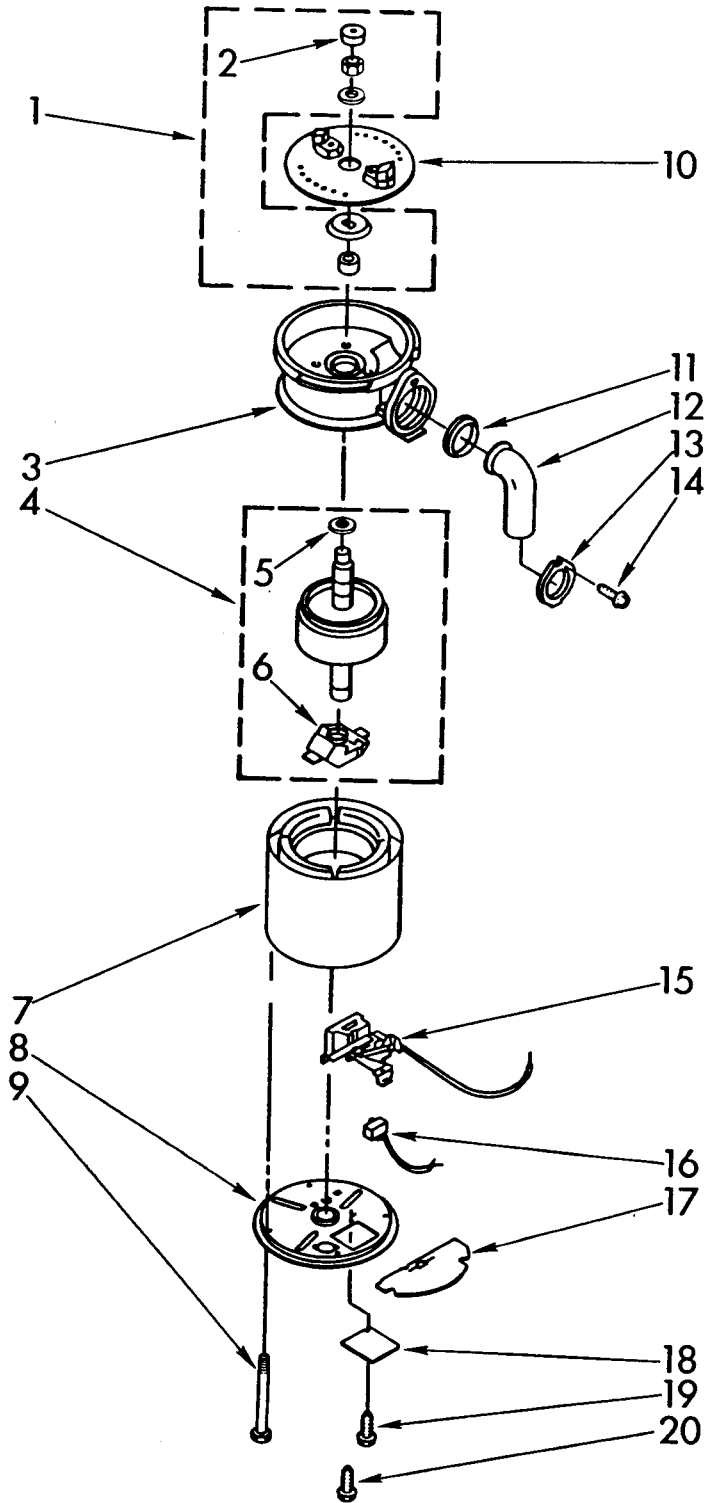

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4211340	Kit, Sleeve And Seal (Includes Plug, Nut, Slinger And Sleeve)
2	4211341	Plug
3	4211343	End Bell Assembly (Upper)
4	4211347	Rotor And Shaft Assembly
5	4211321	Washer
6	4211322	Assembly, Centrifugal Actuator
7	4211323	Stator Assembly
8	4211377	End Frame Assembly (Lower)
9	4211348	Bolt, Thru (4)
10	4211342	Shredder Assembly, Rotating
11	4211344	Gasket, Tailpipe
12	4211317	Tailpipe
13	4211345	Flange, Tailpipe
14	4211346	Screw, Tailpipe
15	4211324	Switch Assembly, Start
16	4211325	Protect, Overload
17	4211326	Shield, Wire
18	4211328	Cover, Terminal
19	4211329	Screw
20	4211330	Screw, Ground
21	4211397	Emergency, Wrench Assembly
22	4211396	Adapter, Sink Assembly

Following Parts Not Illustrated

LIT4211550	Guide, Use and Care
LIT4171069	Instructions, Installation
LIT4211438	Repair Parts List