


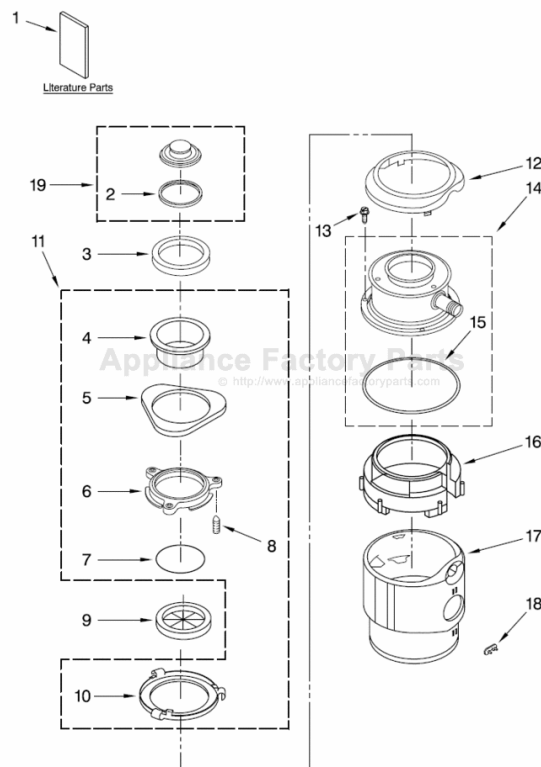

KITCHENAID KCDI075V0 Owner's Manual


[Shop genuine replacement parts for KITCHENAID
KCDI075V0](#)



[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----


KitchenAid®

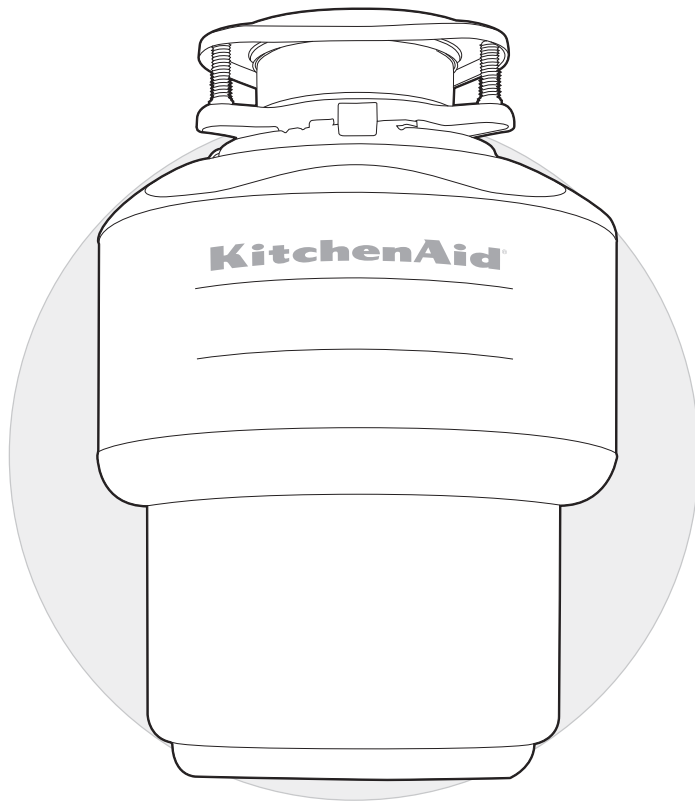

KITCHENAID™ IMPERIAL™ KCDI075V

US 1-800-422-1230
Canada 1-800-807-6777

Includes/Incluye/Comprend

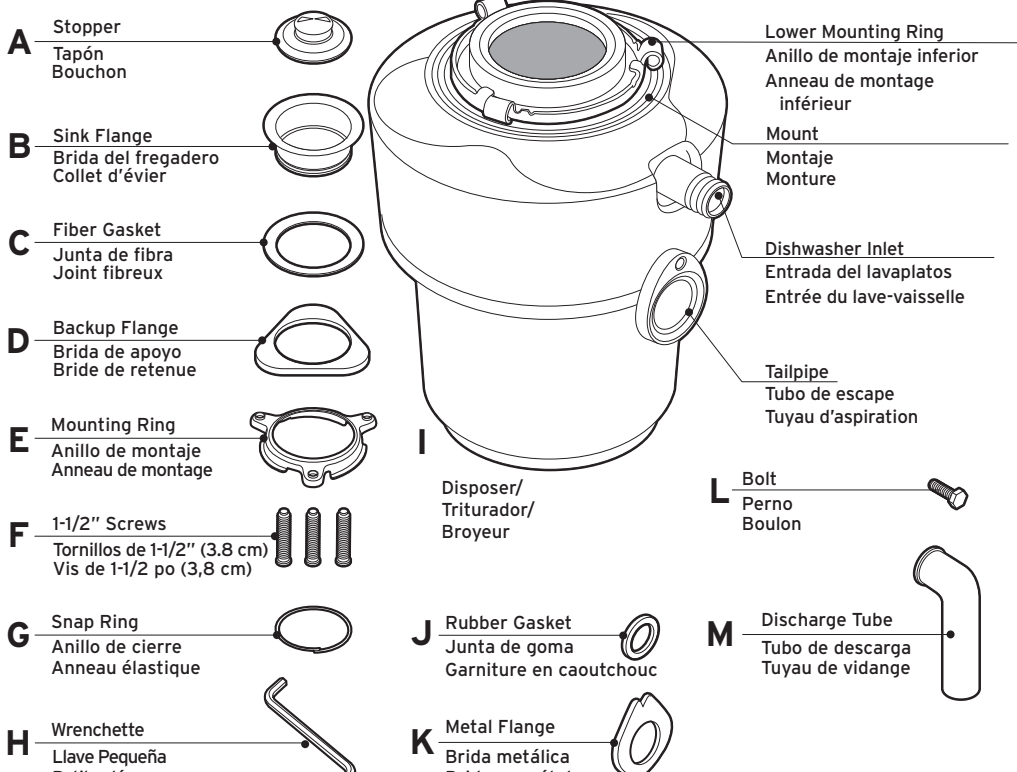

Installation instructions

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

! This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.


All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER You can be killed or seriously injured if you don't immediately follow instructions.


! WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Check installation dimensions Verifique las dimensiones Vérifiez les dimensions

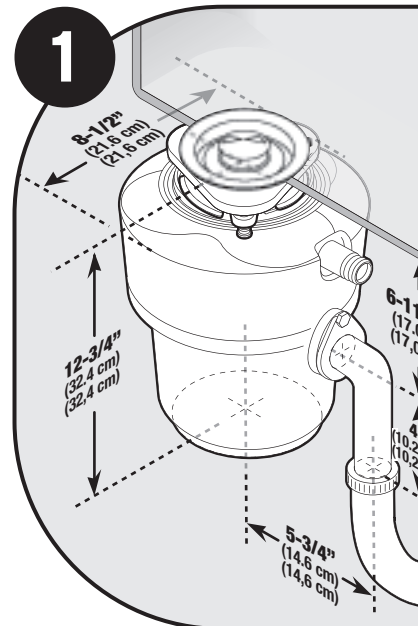

Install flange in sink hole Instale la brida en el orificio Installez le collet dans le trou

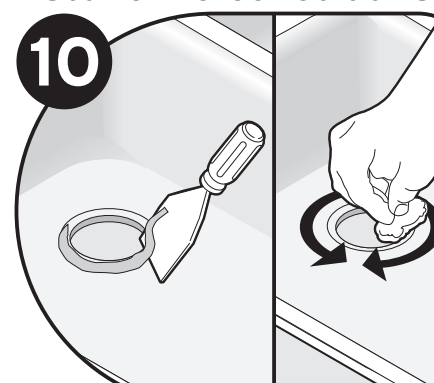

⚠ WARNING



Electrical Shock Hazard

Connect ground wire to green ground screw in disposer wiring box.

Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ ADVERTENCIA

Peligro de Choque Eléctrico

Conecte el cable de conexión a tierra al tornillo verde de tierra en la caja de cableado del triturador.


No seguir estas instrucciones puede ocasionar la muerte, incendio o choque eléctrico.

⚠ AVERTISSEMENT

Risque de choc électrique

Branchez le fil de terre à la vis verte de mise à la terre dans la boîte de câblage du broyeur.


Le non-respect de ces instructions peut causer un accident mortel, un incendie ou un choc électrique.

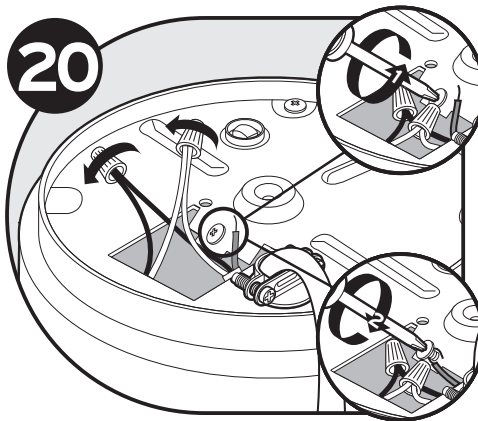

Connect ground wire to green ground screw in disposer wiring box. Connect white wire from disposer to white (neutral) supply wire. Connect black wire from disposer to black (hot) supply wire with wire nuts (not included)./

Conecte el cable de conexión a tierra al tornillo verde de conexión a tierra en la caja de cableado del triturador. Conecte el cable blanco del triturador al cable blanco (neutro) de suministro. Conecte el cable negro del triturador al cable negro (vivo) de suministro, usando las tuercas para cable (no incluidas)./

Branchez le fil de terre à la vis verte de mise à la terre dans la boîte de câblage du broyeur. Raccordez le fil blanc du broyeur au fil blanc (neutre) d'alimentation. Raccordez le fil noir du broyeur au fil d'alimentation noir (chargé) au moyen de coincesurs à câble (non compris).

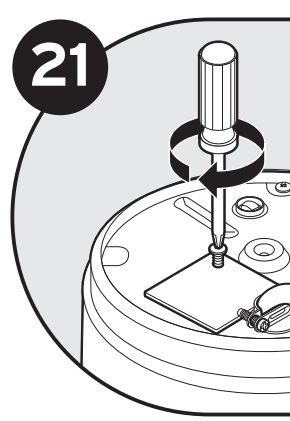

Push wires into disposer (do not touch wires or electrical cover) and replace electrical cover. Coloque los cables dentro del triturador (no toque los cables ni la protección de cartón) y vuelva a colocar la protectora eléctrica./

Poussez les fils dans le broyeur (ne touchez pas les fils ou la protection en carton) et remplacez la protection en carton).

Figure A/
Figura A/
Figure A


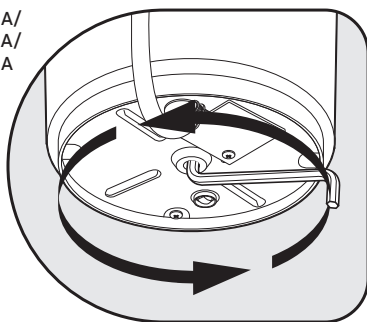


Figure B/
Figura B/
Figure B

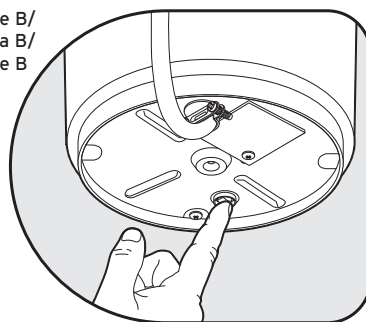

ENGLISH USE & CARE GUIDE

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

1. Remove stopper from sink opening.
2. Turn on wall switch to start disposer.
3. Slowly insert food waste into disposer. When grinding is complete, turn disposer off at switch.

DO...

- First turn on a moderate to strong water flow over the disposer. Continue running water after grinding is completed to help flush food particles down the drain.
- Grind virtually any food material.
- Grind hard materials such as seeds, pits, and bones. The scouring action is created by the high speed rotation of the disposer chamber.
- Grind peelings from citrus fruit.
- Use a disposer cleaner, degreaser, or deodorizer to relieve objectionable odors caused by food particles.

IMPORTANT: Regularly inspect the disposer and its fittings for water leaks, as well as for any damage. Manufacturer cannot be held responsible for property damage as a result of misuse.

CLEANING DISPOSER

Over time, food particles may accumulate in the disposer, caused by insufficient water flow.

1. Turn off disposer at switch.
2. Place stopper in sink opening.
3. Mix 1/4 cup baking soda with 1/2 cup water.

RELEASING DISPOSER JAM

If motor stops while disposer is running, follow these steps:

1. Turn off disposer and water.
2. Insert one end of wrench into the disposer from the bottom. Turn the wrench in a clockwise revolution. Remove wrench after 10 seconds.
3. With tongs reach into disposer and remove any objects from the disposer bottom (see Figure B).

FIVE YEAR WARRANTY

For five years from the date of purchase, KitchenAid will provide a replacement disposer provided by a KitchenAid designated service technician.

KITCHENAID WILL NOT PAY FOR:

1. Service calls to correct the installation or to show you how to use your product, to replace the disposer, or plumbing.
2. Repairs when your product is used for commercial household use. Damage resulting from misuse, abuse (such as overloading, fire, floods, acts of God, improper use, etc.) is not covered.

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING: When using electric disposers, basic precautions are always to be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is required when a disposer is used near children.
- Do not put fingers or hands into a disposer.
- Turn the power switch to the off position before attempting to clear a jam or remove an object from the disposer.
- When attempting to loosen a jam in a disposer, use a long wooden object such as a spoon or the wooden handle of a broom or mop.
- When attempting to remove objects from a disposer use long-handled pliers.
- When not operating a disposer, leave the drain cover in place to reduce the risk of objects falling into the disposer.
- To reduce the risk of injury by materials that are expellable by a disposer do not put the following into a disposer: clam or oyster shells, caustic drain cleaners or similar products, glass, china, or plastic, large (whole) bones, metal (such as bottle caps, steel shot, tin cans, or utensils), hot grease or other hot liquids.
- Reference steps 17-22 for proper electrical grounding instructions.