


KITCHENAID KCDI250X Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDI250X](#)

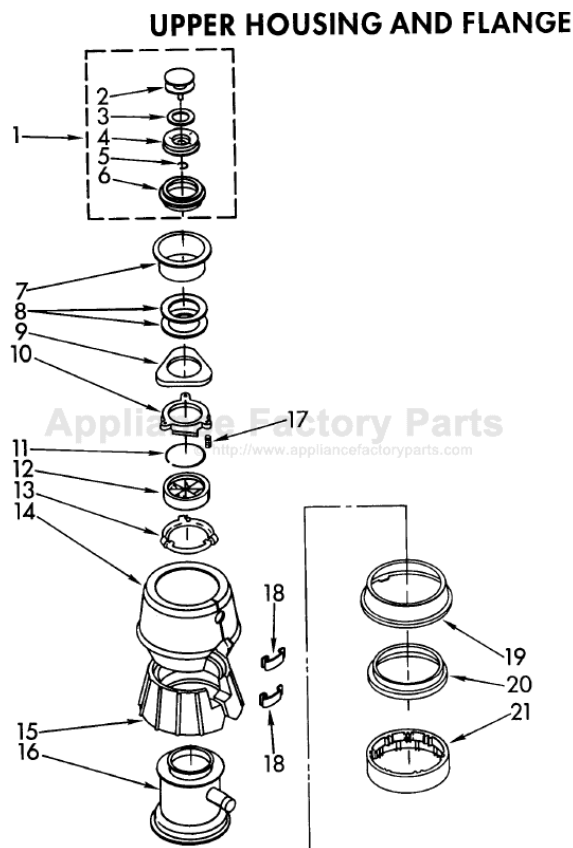

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----


PARTS LIST FOR

KitchenAid

DISPOSER

**MODEL
KCDI250X**

UPPER HOUSING AND FLANGE PARTS

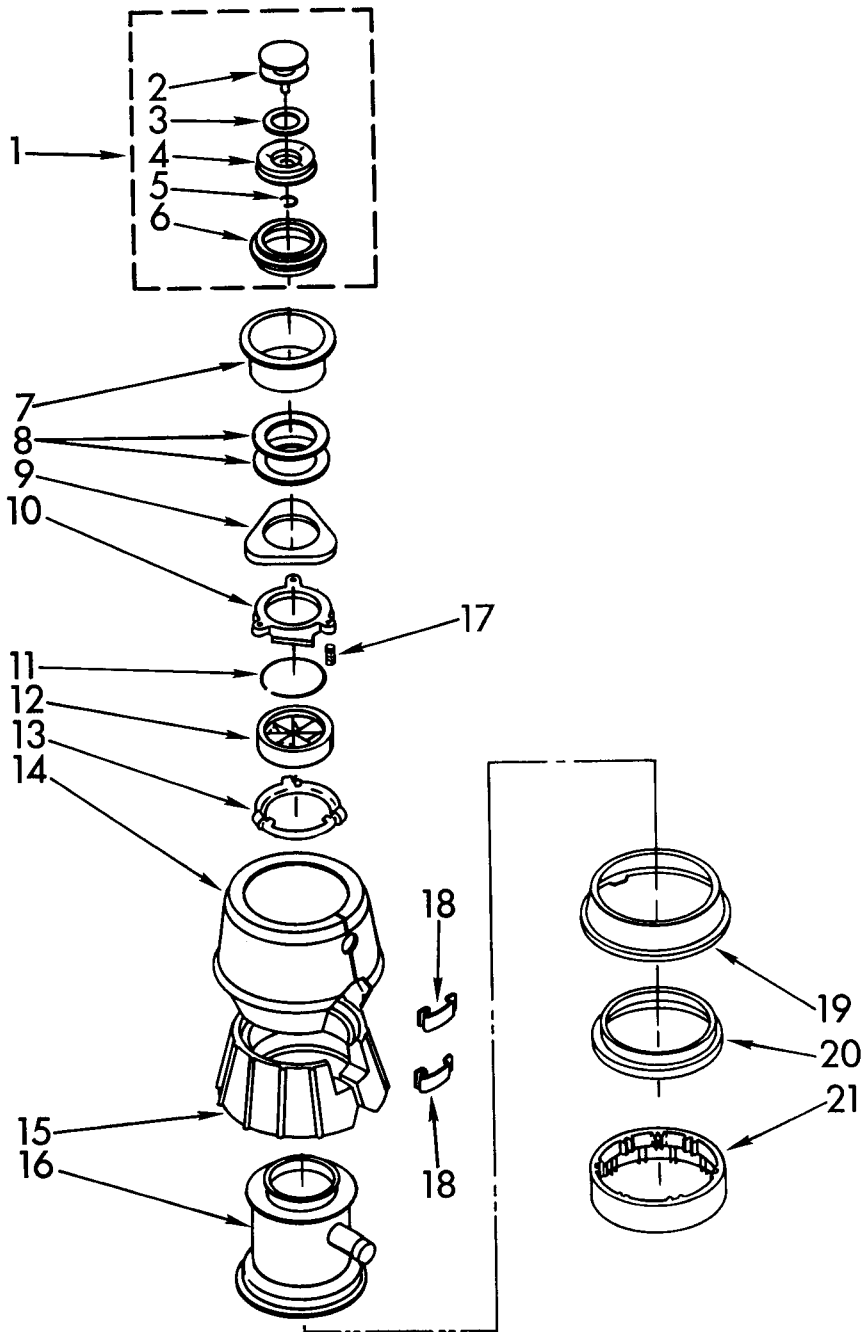

KitchenAid

ST. JOSEPH, MI 49085

© 1991, 1992 KITCHENAID



4-92 Litho in U.S.A.

Part No. 4211561 Rev. A
5-92


1	4211398	Stopper Assembly
2	4211399	Handle, Stopper
3	4211355	Gasket, Stopper (Inner)
4	4211491	Body, Stopper
5	4211357	Ring, Retaining
6	4211333	Gasket, Stopper
7	4211301	Flange, Strainer
8	4211302	Gasket, Strainer Flange (2)
9	4211303	Flange, Backup
10	4211304	Flange, Mounting
11	4211306	Ring, Retaining
12	4211334	Gasket, Mounting
13	4211308	Flange, Body
14	4211400	Shell, Trim Assembly
15	4211401	Insulation (Top)
16	4211402	Body Container Assembly
17	4211305	Screw, Backup (3)
18	4211339	Fastener, Trim Shell (2)
19	4211364	Body, Lower
20	4211365	Gasket, Shredder
21	4211403	Shredder, Stationary

Following Parts Not Illustrated

LIT4211451	Guide, Use And Care
LIT4171069	Instructions, Installation
LIT4211561	Repair Parts List

LOWER HOUSING AND MOTOR PARTS

For Model: KCDI250X

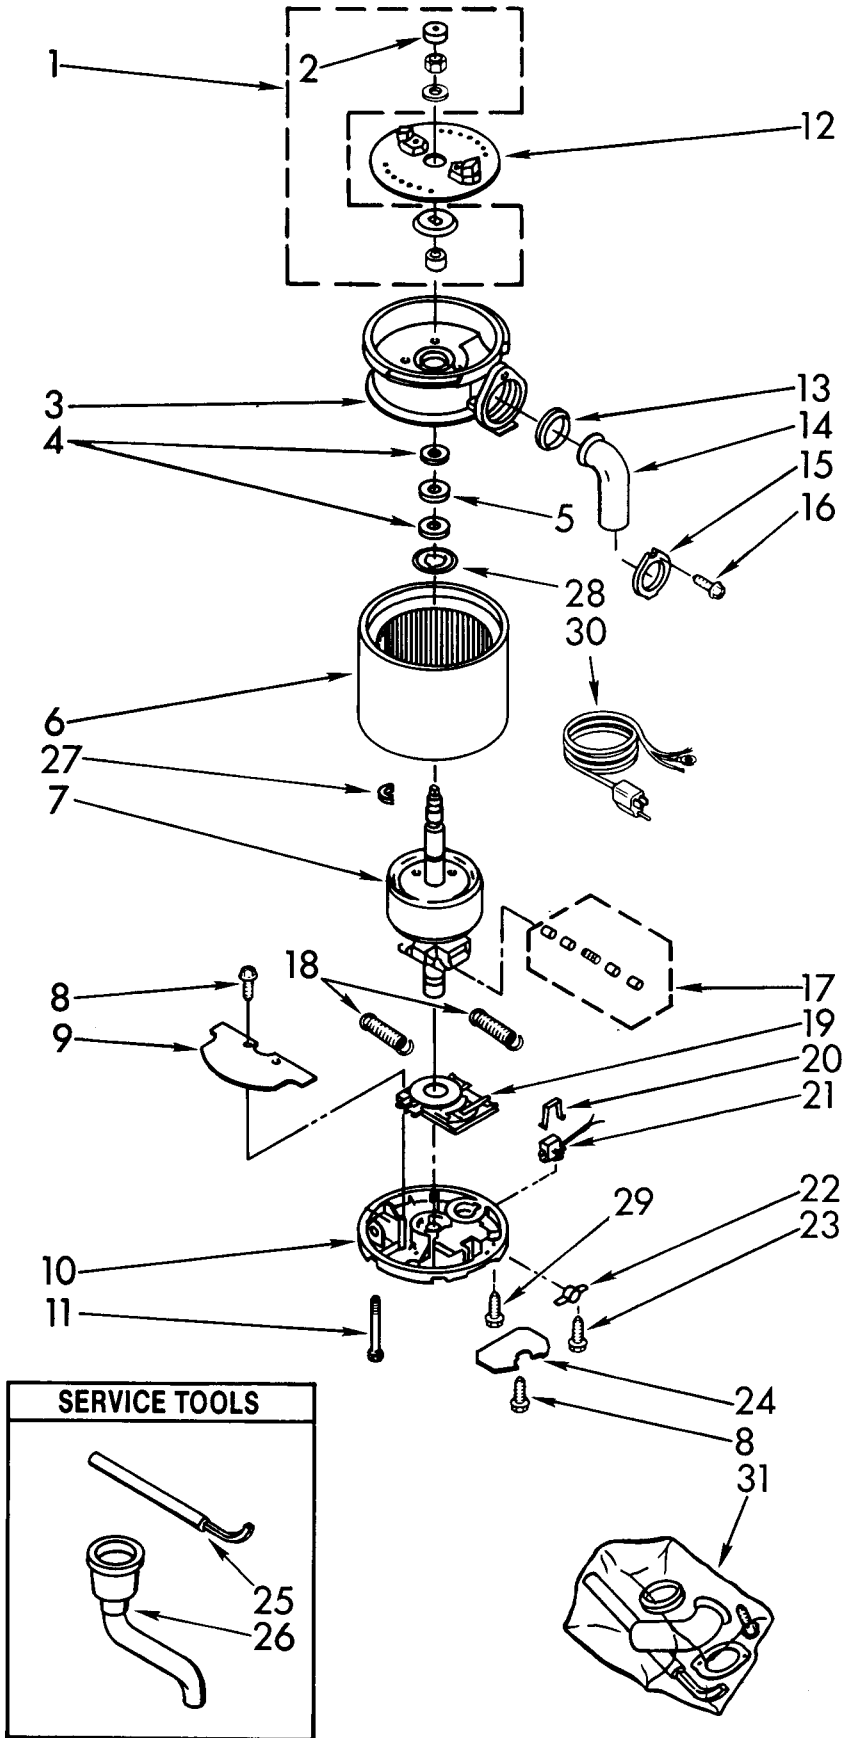

1	4211311	Kit, Sleeve & Seal (Includes Plug, Nut, Washer, Slinger, And Sleeve)
2	4211341	Plug
3	4211492	End Bell Assembly (Upper)
4	4211405	Washer, Thrust (3)
5	4211406	Washer, Rubber
6	4211407	Stator Assembly
7	4211494	Rotor And Shaft Assembly
8	4211380	Screw (4)
9	4211381	Insulation, Shield
10	4211470	End Frame Assembly (Lower)
11	4211389	Bolt, Thru (4)
12	4211342	Shredder Assembly, Rotating
13	4211344	Gasket, Tailpipe
14	4211317	Tailpipe
15	4211345	Flange, Tailpipe
16	4211346	Screw, Tailpipe
17	4211468	Transfer Assembly
18	4211378	Spring (2)
19	4211469	Switch Assembly, Start
20	4211383	Clip, Overload
21	4211425	Protector, Overload
22	4211387	Clamp, BX
23	4211388	Screw, Clamp BX
24	4211391	Cover, Terminal
25	4211435	Emergency, Wrench Assembly
26	4211396	Adapter, Sink Assembly
27	4211376	C-Ring
28	4211493	Cup, Washer
29	4211390	Screw, Ground
30	4211472	Plug & Cord
31	4211566	Kit, Installation (Includes Nos. 13, 14, 15, 16, 25, Instructions and Use and Care Guide)