 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



KITCHENAID KCDI250X3 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KCDI250X3](#)

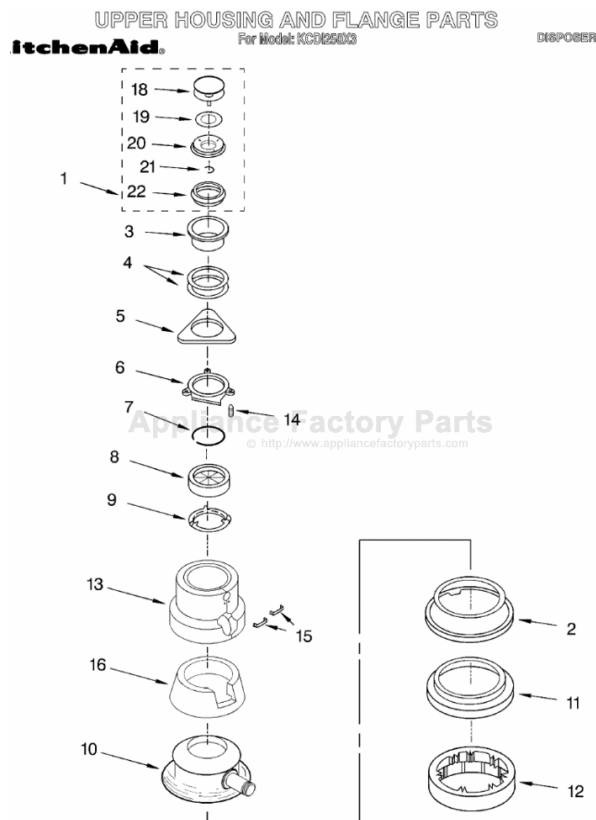

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

 
----- Manual continues below -----

UPPER HOUSING AND FLANGE PARTS

KitchenAid®

For Model: KCD1250X3



DISPOSER

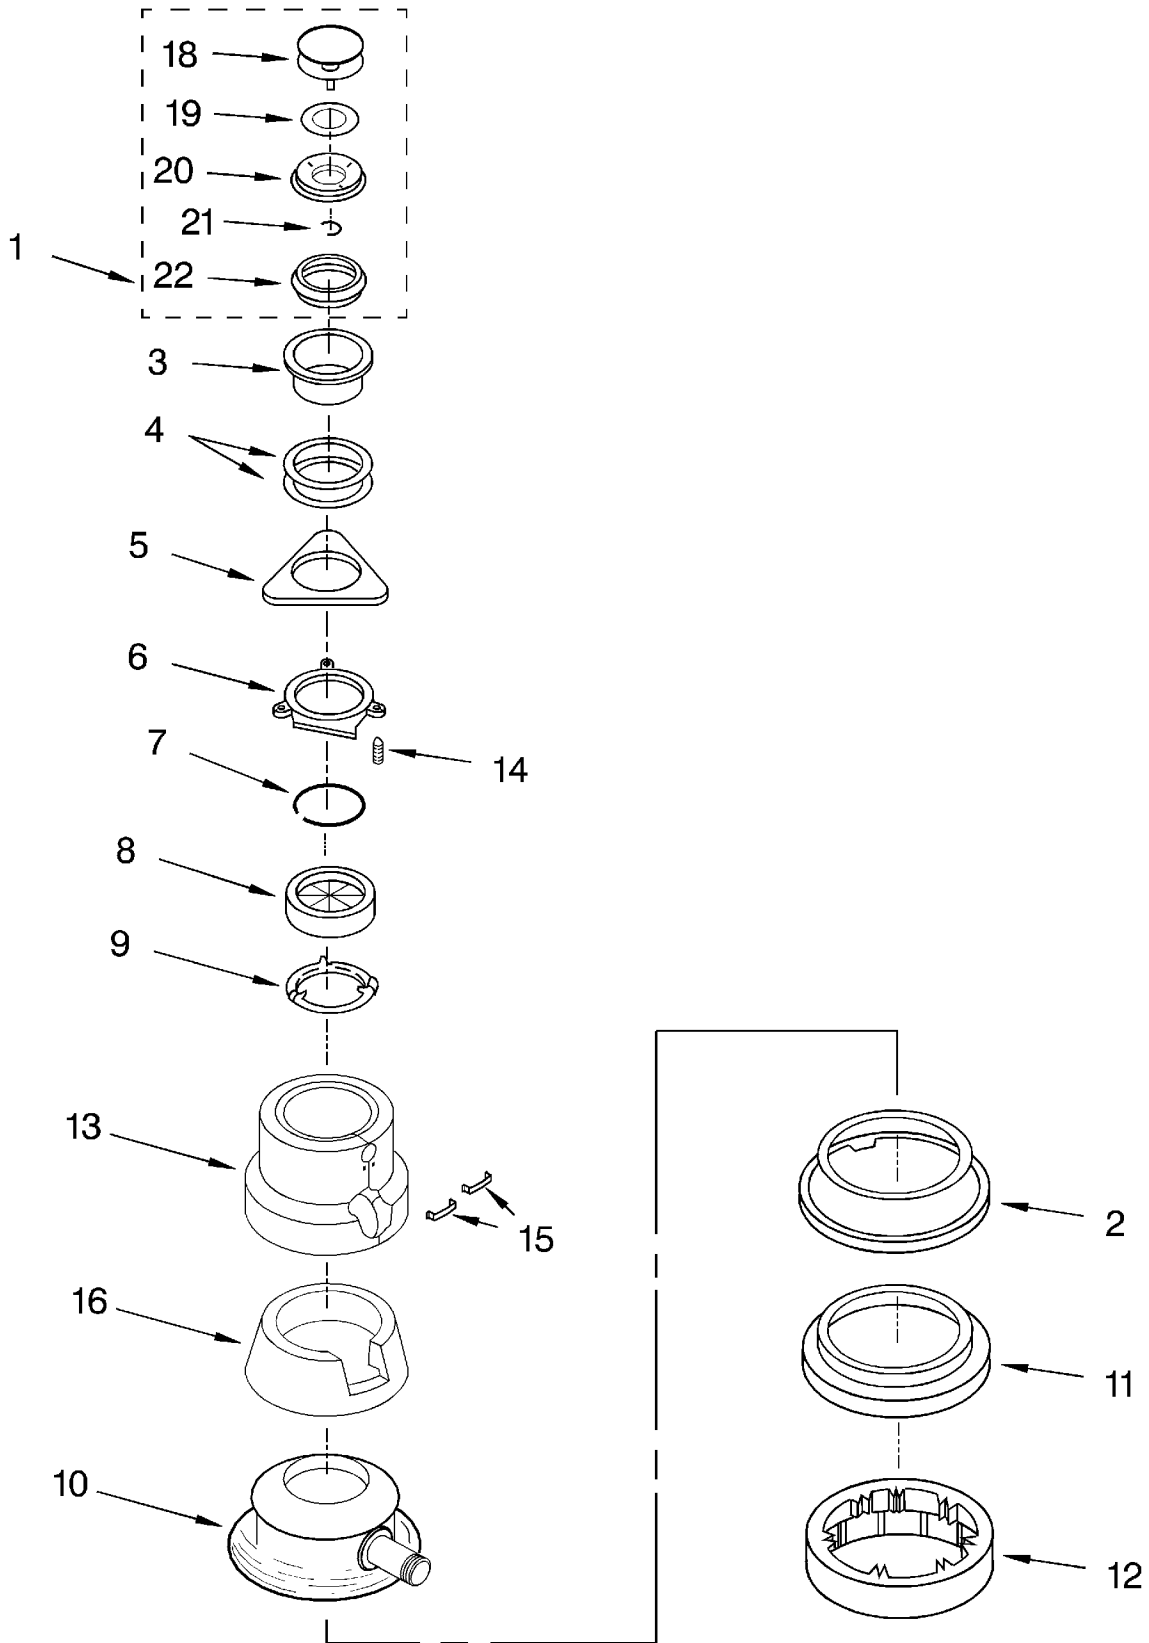

1	4211398	Stopper Assembly
2	4211364	Body, Lower
3	4211553	Flange, Strainer
4	4211302	Seal, Sink Flange
5	4211303	Flange, Backup
6	4211304	Flange, Mounting
7	4211306	Ring, Retaining
8	4211334	Gasket, Mounting
9	4211308	Flange, Body
10	4211629	Container, Body Assembly
11	4211365	Gasket, Shredder
12	4211630	Shredder, Stationary
13	4211400	Trim, Shell Assembly
14	4211305	Screw, Backup
15	4211339	Clip, Shell Trim
16	4211401	Insulation, Top
18	4211399	Gasket, Stopper
19	4211355	Flange, Strainer
20	4211491	Seal, Sink Flange
21	4211357	Flange, Backup
22	4211333	Flange, Mounting

UPPER HOUSING AND MOTOR PARTS

  For Model: KCD1250X3

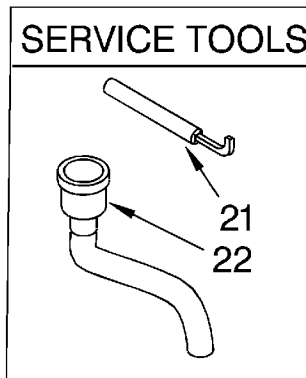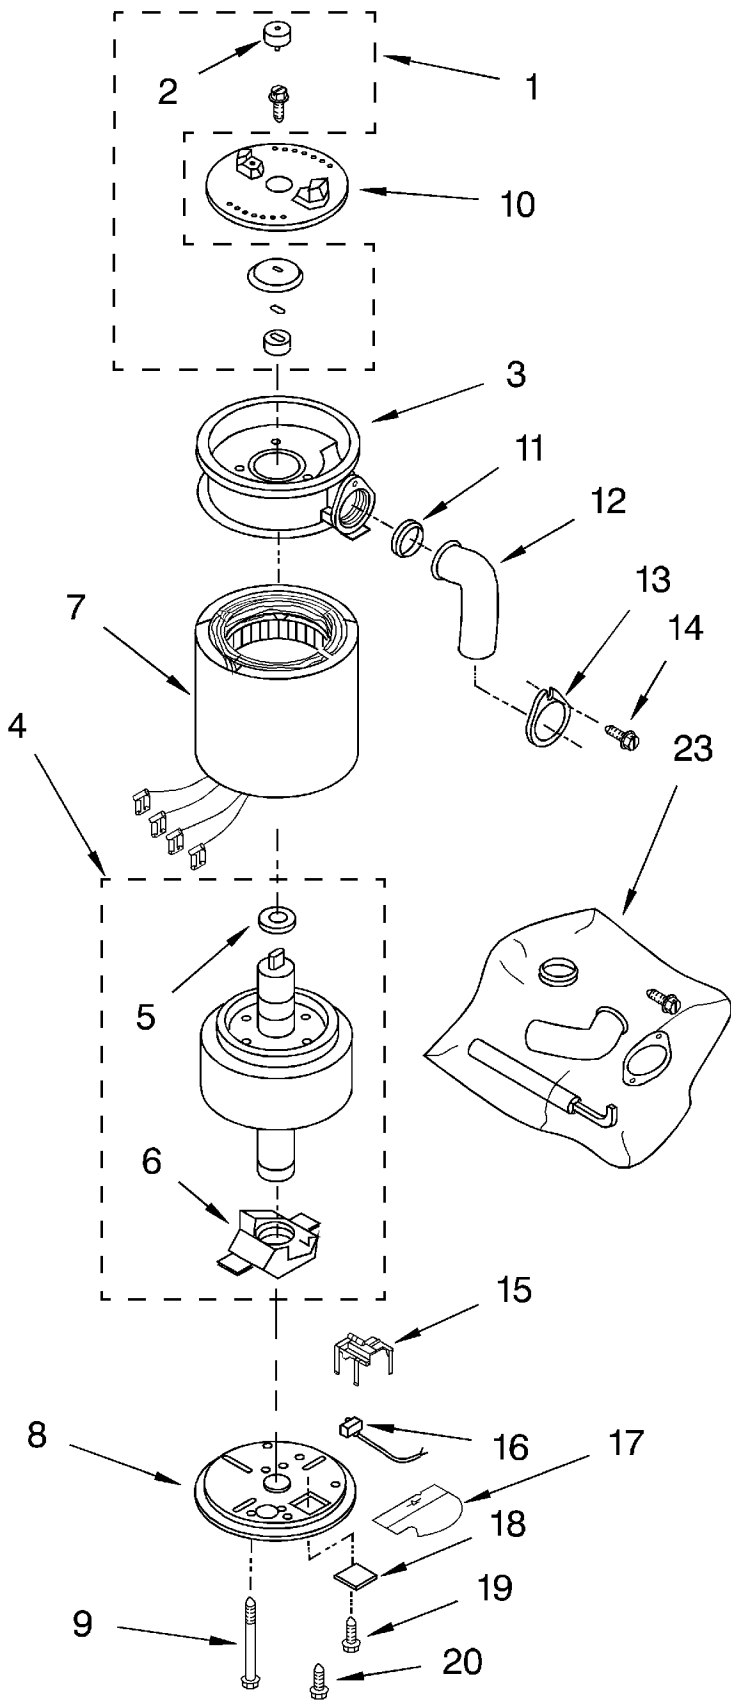

1	4211578	Kit, Sleeve And Seal (Includes Plug, Bolt, Washer, Slinger And Sleeve)
2	4211341	Plug
3	4211492	End Bell Assembly (Upper)
4	4211632	Rotor And Shaft Assembly
5	4211321	Washer
6	4211322	Centrifugal Actuator Assembly
7	4211407	Stator Assembly
8	4211635	End Frame Assembly (Lower)
9	4211348	Bolt, Thru
10	4211631	Shredder
11	4211344	Gasket, Tailpipe
12	4211317	Tailpipe
13	4211345	Flange, Tailpipe
14	4211346	Screw, Tailpipe
15	4211633	Switch, Start & Reverse
16	4211634	Protect, Overload
17	4211326	Shield, Wire
18	4211611	Cover, Terminal
19	4211612	Screw, Terminal Cover
20	4211330	Screw, Tailpipe
21	4211435	Wrench, Emergency
22	4211396	Adapter, Sink
23	4211639	Kit, Installation (Includes # 11, 12, 13 14, 21, Instructions, and Use and Care Guide)

Following Parts Not Illustrated

LITERATURE PARTS

LIT4211563	Guide, Use And Care
LIT4211562	Instructions, Installation