


# KITCHENAID KCDS075T0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID  
KCDS075T0](#)

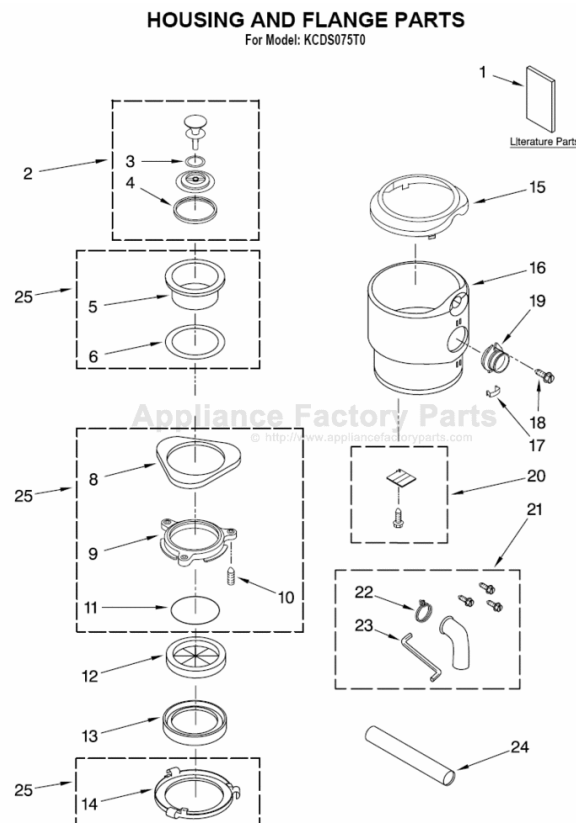

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----

# KitchenAid®



## KITCHENAID® SUPERBA® KCDS075T

US 1-800-422-1230  
Canada 1-800-807-6777

(R)Registered trademark/TM Trademark of KitchenAid, U.S.A., KitchenAid Canada licensee in Canada.

© 2009 All rights reserved.


(R)Marca registrada/TM Marca comercial de KitchenAid, E.E. UU, KitchenAid Canada concesionario en Canadá.

© 2009 Todos los derechos reservados.

®Marque déposée/™Marque de commerce de KitchenAid, U.S.A., Emploi sous licence par KitchenAid Canada au Canada.

©2009. Tous droits réservés.

### Includes/Incluye/Comprend

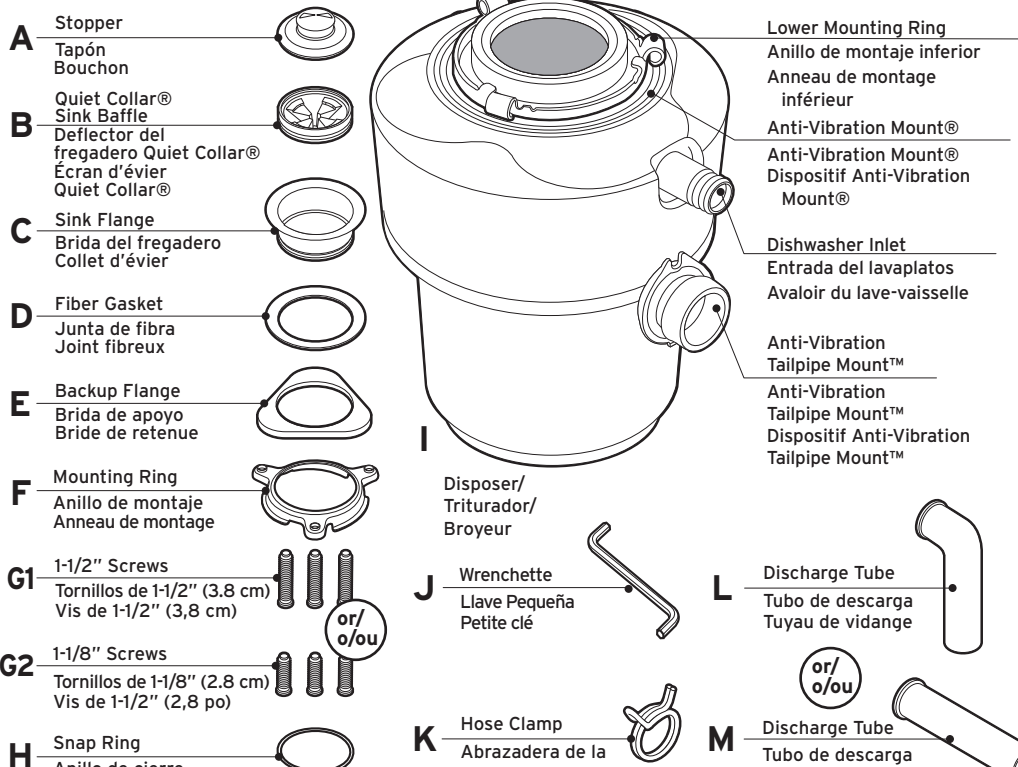

### Installation instructions

**YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

**⚠** This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.


All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**⚠ DANGER** You can be killed or seriously injured if you don't immediately follow instructions.


**⚠ WARNING** You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### Check installation dimensions Verifique las dimensiones Vérifier les dimensions

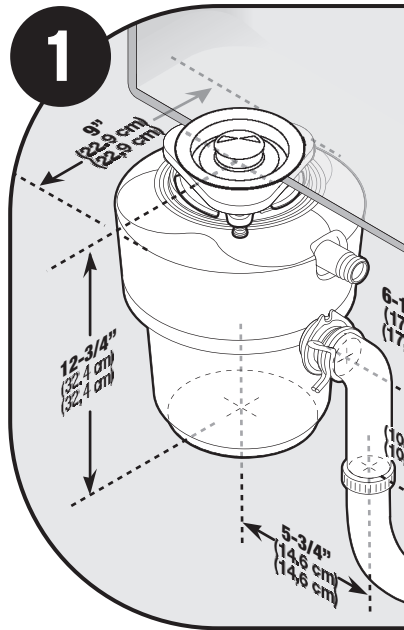

### Install flange in sink Instale la brida en el fregadero Installer le collet dans le fregadero

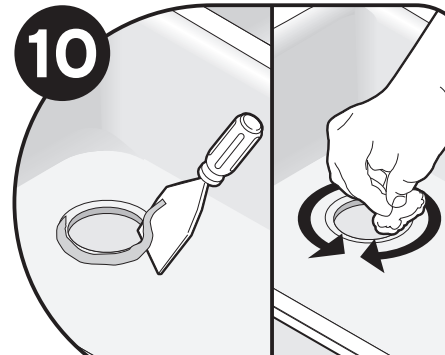

## ⚠ WARNING



### Electrical Shock Hazard

Connect ground wire to green ground screw in disposer wiring box.

Failure to follow these instructions can result in death, fire, or electrical shock.

## ⚠ ADVERTENCIA

### Peligro de Choque Eléctrico

Conecte el cable de conexión a tierra al tornillo verde de tierra en la caja de cableado del triturador.


No seguir estas instrucciones puede ocasionar la muerte, incendio o choque eléctrico.

## ⚠ AVERTISSEMENT

### Risque de choc électrique

Brancher le fil de terre à la vis verte de mise à la terre dans la boîte de câblage de le broyeur.


Le non-respect de ces instructions peut causer un décès, un incendie ou un choc électrique.

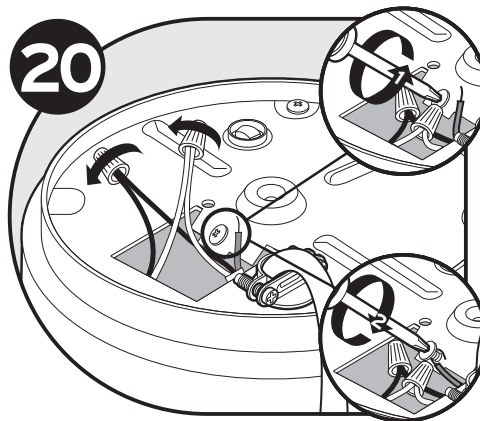

Connect ground wire to green ground screw in disposer wiring box. Connect white wire from disposer to white (neutral) supply wire. Connect black wire from disposer to black (hot) supply wire with wire nuts (not included)./

Conecte el cable de conexión a tierra al tornillo verde de conexión a tierra en la caja de cableado del triturador. Conecte el cable blanco (neutro) de suministro. Conecte el cable negro del triturador al cable negro (vivo) de suministro, usando las tuercas para cable (no incluidas)./

Brancher le fil de terre à la vis verte de mise à la terre dans la boîte de câblage du broyeur. Relier le fil blanc du broyeur au fil blanc (neutre) d'alimentation. Relier le fil noir du broyeur au fil noir (chargé) d'alimentation au moyen de coins à câble (non compris).

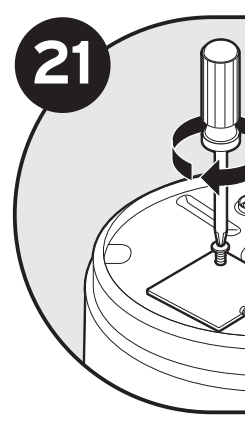

Push wires into disposer (behind electrical shield) and replace electrical cover. Coloque los cables dentro del compartimiento y desplace la protección de la placa protectora eléctrica. Pousser les fils dans le compartiment (derrière l'écran de carton) et remplacer la protection.

Figure A/  
Figura A/  
Figure A


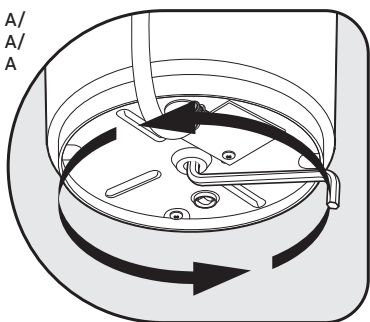


Figure B/  
Figura B/  
Figure B

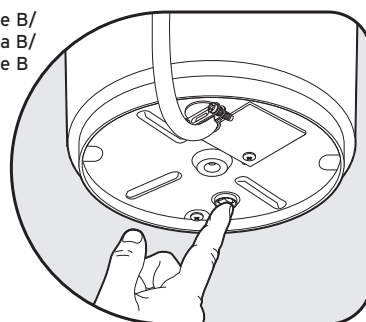

## ENGLISH USE & CARE GUIDE

### YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

**⚠** This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**⚠ DANGER** You can be killed or seriously injured if you don't immediately follow instructions.

**⚠ WARNING** You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

**WARNING:** When using electric disposers, basic precautions are always to be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is required when a disposer is used near children.
- Do not put fingers or hands into a disposer.
- Turn the power switch to the off position before attempting to clear a jam or remove an object from the disposer.
- When attempting to loosen a jam in a disposer, use a long wooden object such as a spoon or the wooden handle of a broom or mop.
- When attempting to remove objects from a disposer use long-handled tongs or pliers. For a disposer that is magnetically actuated, use nonmagnetic tools.
- When not operating a disposer, leave the drain cover in place to reduce the risk of objects falling into the disposer.
- To reduce the risk of injury by materials that are expellable by a disposer do not put the following into a disposer: clam or oyster shells, caustic drain cleaners or similar products, glass, china, or plastic, large (whole) bones, metal (such as bottle caps, steel shot, tin cans, or utensils), hot grease or other hot liquids.

### SAVE THESE INSTRUCTIONS

1. Remove stopper from sink opening.
2. Turn on wall switch to start disposer.
3. Slowly insert food waste into disposer. After grinding is complete, turn disposer off and remove stopper.

#### DO...

- First turn on a moderate to strong stream of water on the disposer. Continue running water until grinding is completed to help flush.
- Grind virtually any food material.
- Grind hard materials such as seeds and pits. The scouring action is created by the action of the blades in the grinding chamber.
- Grind peelings from citrus fruit.
- Use a disposer cleaner, degreaser, or deodorizer to relieve objectionable odors caused by food particles.

**IMPORTANT:** Regularly inspect the disposer and its fittings for water leaks, as well as for any damage. Manufacturer cannot be held responsible for property damage as a result of misuse.

#### CLEANING DISPOSER

Over time, food particles may accumulate in the disposer, caused by insufficient water flow.

1. Turn off disposer at switch.
2. Place stopper in sink opening.
3. Mix 1/4 cup baking soda with 1/2 cup water.
4. Remove Quiet Collar® Sink Blocker.

#### RELEASING DISPOSER JAM

If motor stops while disposer is running, the disposer may be jammed. To release the jam, follow these steps:

1. Turn off disposer and water.
2. Insert one end of wrenchette into the disposer. Turn the wrenchette in the direction of rotation. Remove wrenchette.
3. With tongs reach into disposer and remove any objects from disposer bottom (see Figure B).

#### FIVE YEAR WARRANTY

For five years from the date of purchase, KitchenAid will provide a replacement disposer provided by a KitchenAid designated service provider.

#### KITCHENAID WILL NOT PAY FOR:

1. Service calls to correct the installation of your product, to replace plumbing, or to replace the disposer.
2. Repairs when your product is used for commercial or household use. Damage resulting from modification, misuse, abuse (such as fire, floods, acts of God, improper use, or use not in accordance with local electrical codes).