


This Owner's Manual is provided and hosted by Appliance Factory Parts.



KITCHENAID KCDS100T0 Owner's Manual


[Shop genuine replacement parts for KITCHENAID
KCDS100T0](#)

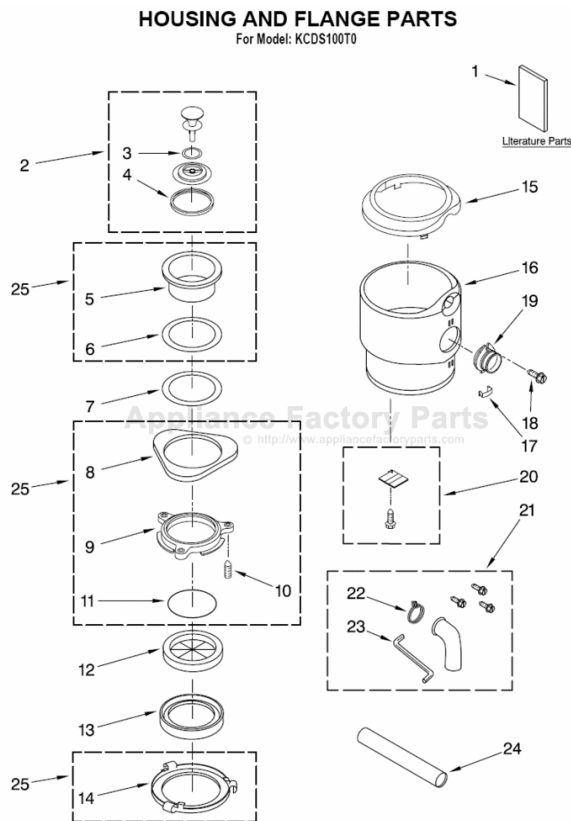

[Find Your KITCHENAID Disposal Parts - Select From 75 Models](#)

----- Manual continues below -----

KitchenAid®

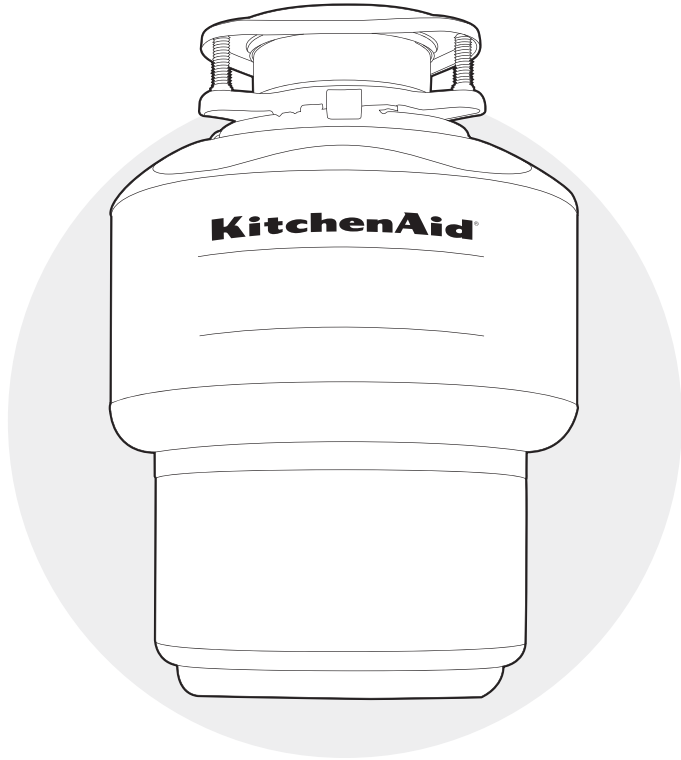

KITCHENAID® SUPERBA® KCDS100T

US 1-800-422-1230
Canada 1-800-807-6777

(R)Registered trademark/TM Trademark of KitchenAid, U.S.A., KitchenAid Canada licensee in Canada.

© 2009 All rights reserved.

(R)Marca registrada/TM Marca comercial de KitchenAid, EE. UU, KitchenAid Canada concesionario en Canadá.

© 2009 Todos los derechos reservados.

®Marque déposée/™Marque de commerce de KitchenAid, U.S.A., Emploi sous licence par KitchenAid Canada au Canada.

©2009. Tous droits réservés.

Includes/Incluye/Comprend

- | | | | | |
|---|--|---|--|--|
| A Stopper
Tapón
Bouchon | | I Disposer/
Triturador
Broyeur | | Lower Mounting Ring
Anillo de montaje inferior
Anneau de montage inférieur |
| B Quiet Collar®
Sink Baffle
Deflector del fregadero
Quiet Collar®
Écran d'évier
Quiet Collar® | | J Wrenchette
Llave Pequeña
Petite clé | | Anti-Vibration Mount®
Anti-Vibration Mount®
Anti-Vibration Mount® |
| C Sink Flange
Brida del fregadero
Collet d'évier | | K Hose Clamp
Abrazadera de la manguera | | Dishwasher Inlet
Entrada del lavaplatos
Avaloir du lave-vaisselle |
| D Fiber Gasket
Junta de fibra
Joint fibreux | | L Discharge Tube
Tubo de descarga
Tuyau de vidange | | Anti-Vibration Tailpipe Mount™
Anti-Vibration Tailpipe Mount™ |
| E Backup Flange
Brida de apoyo
Bride de retenue | | M Discharge Tube
Tubo de descarga
Tuyau de vidange | | |
| F Mounting Ring
Anillo de montaje
Anneau de montage | | | | |
| G1 1-1/2" Screws
Tornillos de 1-1/2" (3,8 cm)
Vis de 1-1/2" (3,8 cm) | | | | |
| G2 1-1/8" Screws
Tornillos de 1-1/8" (2,8 cm)
Vis de 1-1/8" (2,8 po) | | | | |
| H Snap Ring
Anillo de cierre | | | | |

Installation instructions

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

⚠ This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.


All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER You can be killed or seriously injured if you don't immediately follow instructions.


⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Check installation dimensions Verifique las dimensiones Vérifier les dimensions

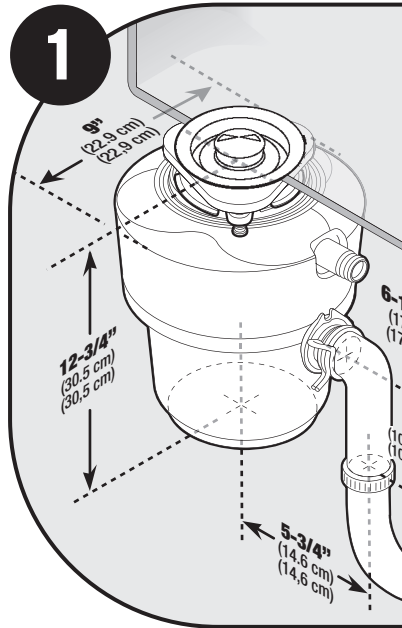

Install flange in sink hole Instale la brida en el orificio Installer le collet dans le trou

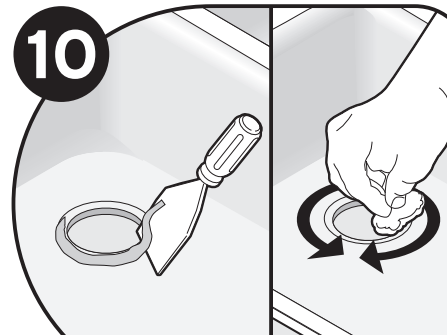

⚠ WARNING



Electrical Shock Hazard

Connect ground wire to green ground screw in disposer wiring box.

Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ ADVERTENCIA

Peligro de Choque Eléctrico

Conecte el cable de conexión a tierra al tornillo verde de tierra en la caja de cableado del triturador.


No seguir estas instrucciones puede ocasionar la muerte, incendio o choque eléctrico.

⚠ AVERTISSEMENT


Risque de choc électrique

Branchez le fil de terre à la vis verte de mise à la terre dans la boîte de câblage du broyeur.

Le non-respect de ces instructions peut causer un décès, un incendie ou un choc électrique.

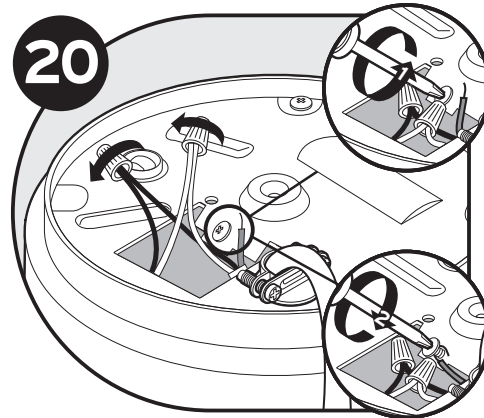

Connect ground wire to green ground screw in disposer wiring box. Connect white wire from disposer to white (neutral) supply wire. Connect black wire from disposer to black (hot) supply wire with wire nuts (not included)./ Conecte el cable de conexión a tierra al tornillo verde de conexión a tierra en la caja de cableado del triturador. Conecte el cable blanco del triturador al cable blanco (neutro) de suministro. Conecte el cable negro del triturador al cable negro (vivo) de suministro, usando las tuercas para cable (no incluidas)./ Brancher le fil de terre à la vis verte de mise à la terre dans la boîte de câblage du broyeur. Relier le fil blanc du broyeur au fil blanc (neutre) d'alimentation. Relier le fil noir du broyeur au fil noir (chargé) d'alimentation au moyen de coins à câble (non compris).

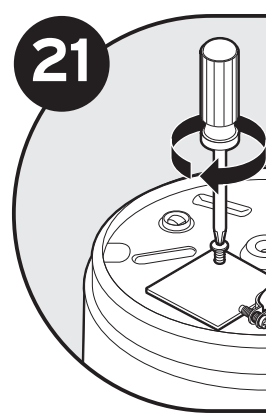

Push wires into disposer (do not use force) and replace electrical cover. Coloque los cables dentro de la caja de cableado y desplace la protección de cartón. a colocar la placa protectora. Pousser les fils dans le broyeur (ne pas utiliser de force) et remplacer l'écran de carton) et replacer

Figure A/
Figura A/
Figure A


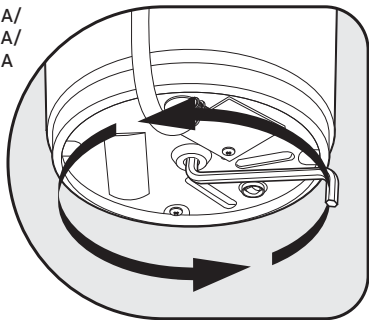


Figure B/
Figura B/
Figure B

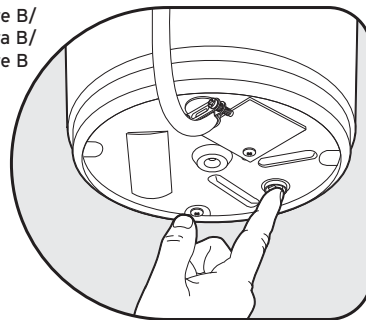

ENGLISH USE & CARE GUIDE

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

⚠ This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING: When using electric disposers, basic precautions are always to be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is required when a disposer is used near children.
- Do not put fingers or hands into a disposer.
- Turn the power switch to the off position before attempting to clear a jam or remove an object from the disposer.
- When attempting to loosen a jam in a disposer, use a long wooden object such as a spoon or the wooden handle of a broom or mop.
- When attempting to remove objects from a disposer use long-handled tongs or pliers. For a disposer that is magnetically actuated, use nonmagnetic tools.
- When not operating a disposer, leave the drain cover in place to reduce the risk of objects falling into the disposer.
- To reduce the risk of injury by materials that are expellable by a disposer do not put the following into a disposer: clam or oyster shells, caustic drain cleaners or similar products, glass, china, or plastic, large (whole) bones, metal (such as bottle caps, steel shot, tin cans, or utensils), hot grease or other hot liquids.

SAVE THESE INSTRUCTIONS

1. Remove stopper from sink opening.
2. Turn on wall switch to start disposer.
3. Slowly insert food waste into disposer. When grinding is complete, turn disposer off and remove stopper.

DO...

- First turn on a moderate to strong water flow to help break up the buildup, caused by insufficient water, on the disposer. Continue running water until grinding is completed to help flush the disposer.
- Grind virtually any food material.
- Grind hard materials such as seeds and pits. The abrasive scouring action is created by the grinding action.
- Grind peelings from citrus fruit.
- Use a disposer cleaner, degreaser, or bleach to help relieve objectionable odors caused by food buildup.

IMPORTANT: Regularly inspect the disposer and its fittings for water leaks, as well as for any damage. Manufacturer cannot be held responsible for property damage as a result of misuse.

CLEANING DISPOSER

Over time, food particles may accumulate on the disposer, causing a buildup, caused by insufficient water.

1. Turn off disposer at switch.
2. Place stopper in sink opening.
3. Mix 1/4 cup baking soda with 1/2 cup water.
4. Remove Quiet Collar® Sink Blocker.

This disposer is equipped with a jam release feature that the disposer is jammed, releasing the disposer jam.

RELEASING DISPOSER JAM

If motor stops while disposer is running, follow these steps:

1. Turn off disposer and water.
2. Insert one end of wrenchette into the disposer. Turn the wrenchette one revolution. Remove wrenchette.
3. With tongs reach into disposer and remove any objects from the disposer bottom (see Figure B).

SEVEN YEAR WARRANTY

For seven years from the date of purchase, KitchenAid will pay for the cost of parts and labor provided by a KitchenAid designated service technician.

KITCHENAID WILL NOT PAY FOR:

1. Service calls to correct the installation of the disposer, how to use your product, to replace the disposer, or plumbing.
2. Repairs when your product is used for commercial or household use. Damage resulting from misuse, abuse (such as fire, floods, acts of God, improper