


**KitchenAid**

**UNIT PARTS**

For Models: KHM7TWH0, KHM7DWH0, KHM7TBWH0

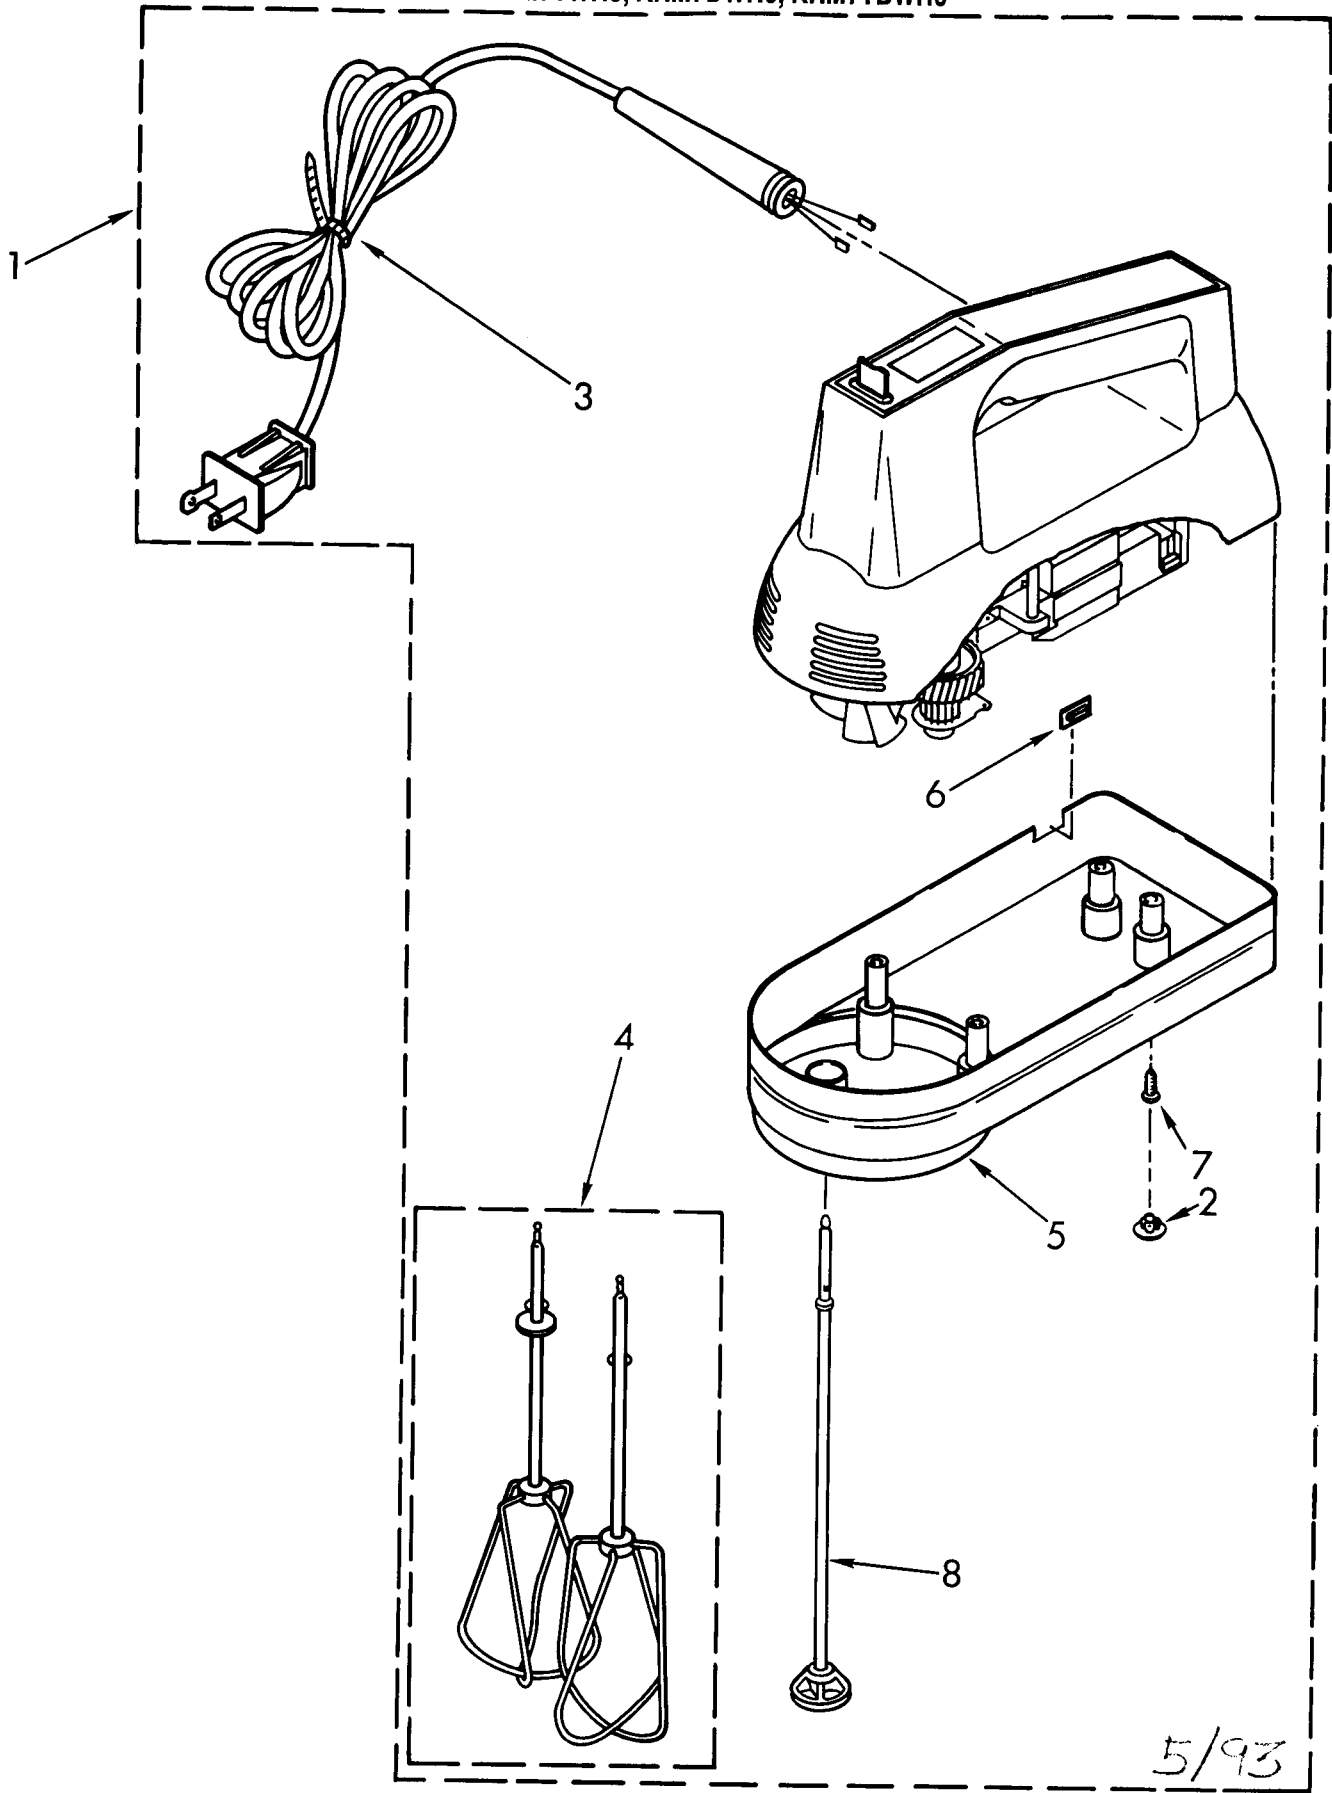

- |   |         |  |
|---|---------|--|
| 1 | 4176932 | Unit, Complete   |
| 2 | 3181104 | Cover, Screw (4)   |
| 3 | 3181141 | Cord and Plug Assembly                                     |
| 4 | 3181106 | Turbo-Beater Pak Inc's Rt & Lt                             |
| 5 | 3181139 | Cover, Lower Housing with Black Trim Band (Includes No. 2) |
| 6 | 3181140 | Switch, Off/On Control                                     |
| 7 | 3181125 | Screw (4) #6-19 x 1 1/4                                    |
| 8 | 3182492 | Blender Rod (Mdl.KHM7TBWHO)                                |

Following Parts Not Illustrated  
4176933 Carton, 4-Pack

LITERATURE PARTS

LIT4176929 Use and Care Guide  
LIT4176928 Repair Parts List